



ASSEMBLY INSTRUCTION

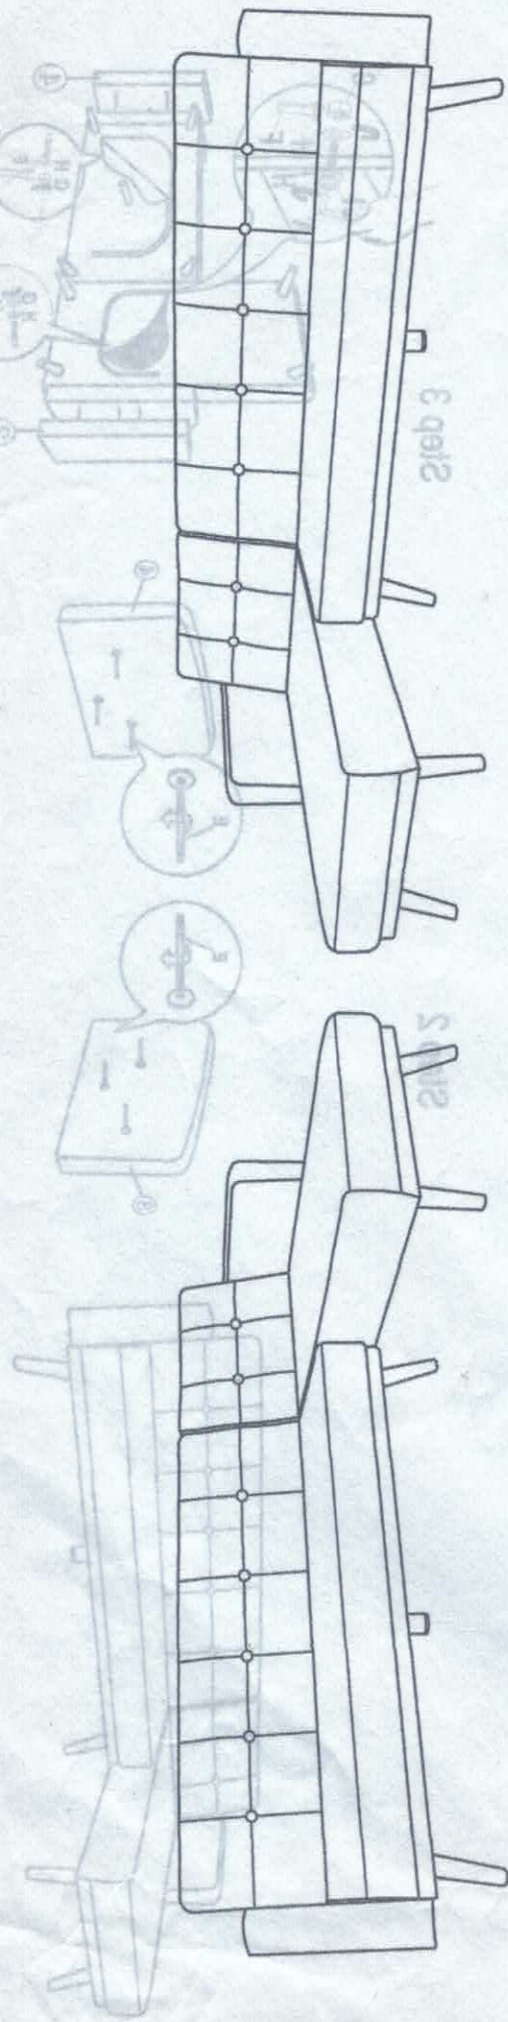


ASSEMBLY INSTRUCTIONS

PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

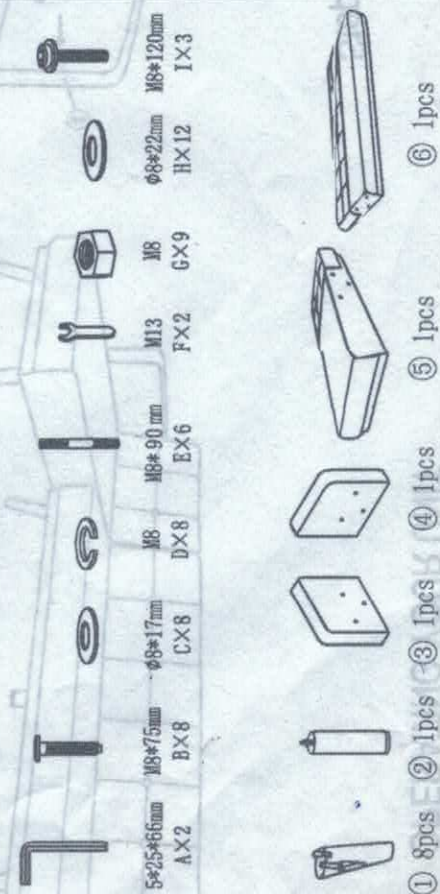

Step 1

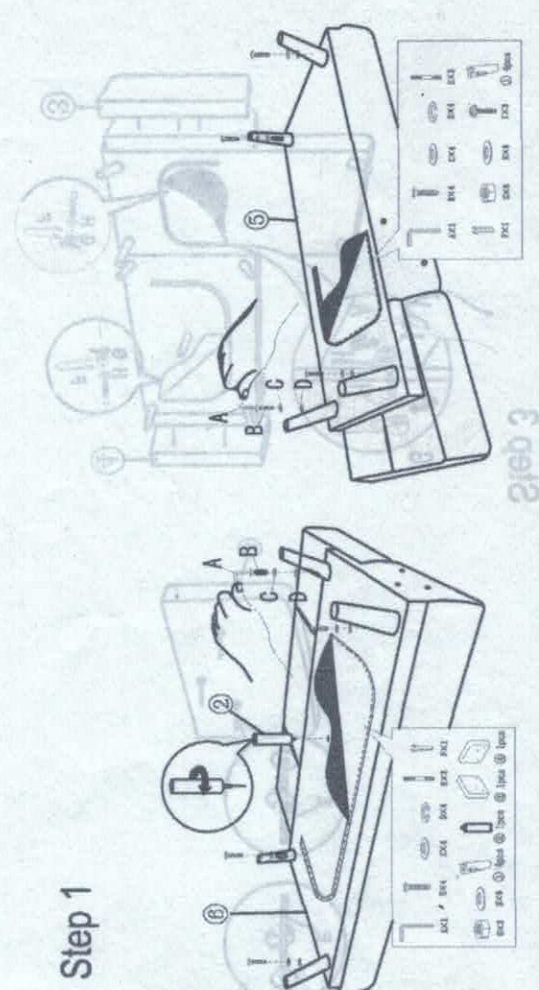

① OPERATING YOUR UNIT

② 1lbs



③ 1lbs




Step 2

Step 3


PARTS AND HARDWARE

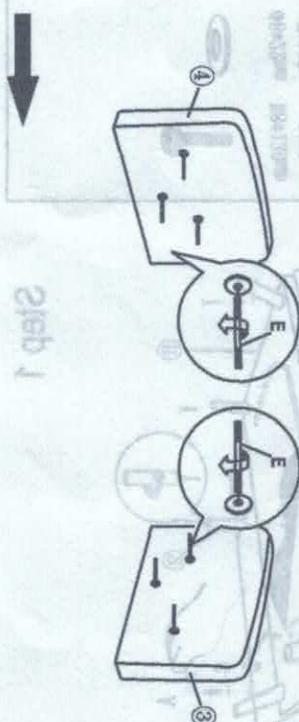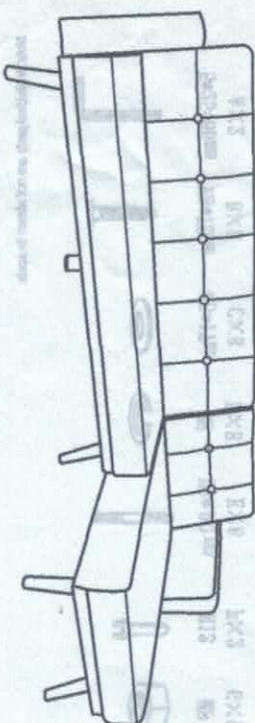

Step 1


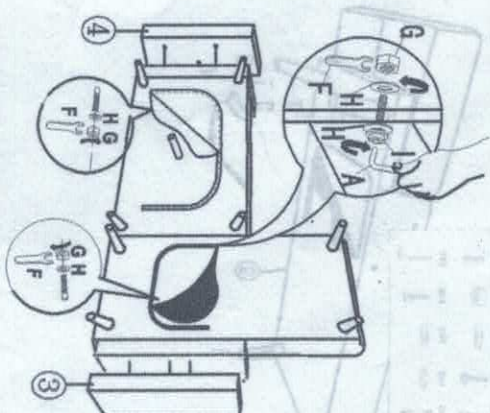


ASSEMBLY INSTRUCTIONS

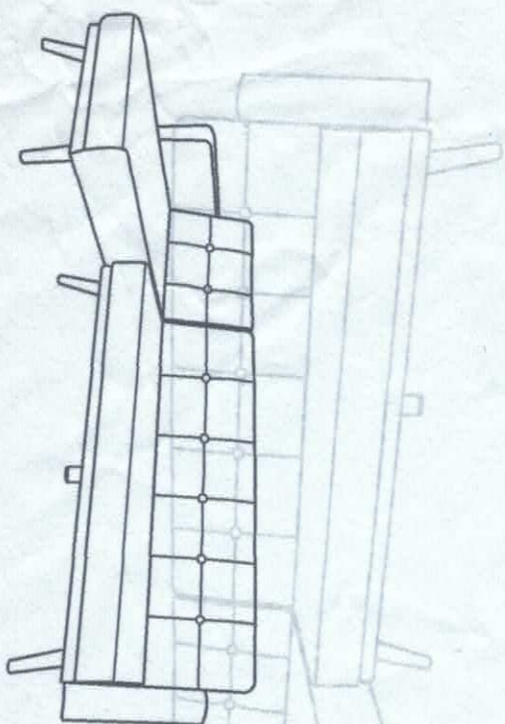

Step 2

Step 3

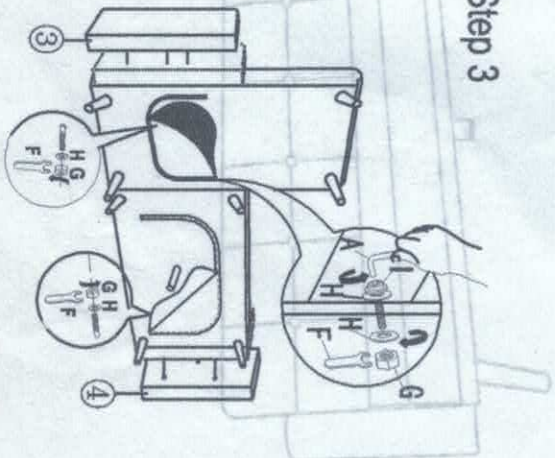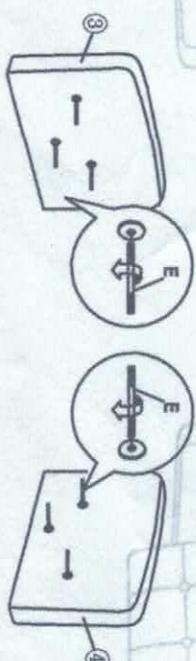

ASSEMBLY INSTRUCTION