



ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

ASSEMBLY REQUIREMENTS	3 Hours	1-Person	Tools Required:		⊕
	Assembly Time (Approximate)	Assembly	(Not Provided)		⊖

 
Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Email: replacementparts@buylateral.com
Within 30 days from delivery date

PRODUCTS PURCHASED THROUGH OUR
AUTHORIZED VENDORS ONLY ARE ELIGIBLE
FOR REPLACEMENT PARTS.

We appreciate your business!

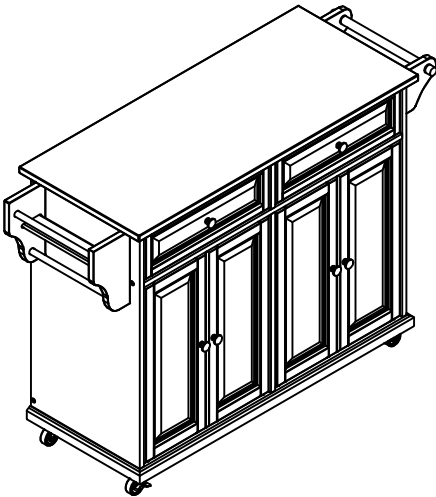

THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY -
NOT FOR COMMERCIAL USE.

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.


ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

PARTS LIST

NO. PART NAME	QTY	NO. PART NAME	QTY
(A) Top Panel	1	(M) Right Door	2
(B) Bottom Panel	1	(N) Drawer Front Panel	2
(C) Left Panel	1	(O) Drawer Left Panel	2
(D) Right Panel	1	(P) Drawer Right Panel	2
(E) Middle Panel	1	(Q) Drawer Back Panel	2
(F) Back Panel	3	(R) Drawer Bottom Panel	2
(G) Front Center Rail	1	(S) Towel Rack Support	2
(H) Back Top Rail	1	(T) Towel Rod	1
(I) Back Bottom Rail	1	(U) Spice Rack Left Panel	1
(J) Back Post	2	(V) Spice Rack Right Panel	1
(K) Shelf Panel	2	(W) Spice Rack Bottom Panel	1
(L) Left Door	2	(X) Spice Rack Bar	2

 ASSEMBLY OVERVIEW

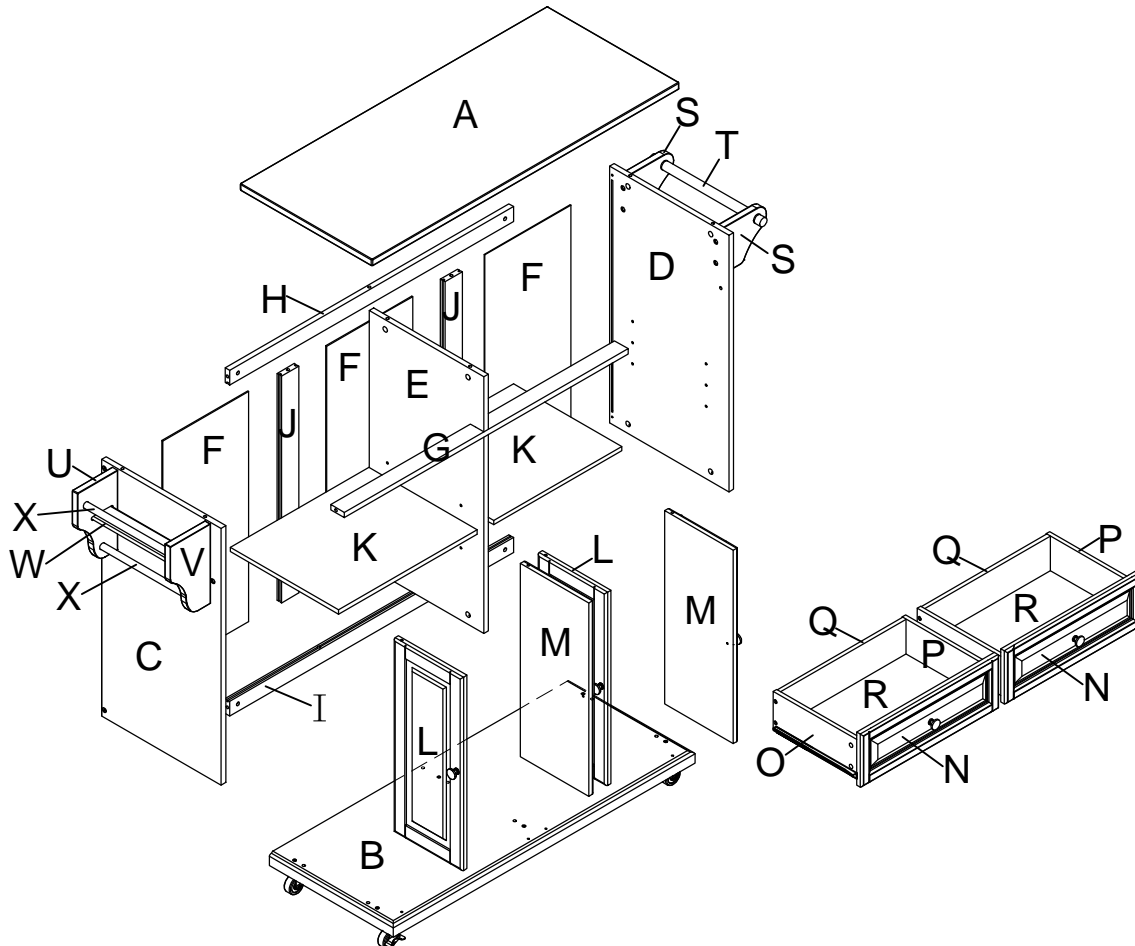

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

HARDWARE LIST



20X
 Ø6*35mm
 1
 Cam-bolt



12X
ø8*30mm
2
Wood Dowel



 
20X
 Ø15*9mm
 3
 Cam-lock




6X
 Ø10*10mm
 4
 Barrel Nut




8X
 Ø3*30mm
 5
 Screw

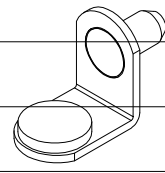

8X
ø6.5mm
6
Shelf Holder

 

8X
 Ø7*38mm
 7
 Screw

 


6X
 $\phi 5 \times 60\text{mm}$


 Screw



 
2X
70*12mm
9
Door Magnet




2X
3"
10
Caster With Lock

 


2X
3"
11
Caster

 


16X
 Ø4*14mm
 12
 Screw

 

4X
3.5*15mm
13
Screw

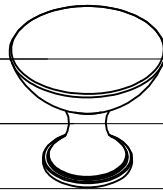 


6X
 Ø29*28mm
 14
 Handle

 

6X
Ø5/32"*22mm
15
Handle Bolt

 EXTRA HARDWARE



1PC
 Cam-bolt
 1PC



 
Ø15*9mm
 2PCS
 Cam-lock



2PCS
 Wood Dowel
 8*30mm




2PCS
 Barrel Nut
 10mm

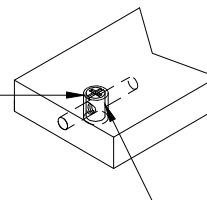

If Barrel Nut is missing in a part, use the extra Barrel Nut provided to insert into this hole.


INSTRUCTIONS FOR CAM-BOLT & CAM-LOCK

 INSERTING AND TIGHTENING CAM-BOLT

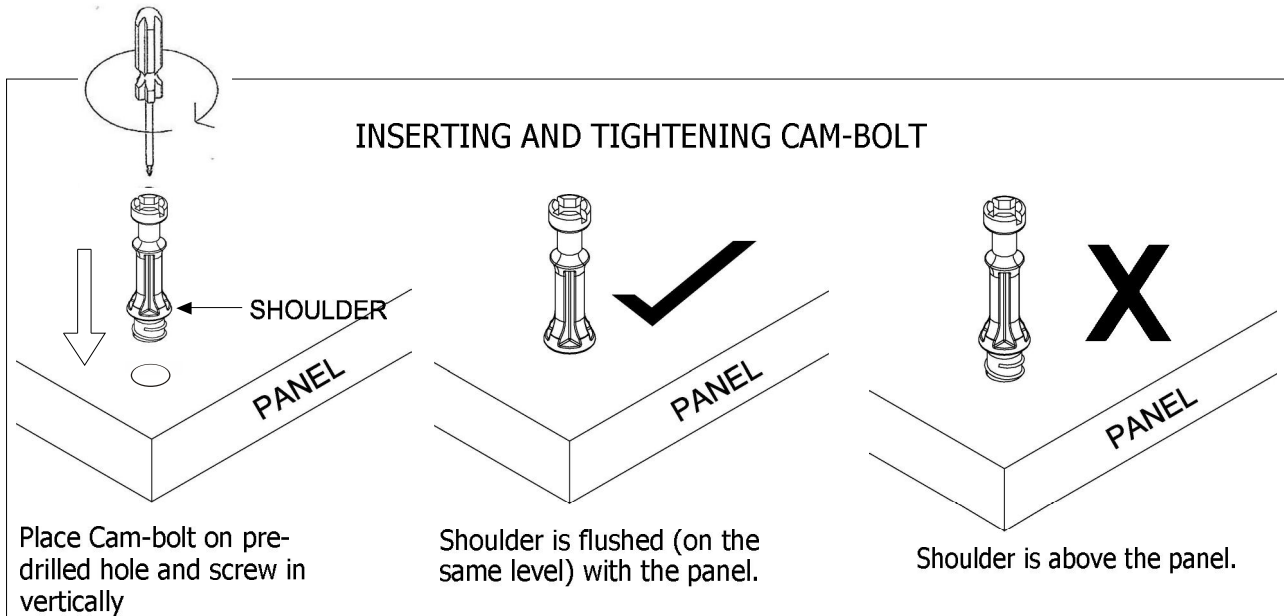

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

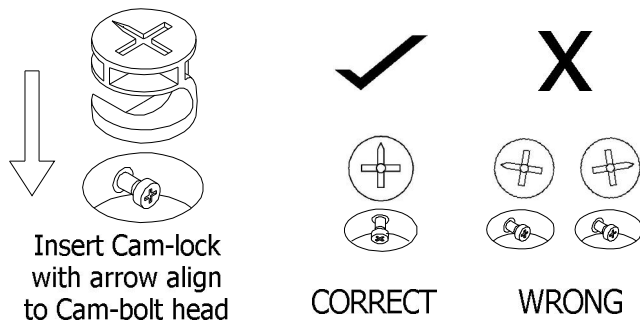

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 
TIGHTENING CAM-LOCK



Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

Instructions For Barrel Nut

Insert Barrel Nut with the perpendicular hole facing and in-line with the drill hole that the bolt is to be inserted.

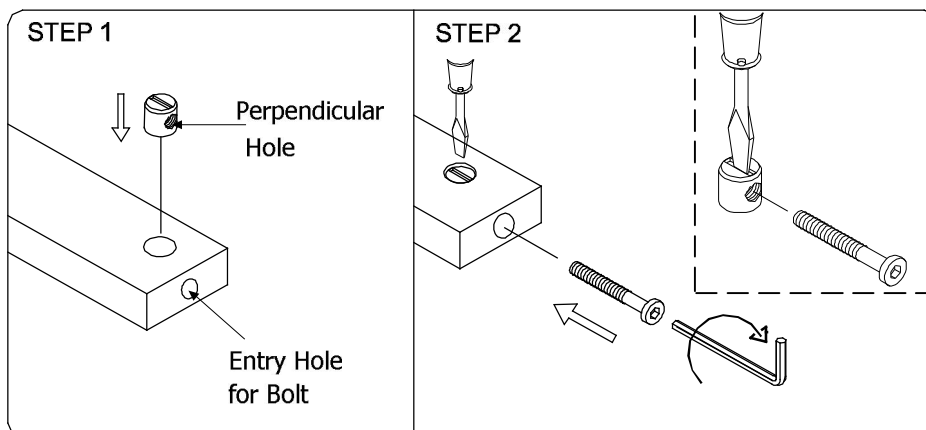


Use a Flat-head Screwdriver to hold Barrel Nut in position before inserting bolt to thread into the Barrel Nut.

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 1

 
- a) Lay Drawer Front Panel (N) as shown on a material that does not scratch or damage the parts and screw in Cam-bolt (1) into designated holes as shown.

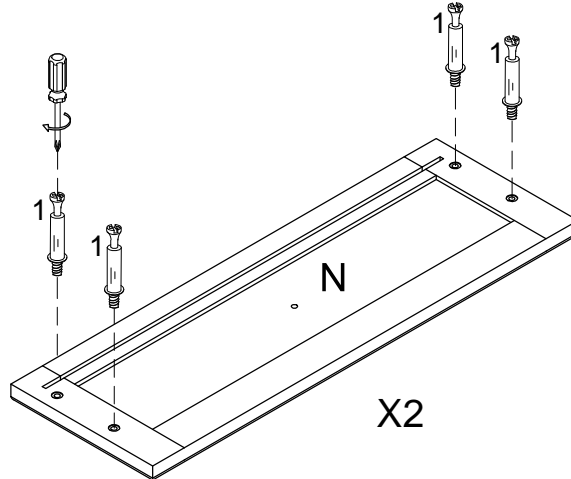



①  8PCS

 
STEP 2

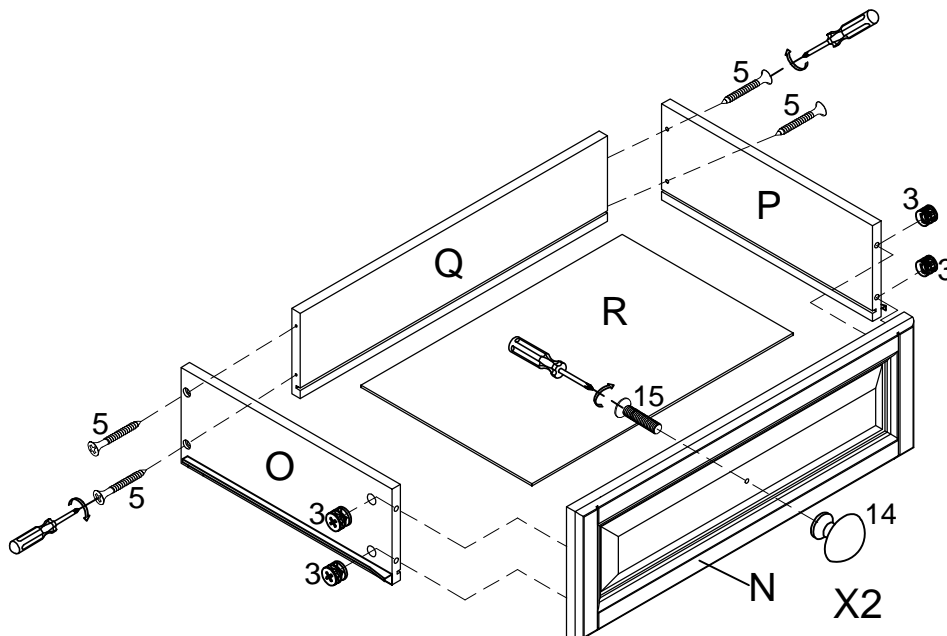
- a) Position Drawer Back Panel (Q) between Drawer Left & Right Panel (O & P) as shown. Check that the groove on (O, P & Q) are aligned and use Screw (5) to fasten (O & P) to (Q).
- b) Fit Drawer Bottom Panel (R) via groove on (O, P & Q).
- c) Attach Drawer Front Panel (N) from STEP 3 to (O & P) via cam-bolts on (Q). Next, insert Cam-lock (3) into designated holes on (O & P) and turn clockwise to lock onto cam-bolt. Refer to Page 4 for instructions on inserting and tightening cam-lock.
- d) Use Handle Bolt (15) to fasten Handle (14) to Front Panel (N).



③  8PCS

⑤  8PCS

 
⑭  2PCS




⑮  2PCS

ASSEMBLY INSTRUCTIONS
KITCHEN CART ITEM# 63000

STEP 3

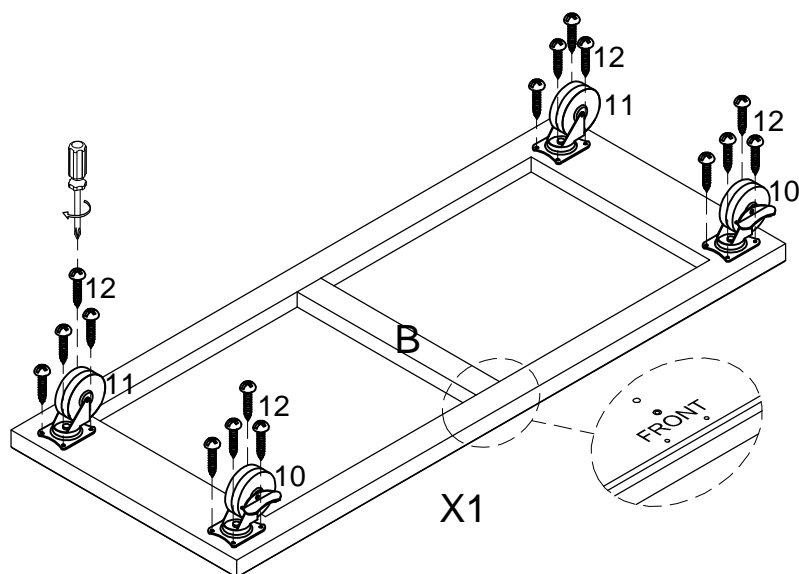
- a) Lay Bottom Panel (B) bottom-side up as shown and use Screw (12) to fasten Casters (10 & 11). Note: the placement of Casters with Lock (10) are at the front edge of (B). Do not tighten the screws completely until all of the screws are in place on each caster.




⑩		2PCS
⑪		2PCS
⑫		16PCS

STEP 4

 - a) Lay Bottom Panel (B) right-side up as shown and Screw in Cam-bolt (1) into designated holes.

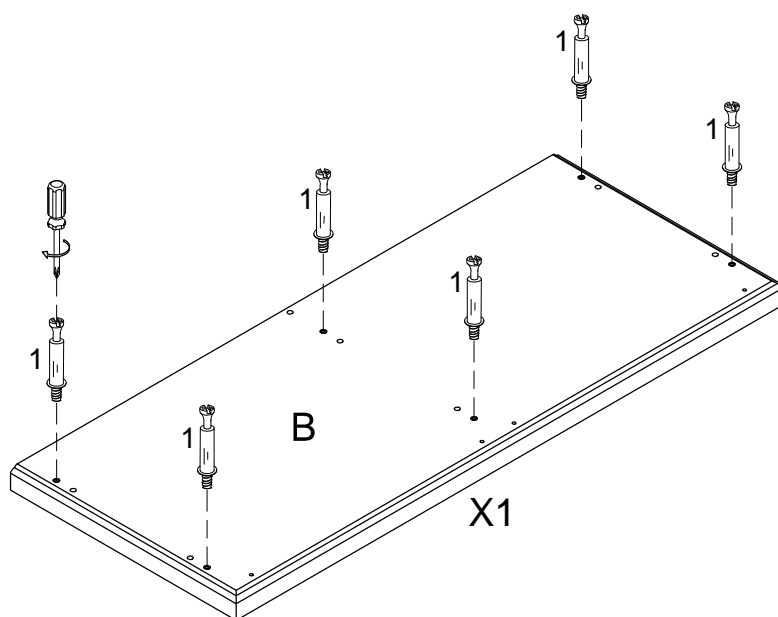


①		6PCS
---	---------------------------------------------------------------------------------------	------

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 5

 - a) Insert Wood Dowel (2) into the inner holes beside cam-bolt on Bottom Panel (B).
- b) Attach Left and Right Panel (C & D) to Bottom Panel (B) via cam-bolt and wood dowel on (B).
- c) Insert Cam-lock (3) into designated holes on (C & D) and turn cam-lock clockwise to lock onto cam-bolt.

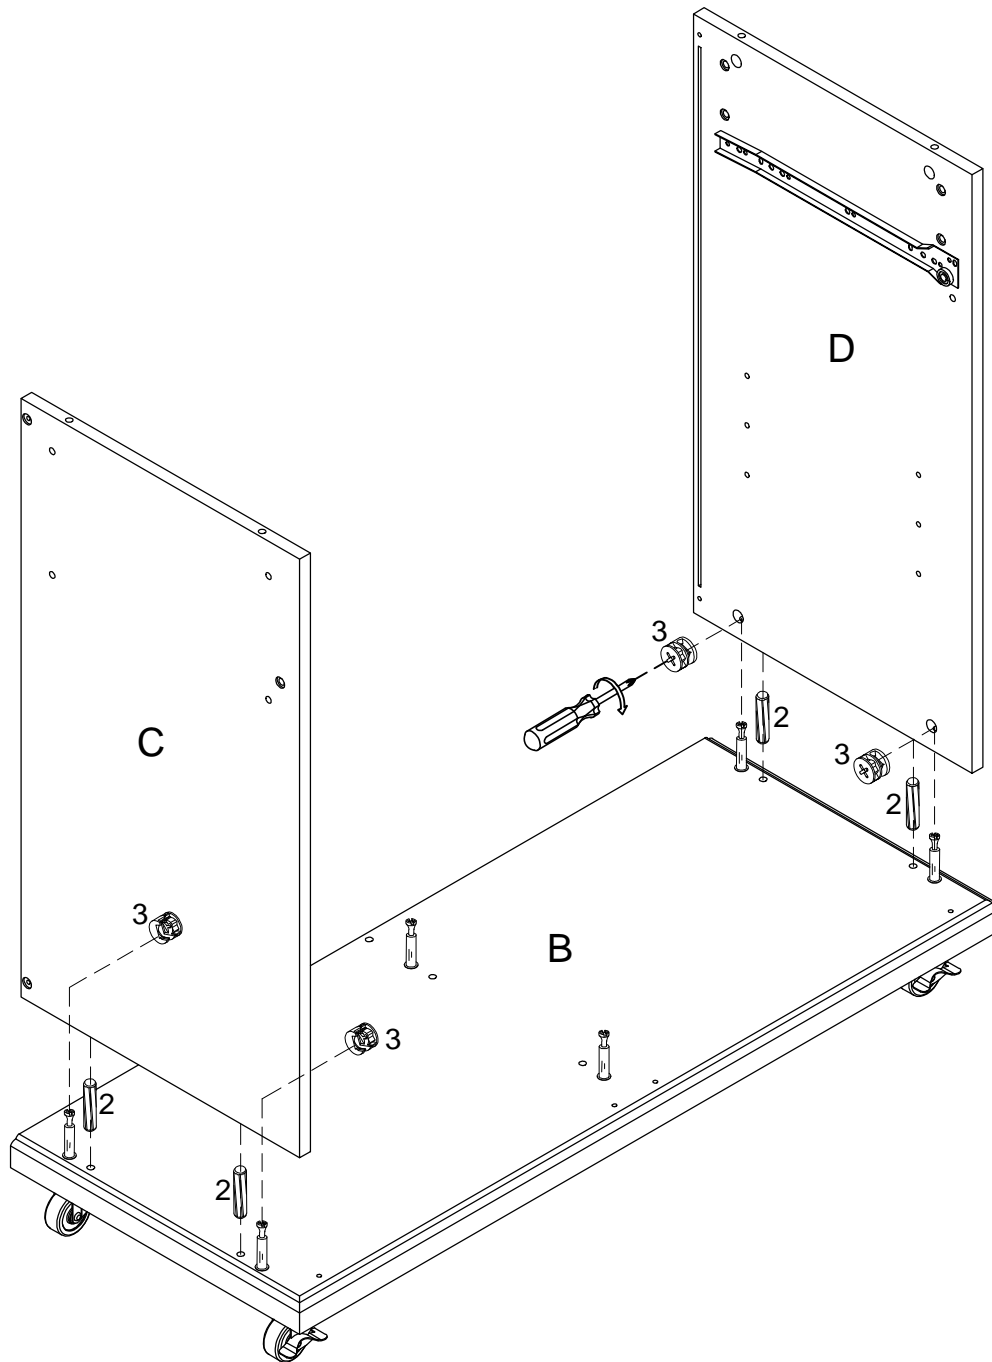


- | | | |
|---|--|------|
| ② | | 4PCS |
| ③ | | 4PCS |

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 6

 
- Insert Wood Dowel (2) into designated holes on Bottom Panel (B) as shown.
- Attach Back Bottom Rail (I) to (B) via wood dowel.
- Insert Barrel Nut (4) into designated hole on Back Bottom Rail (I). Refer to Page 4 for instructions on installing Barrel Nut.
- Insert Screw (8) through the designated hole on (C & D) to screw onto barrel nut.

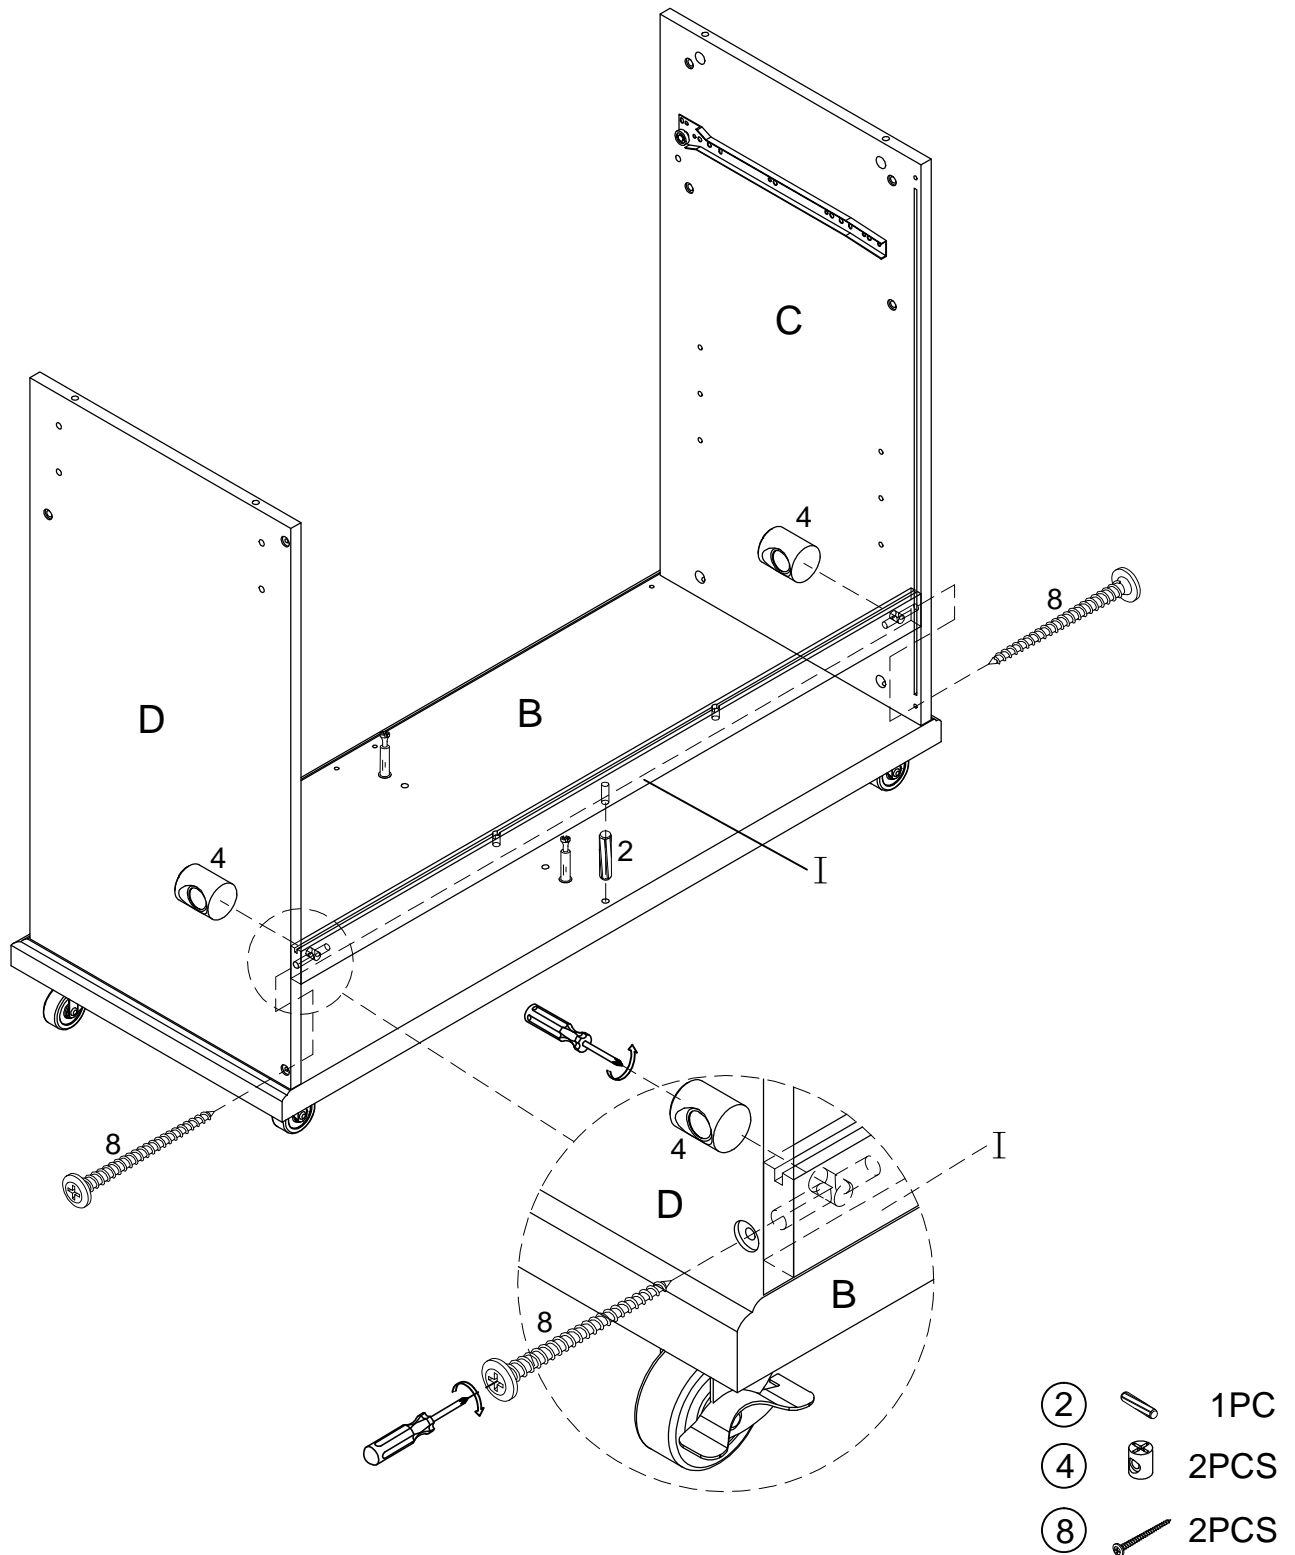



ASSEMBLY INSTRUCTIONS
KITCHEN CART ITEM# 63000

 STEP 7

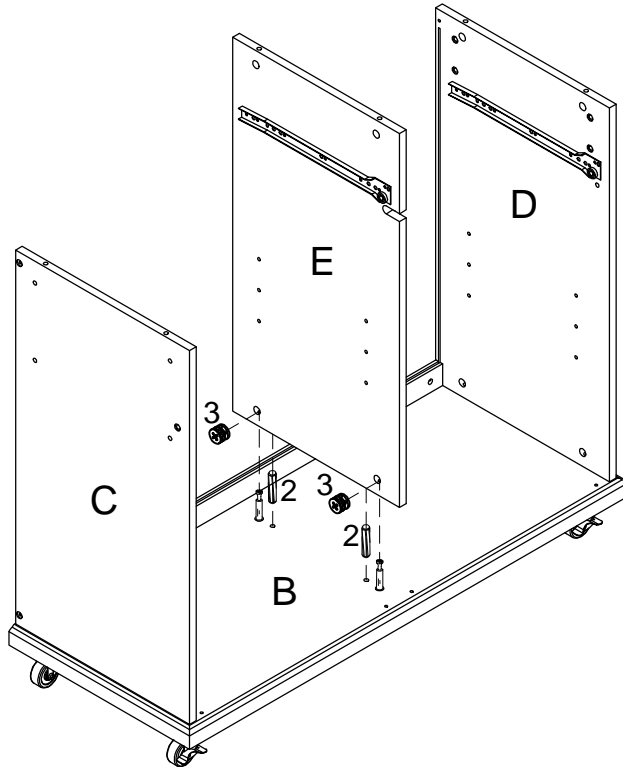
- a) Insert Wood Dowel (2) into the inner holes between the com-bolts on Bottom Panel (B) and attach Middle Panel (E). Next, insert Cam-lock (3) into designated holes on (E) and turn cam-lock clockwise to lock onto cam-bolt.




- ②  2PCS
③  2PCS

STEP 8

 - a) Insert Wood Dowel (2) into designated holes on Back Bottom Rail (I) and attach Back Post (J) to (I) via wood dowels.

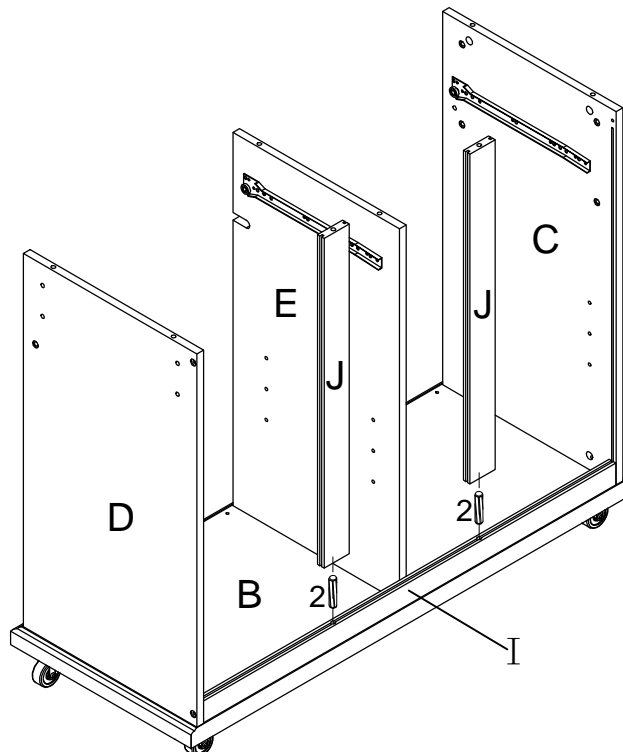


- ②  2PCS

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 9

 
Note: The 3 pieces of Back Panel are of the same size. They are named Right, Center & Left for the convenience of calling out each piece during the assembly process.

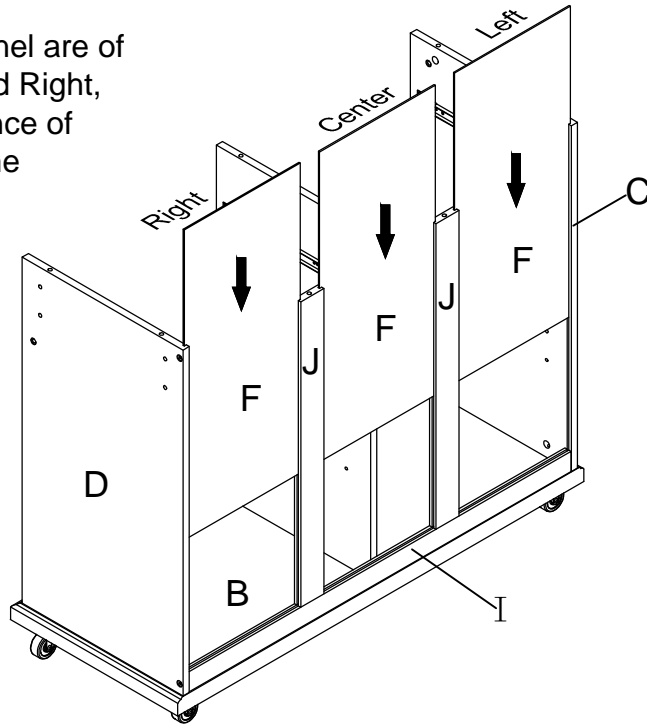

- Fit Right Back Panel (F) via groove on Right Panel (E) and Back Post (J).
 - Fit Center Back Panel (F) via groove on Back Post (J).
 - Fit Left Back Panel (G) via groove on Left Panel (D) and Back Post (J).
- Check that the bottom edge of each piece of Back Panel fits into the groove on Back Bottom Rail (L).

STEP 10

 
- Insert Wood Dowel (2) into designated hole on both Back Post (J) and attach Back Top Rail (H) to (J).
- Insert Barrel Nut (4) into designated hole on (H) and insert Screw (8) through the designated hole on (D & C) to screw onto barrel nut. Do not tighten (8) completely until both screws are threaded into the barrel nut.

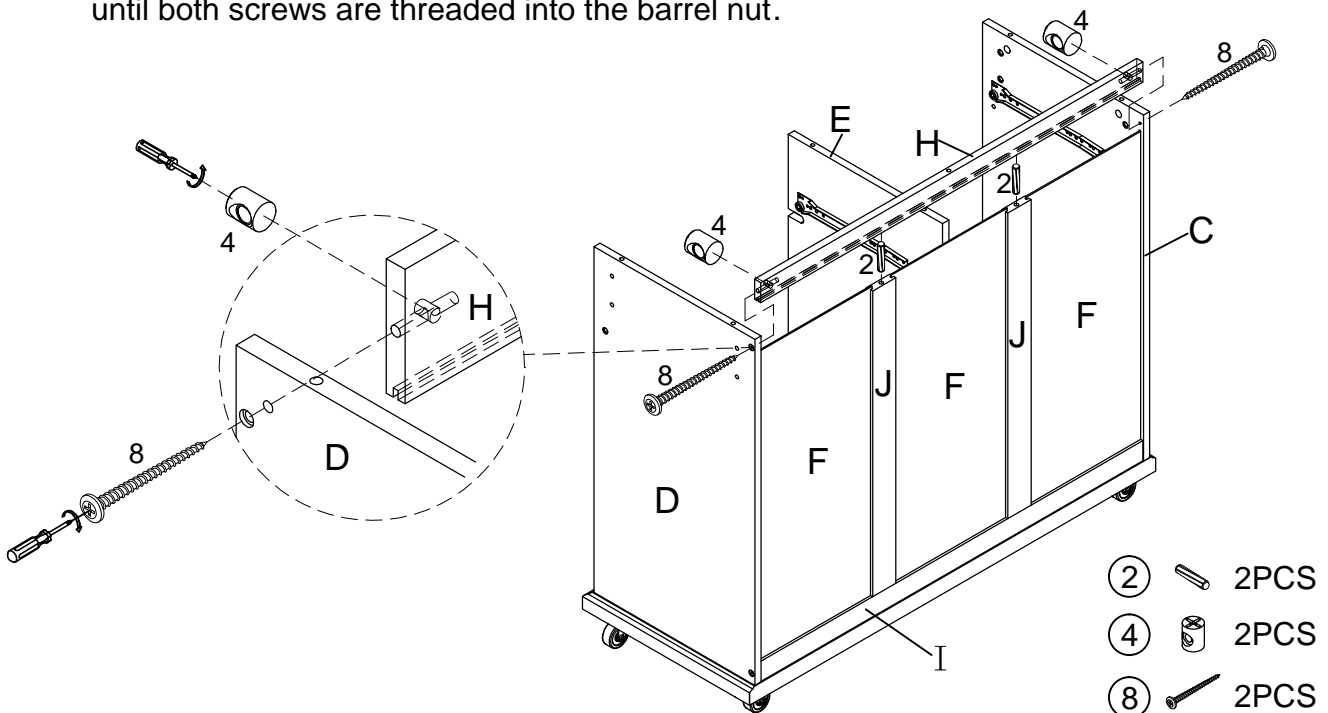

ASSEMBLY INSTRUCTIONS **KITCHEN CART ITEM# 63000**


STEP 11

 - a) Lay Front Center Rail (G) as shown and use Screw (13) to fasten Door Magnet (9) into the pilot holes as shown.

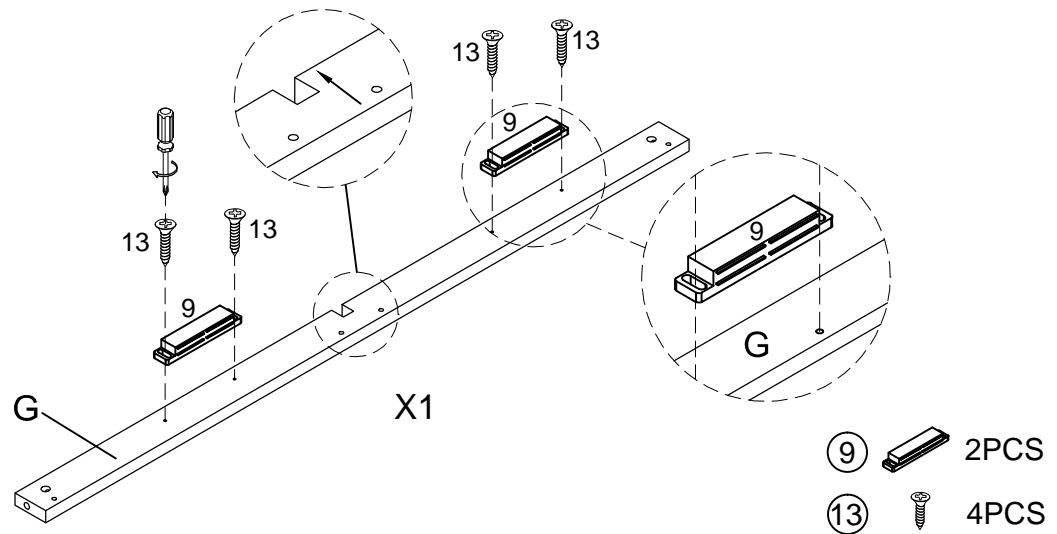

STEP 12

 - a) Fit Front Center Rail (G) to Middle Panel (E) by mating the crossed edge half lap on (G) to (E).
 b) Insert Barrel Nut (4) into designated hole on bottom side of (G).
 c) Insert Screw (8) through the designated hole on (C & D) to screw into barrel nut. Do not tighten (8) until both screws are threaded into the barrel nut.

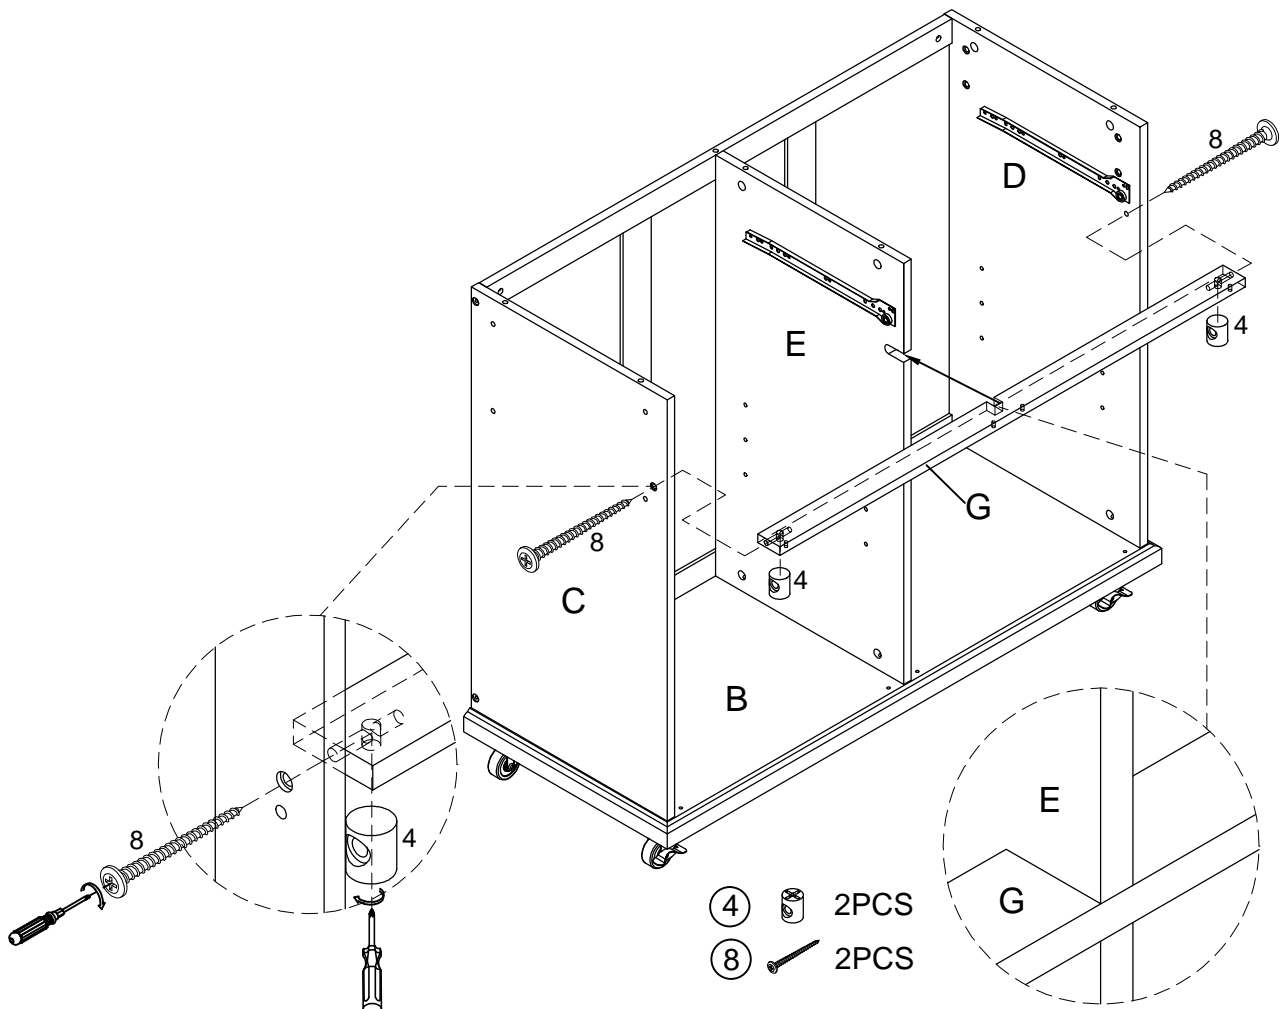


ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 13

 - a) Use Screw (7) to fasten Towel Rack Support (S) to Right Panel (D). Do not tighten (7) until both screws are in place on (S). Next, insert Towel Rod (T) to fit on the Towel Rack Support.
- b) Use Screw (7) to loosely fasten Spice Rack Left & Right Support (U & V) to Left Panel (C). Next, fit Spice Rack Bottom Panel (W) and Bar (X) between (U & V) and tighten Screw (7).

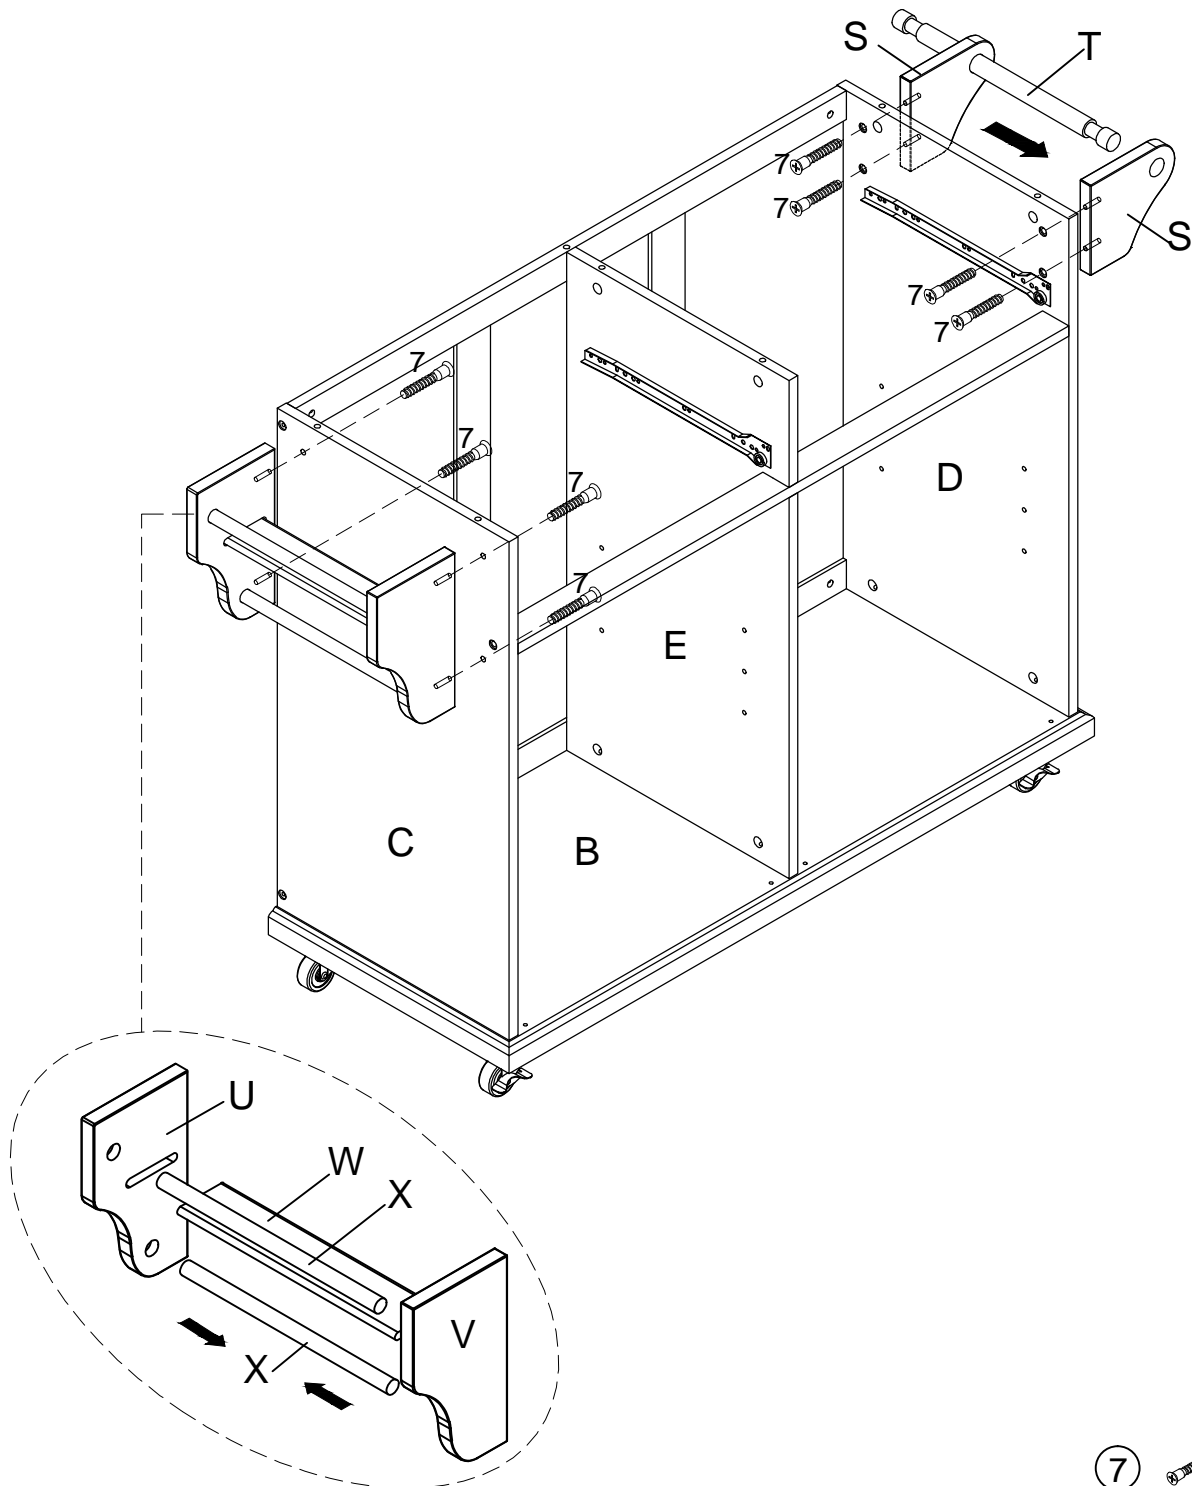


⑦ 8PCS

ASSEMBLY INSTRUCTIONS
KITCHEN CART ITEM# 63000

STEP 14

 - a) Lay Top Panel (A) bottom-side up as shown on a material that does not scratch or damage the part.
- b) Screw in Cam-bolt (1) into designated holes as shown. Refer to Page 4 for instructions to screw in and tighten Cam-bolt.

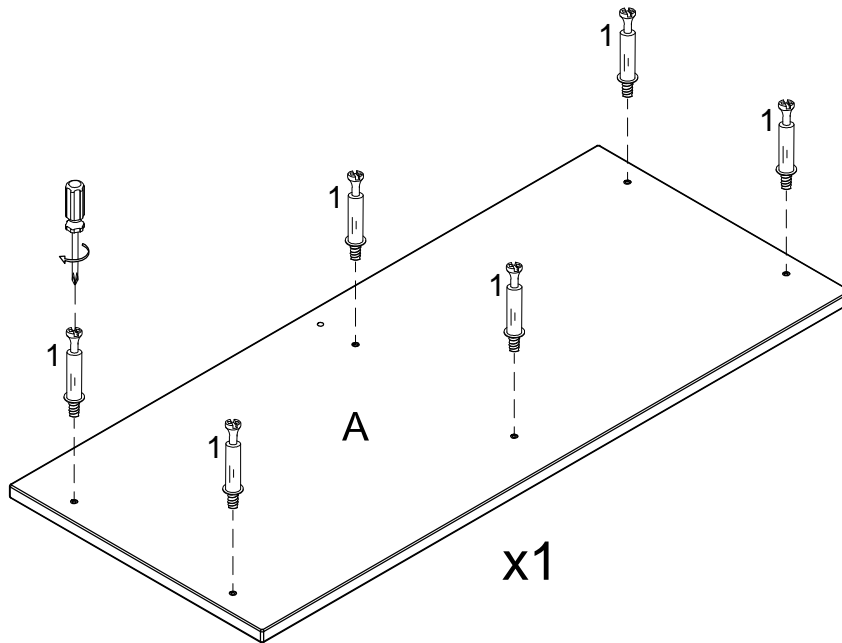


① 6PCS

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 15

 - a) Insert Wood Dowel (2) into designated holes on top edge of Back Top Rail (H).
- b) With assistance, attach Top Panel (A) from STEP 1 to Left Panel (C), Right Panel (D), Middle Panel (E) and Back Top Rail (H) via cam-bolts and wood dowels on (A) and (H), respectively.
- c) Insert Cam-lock (3) into designated holes on (C, D & E) and turn clockwise to lock onto Cam-bolt to fasten (A).

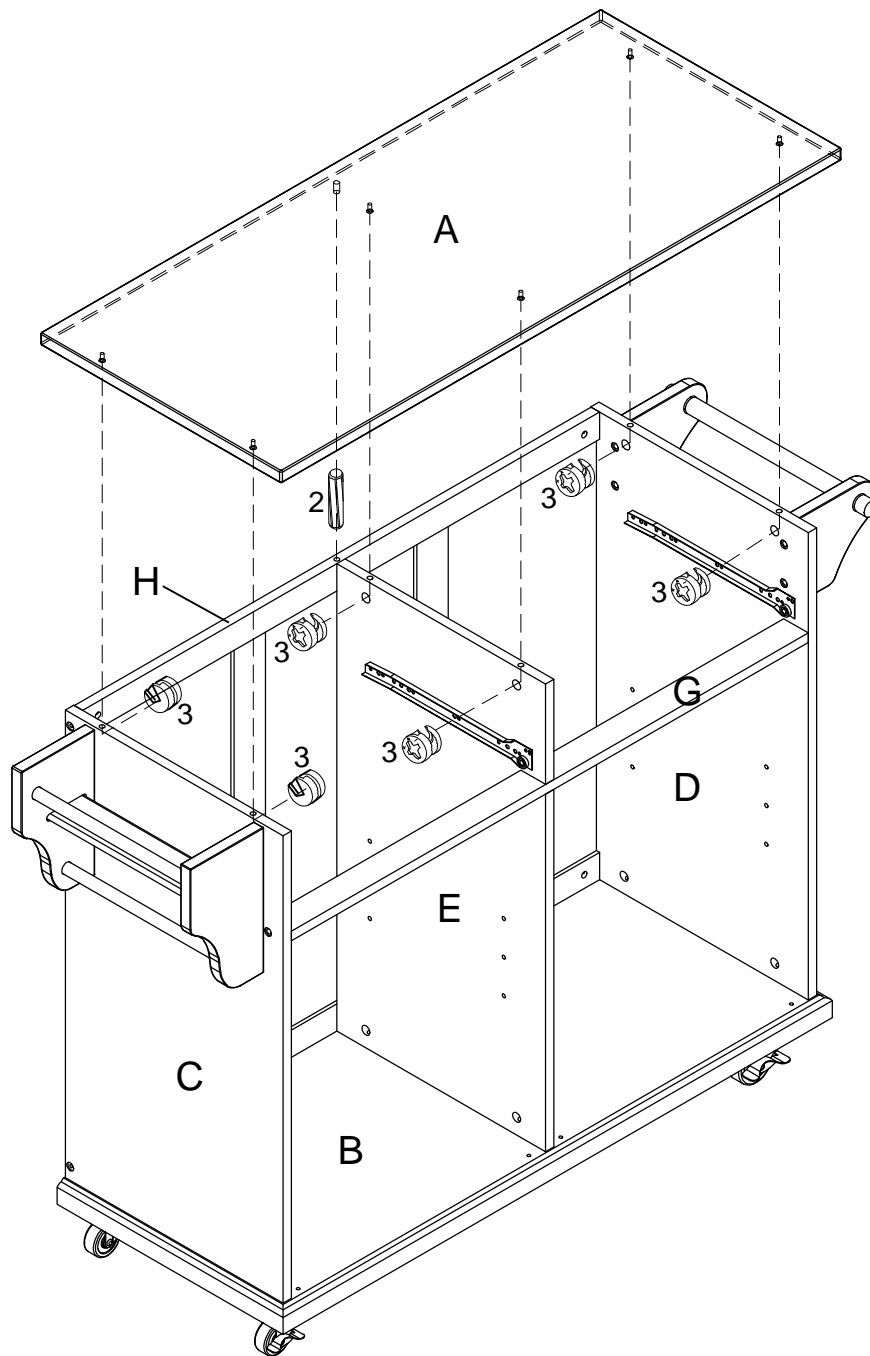


- | | | |
|---|--|------|
| ② | | 1PC |
| ③ | | 6PCS |

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 16

 - Insert Shelf Holder (6) into the designated holes on the same level at the desired height on Left and Middle Panel (C & E) and Right and Middle Panel (D & E).
- Place Shelf (K) by tilting it to fit between the vertical panels and then level it to sit on Shelf Holder (6).
- Insert Left and Right Door (L & M) by inserting the fixed Pin on bottom of door into the Pin Pivot Cavity on Bottom Panel. Next, depress the Pin on the top edge of Door and then releasing the Pin to be inserted into the Pin Pivot Cavity on the bottom side of Front Center Rail (G).
- Use Handle Bolt (15) to affix Handle (14) to (L & M).

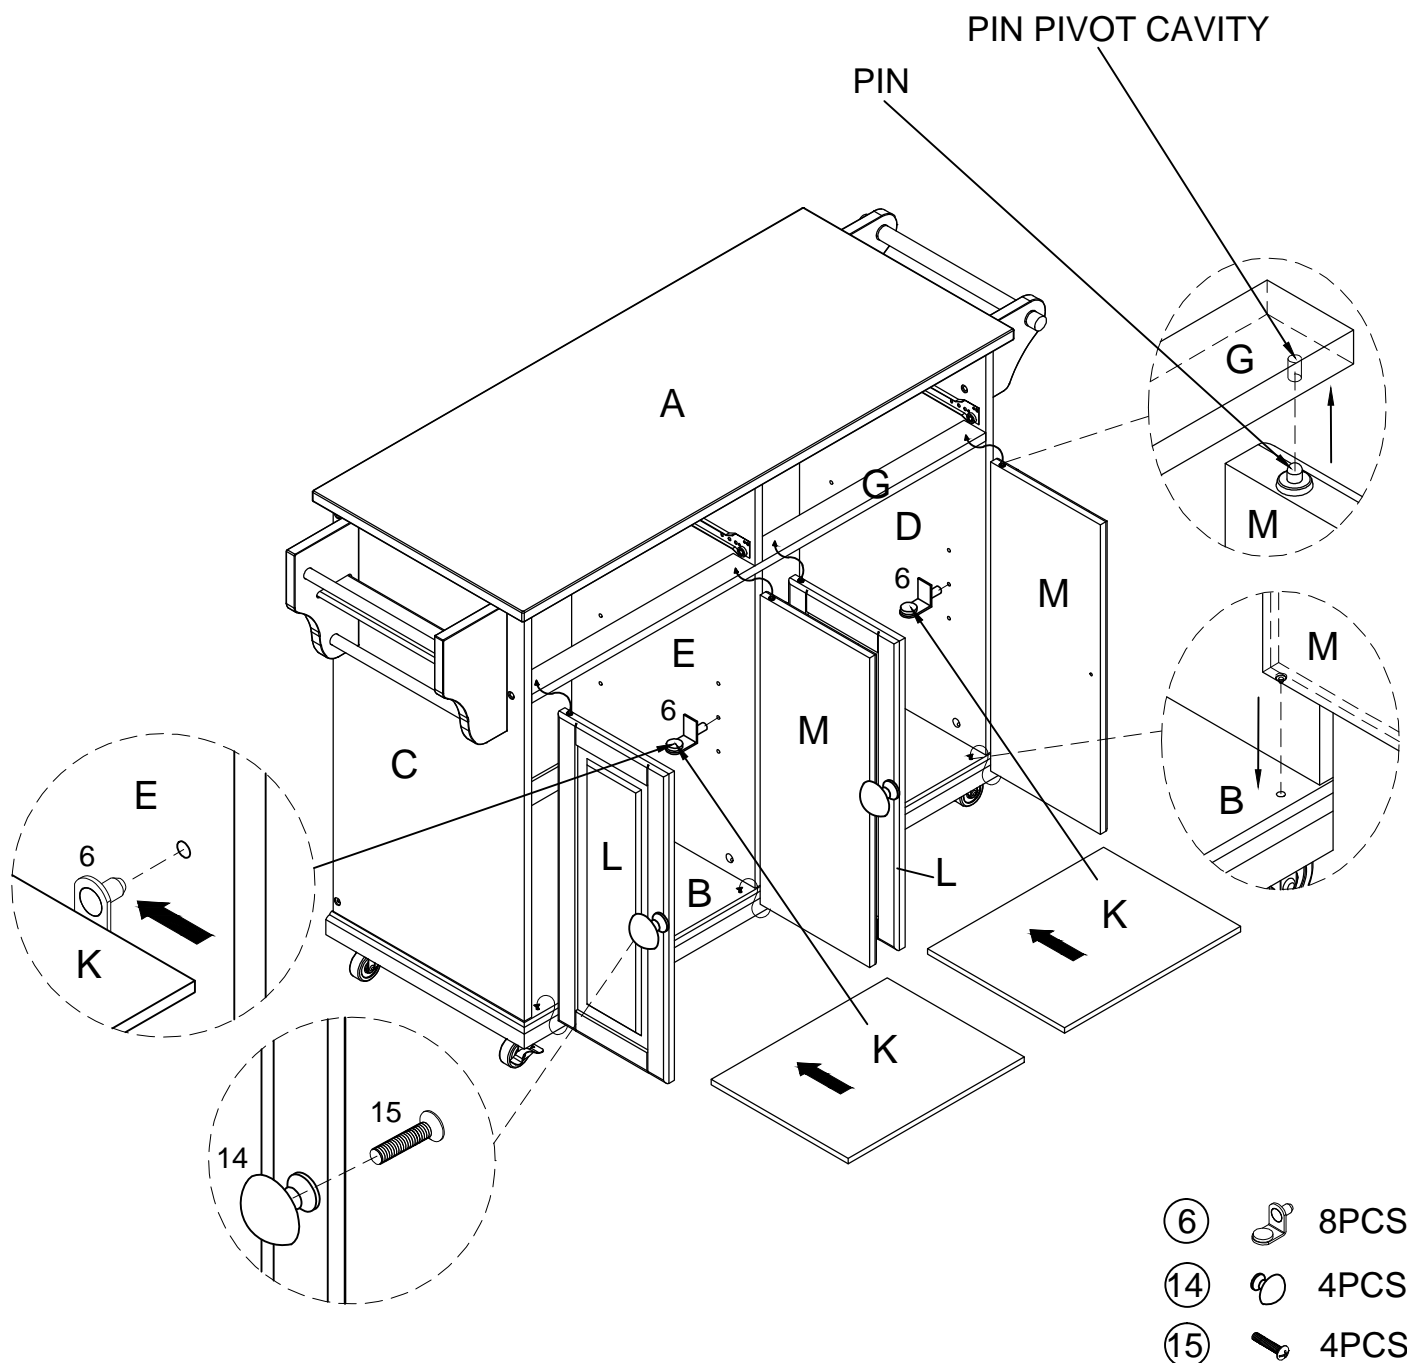

ASSEMBLY INSTRUCTIONS

KITCHEN CART ITEM# 63000

STEP 17

Insert the drawers.

To insert drawer:

- a) Align and position rollers on the Drawer Runner (that is fastened to the drawer) above the rollers on the Drawer Tracks (located on the Left, Right and Middle Panel).
- b) Lift the Back Panel end of the drawer slightly upward to position and slide the rollers on the Drawer Runner into the Drawer Tracks, and then push in the drawer squarely and gently.

The assembly of the cart is complete.

