 



INSTALLATION MANUAL

ELECTRIC SIT-STAND DESK



min 730mm
max 1200mm

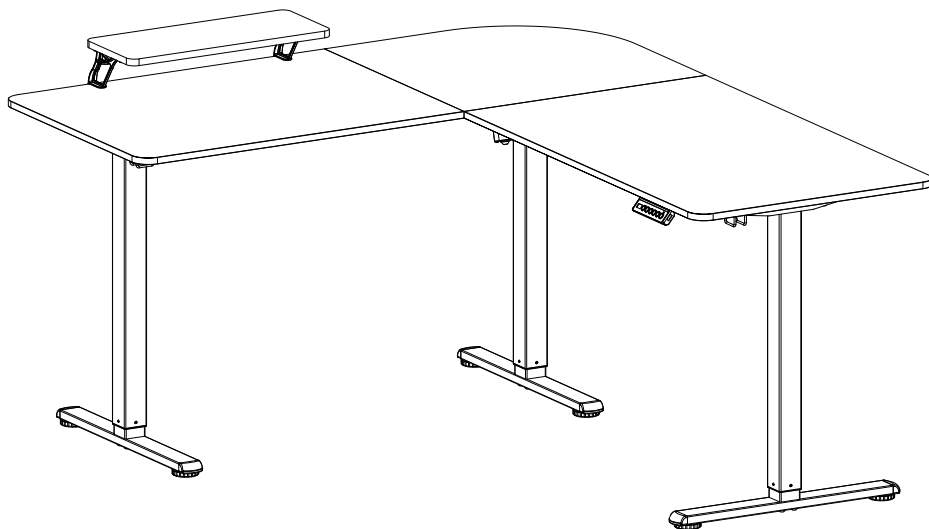

80kg(176lbs)

EN Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact our online after-sale service for help.

- CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Mounts must be attached as specified in assembly instructions. Improper installation may result in damage or serious personal injury.
 - Safety gear and proper tools must be used. This product should only be installed by professionals.
 - Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
 - Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
 - This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
 - This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, please contact our online after-sale service for help.
- MAINTENANCE:** Check that the bracket is secure and safe to use at regular intervals (at least every three months).

DE Bitte vor Beginn der Montage und Zusammenbau das ganze Handbuch durchlesen. Bitte sich mit dem Händler vor Ort bei Fragen zur Anleitung oder Warnungen in Verbindung setzen.

- VORSICHT:** Bei Verwendung mit Produkten, die das zulässige Gewicht überschreiten, können Schäden oder möglicherweise Verletzungen die Folge sein.
- Halterungen sollen entsprechend den Montageanweisungen angebracht werden. Eine unsachgemäße Montage kann Schäden oder Verletzungen zur Folge haben.
 - Sicherheitsausrüstung und geeignete Werkzeuge verwenden. Die Montage des Produktes sollte nur von Fachleuten durchgeführt werden.
 - Die tragenden Oberflächen sollen das gesamte Gewicht von Geräten und allen zusätzlichen Bauteilen sicher aushalten können.
 - Nur die mitgelieferten Einbauschrauben verwenden und die Schrauben NICHT ZU FEST ANZIEHEN.
 - Dieses Produkt enthält Kleinteile, die Erstickungsgefahr beim Verschlucken hervorrufen können. Diese Teile von Kindern fernhalten.
 - Dieses Produkt nur in Innenräumen verwenden. Verwendung des Produktes im Außenbereich kann zu Verletzungen und Schäden führen.
- WICHTIG:** Vor der Montage bitte alle erhaltenen Bauteile mit der Bauteilliste abgleichen. Bei beschädigten oder fehlenden Teilen den Händler vor Ort nach Ersatzteilen fragen.
- WARTUNG:** Die Halterungsklammer regelmäßig auf Sicherheit und Stabilität prüfen (am besten alle drei Monate).

FR Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.

- ATTENTION:** L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.
- Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.
 - Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
 - Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composants associés.
 - Utilisez les vis de montage fournies et NE SÉRREZ PAS TROP les vis de montage.
 - Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
 - Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une défaillance du produit ou des blessures aux personnes.
- IMPORTANT:** Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.
- MAINTENANCE:** À intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable.

ES Lea todo el manual de instrucciones antes de iniciar la instalación y el montaje. Si tiene alguna duda o advertencia, póngase en contacto con el servicio postventa en línea para obtener ayuda.

- PRECAUCIÓN:** El uso con productos más pesados que los pesos nominales indicados puede provocar inestabilidad y causar posibles lesiones.
- Los soportes deben fijarse como se especifica en las instrucciones de montaje. Una instalación incorrecta puede provocar daños o lesiones personales graves.
 - Debe utilizarse equipo de seguridad y herramientas adecuadas. Este producto sólo debe ser instalado por profesionales.
 - Asegúrese de que la superficie de apoyo soporta con seguridad el peso combinado del equipo y de todos los herrajes y componentes fijados.
 - Utilice los tornillos de montaje suministrados y NO APRIETE EN EXCESO los tornillos de montaje.
 - Este producto contiene elementos pequeños que pueden suponer un riesgo de asfixia si se ingieren. Manténgalos fuera del alcance de los niños.
- IMPORTANTE:** Asegúrese de haber recibido todas las piezas de acuerdo con la lista de comprobación de componentes antes de la instalación. Si falta alguna pieza o está defectuosa, póngase en contacto con nuestro servicio postventa en línea para obtener ayuda.
- MANTENIMIENTO:** Compruebe que el soporte está bien sujeto y sea seguro de usar a intervalos regulares (al menos cada tres meses).

IT Leggere l'intero manuale di istruzioni prima di iniziare l'installazione e il montaggio. In caso di domande o avvertenze, contattare il servizio di assistenza online.

- ATTENZIONE:** l'uso con prodotti di peso superiore a quello nominale indicato può causare instabilità e possibili lesioni.
- I supporti devono essere fissati come specificato nelle istruzioni di montaggio. Un'installazione non corretta può causare danni o gravi lesioni personali.
 - È necessario utilizzare attrezzature di sicurezza e strumenti adeguati. Questo prodotto deve essere installato solo da professionisti.
 - Assicurarsi che la superficie di supporto sia in grado di sostenere il modo sicuro il peso combinato dell'apparecchiatura e di tutti i componenti e l'hardware collegati.
 - Utilizzare le viti di montaggio fornite e non serrare eccessivamente le viti di montaggio.
 - Questo prodotto contiene piccoli elementi che possono costituire un rischio di soffocamento se ingeriti. Tenere questi oggetti lontano dalla portata dei bambini.
 - Questo prodotto è destinato esclusivamente all'uso interno. L'uso del prodotto all'aperto può causare guasti e lesioni personali.
- IMPORTANTE:** prima di procedere all'installazione, accertarsi di aver ricevuto tutti i componenti secondo la lista di controllo dei componenti.
- In caso di parti mancanti o difettose, contattare il nostro servizio di assistenza online.
- MANUTENZIONE:** verificare che la staffa sia sicura e che possa essere utilizzata a intervalli regolari (almeno ogni tre mesi).

NL Lees de volledige handleiding voordat u begint met de installatie en montage. Als u vragen of waarschuwingen hebt, neem dan contact op met uw online klantenservice voor hulp.

- LET OP:** Gebruik met producten die zwaarder zijn dan de aangegeven gewichten kan leiden tot instabiliteit en mogelijk letsel.
- Bevestigingen moeten worden bevestigd zoals aangegeven in de montagehandleiding. Onjuiste installatie kan leiden tot schade of ernstig persoonlijk letsel.
 - Veiligheidsuitrusting en geschikt gereedschap moeten worden gebruikt. Dit product mag alleen door professionals worden geïnstalleerd.
 - Zorg ervoor dat het draagvlak het gecombineerde gewicht van de apparatuur en alle bevestigde hardware en onderdelen veilig kan dragen.
 - Gebruik de bijgeleverde montageschroeven en haal ze NIET te strak aan.
 - Dit product bevat kleine onderdelen die bij onjuiste vastmakingsgevaar kunnen opleveren. Houd deze voorwerpen uit de buurt van kinderen.
- Dit product is alleen bedoeld voor gebruik binnenshuis. Gebruik van dit product buitenshuis kan leiden tot defecten aan het product en persoonlijk letsel.

BELANGRIJK: Controleer voor de installatie of je alle onderdelen hebt ontvangen volgens de onderdelenchecklist. Als er onderdelen ontbreken of defect zijn, neem dan contact op met onze online dienst na verkoop voor hulp.

 
ONDERHOUD: Controleer regelmatig (minstens om de drie maanden) of de beugel goed vastzit en veilig kan worden gebruikt.

RU Перед началом установки и сборки прочитайте руководство по установке. Если у Вас возникли какие-либо вопросы относительно инструкций или предупреждений, свяжитесь с Вашим локальным распространителем для получения помощи.


- ВНИМАНИЕ:** Использование продуктов, вес которых превышает указанный расчетный вес, может привести к нестабильности и в возможном повреждению.
- Опоры должны быть установлены, как это показано в монтажных инструкциях. Неправильная установка может привести к получению серьезных травм.
 - Необходимо использовать предостереженное устройство и специальные инструменты. Продукт должен устанавливаться только профессионалами.
 - Убедитесь, что несущая поверхность выдержит безопасный способ установки и комбинацию оборудования и комплектующих.
 - Необходимо использовать изделие в комплекте установочные шурупы и НЕ ПЕРЕТЯГИВАТЬ установочные шурупы.
 - Данный продукт содержит маленькие детали, которые представляют опасность удушья при проглатывании. Такие детали необходимо хранить в недоступном для детей месте.
 - Данный продукт предназначен только для эксплуатации в помещениях. Использование данного продукта на улице может привести к поломке продукта и получению травм.
- ВАЖНО:** Перед установкой убедитесь, что Вы получили все детали в соответствии со списком комплектующих. Если не хватает каких-либо деталей или они поломаны, свяжитесь с Вашим местным распространителем по вопросу замены.
- ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ:** Необходимо регулярно проверять (как минимум, раз в три месяца), чтобы кронштейн был зафиксирован, и его использование было безопасным.

PT Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre quaisquer uma das instruções ou avisos, por favor, entre em contato com o seu distribuidor local para assistência.


- ATENÇÃO:** O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos.
- Os suportes devem ser anexados como especificado nas instruções de montagem. A instalação incorreta pode causar danos ou sérias lesões pessoais.
 - Equipamentos de segurança e ferramentas adequadas devem ser utilizadas. Este produto só deve ser instalado por profissionais.
 - Certifique-se que a superfície de suporte suportará com segurança o peso combinado do equipamento e todas as ferragens e componentes anexados.
 - Use os parafusos de montagem fornecidos e NÃO APRIQUE EXCESSIVAMENTE os mesmos.
 - Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha estas itens longe do alcance de crianças.
 - Este produto destina-se somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto e lesões pessoais.
- IMPORTANTE:** Antes de começar a instalação, certifique-se de que você recebeu todas as peças, de acordo com a lista de componentes, antes da instalação. Se alguma peça estiver faltando ou é defeituosa, contate o seu distribuidor local para substituição.
- MANUTENÇÃO:** Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses).




B1(X1)

 


B2(X1)

 


B3(X1)

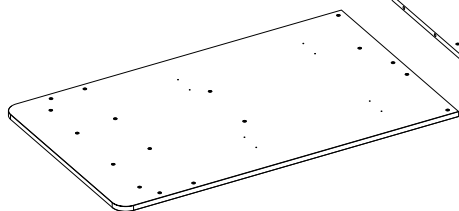


B4(X1)

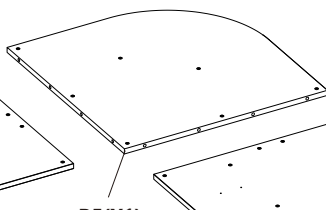

B5(X1)

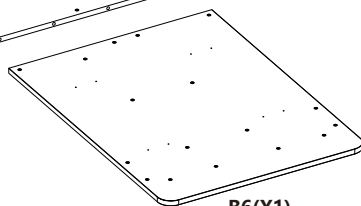

B6(X1)

 

B7(X3)



 
B8(X2)



B9(X2)



B10(X2)



B11(X1)



B12(X1)



B13(X1)



B14(X1)



B15(X4)



B16(X2)



B17(X1)



B18(X2)



B19(X2)

ax12



M6X10

bx12



M8X35

cx11



M6X12

dx18



M6X14

ex4



PWA4.2X13

fx4



M6X14

gx8



D8×40

hx1



M5

ix1




M18


jx5





1

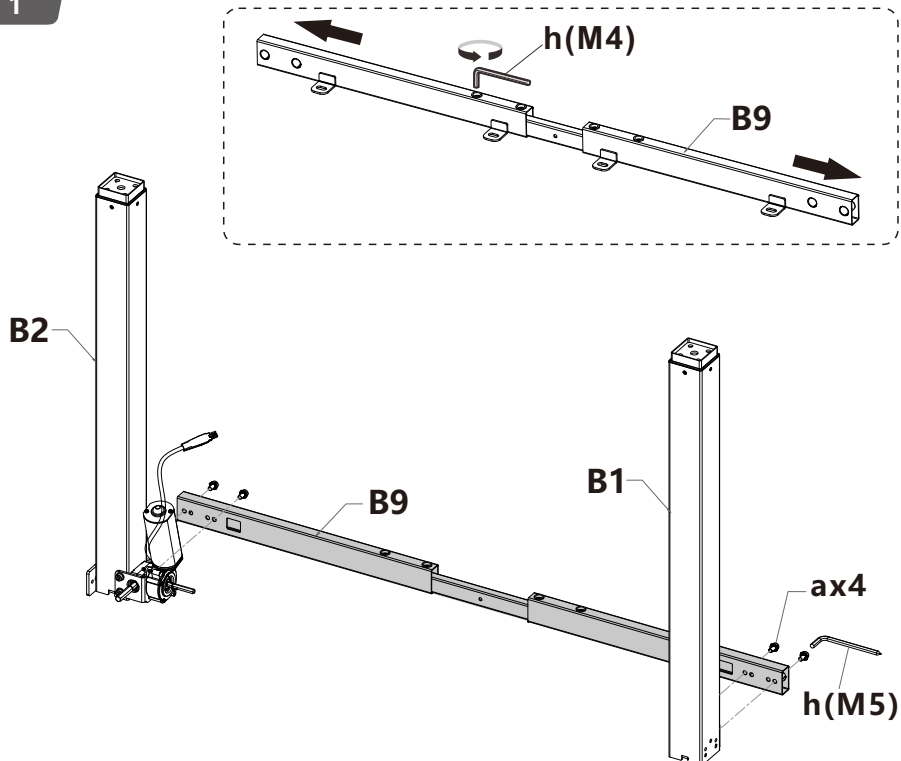


2

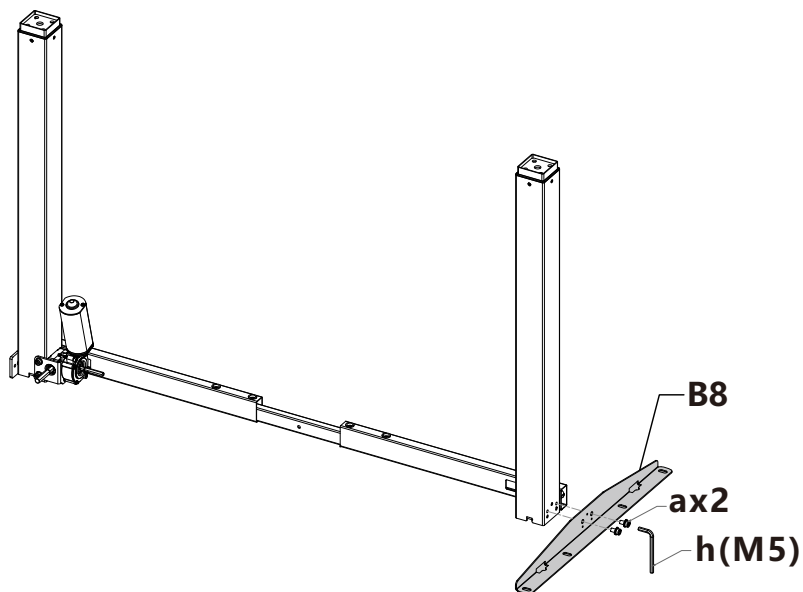


3

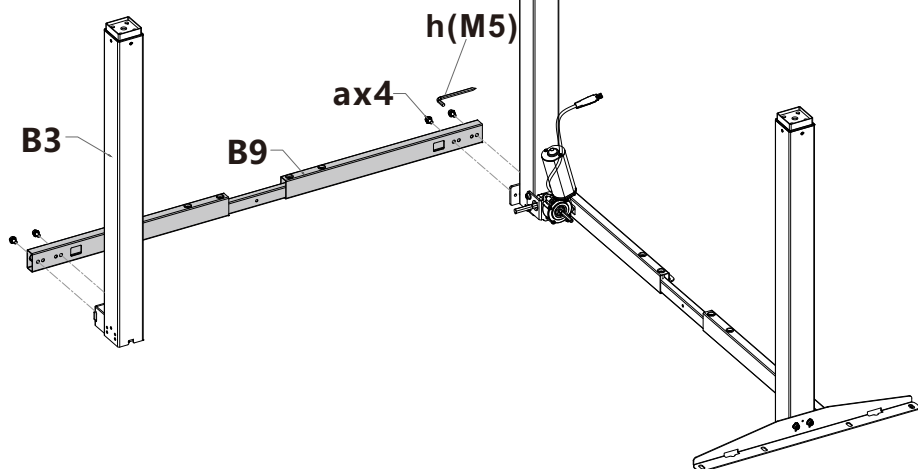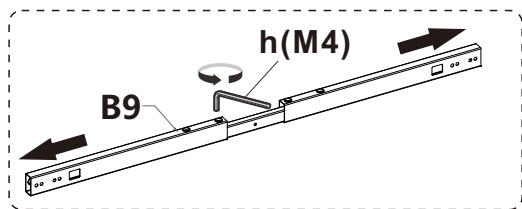

4

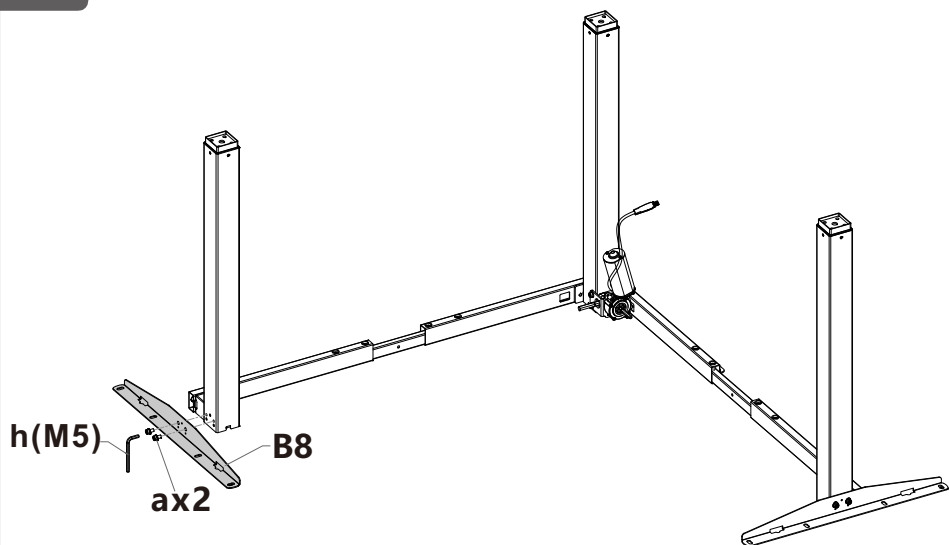

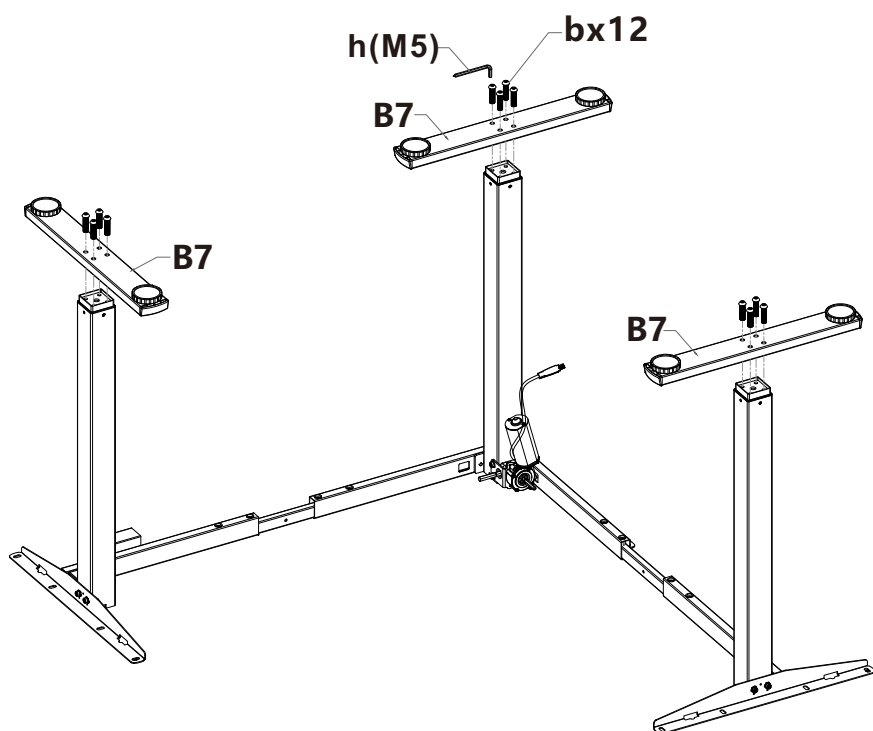


Assembly Options

This desk can be assembled with a **left or right** side extension. Please select an option and proceed with assembly.


Option A | Right Side Extension ➡ Page 7-13

Desk frame will extend out to right side, with a short left side.

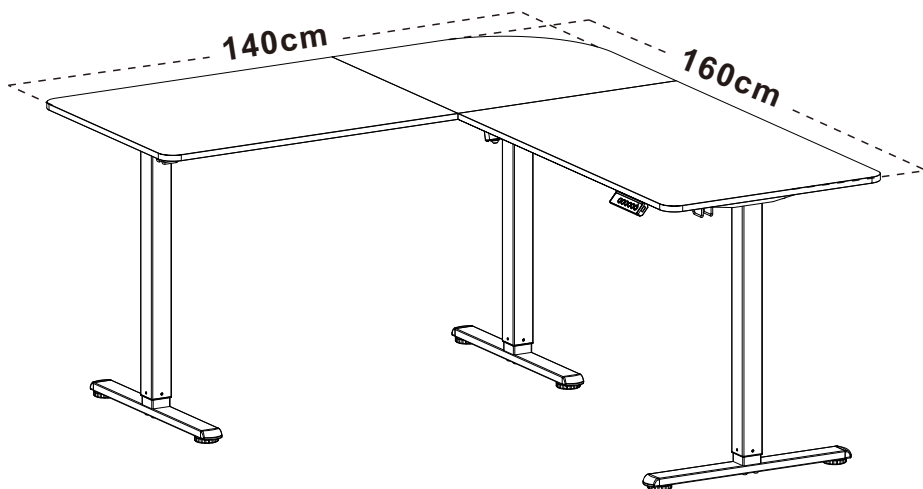



Option B | Left Side Extension ➡ Page 14-20


Desk frame will extend out to Left side, with a short right side.

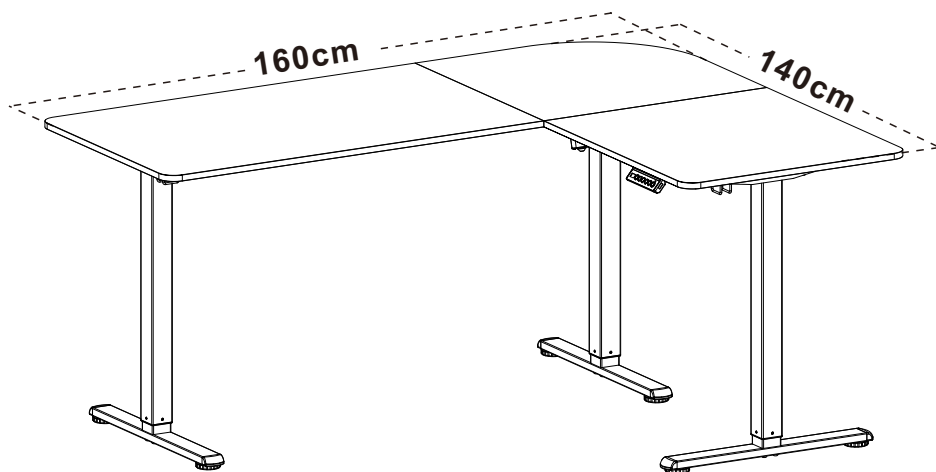


Option A | Right Side Extension ➔ **Page 7-13**


Desk frame will extend out to right side, with a short left side.

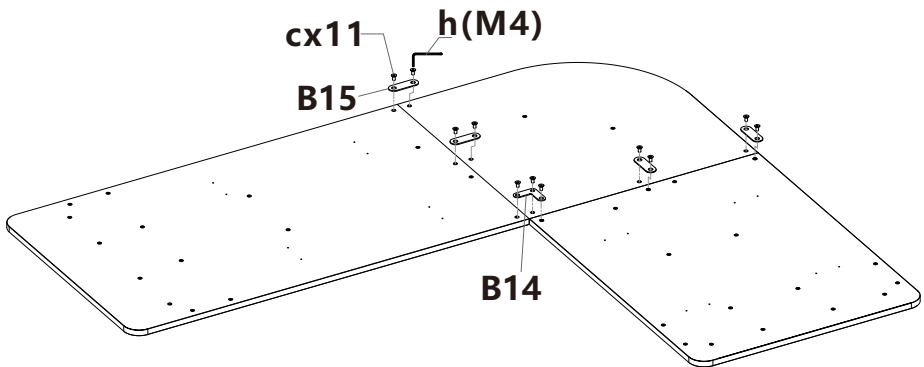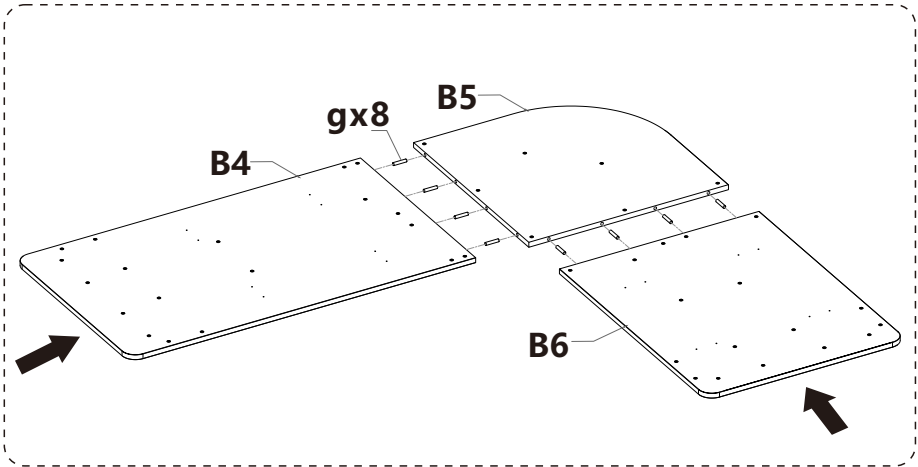

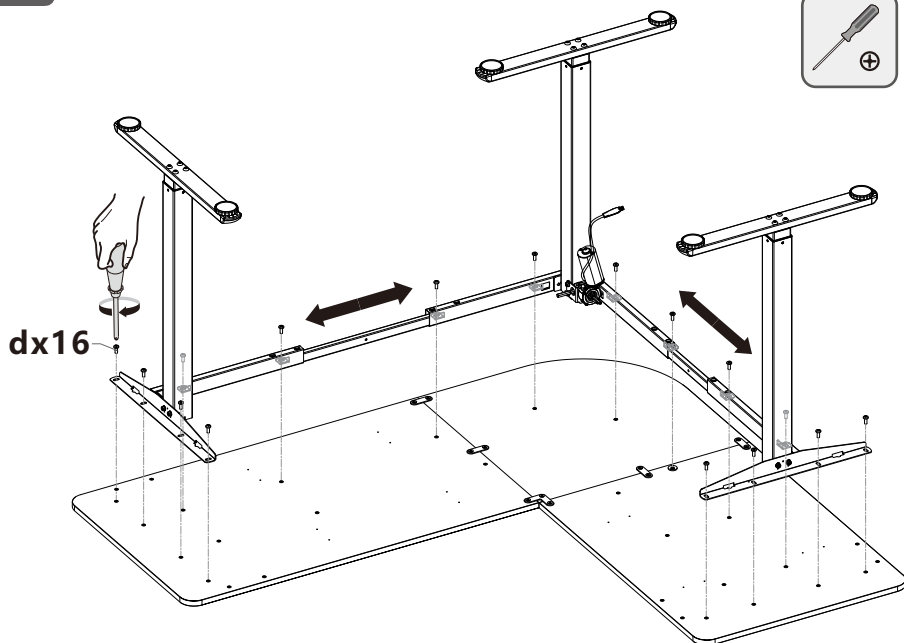

Note: Please pre-install 16 number “d” screws to the corresponding hole position, and then tighten them all in turn, finally use the “h(M4)” wrench to tighten the crossbar.

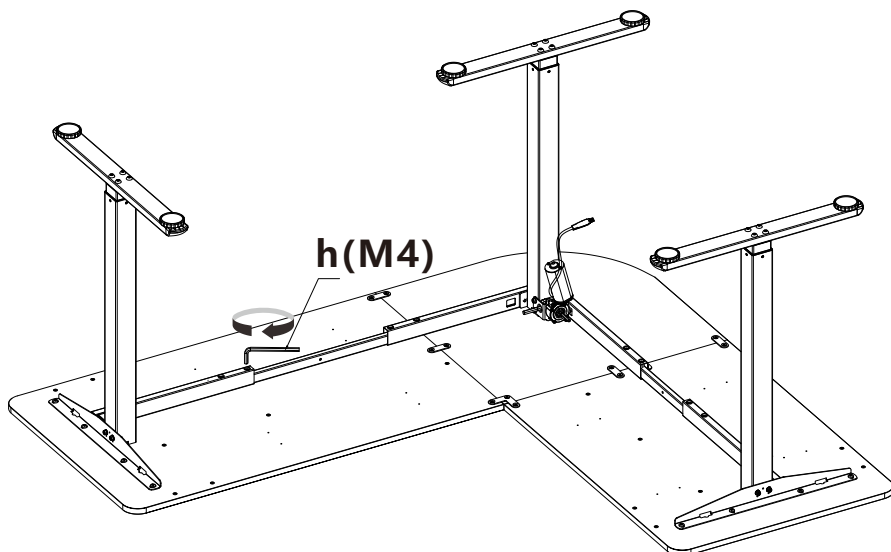

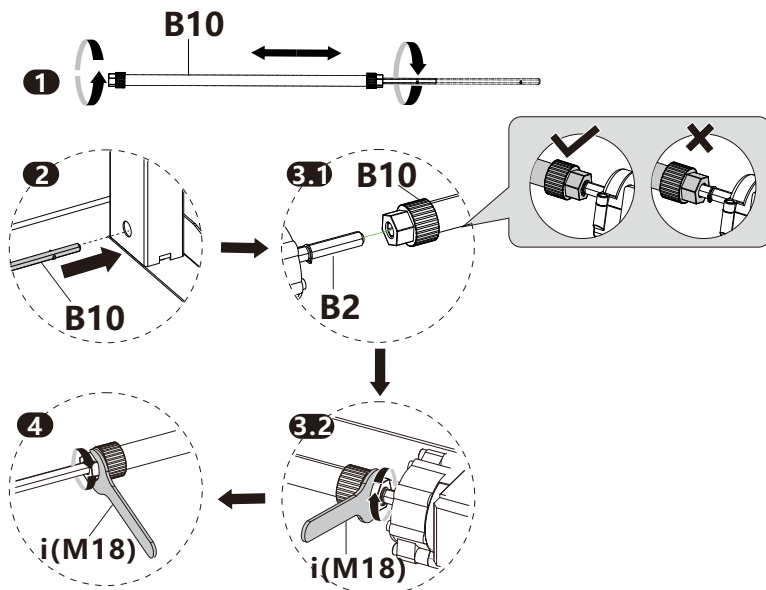




Note: Loosen the right plastic coupling nut on the sync rod (**B10**) and insert the hex shaft into the left and right legs (**B1**, **B3**).


Please make sure all three legs are the same height. If not, turn the sync lever (**B10**) clockwise to raise the corresponding outrigger, counterclockwise to lower.


Loosen the left plastic coupling nut on the sync rod (**B10**) and extend it to the motorized outrigger (**B2**).

Finally, tighten the plastic nuts on the left and right sides of the synchronization rod (**B10**).

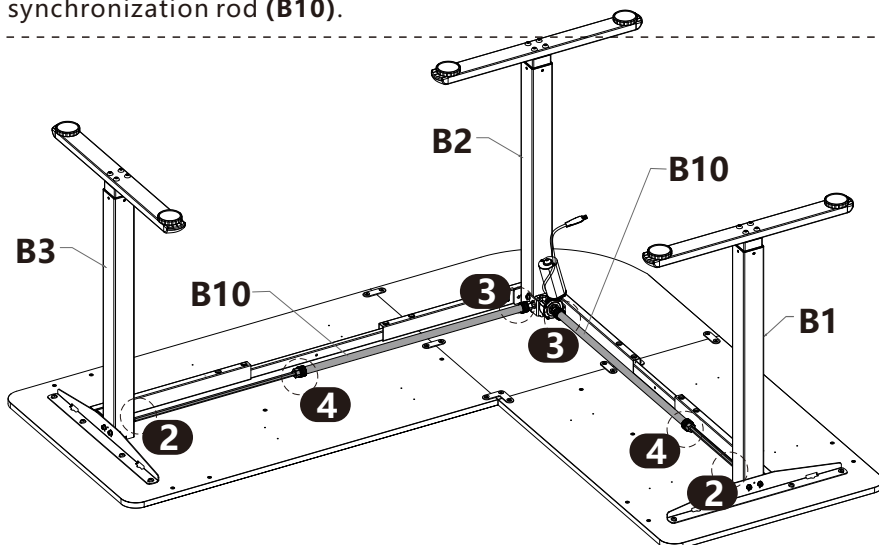


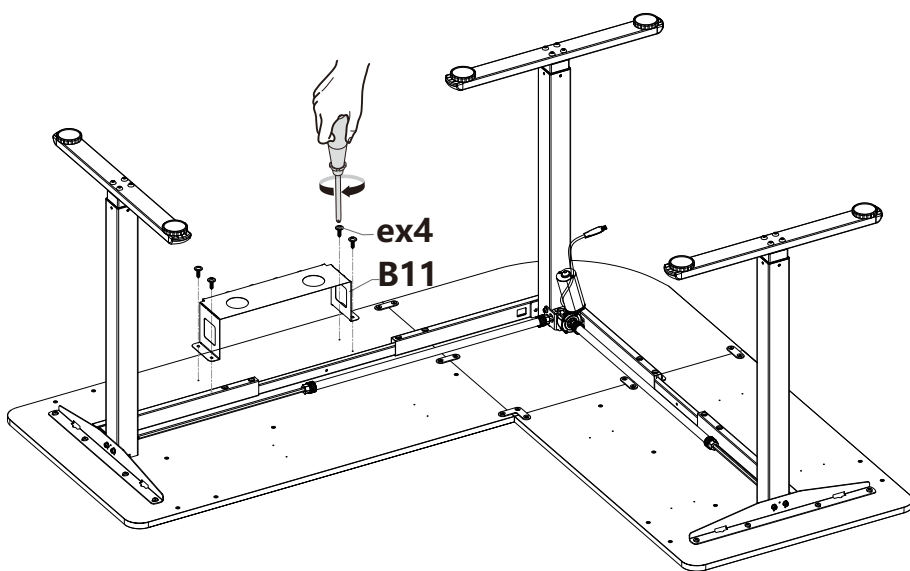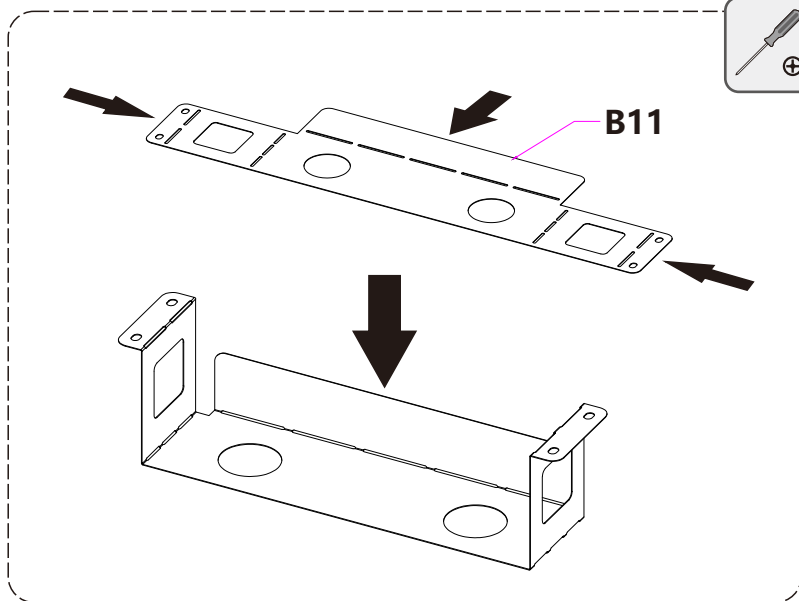

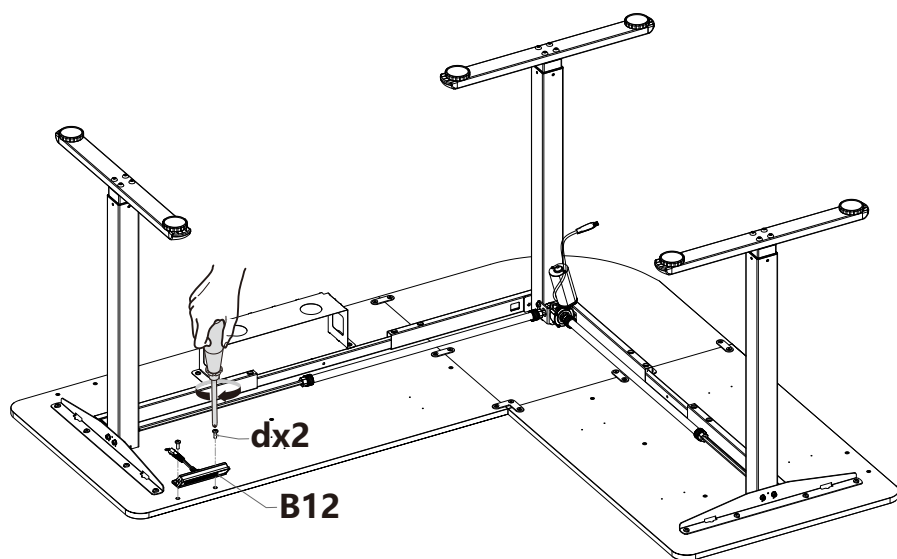


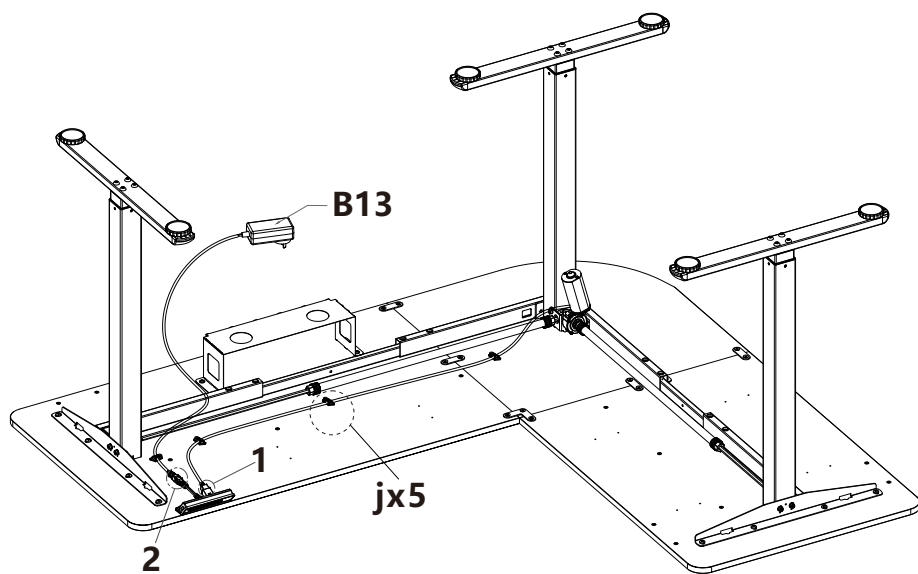


1

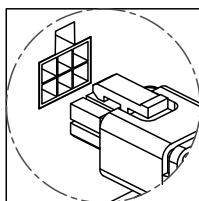


2

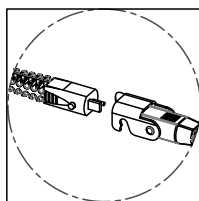


3

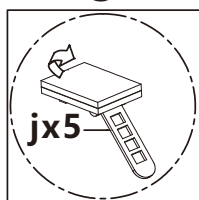


4

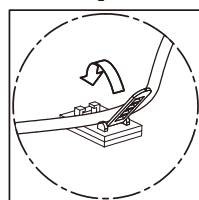



5

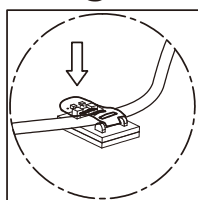


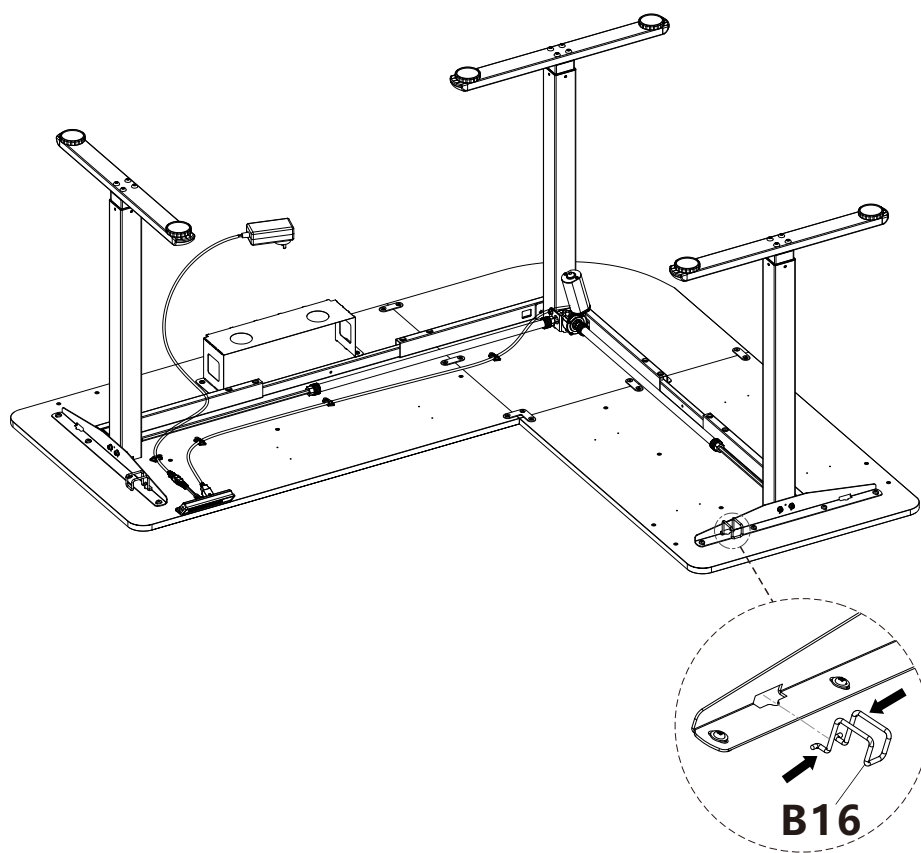


Option B | left Side Extension**➡ Page 14-20**


Desk frame will extend out to left side, with a short right side.

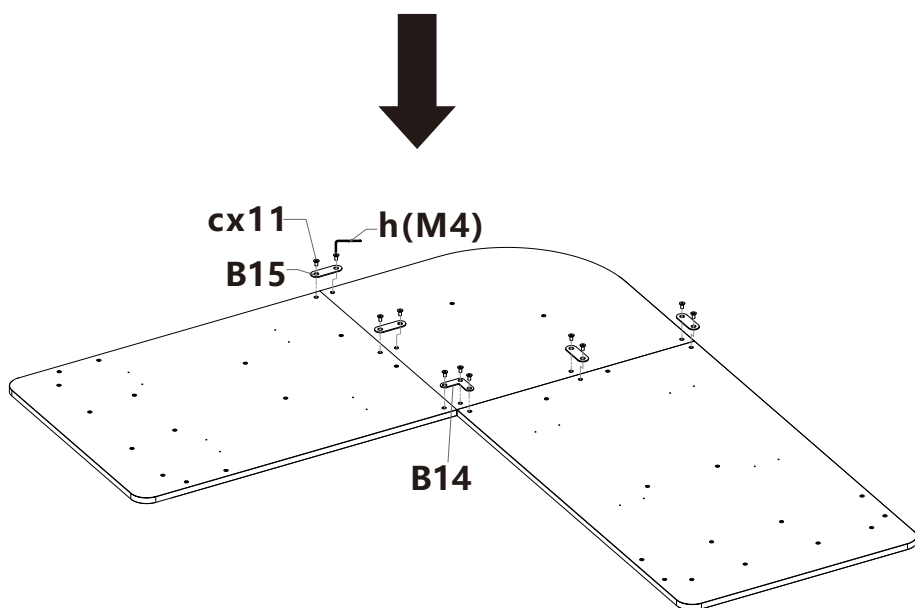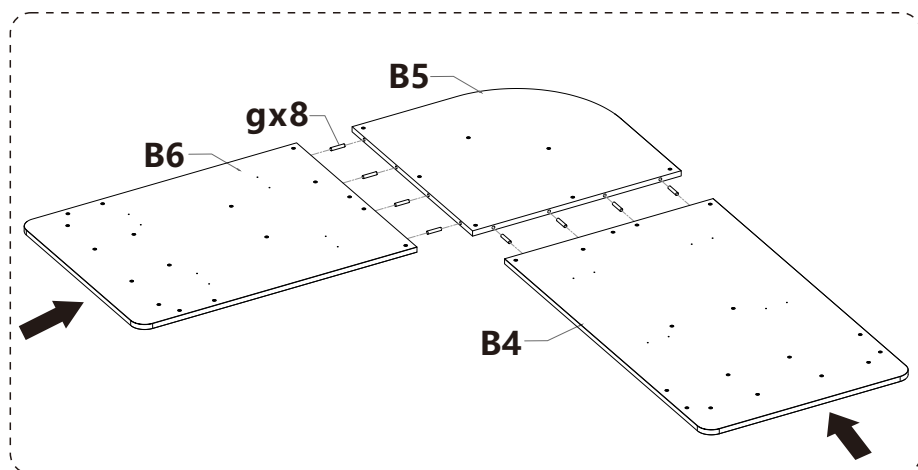

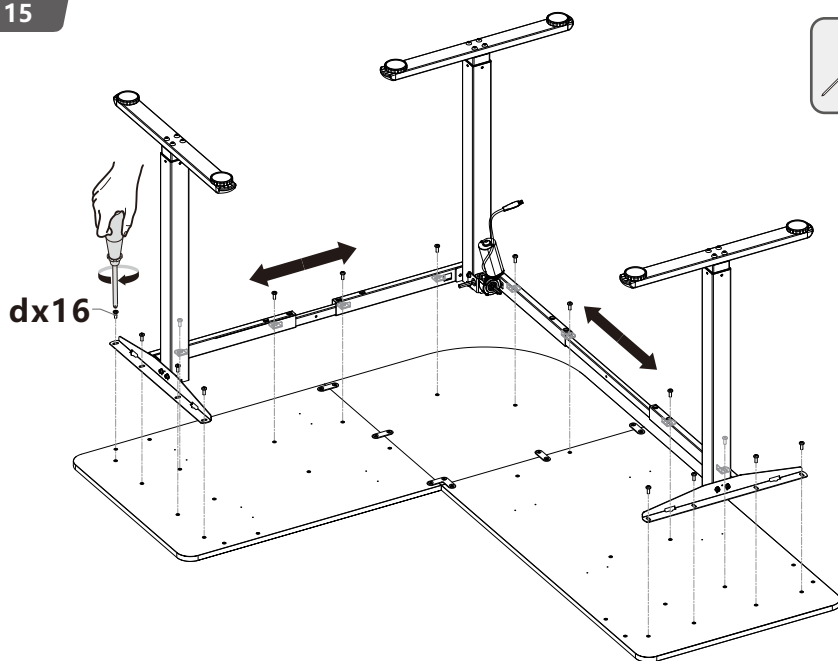

Note: Please pre-install 16 number “d” screws to the corresponding hole position, and then tighten them all in turn, finally use the “h(M4)” wrench to tighten the crossbar.

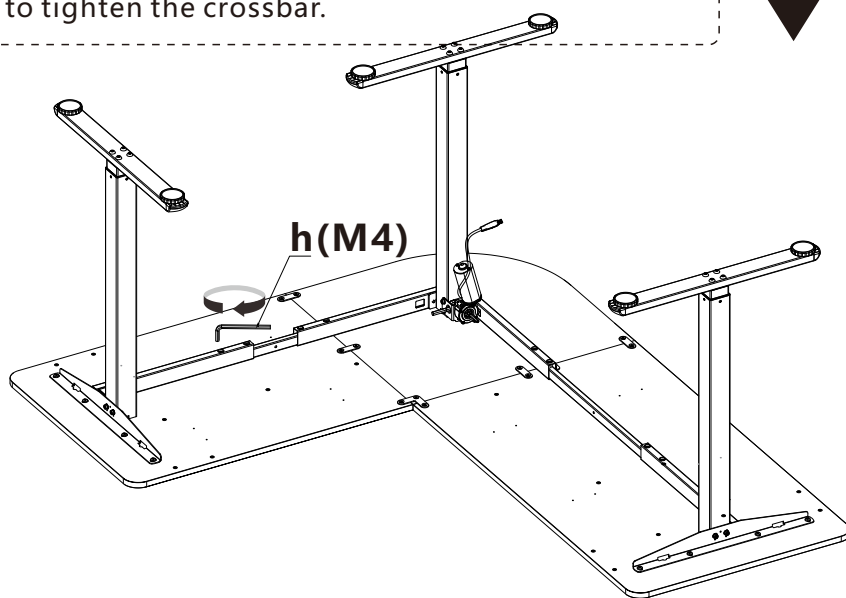

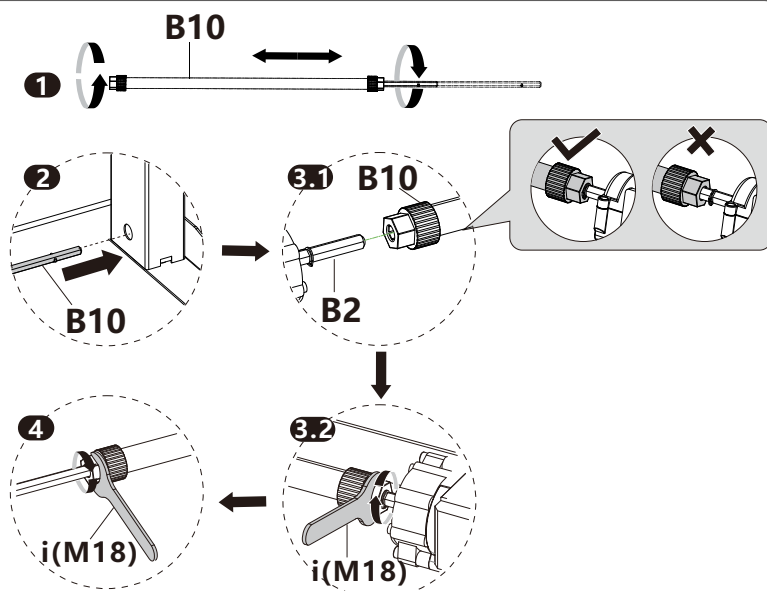




Note: Loosen the right plastic coupling nut on the sync rod (B10) and insert the hex shaft into the left and right legs (B1, B3).


Please make sure all three legs are the same height. If not, turn the sync lever (B10) clockwise to raise the corresponding outrigger, counterclockwise to lower.


Loosen the left plastic coupling nut on the sync rod (B10) and extend it to the motorized outrigger (B2).

Finally, tighten the plastic nuts on the left and right sides of the synchronization rod (B10).

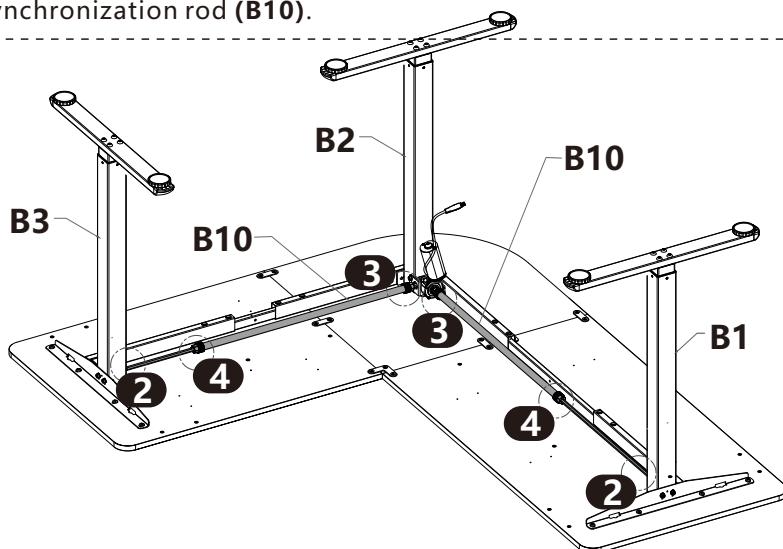


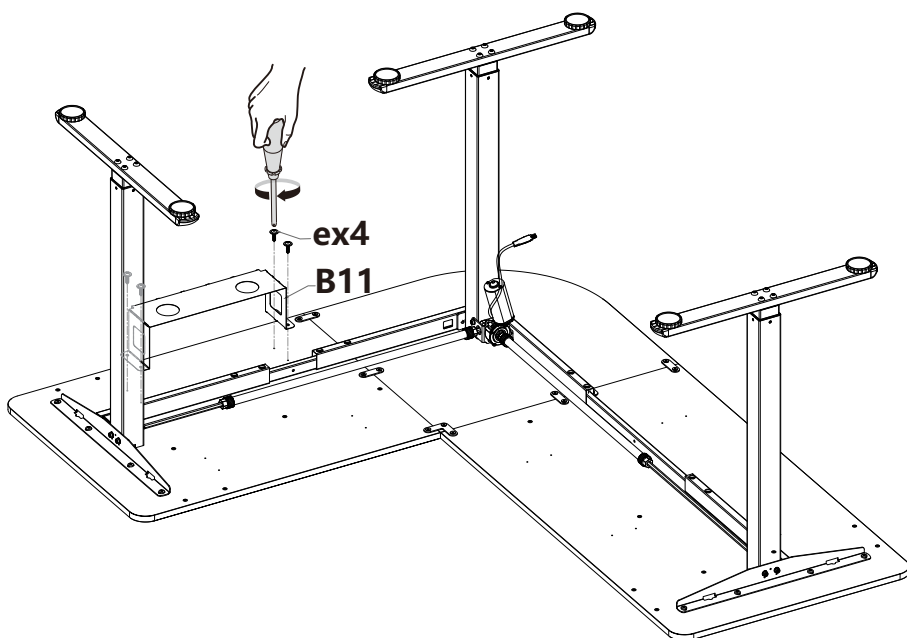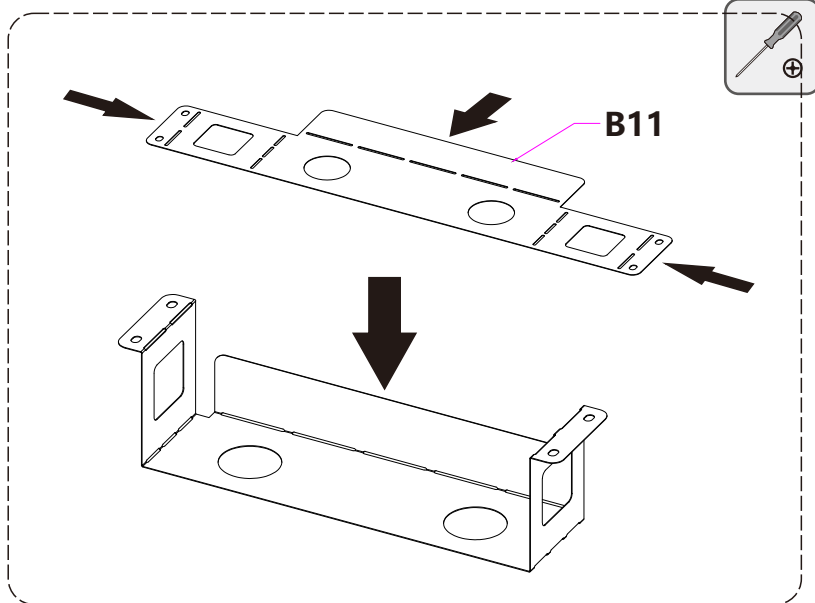

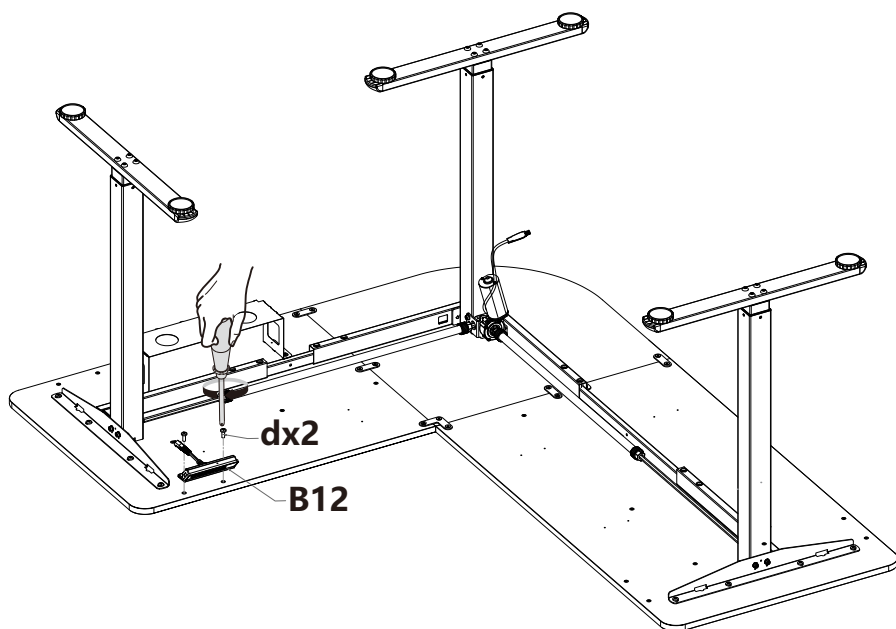


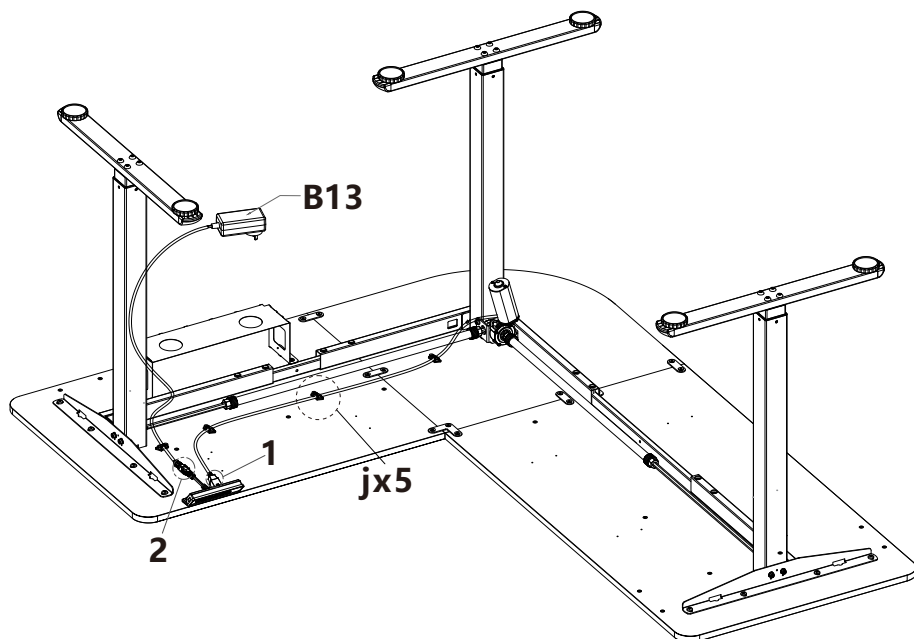


1

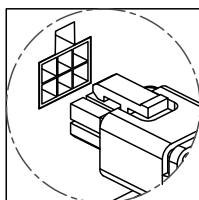


2

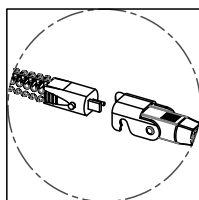


3

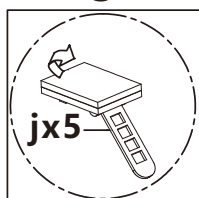




4

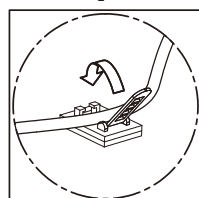



5

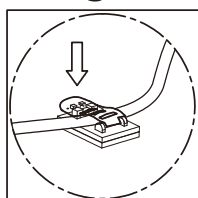

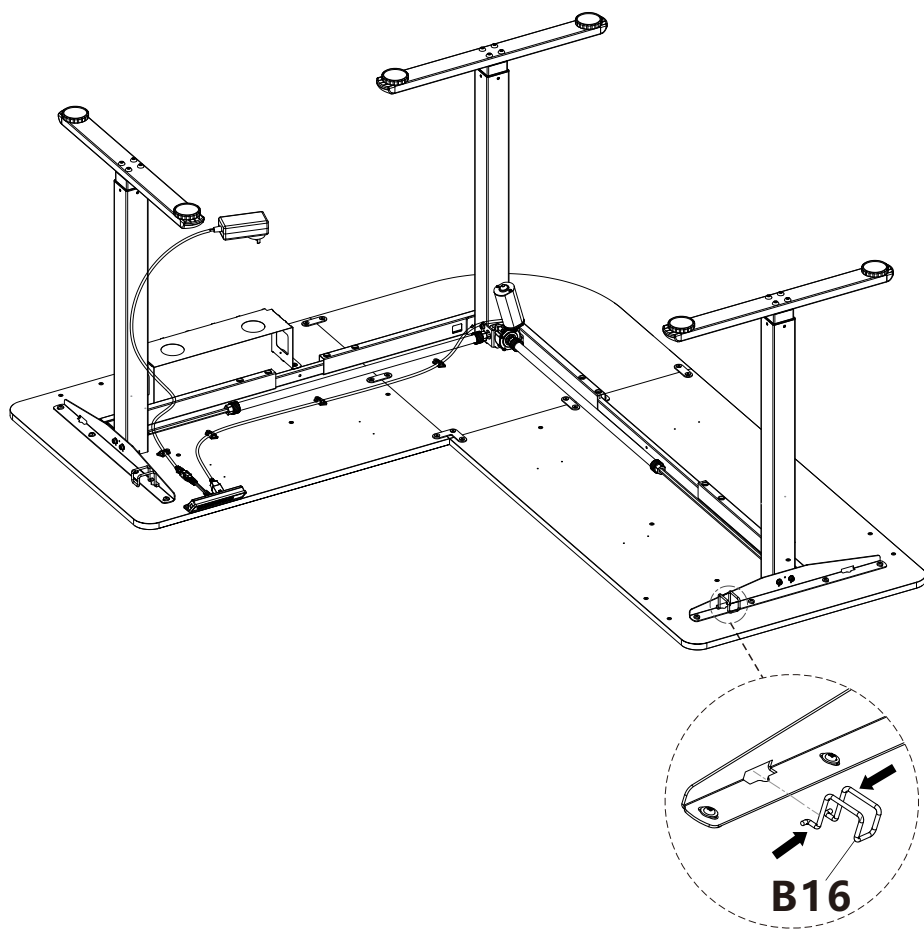

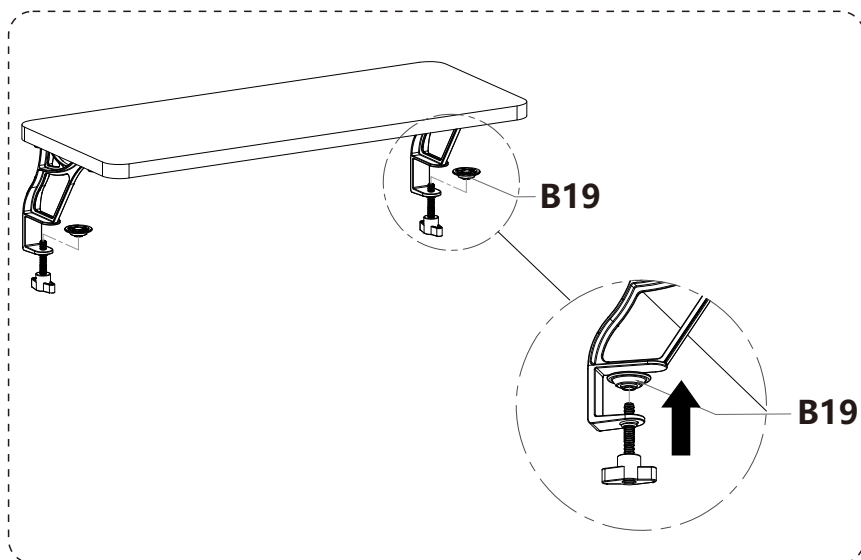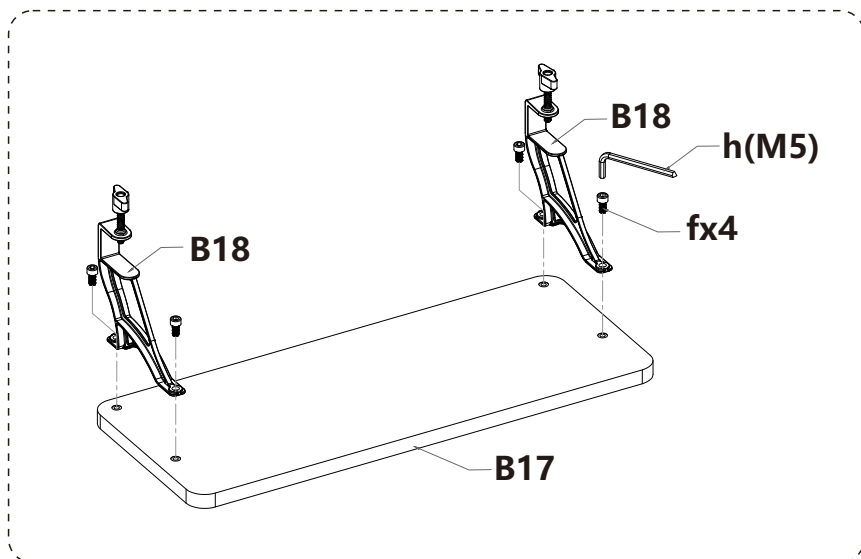

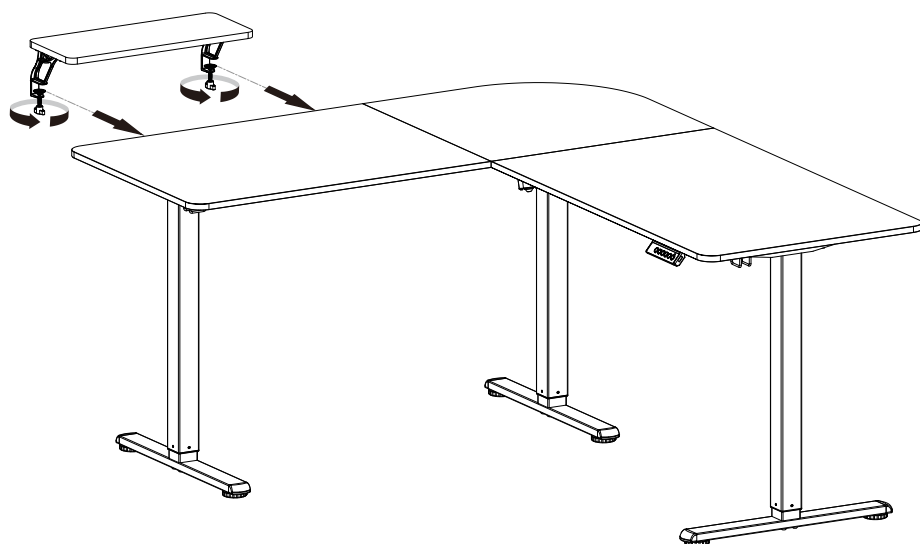

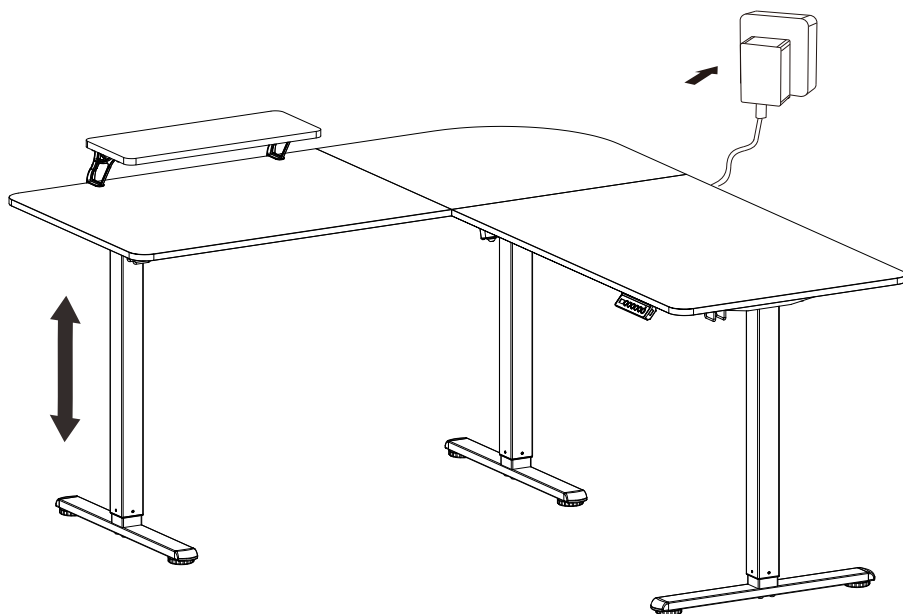

If the left side doesn't go up/down when using the desk, go back to step 9 or 16. Make sure the drive rod is installed correctly.

IMPORTANT! You must Reset the desk prior to use:


Press and hold the "—" button on the Handset until the desk reaches its lowest height. Release the "—" button.

Press and hold the "—" button again for more than 3 seconds until "rst" is displayed. Release the "—" button.


Press and hold the "—" button until the desk lowers a little bit more, slightly rises and stops. Release the "—" button.

The handset will then display the current height.

Your desk is now ready to use.

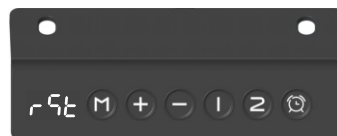

Using the Controller

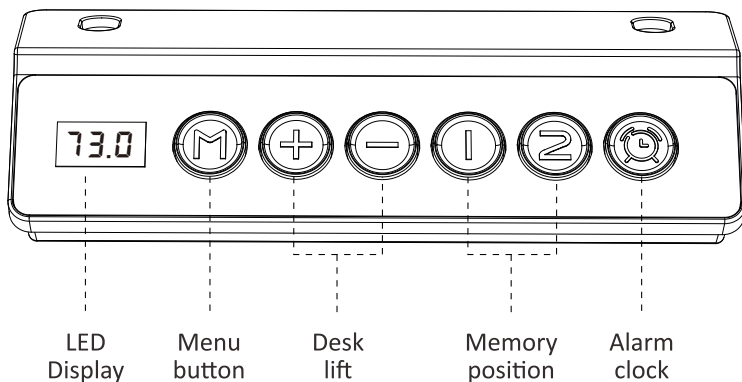

■ Display

Shows the current desk height and other information

■ M

Menu button for saving preferred positions and accessing settings

■ +

Raises the desk height

■ -

Lowers the desk height

■ 1 and 2

Memory position buttons for saving and recalling preferred desk heights

■ Alarm clock

Set an alarm reminder.

Setting the Controller

First Time Setup:

When powered on for the first time, the unit beeps once and displays current height. If the height reading is wrong, carry out reset according to instructions in this manual.

Basic Operation:

- **Raising the desk:** Press and hold the "+" button.
 - **Lowering the desk:** Press and hold the "-" button.
-

Saving Memory Positions:

1. With the desk stationary, press the "M" button. The display will show "S-".
 2. Press either the "1" or "2" button to save the current desk height to that memory position. The desk can store two height positions, and these are retained even after power loss.
 3. To recall a saved position, press the corresponding "1" or "2" button. The desk will automatically move to that height. Press any button to stop the movement during recall.
-

Child Lock:

1. Press and hold the "+" and "-" buttons simultaneously for 5 seconds. The display will show "Loc," indicating the system is locked. The desk cannot be adjusted while locked.
 2. To unlock, simultaneously press and hold the "+" and "-" buttons for 5 seconds again. The display will revert to the normal height display.
-

Timer:

1. Each press of the timer button increases the timer by 0.5 hours, up to a maximum of 2 hours. The display will flash for 4 seconds, then the timer indicator (if present in the unit) will illuminate and the timer will begin counting down.
2. When the timer expires, the buzzer will beep five times, and the timer will reset.

Setting the Controller

Menu Operation:

1. Enter the settings menu: Press and hold the "M" button for 5 seconds. The menu items will flash.
2. Switch setting items: Short press the "M" button.
3. Adjust values: Short press "+" or "-".
4. Faster adjustment: press and hold "+" or "-" (only for minimum and maximum height settings).
5. Save settings and exit the menu: Press and hold the "M" button, until a progress bar appears, ending on "SOS" for success or "FAL" for failure.
6. Inactivity: The menu will automatically exit after 10 seconds of inactivity.

Menu Operation	Display	Range/Values	Remarks
Minimum Height Setting	73 ~ 108	73 ~ 108 cm	Must be at least 10 cm less than the maximum height setting.
Maximum Height Setting	83 ~ 118	83 ~ 118 cm	Must be at least 10 cm greater than the minimum height setting.
Board Thickness Setting	0 ~ 30	0 ~ 30 cm	Sets the desktop board thickness.
Upward Obstacle Sensitivity	PC0 ~ PC5	0-5(0: Off, 1-5: Sensitivity levels)	A higher value means it's more easily triggered.
Downward Obstacle Sensitivity	DC0 ~ DC5	0-5(0: Off, 1-5: Sensitivity levels)	A higher value means it's more easily triggered.
Tilt Sensor Sensitivity	SS0 ~ SS5	0-5(0: Off, 1-5: Sensitivity levels)	A higher value means it's more easily triggered.
Display Unit Setting	U-	0 1	Units: cm Units: inch

Setting the Controller

Reset Operation:

1. Press and hold the "-" button until the desk stops moving at its lowest position. Continue holding for 5 seconds. The display will show "⌂", indicating the start of the reset process.
 2. The desk will slowly descend to its lowest position and rebound slightly. Release the "-" button. The reset is complete.
 2. If any issues occur during the reset, release the "-" button immediately to stop the process. You will need to repeat the reset operation until successful. The desk cannot be operated until a successful reset is performed.
-

Energy Saving Mode:

If no buttons are pressed for 1 minute, the controller enters energy-saving mode. The display will turn off, and the controller will consume minimal power. Press any button to exit energy-saving mode.

Troubleshooting

Error Code Table

"r" = "ṙ" "s" = "ṡ" "t" = "ṭ" "c" = "ḥ" "h" = "ḥ" "o" = "ṡ" "E" = "Ḥ"

Error		Code Handling
Self-test Fail - Standby Current Abnormal	sc0	Unplug the desk from the wall outlet, then plug it back in. If the problem persists, <u>hand control unit</u> may be faulty and need to be replaced.
Self-test Fail - Main Power Voltage Abnormal	sc1	Unplug the desk from the wall outlet, then plug it back in. If the problem persists, <u>hand control unit</u> or <u>power supply unit</u> may be faulty and need to be replaced.
Self-test Fail - Drive Voltage Abnormal	sc4	Unplug the desk from the wall outlet, then plug it back in. If the problem persists, <u>hand control unit</u> may be faulty and need to be replaced.
Overheat Protection	hot	The motor is too hot. The desk will work again automatically after a cooling period of 18 minutes.
Main Power Voltage Abnormal	r-6	The alarm will automatically clear when the main power. voltage returns to normal.If problem persists or occurs often, <u>hand control unit</u> or <u>power supply unit</u> may be faulty and need to be replaced
Reset Incomplete	ṙ Ḥṭ	Complete the reset process.

Troubleshooting

Drive Circuit Short Circuit	E10	Unplug the desk from the wall outlet, then plug it back in. If the problem persists, <u>hand control unit</u> may be faulty and need to be replaced.
Overload Protection	E11	Remove weight from the desk. Check if anything is blocking the desk or its electric motor system. WARNING: To avoid injury and/or damage, do not operate the desk until you have checked that there are no obstructions and total weight on the table does not its maximum permitted load.
Motor Phase Missing	E12	Check that the motor cables are properly connected. Reconnect the cables and reset the desk.If the problem persists, <u>hand control unit</u> or <u>motor unit</u> may be faulty and need to be replaced.
Motor Hall Signal Error	E13	Check that the motor cables are properly connected. Reconnect the cables and reset the desk.If the problem persists, <u>hand control unit</u> or <u>motor unit</u> may be faulty and need to be replaced.
Obstruction Detected	E14	The desk has stopped because something is in the way. The desk has moved back 5 cm to prevent damage, then the alarm will clear. WARNING: To avoid injury and/or damage, do not operate the desk until you have checked that there are no obstructions.
Motor Cable Unplugged	E16	Check that the motor cables are properly connected. Reconnect the cables and reset the desk.If the problem persists, <u>hand control unit</u> or <u>motor unit</u> may be faulty and need to be replaced.
Mechanical Fault	E17	Check if the desk is properly assembled. If you require assistance, please contact customer support. WARNING: To avoid injury and/or damage, do not operate the desk until you have checked that the desk was properly assembled according to this manual and no unauthorised changes/repairs were carried out.