

# ASSEMBLY INSTRUCTIONS

## MODEL NAME: 419 - SECTIONAL

 
 
 
 
 
Thank you for purchasing this quality product.

Read instructions carefully prior to assembly.

Check carefully for small parts which may have come loose during transportation inside all the boxes.  
Remove from boxes and place all parts and components on soft surface such as carpet, blanket or furniture pad.

Identify and count all parts and hardware as specified below.


### PARTS LIST:

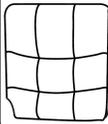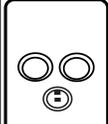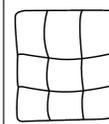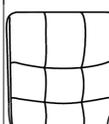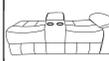NO.	DESCRIPTION	FIGURE	SIZE	LOCATED IN	QT.	NO.	DESCRIPTION	FIGURE	SIZE	LOCATED IN	QT.
1	LEFT BACK FOR LAF LOVESEAT		23 x 9 x 30	BOX 1 OF 3	1	10	RIGHT BACK FOR WEDGE		33 x 9 x 30	BOX 2 OF 3	1
2	CONSOLE BACK FOR LAF LOVESEAT		12 x 6 x 20	BOX 1 OF 3 INSIDE CONSOLE'S BOTTOM COMPARTMENT	1	11	LEFT BACK FOR RAF LOVESEAT		23 x 9 x 30	BOX 3 OF 3	1
3	RIGHT BACK FOR LAF LOVESEAT		23 x 9 x 30	BOX 1 OF 3	1	12	CONSOLE BACK FOR RAF LOVESEAT		12 x 6 x 20	BOX 3 OF 3 INSIDE CONSOLE'S BOTTOM COMPARTMENT	1
4	LAF LOVESEAT SEAT BASE		65 x 35 x 25	BOX 1 OF 3	1	13	RIGHT BACK FOR RAF LOVESEAT		23 x 9 x 30	BOX 3 OF 3	1
5	BACKREST WING FOR LAF LOVESEAT		7 x 9 x 22	BOX 1 OF 3 INSIDE ARMREST'S BOTTOM COMPARTMENT	1	14	BACKREST WING FOR RAF LOVESEAT		7 x 9 x 22	BOX 3 OF 3 INSIDE ARMREST'S BOTTOM COMPARTMENT	1
6	WEDGE SEAT BASE		55 x 34 x 23	BOX 2 OF 3	1	15	RAF LOVESEAT SEAT BASE		65 x 35 x 25	BOX 3 OF 3	1
7	PLASTIC WASHERS		2 x 2 x 1/8 10mm OPENING	BOX 2 OF 3 PLASTIC BAG	5	16	SPEAKER POWER ADAPTER		N/A	BOX 1 OF 3 INSIDE THE CONSOLE	1
8	PLASTIC FEET		2 x 2 x 2	BOX 2 OF 3 PLASTIC BAG	5	17	LED POWER ADAPTER			BOX 1 OF 3 AT THE BOTTOM BACK OF THE LAF SEAT BASE	1
9	LEFT BACK FOR WEDGE		33 x 9 x 30	BOX 2 OF 3	1	18	LED POWER ADAPTER			BOX 1 OF 3 AT THE BOTTOM BACK OF THE LAF SEAT BASE	1

# ASSEMBLY INSTRUCTIONS


## MODEL NAME: 419 - SECTIONAL

### STEP 1

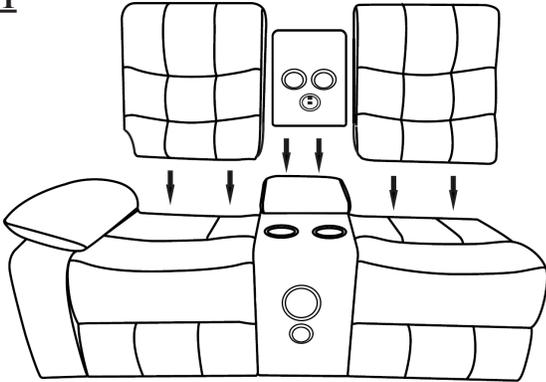


Install left back (1), console back (2), and right back (3) on the LAF loveseat (4). Align the rails on the backs with rails on the seat base, push down gently until you hear "click".

### STEP 2

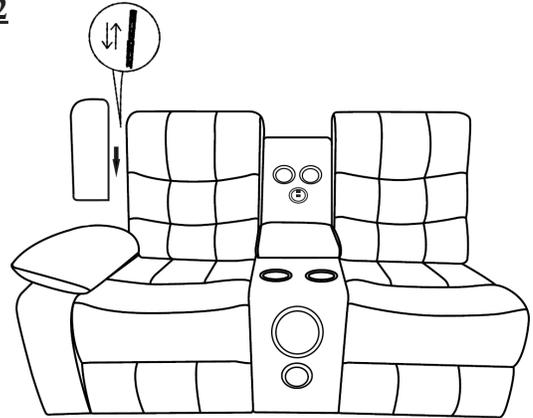


Install backrest wing (5) on the left back cushion (1) by aligning the rails and sliding down the wing gently until lined up with armrest on the seat base.

### STEP 3

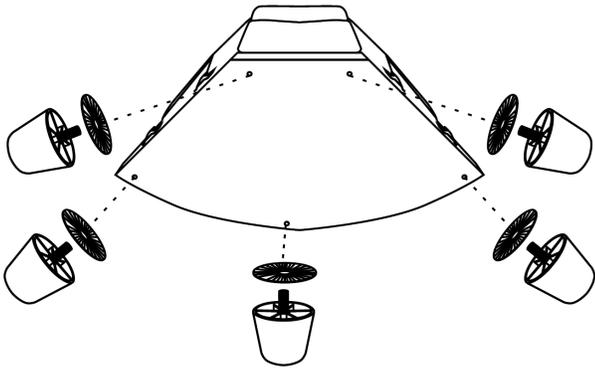


Place plastic washers (7) through the opening on top of the bolt on plastic legs (8). Install each leg with washer by screwing them clockwise into opening on the bottom of the wedge seat base (6).

### STEP 4

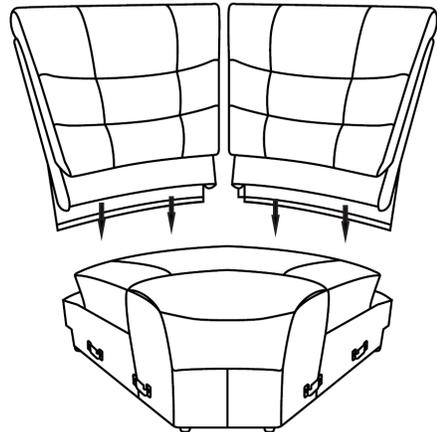


Align the rails on the wedge left and right backs (9) and (10) with rails on the wedge seat base (6), push down gently until you hear "click".

### STEP 5

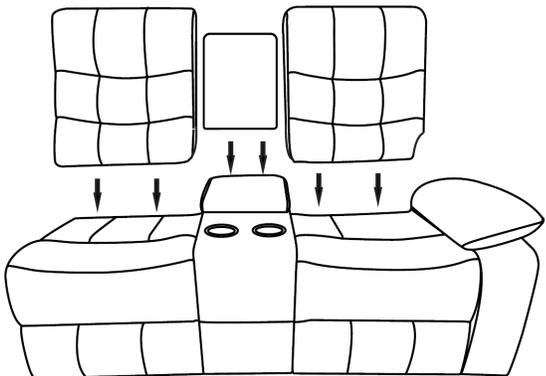

Install left back (11), console back (12), and right back (13) on the RAF loveseat (15). Align the rails on the backs with rails on the seat base, push down gently until you hear "click".

### STEP 6

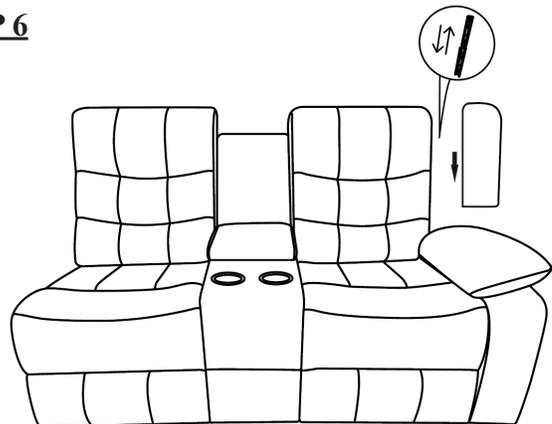


Install backrest wing (14) on the right back cushion (13) by aligning the rails and sliding down the wing gently until lined up with armrest on the seat base.

# ASSEMBLY INSTRUCTIONS


## MODEL NAME: 419 - SECTIONAL

### STEP 7

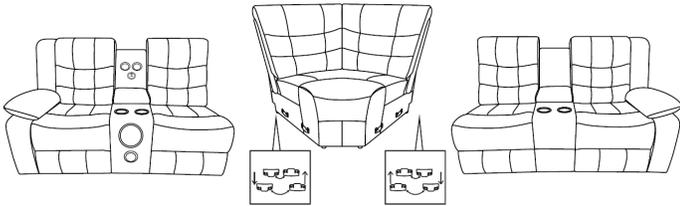

Attach all units together by connecting pre-installed hook connectors (located on armless side of each unit).

### STEP 8

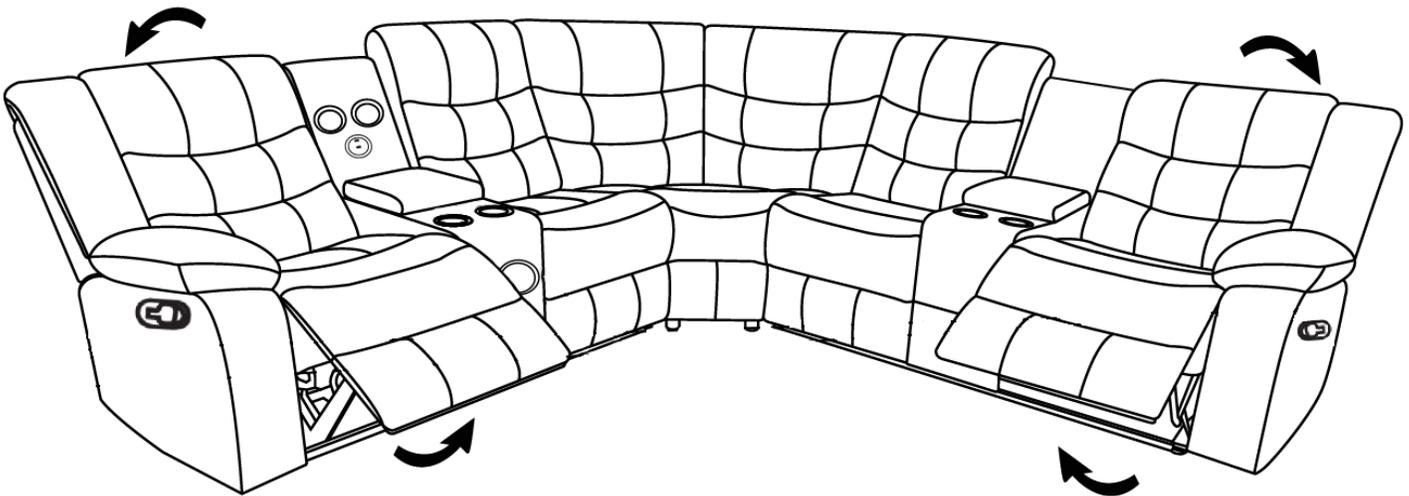

# ASSEMBLY INSTRUCTIONS


## MODEL NAME: 419 - SECTIONAL

### TROUBLESHOOTING

Before repairing the product (always have professional and trained technician diagnose and repair any components and parts of the unit. Do not attempt repairs to parts and components by yourself), please check the following troubleshooting steps to find and fix an issue you may have with the audio. A simple check or minimum adjustment may solve the problem and restore regular operation.

<b>No Sound or volume low</b>	Please check connection to your device (Aux and USB modes), please make sure that the Aux cable is plugged in snugly and securely on each end, please check the cable for cracks and cuts as well as inspect the plugs for visible damage. Check connection using different cable. Check your source device's volume level (all modes)
<b>Startup failure</b>	Please make sure all wires and connections are plugged in snugly and securely, make sure that your wall outlet is powered (try plugging in something else into the same outlet). Make sure that the plug on the back of the speaker console is fully plugged in. Replace power source.
<b>No response</b>	Please see if the device is fully connected on both ends of the cable used (AUX and USB Modes). Please make sure that the BT connection was not interrupted (devices are still paired) and in range. Unplug the power source from wall for 30 seconds, press the power on button and plug the power source back in.
<b>Music plays disordered or skipping</b>	The controls are sensitive to touch, please make sure that nothing is placed over the controls and that the control panel is clean. Restart the sound-box by unplugging the power source from wall for 30 seconds, pressing the power on button and plugging the power source back in.
<b>Bluetooth is not pairing</b>	Please make sure other devices that are stored in your source device's memory (BT device list) are off and not connecting. Restart the source device. Delete previous connection to LKS028 or F913 (depending on the model), unplug the power source from wall for 30 seconds, press the power on button and plug the power source back in. Scan on the source device for LKS028 or F913 (depending on the model).

### ASSEMBLED PRODUCT SPECIFICATIONS AND DIMENSIONS

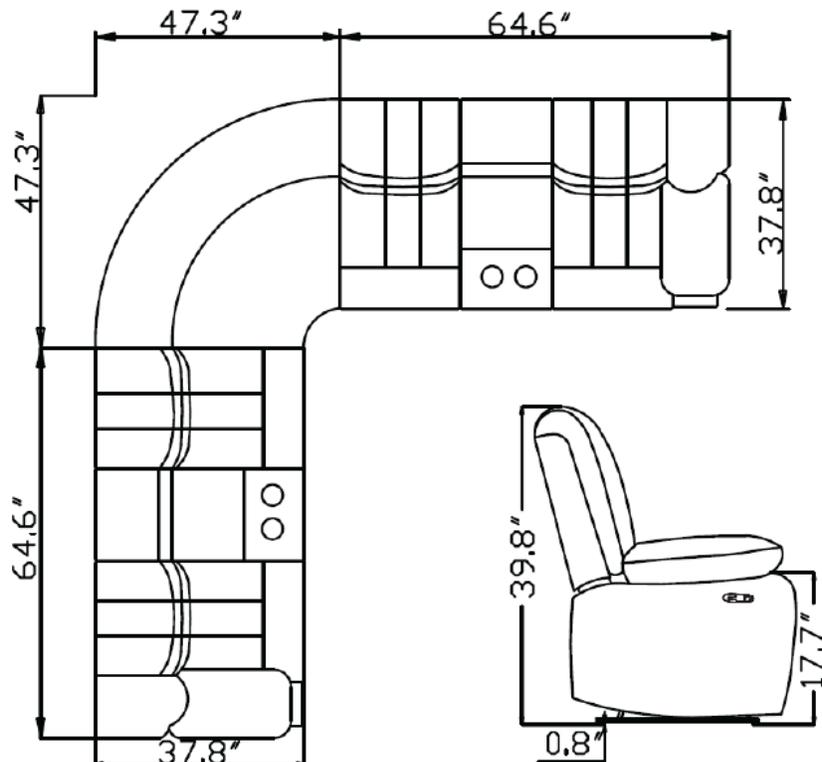

# ASSEMBLY INSTRUCTIONS

## MODEL NAME: 419 - SECTIONAL

### CARING FOR YOUR FURNITURE

Fine wood furniture is a treasured possession in any home, and with good care, it can last for generations. Upholstered furniture provides us with comfort, color and texture. Who doesn't love sinking into the cushioned softness of a favorite sofa?

#### Fine wood furniture

##### Care for fine furniture with these recommendations:

Avoid heat and light. In a natural state, wood contains a surprising amount of moisture. Preserving appropriate moisture levels is key to the preservation furniture. Accordingly, position wood furniture away from heating vents, fireplaces or radiators.

Don't store furniture in attics, where temperature and humidity levels vary widely from summer to winter, day and night. Avoid placing furniture in areas where it will sit in direct sunlight, which can fade fine furniture; use drapes, sheers or protective window films to guard against the sun's rays. Protect from damage. Everyday life can be hard on wood furniture.

Moisture from sweating beverage glasses leaves round rings in the finish, while the heat from a hot dish can ruin the wood finish beneath. Provide cork or felt-bottomed coasters if you will set glasses or mugs on wood, and always use trivets to support hot serving dishes. Place mats, tablecloths or padded table covers protect dining room tables from spills or scrapes. Clean safely. Dust frequently. Occasionally, wood furniture will require heavier cleaning. Using a natural sponge, moisten it with oil soap and wring out most of the water. Gently stroke the furniture to loosen soil. Rinse the residue from the wood with a sponge wrung out in clear water, and then dry the piece with fresh cleaning cloths. Dust furniture often with barely damp white cotton cleaning cloth. Microfiber cloths do a good job of attracting and removing fine blown-in soil. Avoid using a feather duster, as a broken quill can scratch and damage delicate finishes.

Dust damp. Dusting with a dry cloth can scratch, so lightly spritz your cleaning cloth with water, a spray dusting agent or wood polish. Never spray furniture directly, as over-spray can leave a difficult-to-remove film. Follow the grain of the wood as you dust to avoid cross-grain scratches.

Frequent dusting removes dirt before it has a chance to settle in and make itself at home.

#### Upholstered furniture

Dust and dirt act like sandpaper on furniture fabric, so remove it frequently. Vacuum upholstered furniture weekly; lift cushions and use the crevice tool to remove hidden crumbs beneath. Keep upholstered furniture looking new with these tips:

Flip, swap and rearrange. Being territorial creatures, most humans gravitate to their favorite places but when it's the same seat on a long sofa day after day, that preference will start to show. Flip loose cushions regularly, and rotate them on a multi-cushion unit. Similarly, rearrange upholstered furniture once or twice a year to distribute wear more evenly. Switch the position of a love seat and a sofa, or swap the positions of a set of chairs as the seasons change.

Arm caps. Places where bare skin or hair come to rest — armrests, chair backs, seat cushions — are subjected to higher levels of soil and abrasion. Protect high-contact areas of upholstered furniture with arm caps tailored to fit snugly over chair and sofa arms. Slipcovers. In areas with hot summer weather, consider washable slipcovers. Traditionally applied to furniture during the warm season, slipcovers protect against sweat, suntan oil and other summer hazards.

Fabric protection. Spray-on fabric protectors coat fibers and protect upholstery from spills and stains. Fabric protectors can be applied at the mill as the fabric is processed, by the furniture retailer, or at home using commercial spray products. If you apply fabric protection yourself, read the product instructions and observe safety procedures carefully.

#### Caring for leather furniture

Leather upholstery can last for many years if looked after correctly. Follow these tips to take good care of leather furnishings: Keep away from heat and light. Leather furniture is very sensitive to heat and sun damage. Position it away from windows, and from heat sources such as fireplaces, radiators and central heating vents. Uncoated leathers.

Furniture made from uncoated leathers should be dusted frequently. An art gum eraser may remove some stains or deposits safely, but do not use leather creams, conditioners or saddle soap on uncoated leather, since these products can change the color or appearance of the leather. Coated leathers. Vacuum regularly to remove surface soil. Commonly, leather creams or conditioners may be used to clean coated leather once or twice a year. Test leather cleaners in an inconspicuous spot before using.

**Avoid unsuitable products. Never use oil, furniture polish, dusting sprays or ordinary stain removers on leather furniture.**