


ITEM NO:C8716D DINING TABLE

NO.	PARTS·LIST·	QTY
A	TABLE TOP	1PC
B	LEG	4PCS
C	STRETCHER	1PC
D	BOLT 1/4X15MM	8PCS
E	BOLT 1/4X30MM	8PCS
F	SPRING WASHER	8PCS
G	FLAT WASHER	8PCS
H	/ ALLEN KEY	1PC


Note: Pls do not tighten all bolts until the chair is assembled completely. Once assembled, tighten all bolts before attaching the chair.

Note: Pls ne pas serrer tous les boulons jusqu'à ce que les selles est complètement. Once assemblé assemblé, serrer tous boulons avant de fixer les selles.

STEP1

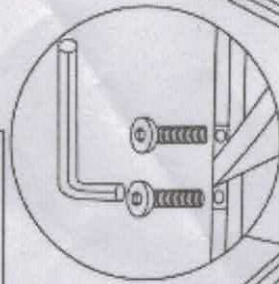


STEP2

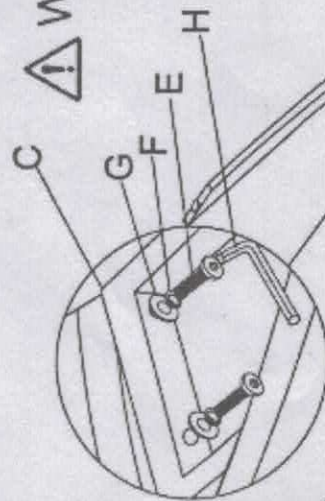

STEP3

⚠ Washer is a must here!

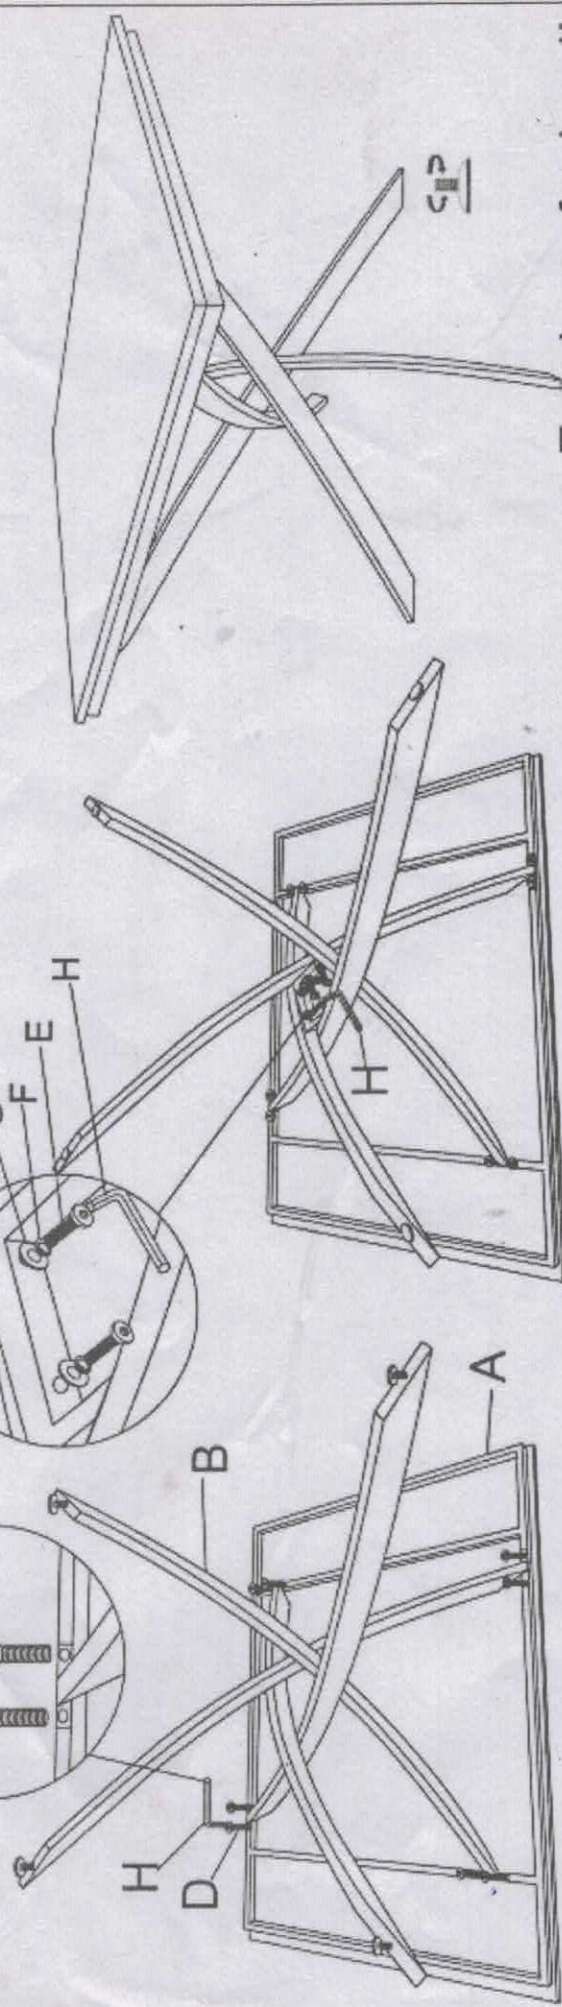

Touch me for level!