

ASSEMBLY INSTRUCTION

PARTS AND HARDWARE

Note: Individual parts are not shown to scale.



4*21*57
Ax1



5*25*66
Bx1



1/4*1mm M8*50mm
Cx16 Dx8



 
 
Ø8x22mm
Ex8



① 4pcs




② 4pcs

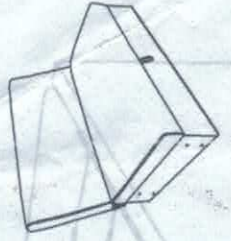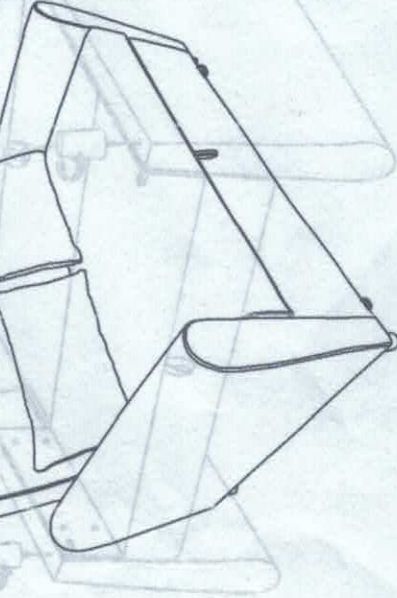

③ 2pcs



 ④ 1pcs

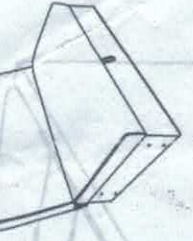



⑤ 1pcs

⑥ 1pcs

ASSEMBLY INSTRUCTIONS

Step 1

  Step 2

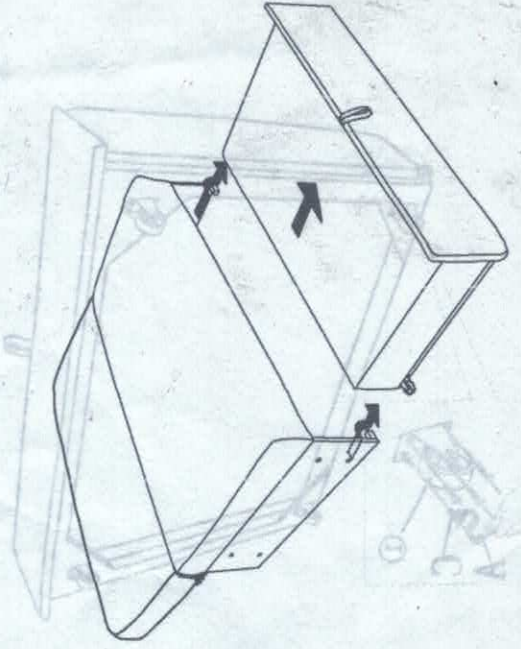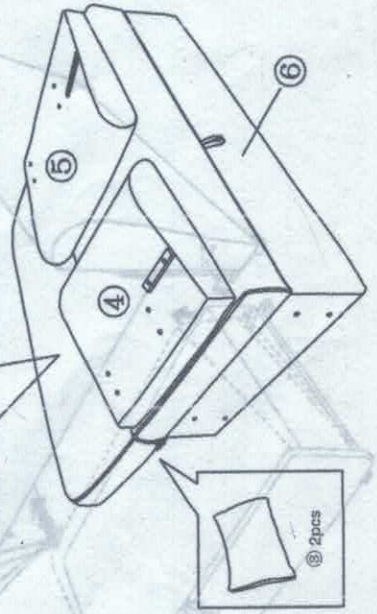


ASSEMBLY INSTRUCTION


OPERATING YOUR UNIT

PARTS AND HARDWARE

 
Step 3

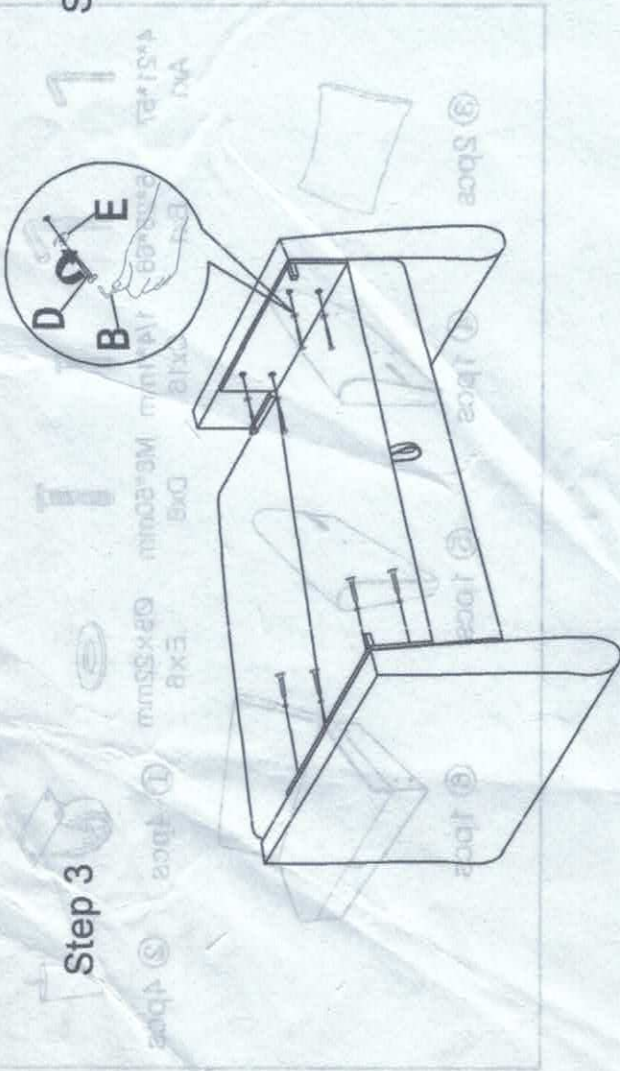

 
Step 4

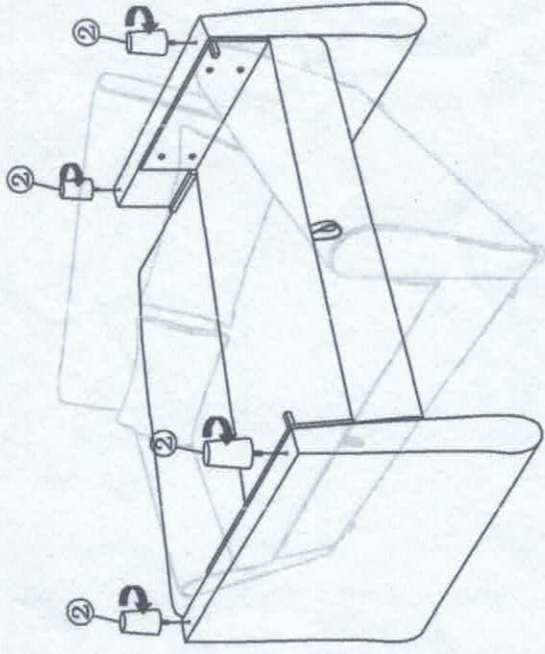

 
Step 5

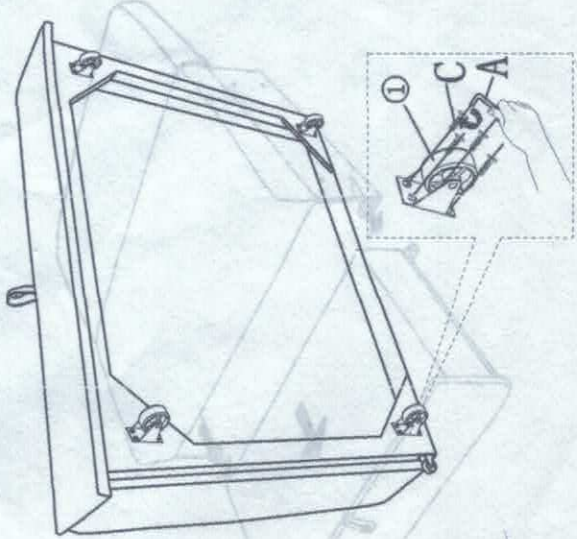

 Step 6

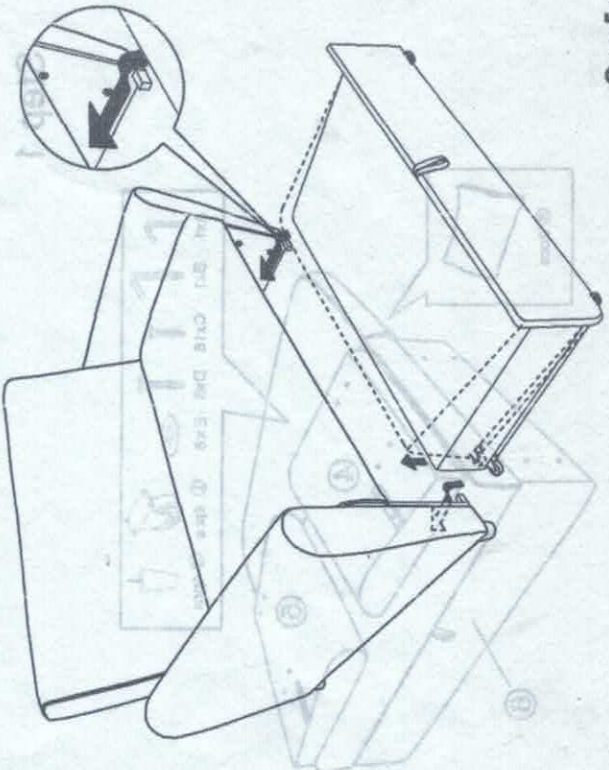

 
Step 7

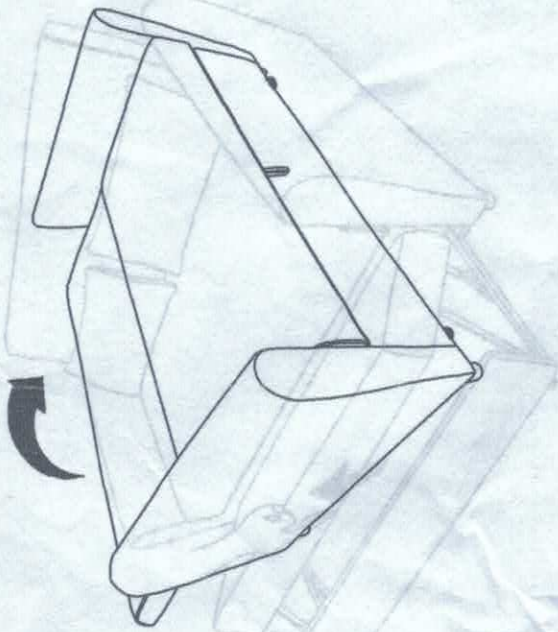


Step 15

Step 8

 Step 11

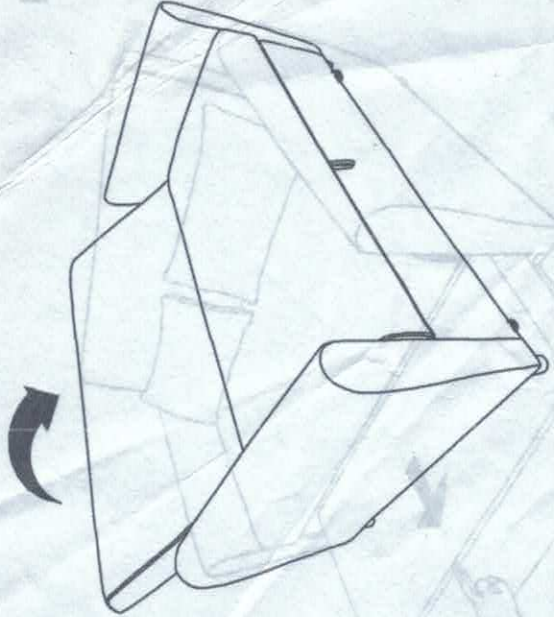

 Step 9

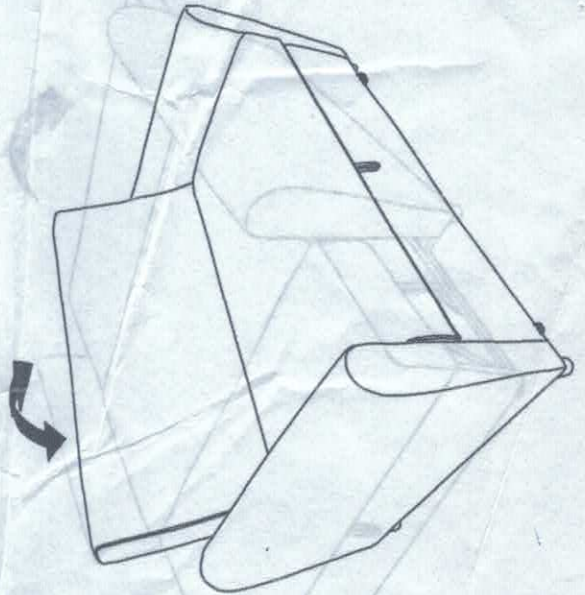


Step 14


Step 10



 
Step 13

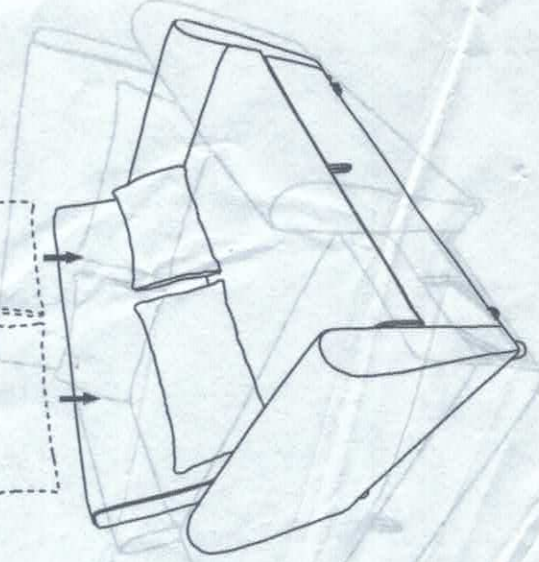

 Step 7

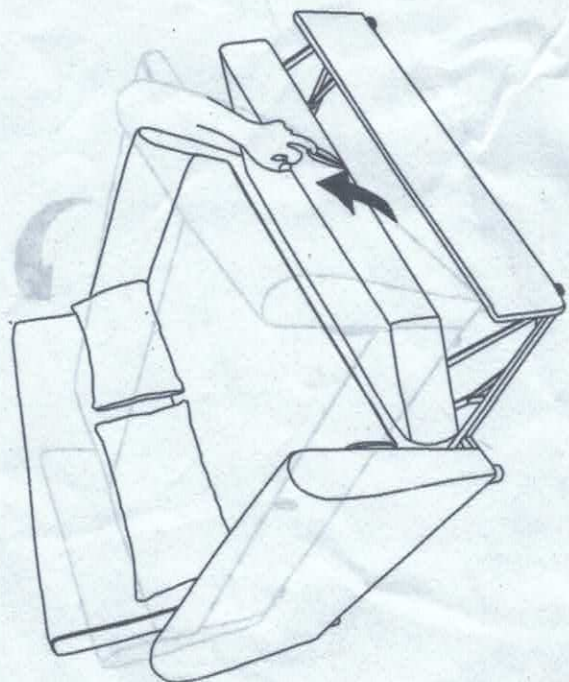


 Step 12

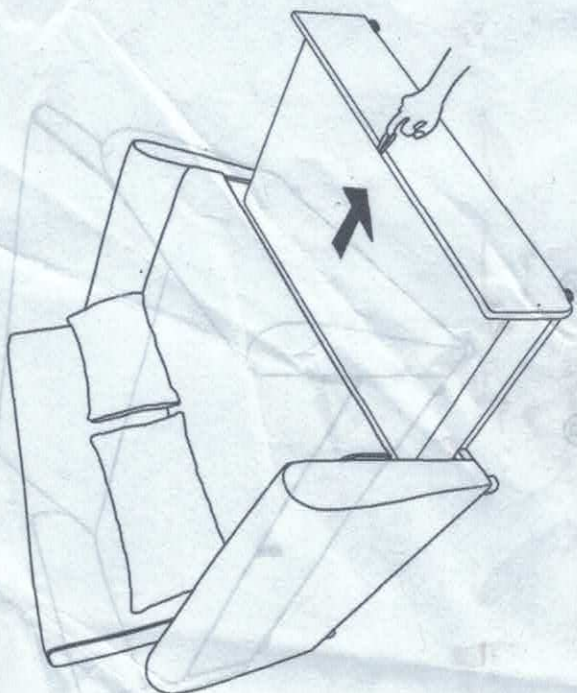


Step 8

 Step 9

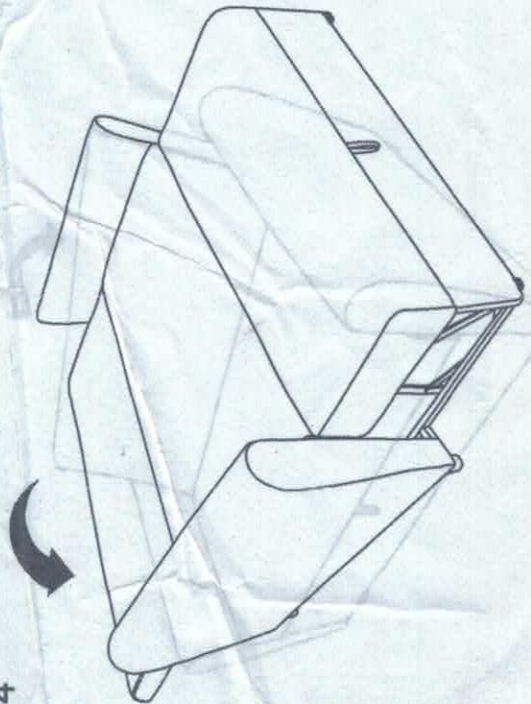

Step 14

 Step 10

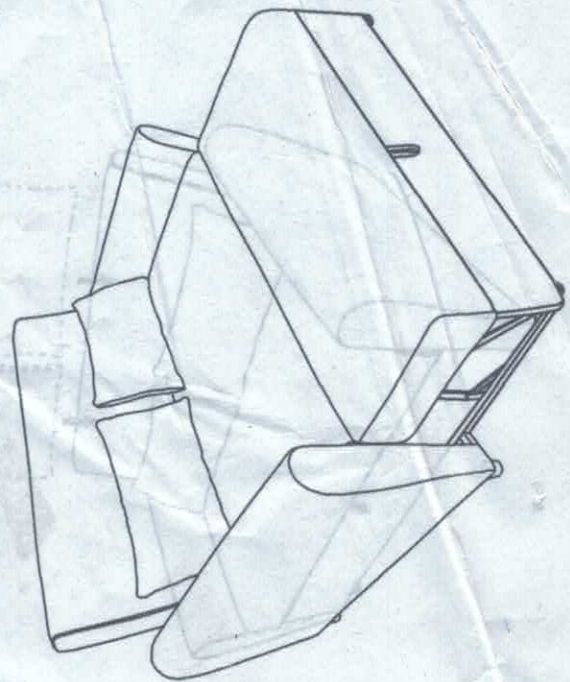

Step 13

Step 11