
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.


Do not tighten bolts fully until you have completed assembly.


PS:Choose the larger Board 1 on the left or on the right according to your personal habits.


If you want the desk like this ,please follow Step1, Step 2, Step 3-1, Step 4-1, Step 5-1, Step 6-1, Step 7-1, Step 8-1, Step 9-1, Step 10-1.

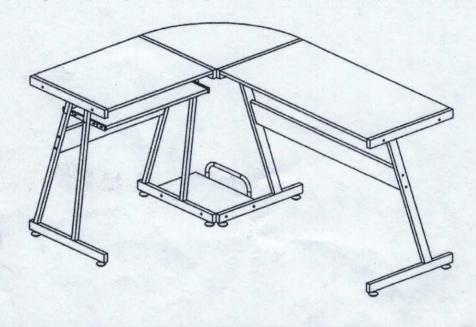

If you want the desk like this ,please follow Step1, Step 2, Step 3-2, Step 4-2, Step 5-2, Step 6-2, Step 7-2, Step 8-2, Step 9-2, Step 10-2.

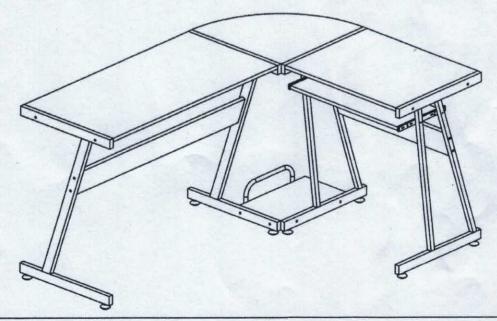





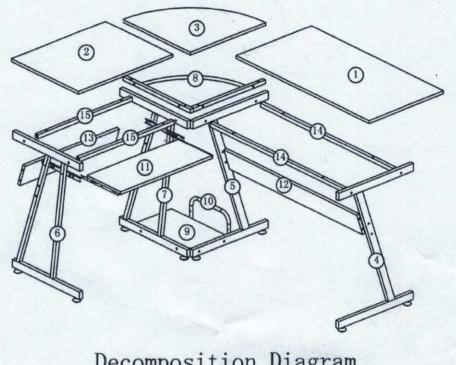

Decomposition Diagram

Method Two

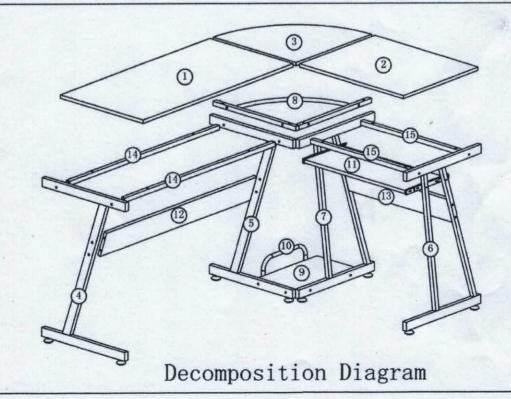

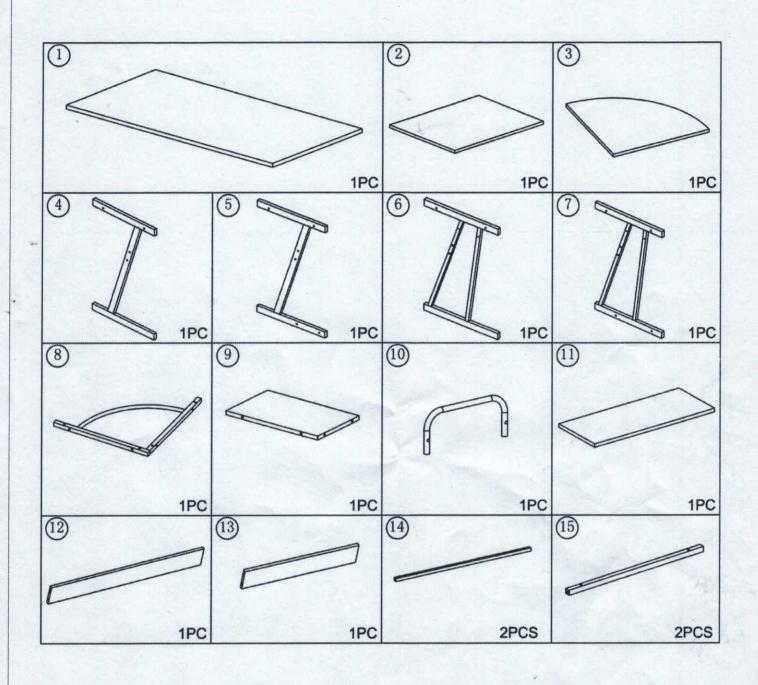

			Har	dware	accesso	ories		
No.	PICTURE		SIZE	QTY	No.	PICTURE	SIZE	QTY
A	(Minim)	0	M6*30	12	F	()	ST4*10	4
В	(M)	0	M6X35	18	G	G1 G2		2
C	() 111111111111111111111111111111111111	0	M6*55	4	H	ట		8
D	0	0	M6*16	32				
E	Quimo	4	ST3. 5X12	4				1

Spare												
No.	PICTURE		SIZE	QTY	No.	PICTURE		SIZE	QTY			
A	()	0	M6*30	1	D	0	0	M6*16	2			
В	()mmm	0	M6X35	1	E	S immi	4	ST3. 5X12	1			
ВС	(m)	0	M6*55	1	F		4	ST4*10	1			

