



|              |                     |               |
|--------------|---------------------|---------------|
| SKU.NO.      | 153.237.01          | USSURI<br>OAK |
| PRODUCT NAME | RENO TV UNIT 2 DRAW |               |

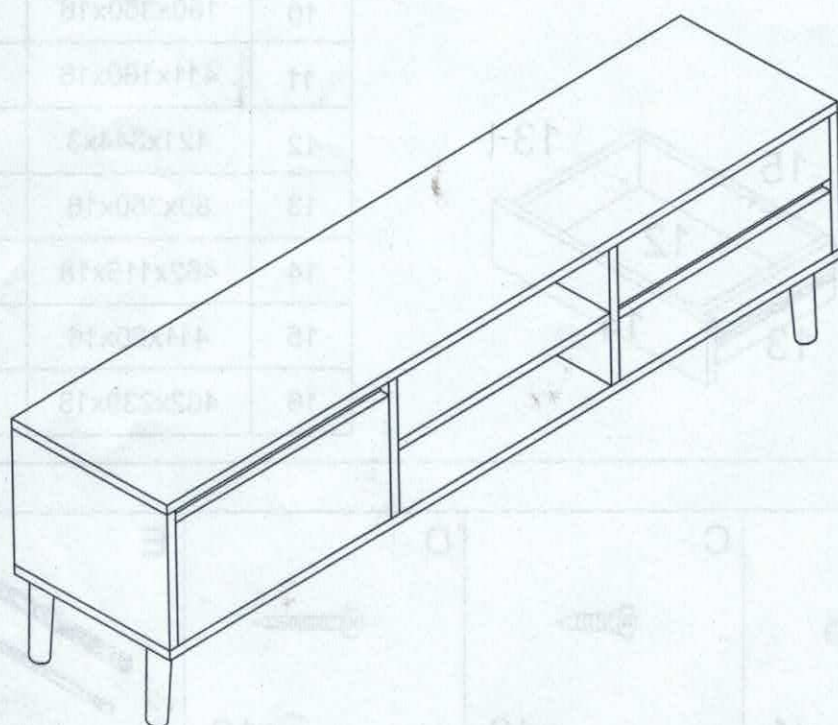

EN

1. Identify the parts which make up your piece of furniture.
  2. Gather the hardware parts and count them.
  3. Have the necessary assembly tools ready.
  4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
  5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
  6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

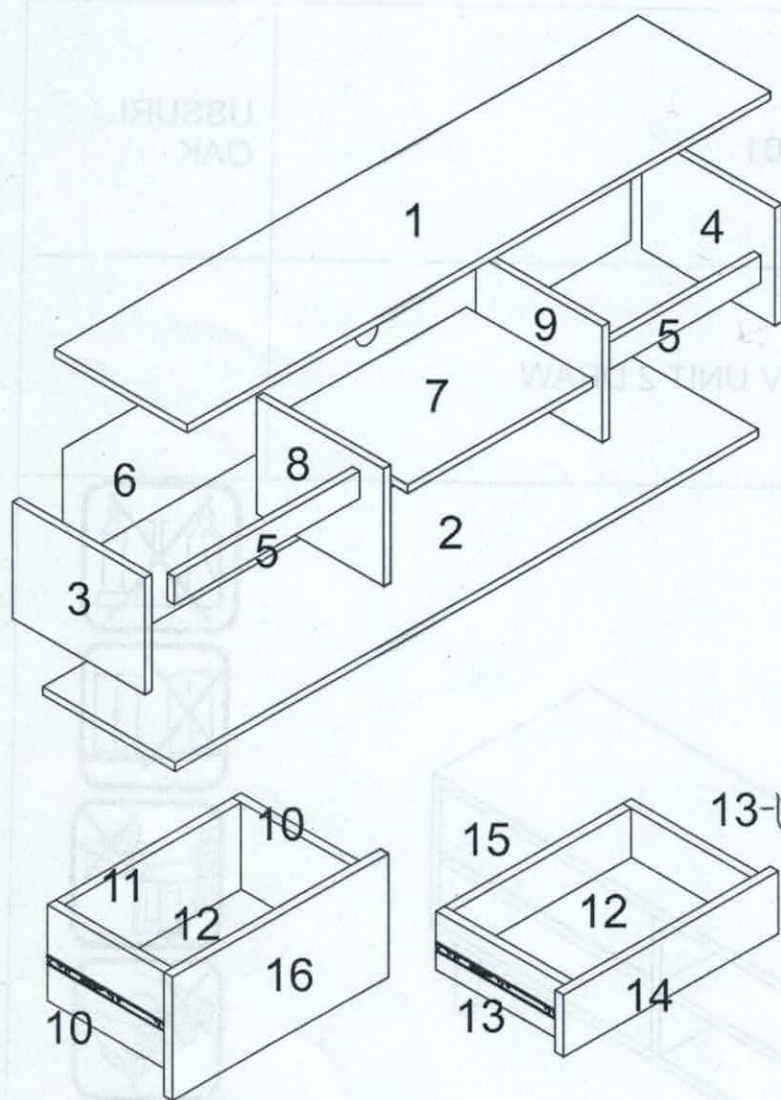

| NO. | Size        | Qty |
|-----|-------------|-----|
| 1   | 1500x400x16 | 1   |
| 2   | 1500x400x16 | 1   |
| 3   | 271x398x16  | 1   |
| 4   | 271x398x16  | 1   |
| 5   | 468x60x16   | 2   |
| 6   | 1476x281x3  | 1   |
| 7   | 498x381x16  | 1   |
| 8   | 271x381x16  | 1   |
| 9   | 271x381x16  | 1   |
| 10  | 160x350x16  | 2   |
| 11  | 411x160x16  | 1   |
| 12  | 421x344x3   | 3   |
| 13  | 80x350x16   | 4   |
| 14  | 462x115x18  | 2   |
| 15  | 411x80x16   | 2   |
| 16  | 462x239x18  | 1   |

|                            |                           |                            |                              |                          |
|----------------------------|---------------------------|----------------------------|------------------------------|--------------------------|
| <b>A</b><br><br>41mm x36   | <b>B</b><br><br>8x40mm x4 | <b>C</b><br><br>3x14mm x48 | <b>D</b><br><br>3.5x30mm x12 | <b>E</b><br><br>250mm x6 |
| <b>F</b><br><br>3x14mm x20 | <b>H</b><br><br>4x4       | <b>J</b><br><br>4x4        | <b>K</b><br><br>1x1          |                          |




SET-UP TIME: 30 MINUTE



OUTILLAGE:  
TOOLS:




NUMBER OF PERSONS: 02



screw driver or drill



# 1

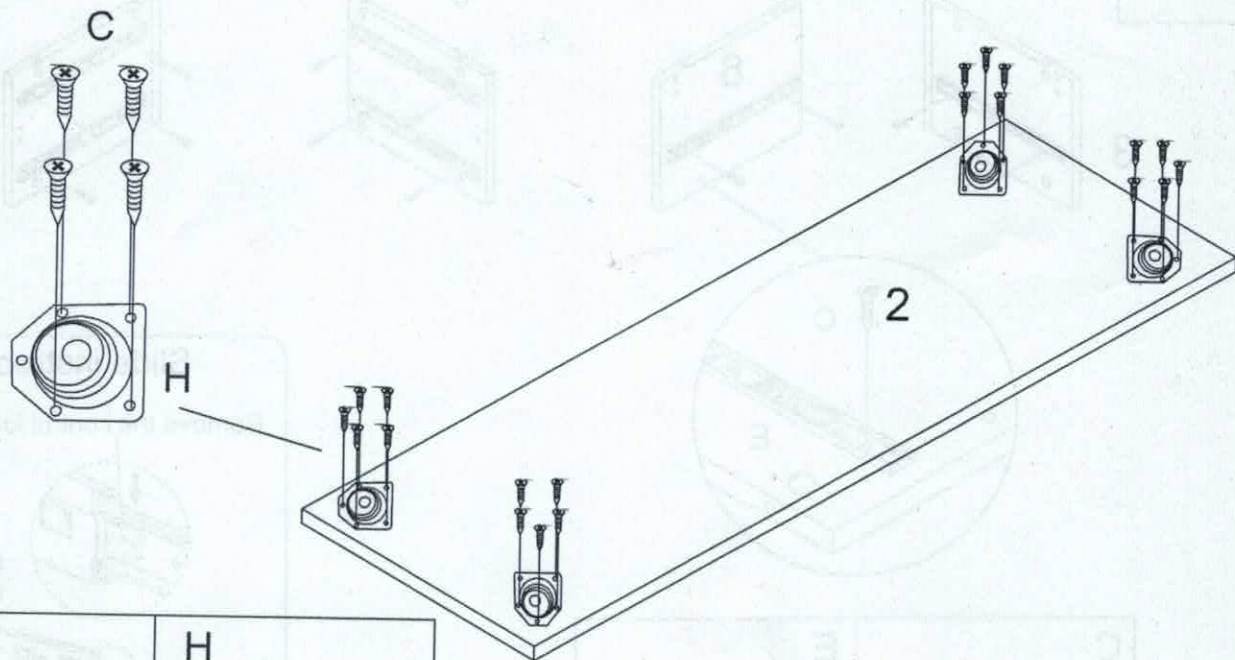

C




x20

H



x4

# 2

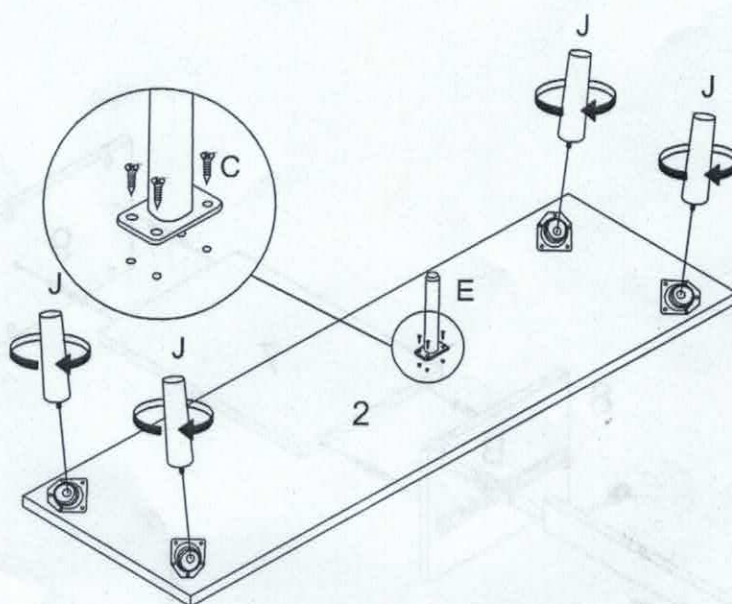

J



x4

C





x4

E





x1

# 3

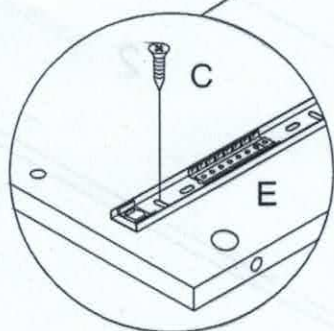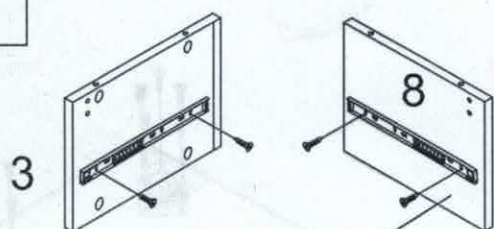


# 9

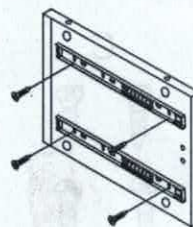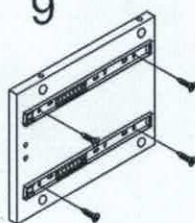


# 4

## Slide instructions

Remove the control lock

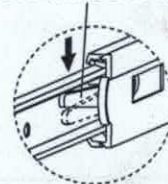

Fixed to side panel

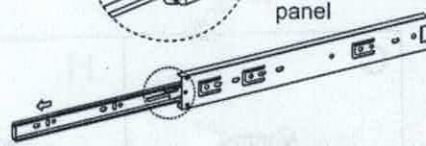

Fixed on the side of the drawer

# C




x12

# E




x6

# 4

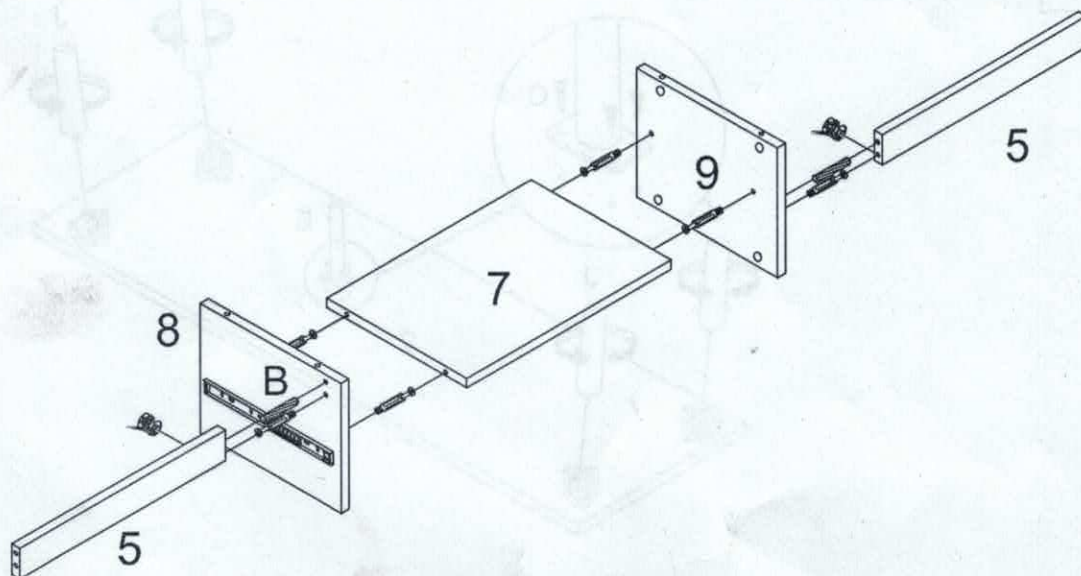

# A



x6


# B




x2



5

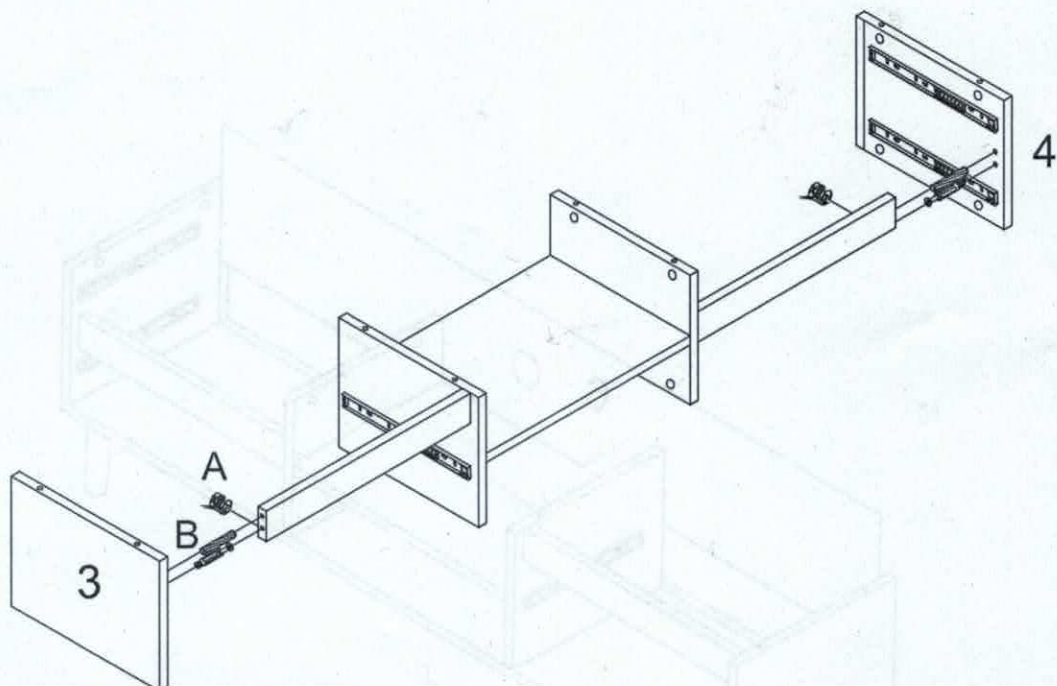

A




x2

B



x2

6

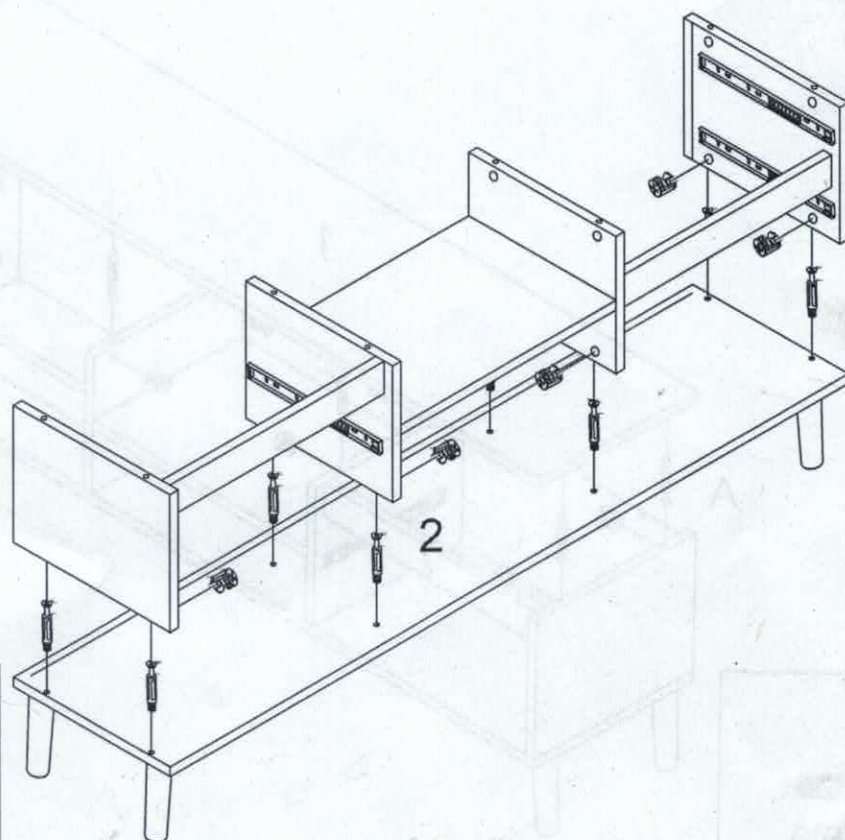


A




x8


7

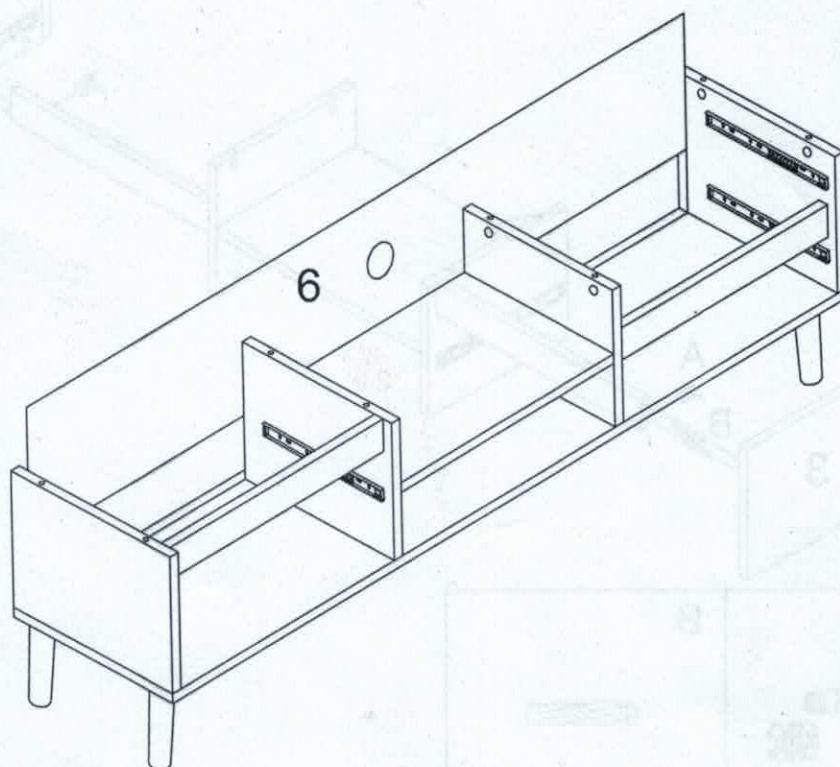

8

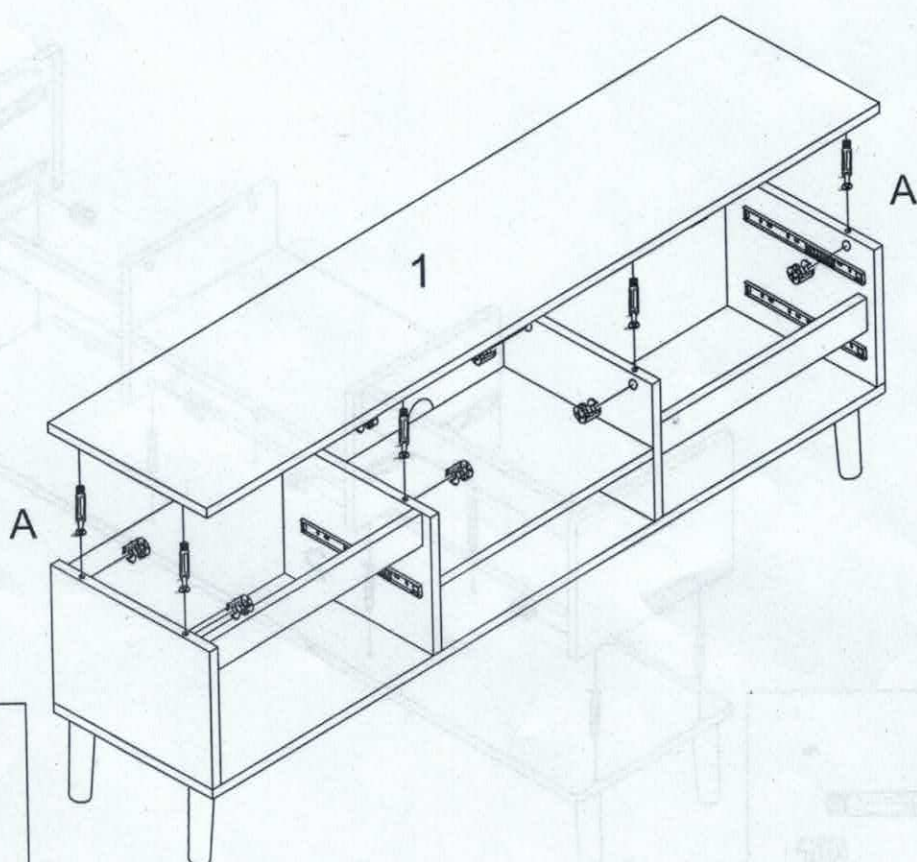




A




x8



9

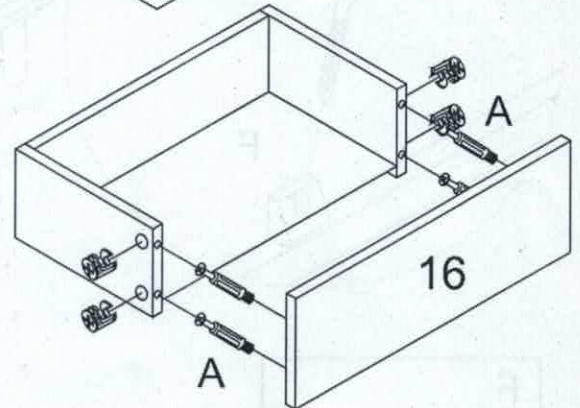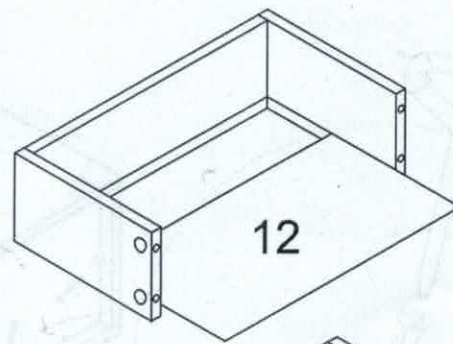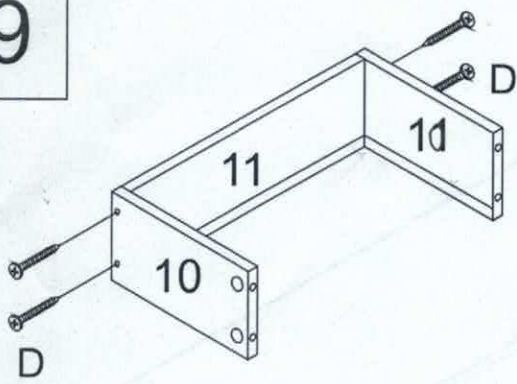

A



x12




D



x12

x3

10

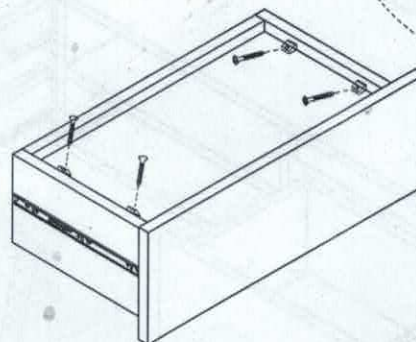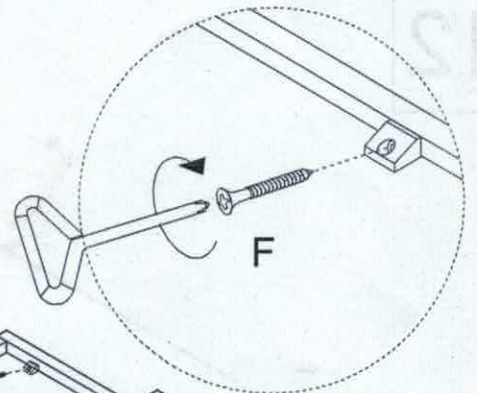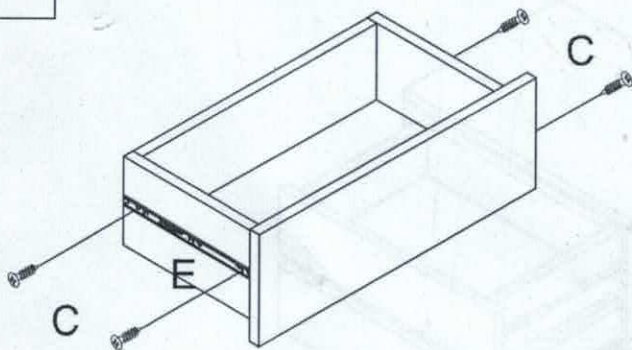

C



x12

E



x6



F



x12

x3

# 11

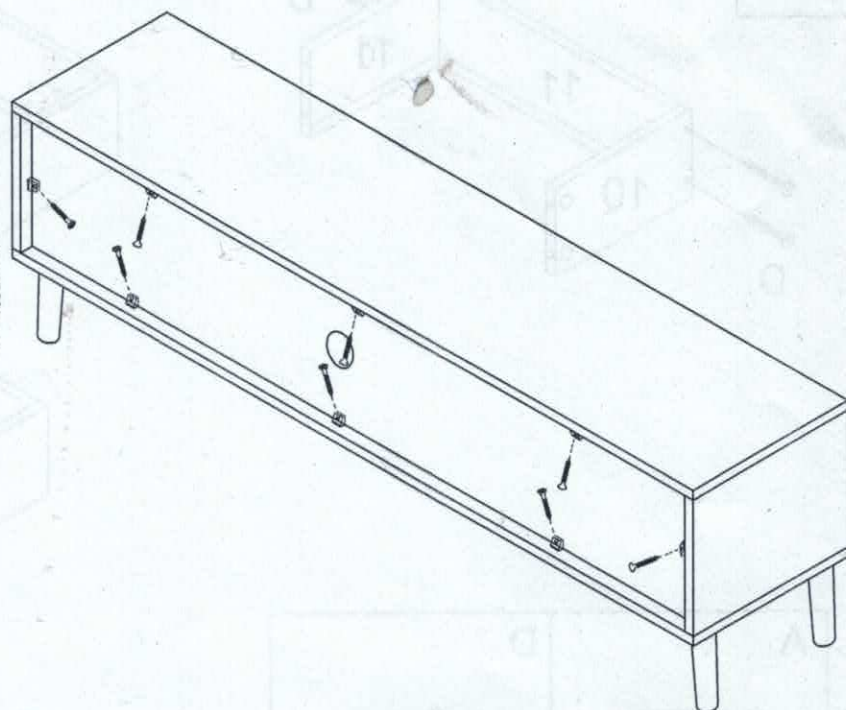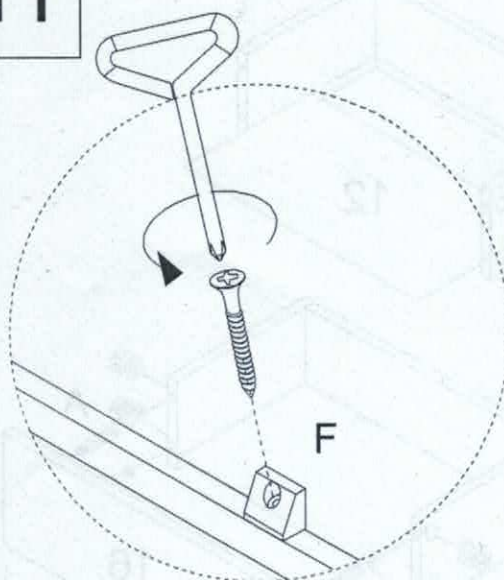

F



x8

# 12

