

ASSEMBLY INSTRUCTIONS

DESCRIPTION : WESTDEN 1-DRAWER
BEDSIDE *LIGHT GREY

MODEL : 821-113

REVISION : A

Component List



No	Descriptions	Qty
A	Nightstand	1
B	Base	1

Hardware List


No	Descriptions	Qty
1	JCBC M6 x 16mm	4
2	Spring Washer Ø1/4 "	4
3	Flat Washer Ø1/4" x 20mm	4
4	L Key M4 x 65mm	1

STEP 1

Prepare a base to prevent the surface of the Nightstand (A) from scratches. Turn the Nightstand upside down, then attach Base (B) to the bottom of Nightstand (A). Tighten with JCBC screw (1), Spring washer (2) and Flat washer (3) using L Key (4).

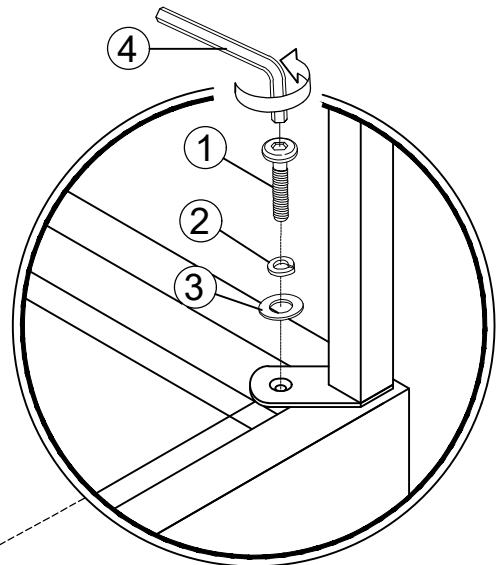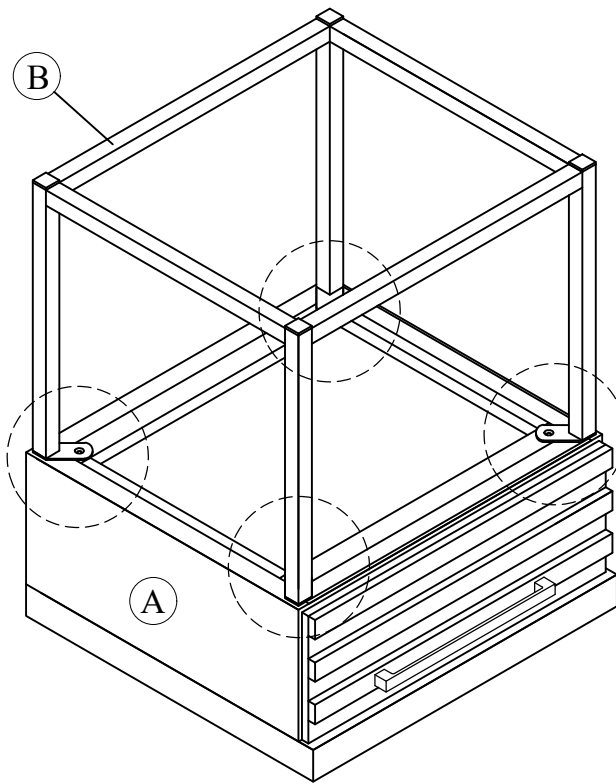

STEP 1

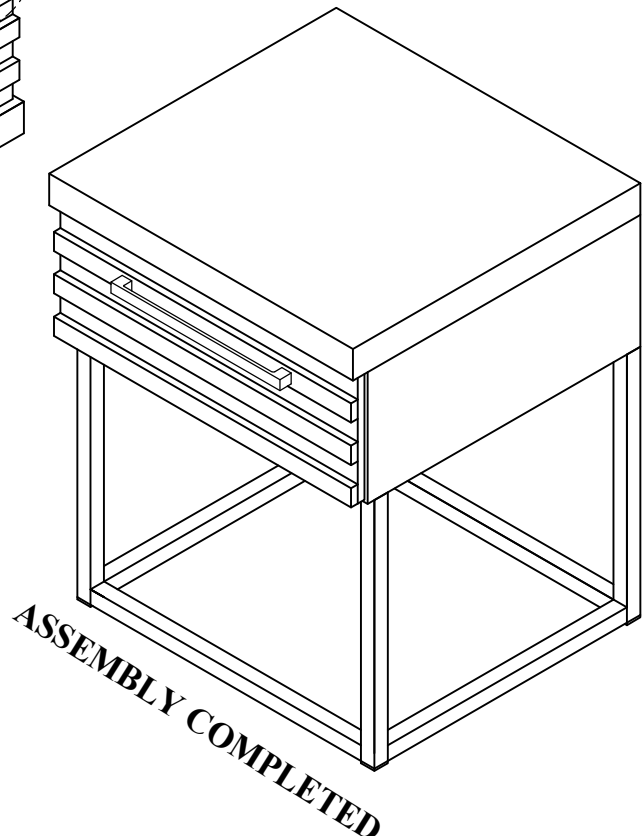

ASSEMBLY COMPLETED

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.