

VL07 / LC-2104 ASSEMBLY INSTRUCTION



①×1



② $\times 1$

 $\phi 6 \times \phi 16$ ③ $\times 4$  $\phi 6 \times \phi 10$ $\textcircled{4} \times 4$ 


M6 × 20

$$\textcircled{5} \times 4$$


4#

⑥ $\times 1$

1. With one person holding the base plate securely on a flat surface, gently twist the leg frame 90 degrees, exposing the bolt holes on the base plate.
2. Locate the Allen key into the hole on both plates as shown. Ensure the Allen key is secure to avoid the legs springing back as this could lead to injury.
3. Position the base plate over the bolt holes on the underside of the chair.
4. Locate the washers and bolt fixings and tighten by hand.
5. Once all 4 bolts are in place, carefully remove the Allen key whilst keeping hold of the legs.
6. Tighten all bolts using the Allen key.
7. Gently release the legs back into position and stand the chair upright.

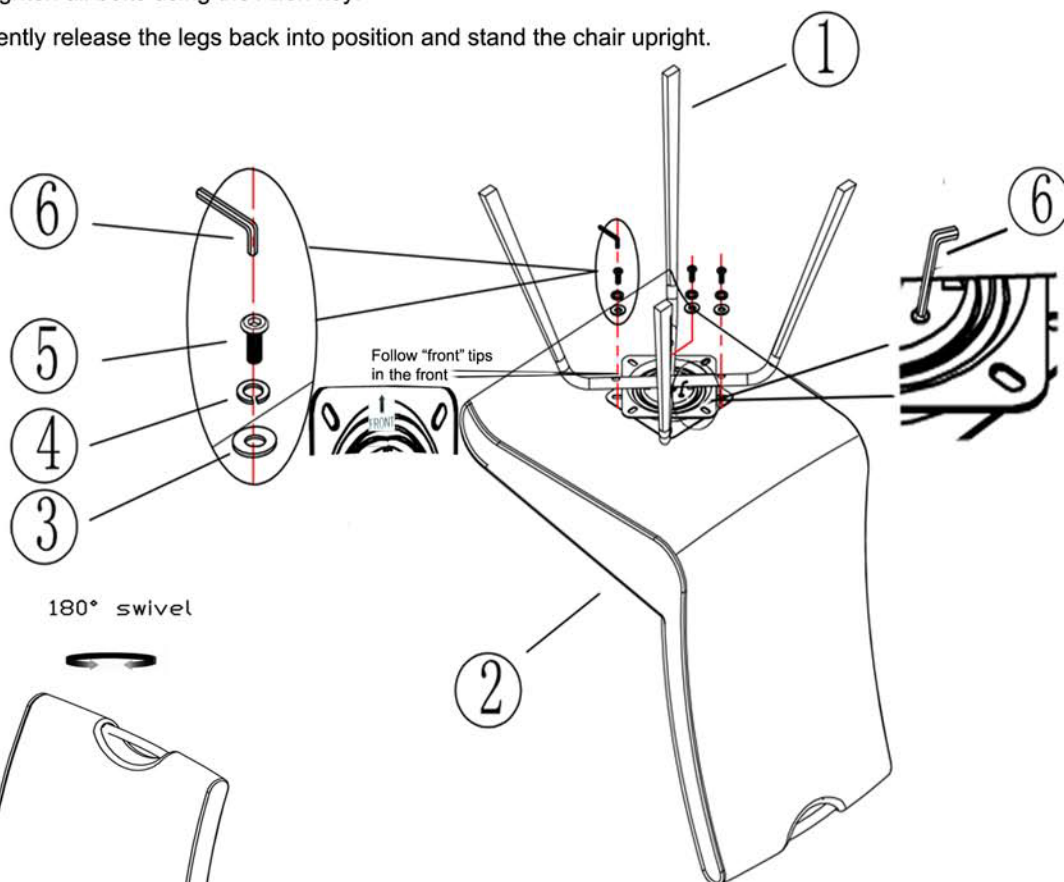

ifurniture

Better, Cheaper, Smarter!