



Installation Instructions

Accessories include


A*3

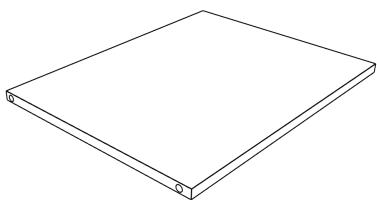


B*2

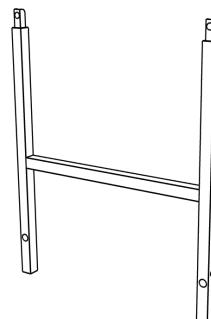


C*2

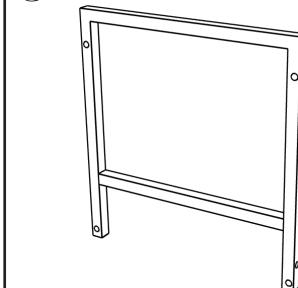

D*2

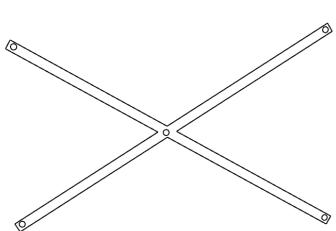

E*12




F*8




G*4



H*1

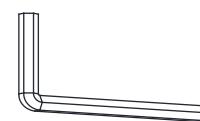


Exploded view

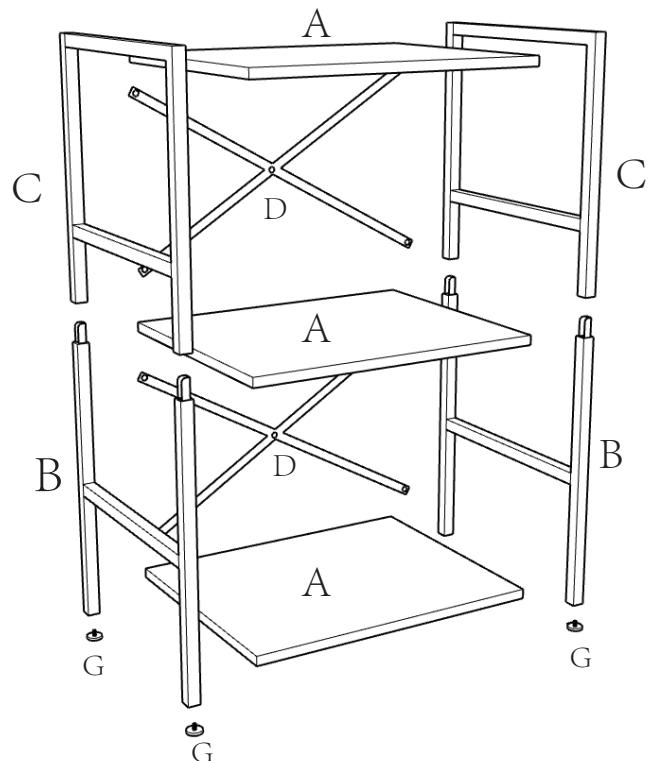


Installation steps

1

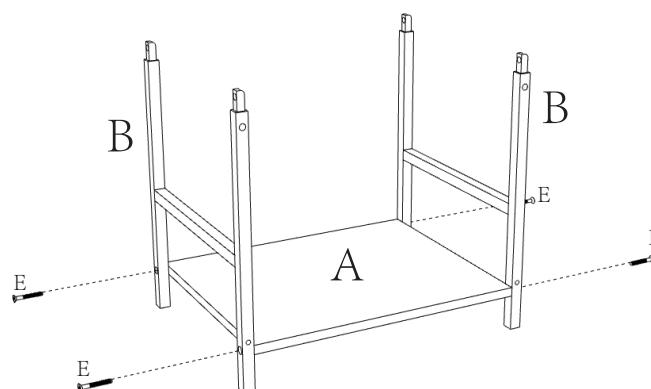

2

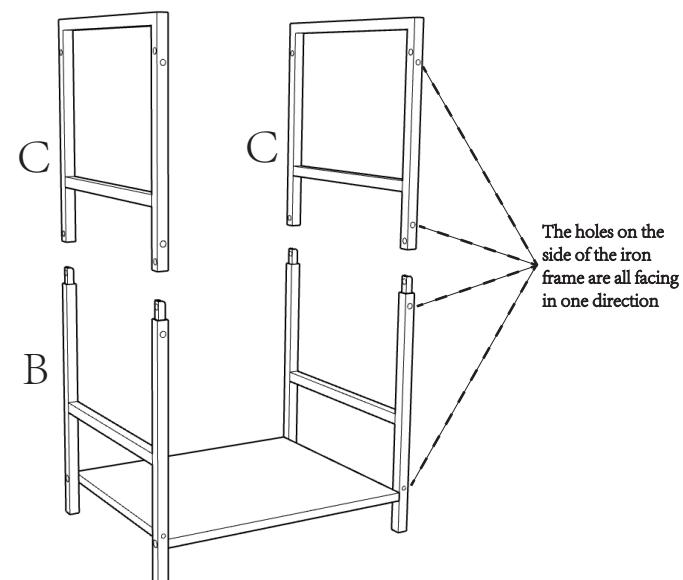


Insert the C iron frame on the B iron frame


The holes on the side of the iron frame are all facing in one direction

Installation steps


3

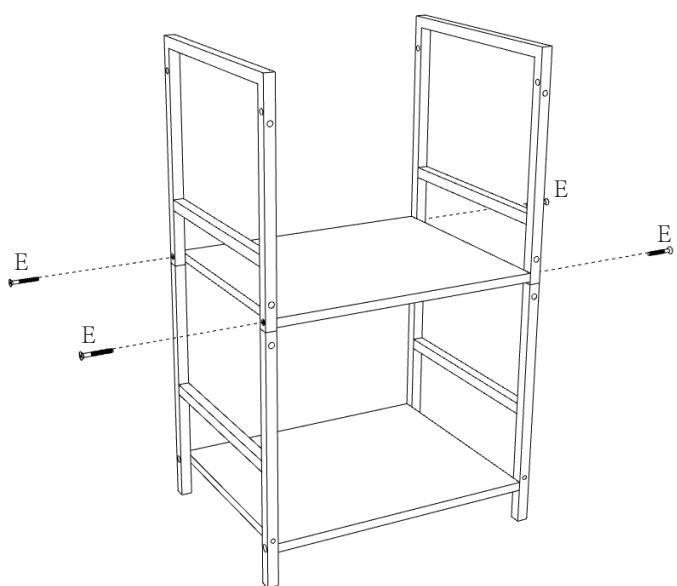


4

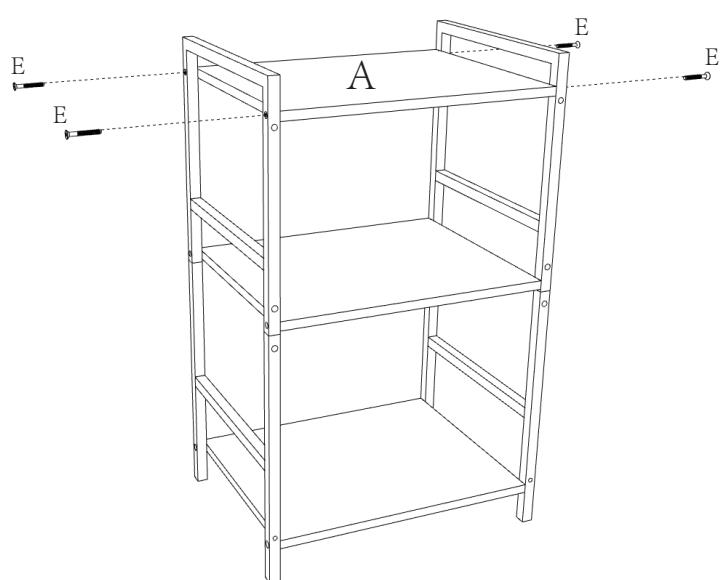

5

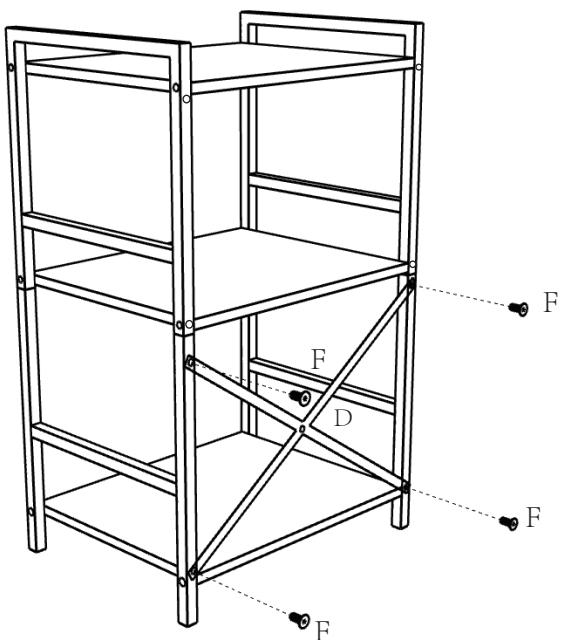


6

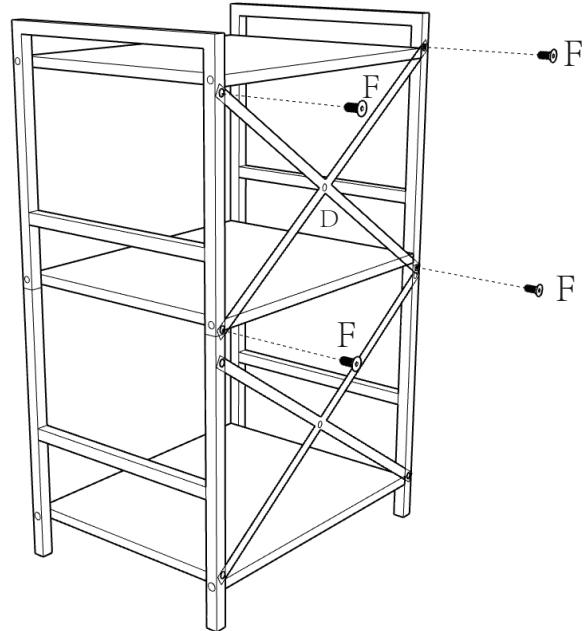

Fix the X-shaped iron wire on the iron frame on both sides

7

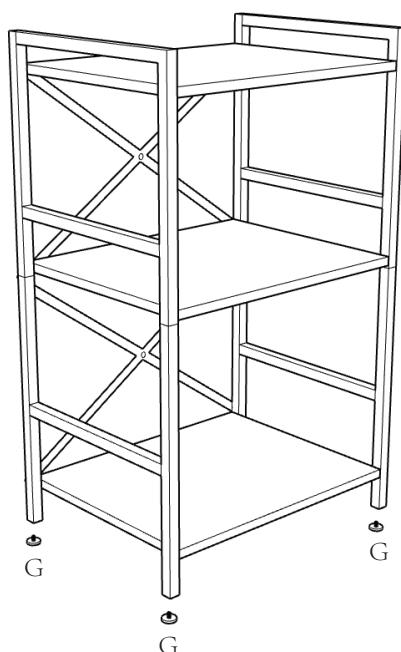

8

