
ITEM NO.: KB010101

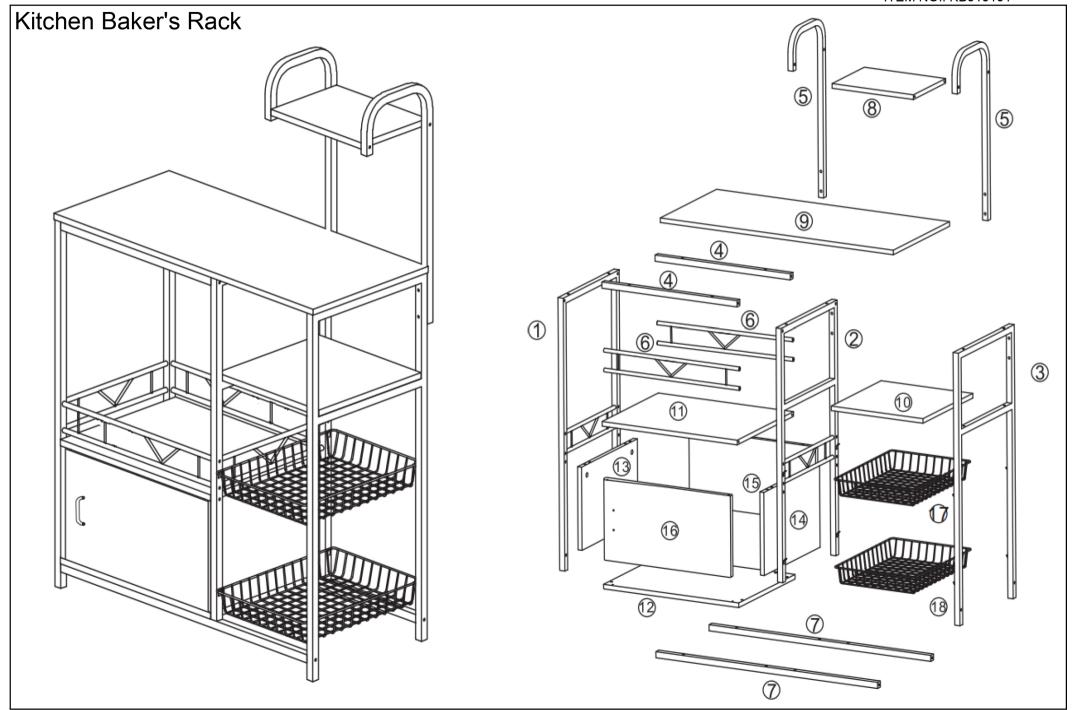

ITEM NO.: KB010101


Thank you for purchasing our Kitchen Baker's Rack. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


#### PRE-ASSEMBLY

- (1) Proper assembly of this item requires 2 people.
- (2) Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- (3) Remove all parts and hardware from box and lay out on a carpeted or scratch-free work surface, such as the cardboard, as this will avoid damaging any parts during assembly.
- (4) Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.

### CARE INSTRUCTIONS

- (1) Hardware may loosen overtime. Periodically check that all connections are tight.
- (2) Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.
- (3) All hot serving dishes should be placed on a pad.
- (4) Any liquid spolled onto the furniture should be cleaned up immediately with a damp cloth.

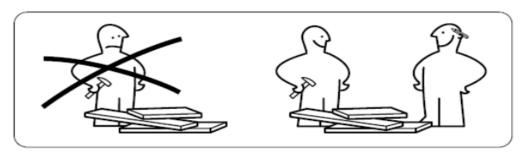

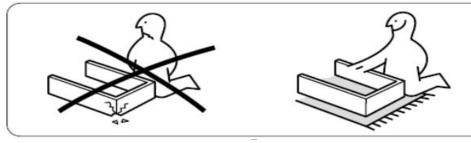

Proper assembly of this item requires 2 people

When assembling, please place it on a clean and smooth floor, such as carpet or cardboard.

ITEM NO.: KB010101


Parts & Hardware						
1	2	3	4	5	6	7
Left Side Frame 1PC	Side Frame 1PC	Right Side Frame 1PC	Top Crossbar 2PCS	Support Bar 2PCS	_	Bottom Crossbar 2PCS
Top Rack 1PC	Top Panel 1PC	Shelf Panel 1PC	Cabinet Top Panel 1PC	Cabinet Bottom Panel 1PC	Cabinet Left Panel 1PC	Cabinet Right Panel 1PC
15 T	16 TO THE THE	(17)	(18)	A	B	C
	[:					
Cabinet Back Panel 1PC		Top Basket 1PC	Bottom Basket 1PC	Allen Key 1PC	Shelf Pin 2PCS	Dowel(¢6x30) 4PCS
	E	F 9	G	<b>1 3 3 3 3 3 3 3 3 3 3</b>		J
Cam Bolt 6PCS	Cam Lock 6PCS	Long Sharp Bolt (St5x45) 8PCS	Door Knob 1PC	Small Bolt(M4x15) 2PCS	Long Bolt(M6x45) 4PCS	Nut 4PCS
K	L	M	N	0	P	Q
(3)::::::::::::::::::::::::::::::::::::	<b>3</b>				(A) Tanana	<b>%</b>
Bolt(M6x27) 16PCS	Medium Bolt(M6x40) 18PCS	Flat Washer 1PC	Magnetic Latch 1PC	Mending Plate 1PC	Small Sharp Bolt (ST3X12) 4 PCS	Sharp Bolt( <b>\$</b> 5x40) 6PCS

ITEM NO.: KB010101


Step 1: Please assemble this kitchen baker's rack onto a clean and smooth surface such as carpet or cardboard. Insert ((4) and Cabinet Back Panel((5) to Cabinet Top Panel((11)) as shown. Insert Shelf Pin(B) into Cabinet Top Panel((11)). Then six Cam Bolts(D) and four Dowels(C) into Cabinet Top Panel(11) as shown, make sure all Cam Bolts(D) and Dowels(C) are tightened and perpendicular to the panels. Fasten Magnetic Latche(N) to Cabinet Top Panel(11) by inserting two Small Sharp Bolts(P) and tighten with supplied Allen Key(A).

DC


Step 2: Attach Cabinet Left Panel(13), Cabinet Right Panel shown, please make sure six Cam Bolts(D) and four Dowel(C) on Cabinet Top Panel(①) are inserted into three panels(13(4)(15)). Then insert six Cam Locks(E) into three panels(13(4)(5), turn Cam Locks(E) 1/2 turn (180 degrees) with Screwdriver to tighten.



DC

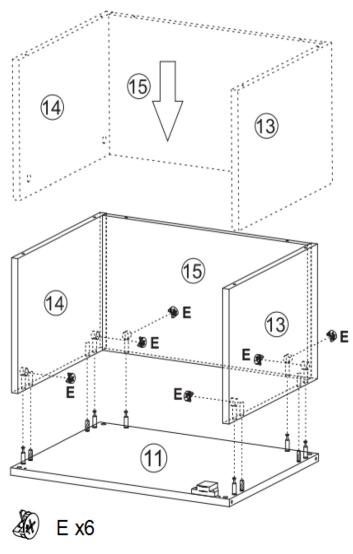

Step 3: Turn over the assembled four panels(11)(13)(4)(15) as attach Door Panel(16) to Cabinet Top Panel(11), make sure Shelf Pin(B) is inserted into the holes of Door Panel(16). Next, insert Shelf Pin(B) thru Flat Washer(M) into the bottom holes of Door Panel((16)), align the holes and attach Cabinet Bottom Panel(12) to the assembled parts, insert six Sharp Bolts(Q) and tighten with supplied Allen Key(A). Do not fully tight all bolts until all parts are in place.

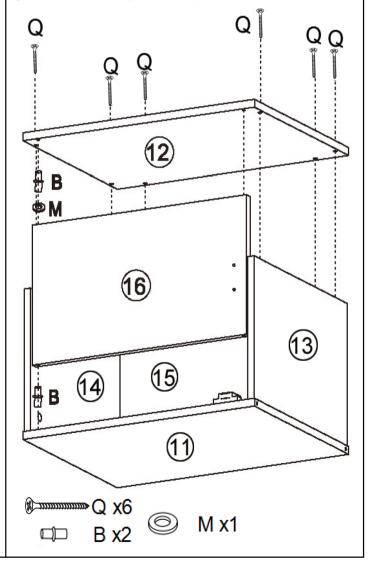


θ L x12


ITEM NO.: KB010101

Step 4: Turn over the assembled parts as shown. Open the doors, attach Door with supplied Allen Key(A). Attach Mending Plate(O) to Door Panel(16), align the holes and insert two Small Sharp Bolts(P), fully tighten with supplied Allen Key(A). Cabinet assembly is preliminarily completed.

Step 5: With the help of others, attach two Top Crossbars(4) and two Mesh Grids(6) to Left Knob(G) to Door Panel(16), align the holes and insert two Small Bolts(H), fully tighten | Side Frame(1) and Side Frame(2) as shown, insert twelve Medium Bolts(L) and tighten them with supplied Allen Kev(A). Do not fully tight all bolts until all parts are in place.

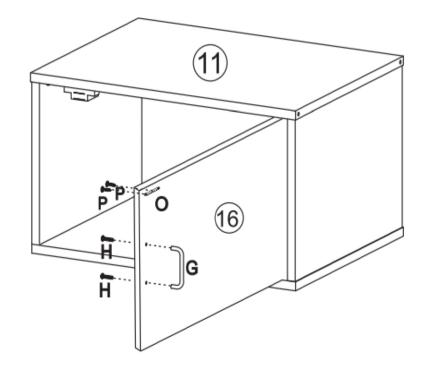



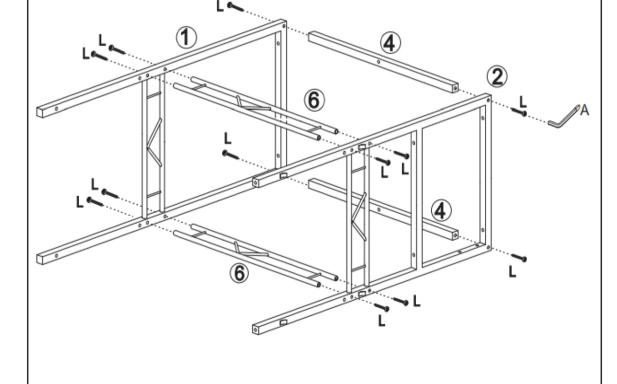


ITEM NO.: KB010101

Step 6: Turn over the assembled cabinet as shown, fasten Step 8: Attach Right Side Frame(3) to two Bottom Step 7: Attach the assembled cabinet and Bottom two Bottom Crossbars(⑦) to Cabinet Bottom Panel(⑫) by Crossbars(⑦) to the assembled metal frame from bottom as Crossbars(7) as shown, insert two Medium Bolts(L) from inserting four Bolts(K) and tighten with supplied Allen shown, align the holes and insert four Medium Bolts(L) and side and tighten with supplied Allen Key(A). Do not fully tight Kev(A). Do not fully tight all bolts until all parts are in place. four Long Sharp Bolts(F), tighten them with supplied Allen all bolts until all parts are in place. Key(A). Do not fully tight all bolts until all parts are in place. 2 @mmmm F x4

ITEM NO.: KB010101

Step 9: With the help of others, flip on the assembled part gently to make it stand. Attach Shelf Panel((10)) to Side Frame((2)) and Right Side Frame((3)) as shown, insert four Bolts(K) and tighten them with supplied Allen Key(Q). Then attach Top Panel((9)) to Left Side Frame((1)), Side Frame((2)) and Right Side Frame((3)), insert eight Bolts(K) and tighten them with supplied Allen Key(A). Do not fully tight all bolts until all parts are in place.

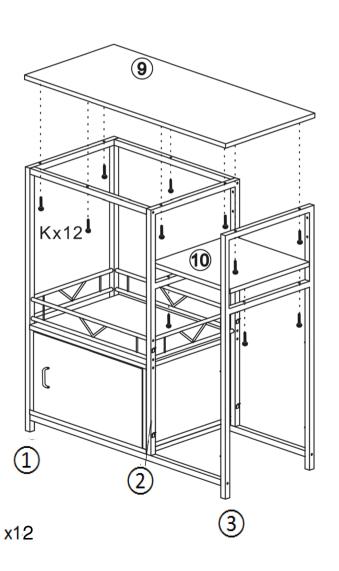

Step 10: Fasten two Support Bars(⑤) to Side Frame(②) and Right Side Frame(③) by inserting four Long Bolts(I) and four Nuts(J), tighten them with supplied Allen Key(A). Attach Top Rack(⑧) to two Support Bars(⑤) as shown, align the holes and insert four Long Sharp Bolts(F), tighten with supplied Allen Key(A). Hook Top and Bottom Basket(⑩⑧) to Side Frame(②) and Right Side Frame(③) as shown. Fully re-tighten all bolts and assembly is completed.

