


## Product instructions(8167#)

Please kindly peruse product instructions before opening cartons to assemble sofas.

QTY of carton of your order

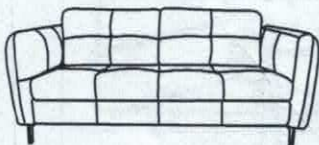

**2seater sofa**

**box size:**

**1A 88\*59\*35CM\*1**


**1B 122\*63\*170CM\*1**

**3seater sofa**

**box size:**

**2A 88\*59\*35CM\*1**

**2B 167\*63\*17CM\*1**

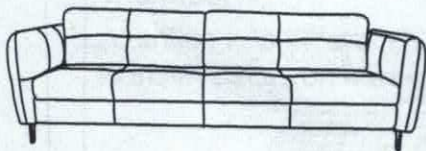

**CAUTION  
8167**


PLEASE DO NOT OPEN  
COMPRESSED PLASTIC  
CUSHION BAGS UNTIL  
YOUR SOFA FRAME IS  
COMPLETELY ASSEMBLED,  
OTHERWISE,IT CAN'T BE  
REPACKED TO RETURNED.

NOtes:Please make sure you received all cartons before assembling

**Size:88\*59\*35CM Armrest carton**



⑦ Arms (1pc Left+1pc Right)Total 2pcs



⑧ Sofa feet\*4pcs



A Screw 40mm\*10pcs

**Hardware list**



B Screw 60mm\*2pcs



C wrench\* 1pcs




D Hex key\* 1pc




E Gasket \*12pcs


**size:122\*63\*17CM/2B:167\*63\*17CM  
seater sofa parts:**

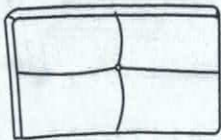


⑥ Back of sofa cushion\*2pcs

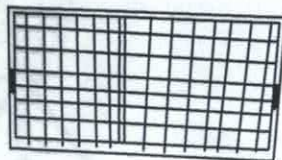


② Iron frame:1pc




① seat cushion:1pc

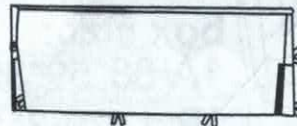

③ Cloth cover:1pc



④ Sofa back frame :1pc





⑤ Front panel:1pc  
(screws pre-installed)


Notes:Please kindly make sure if you received all cartons and check listed accessories of you sofas before assembling.

Notes:pictures of instruction are simplified drawing by hand,any doubts about the steps of installation of sofas, please contact our customer service online,we will send you installation video for your easy assembling.





**STEP1: Assemble the armrest feet**

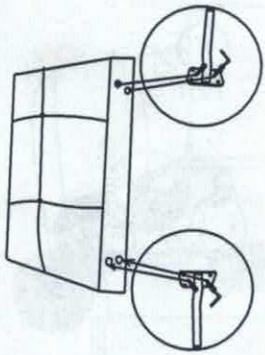
A	M8*40mm		8pcs
D	M8*100mm		1pc



use 40mm screw

**STEP2: Lock the front panel and iron seat frame with screw**



A	M8*35mm		2pcs
D	M8*100mm		1pc

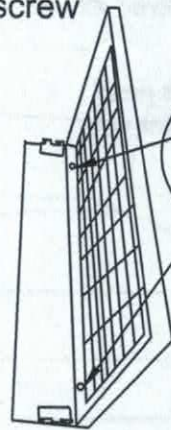


use 35mm screw

**STEP3:**


1: Assemble the screw on the inside of the armrest

A	M8*40mm		8pcs
D	M8*100mm		1pc

use 40mm screw

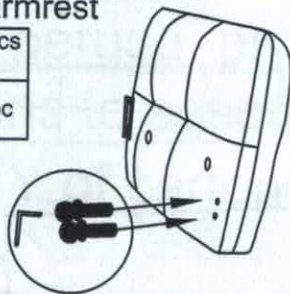


3. Use screw to lock the iron frame and armrest

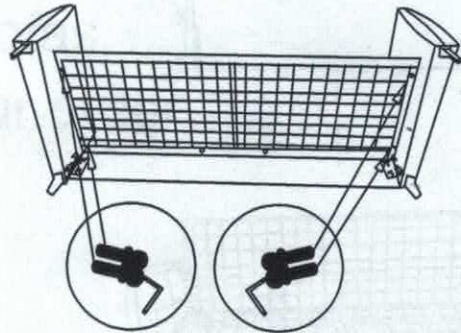



use 40mm screw

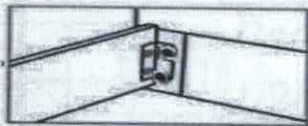2: Insert the metals of the front panel into the screws on armrests




**STEP4:**


1: Align the backrest with the inserts

B	M8*60mm		2pcs
C	M8		1pc

Attention : All screws should be 50% fixed to insert back iron frame.

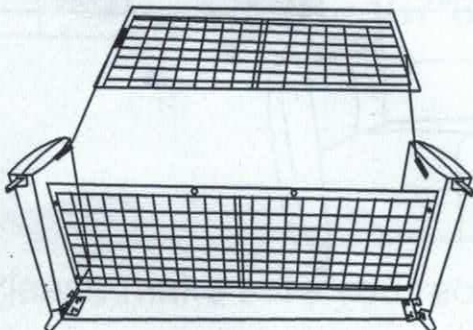

2: Use the screw on the seat iron frame to align the back hole

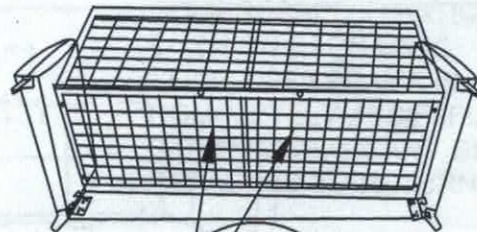

use 60mm screw




**Tips:**

1. Please open the compress packaging when you make sure you received all cartons and accessories.



2. Compress cushions or pillows need be fully shaped within 72hours for your perfect use.





3. Cushions should be regularly maintained for perfect use.




**STEP5:**

1: Put back cloth cover on

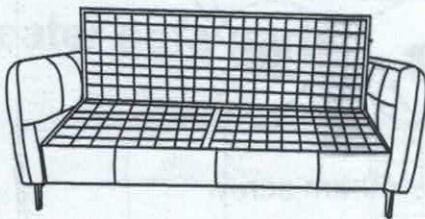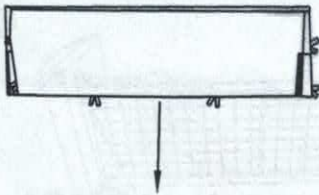

2. put the backrest and seat cushion on

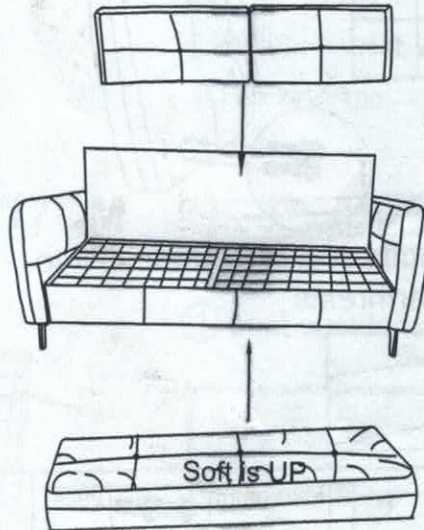

3 seater 3pcs of back cushions

