

① Top Panel 1x	② Right side panels 1x	③ Light side panels 1x	④ Divider Panel 1x	A. Dowel 16x	B. Cam Lock 22x
⑤ Back panel 2x	⑥ Movable Panel 2x	⑦ Door panel 1x	⑧ Fixed panel 1x	C. Cam Pin 22x	D. Cam Cover (2 Colours) 4+18x
⑨ Back panel 1x	⑩ Drawer left side panel 1x	⑪ Drawer right side panel 1x	⑫ Drawer back panel 1x	E. Wood screw 21x	F. Long pitch self-tapping screw (35 Black) 4x
⑬ Drawer bottom panel 1x	⑭ Surround panel 1x	⑮ Bottom Panel 1x	⑯ Supporting leg 4x	G. Screw 16x	H. Handle 1x
M. Backboard strip 1x	N. Anti-pour hardware package 2x	O. Anti-pour hardware package 8x	P. Backboard strip 8x	I. Handle Nails 1x	J. Corner Bracket 2x
				K. Full overlay door hinge 2x	L. 25 square thickened washer 4x
				Model GF571-0810	Size 800W*400D*1080H




Install by 2 persons

1x




Step 2


Note: When installing the inter-board, the three-in-one hole should be installed towards the left as shown in the picture.

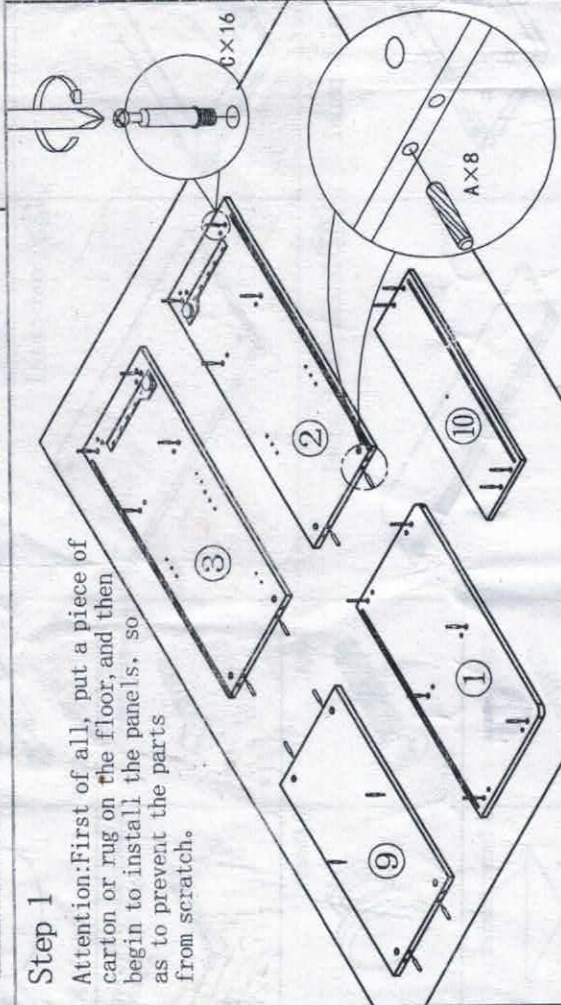


Step 4

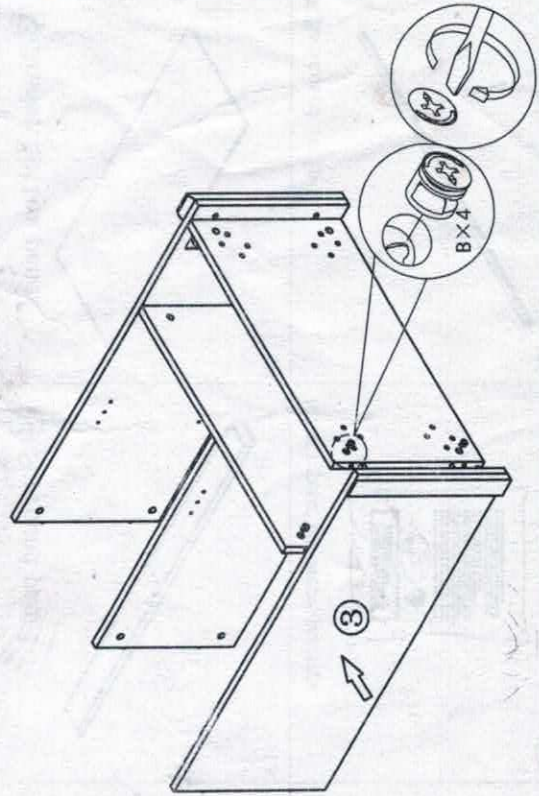

Step 3

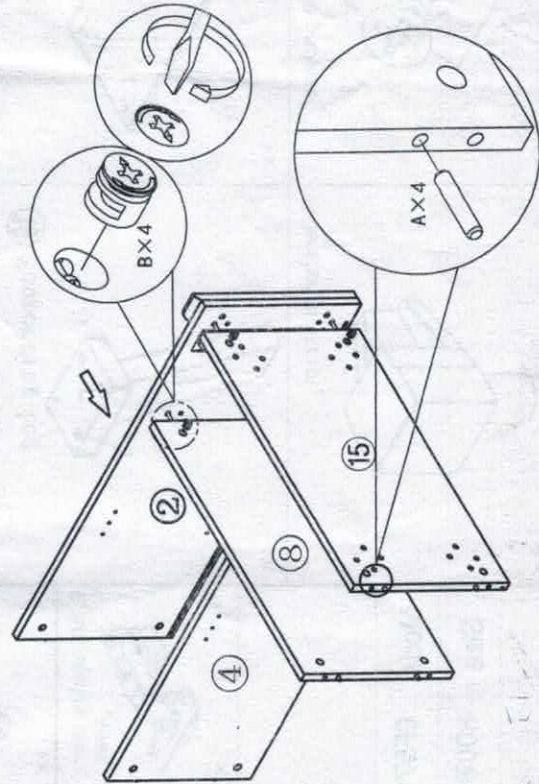


Step 5

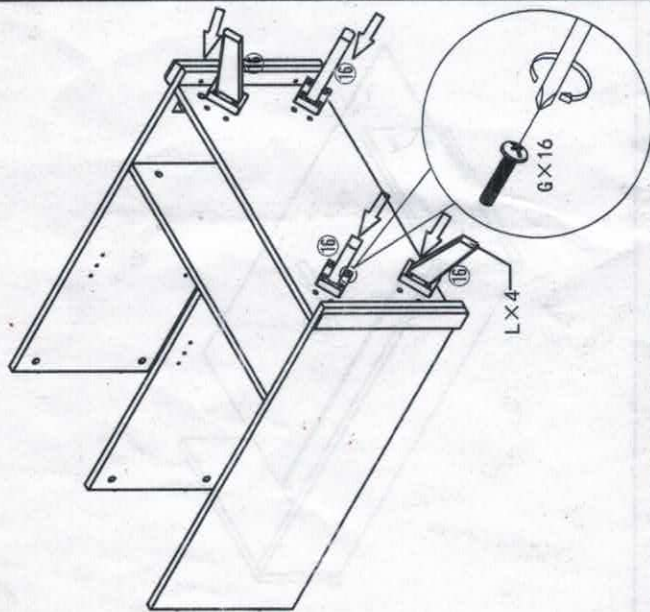


Step 6

Note: When installing this corner connector, this cover can be turned up.

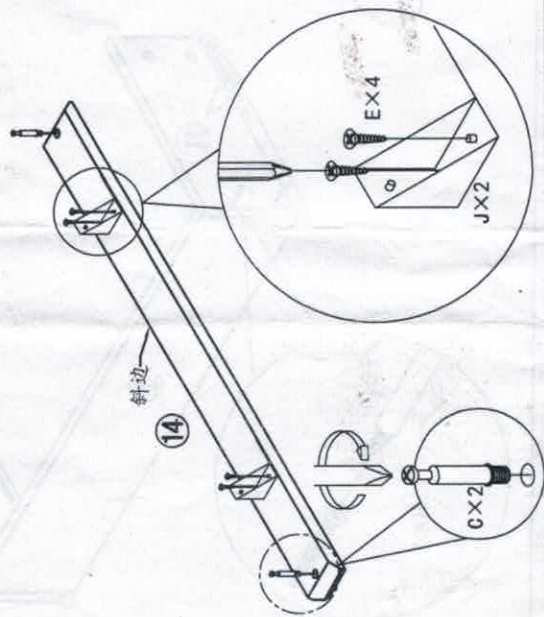


Step 7

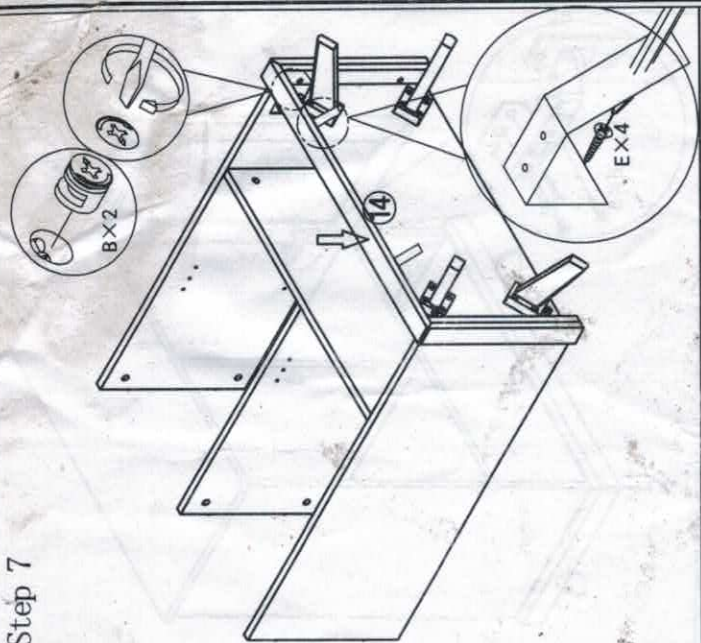


Step 8


Note: When installing the back panel, install the back panel card strip in the middle of the two back panels, then ensure that the left and right sides are stuck into the slots of back panel and ensure that the back panel is straight down into the left and right side panel card slot. If you fail to do this, please press the back panel and then press the back panel into the right side panel card slot.

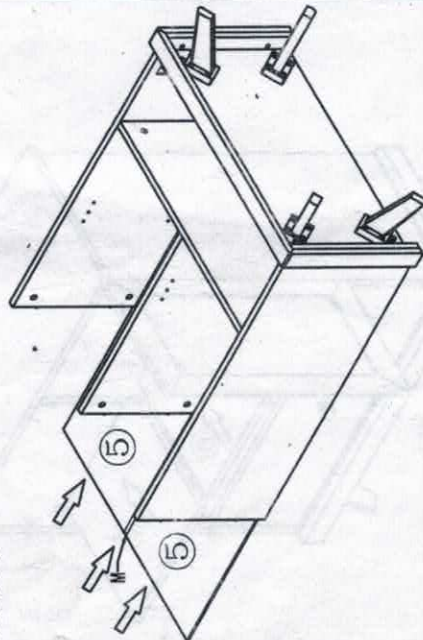


Step 10

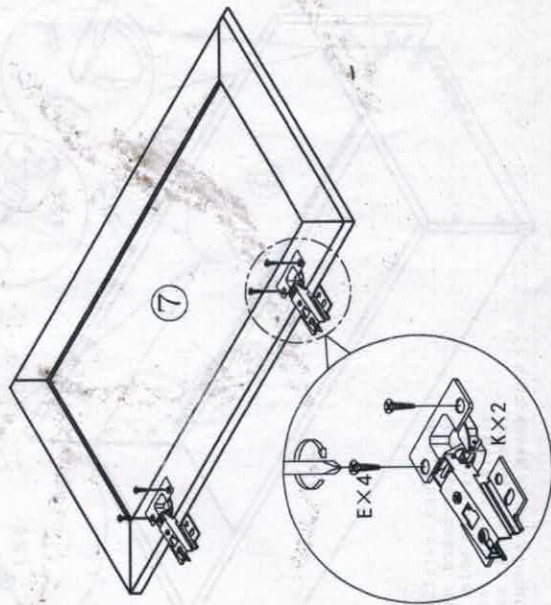


Step 11

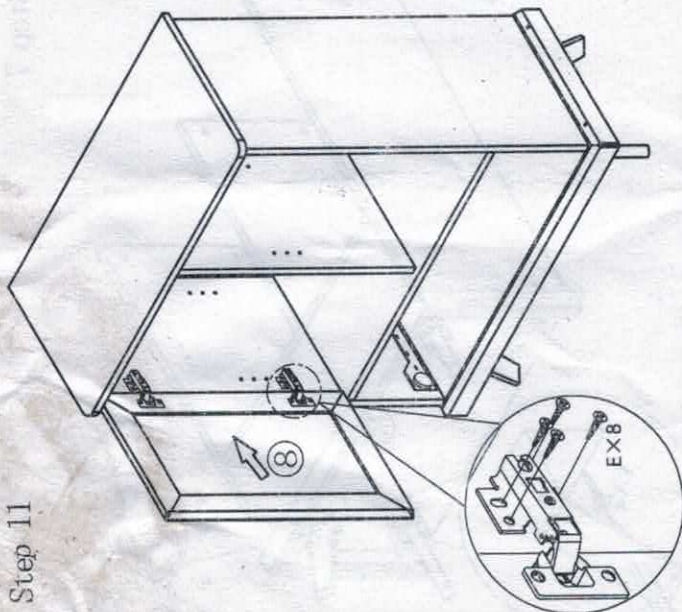


Step 12

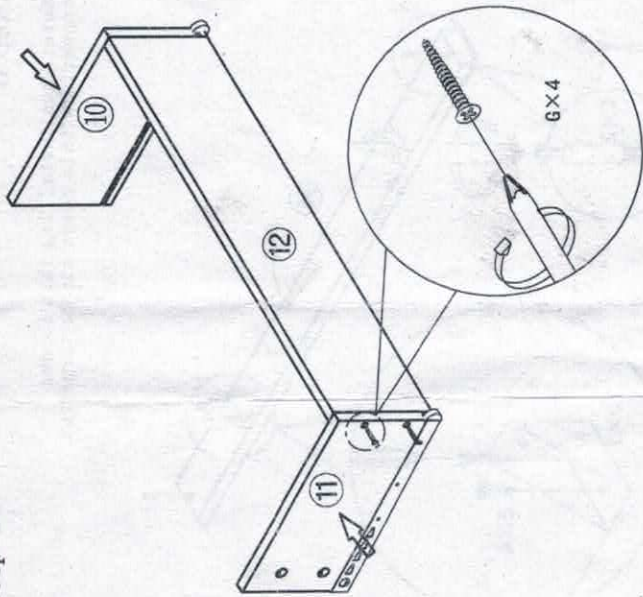


Step 13

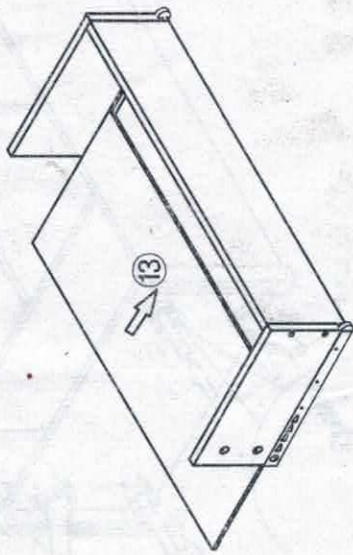


Step 14

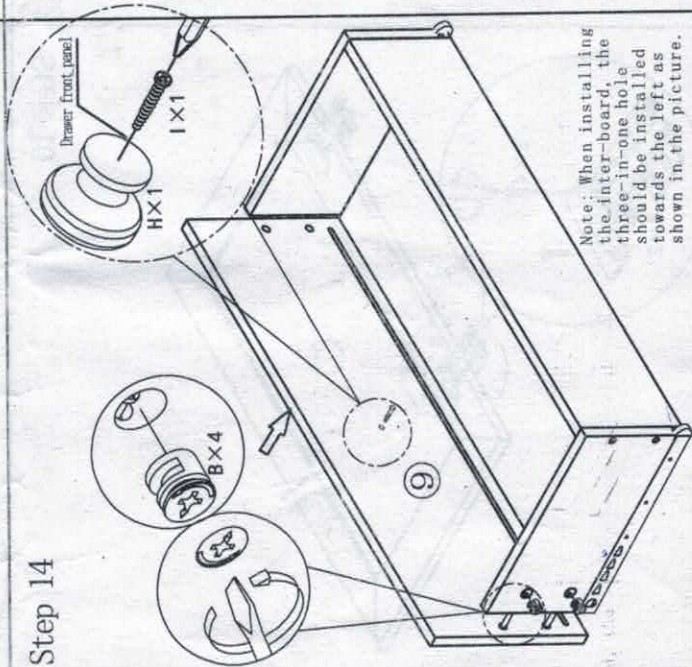

Step 15

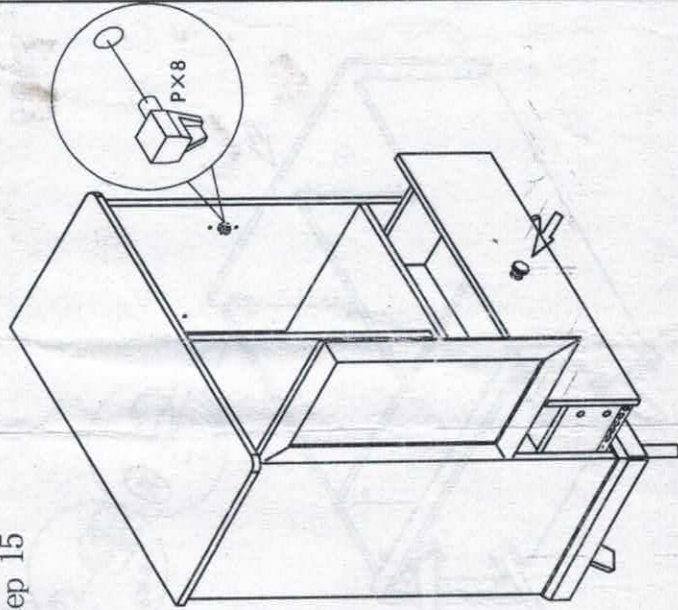


Step 16

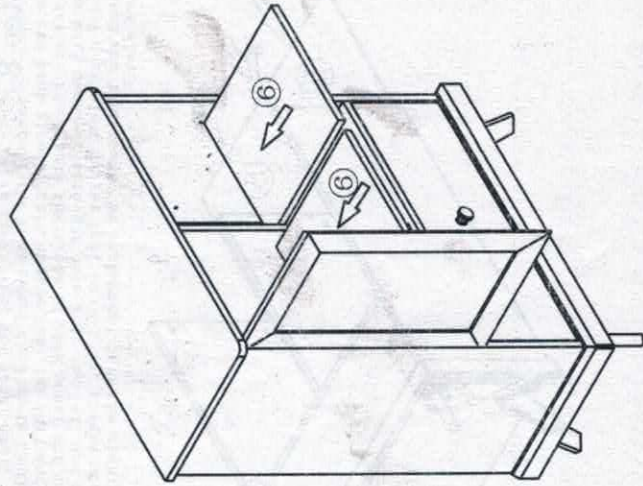


Step 17

Note: The back panel bracket can be installed according to the position drawn in the picture.

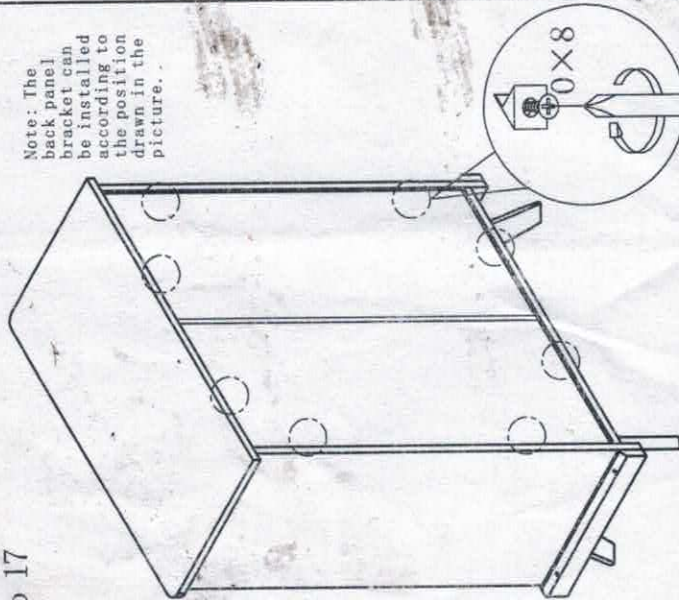


Step 18

Open K (anti-pour hardware package) 2X (the following is the number of single package)

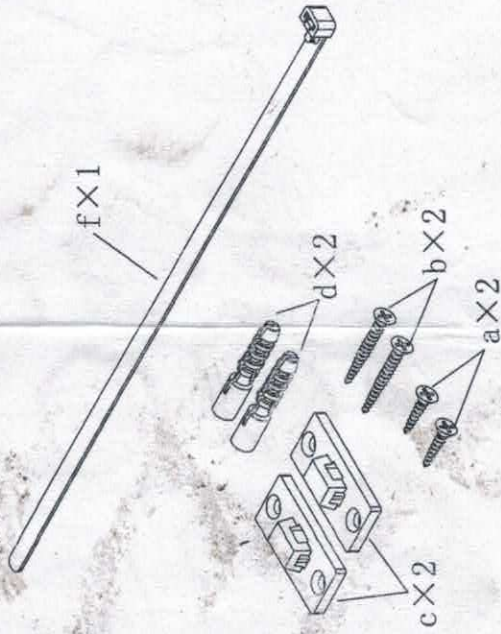

Step 19


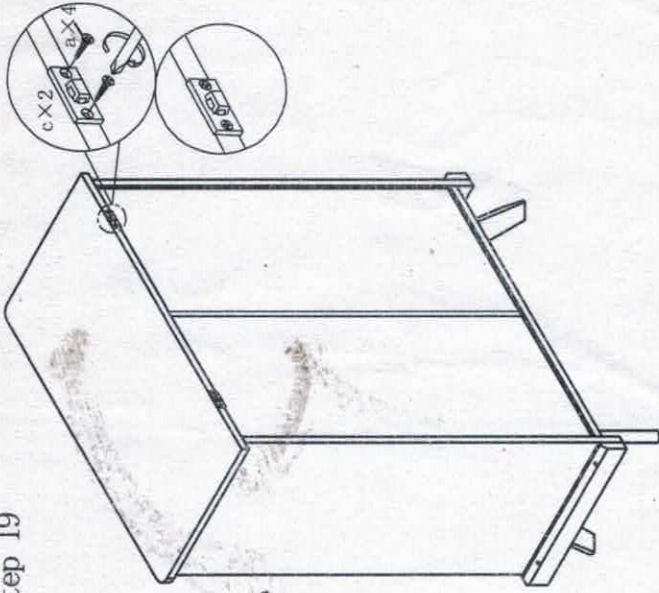


Step 20

Note: According to the installation in the top plate C corresponding to the location of the hole in the wall, and tap into dX4, and then screw into bX4.

Step 21

Note: put f (x2) through the c (x2).

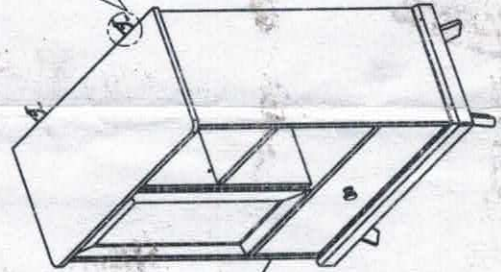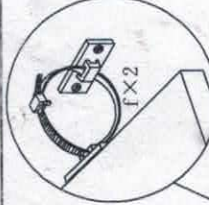

Adjust the distance between the cabinet and the wall, pull the tape tight (f)

Step 22

