

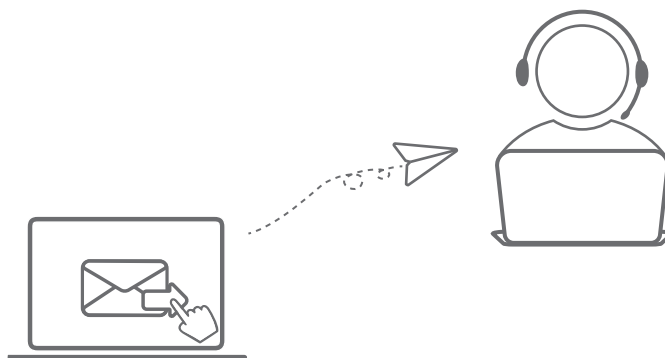


ATTENTION

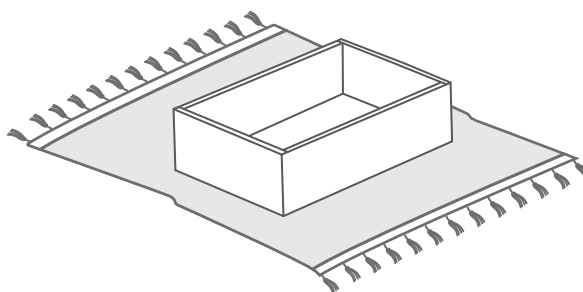

KEEP DRY

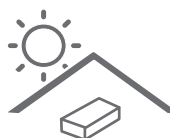


NO SUN EXPOSURE




SOFT DRY CLOTH


PARTS LIST

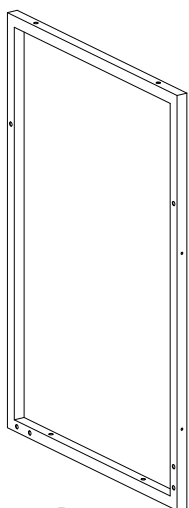


1x2

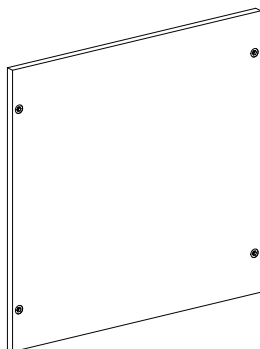


2x1

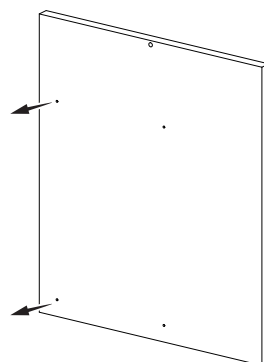

3x1

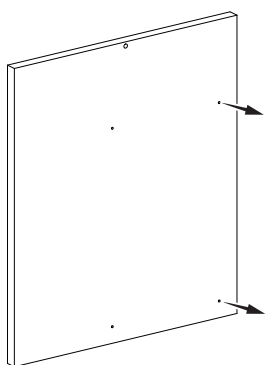


4x1

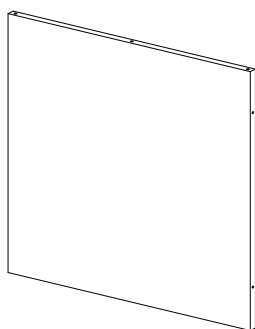


5x1




6x2

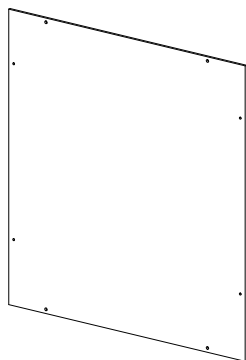

7x1

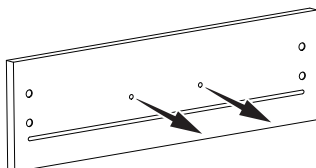


8x1

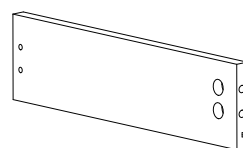


9x1


PARTS LIST

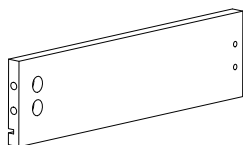


10x1

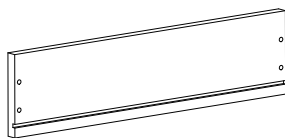


11x1

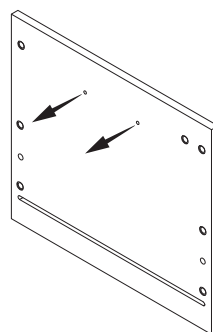


12x1

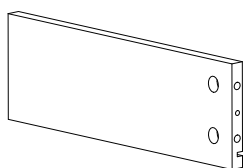


13x1

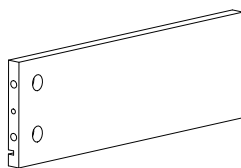

14x1

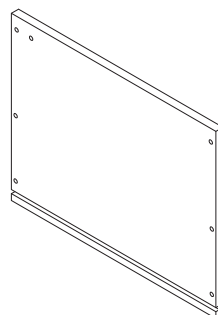


15x1

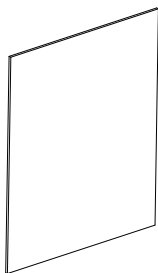


16x2


HARDWARE LIST

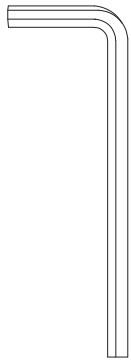

Ax1

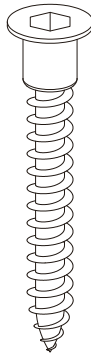

Bx26

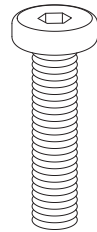

Cx4




D1



D2

Dx8

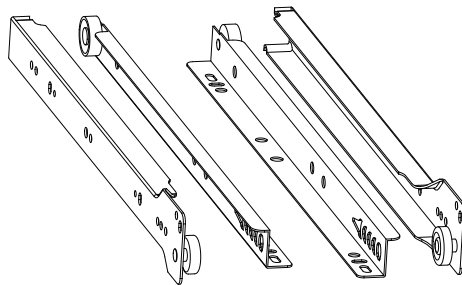

CL

DL


DR

CR


Ex2



Fx2

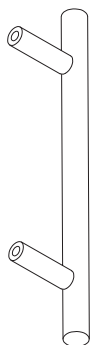


G1x1

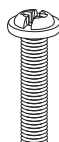

G2x2

Gx2

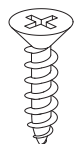


12mm

Hx24




Ix2

HARDWARE LIST

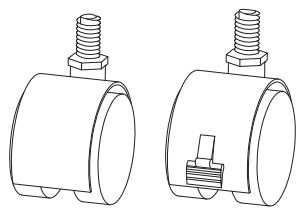

J1 J2


Jx2

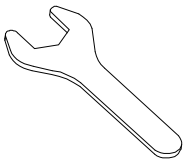

Kx1


1 ATTENTION

During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.

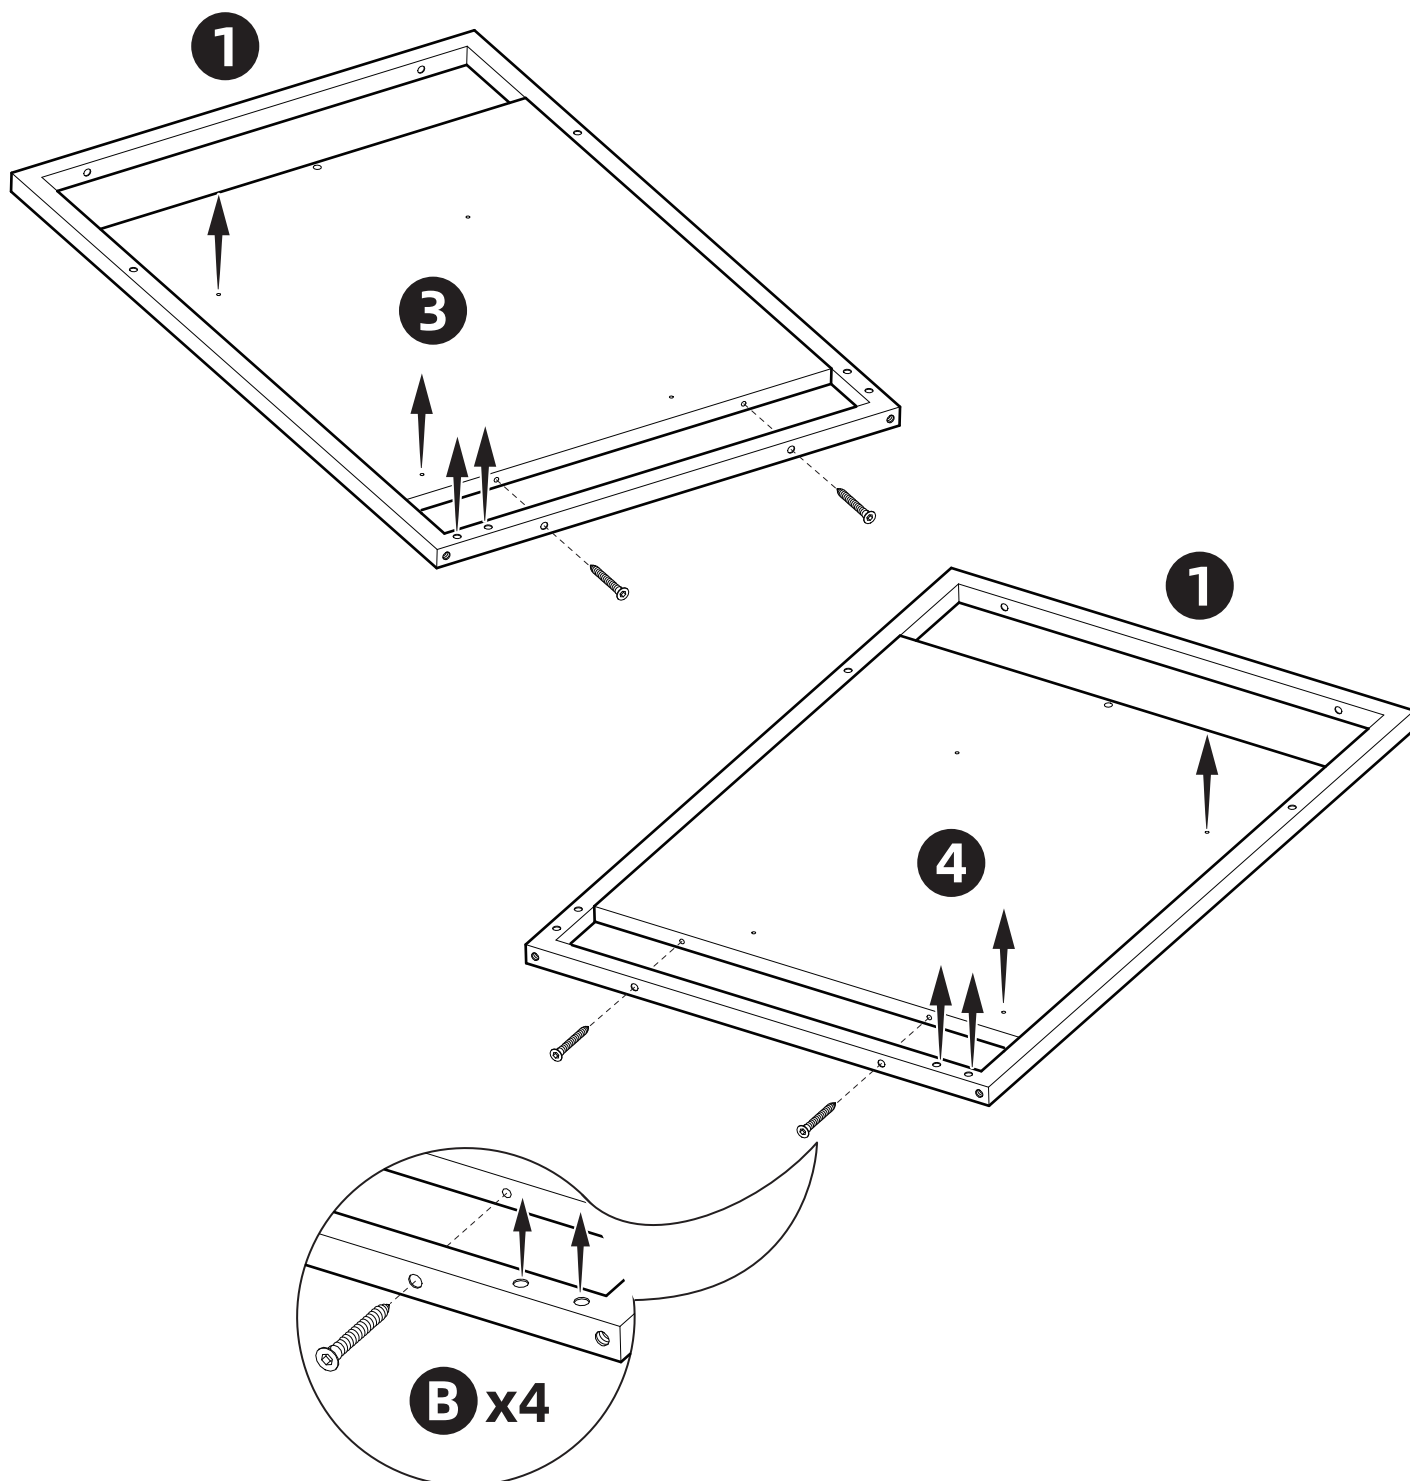


2 ATTENTION

Please note the direction of the holes .

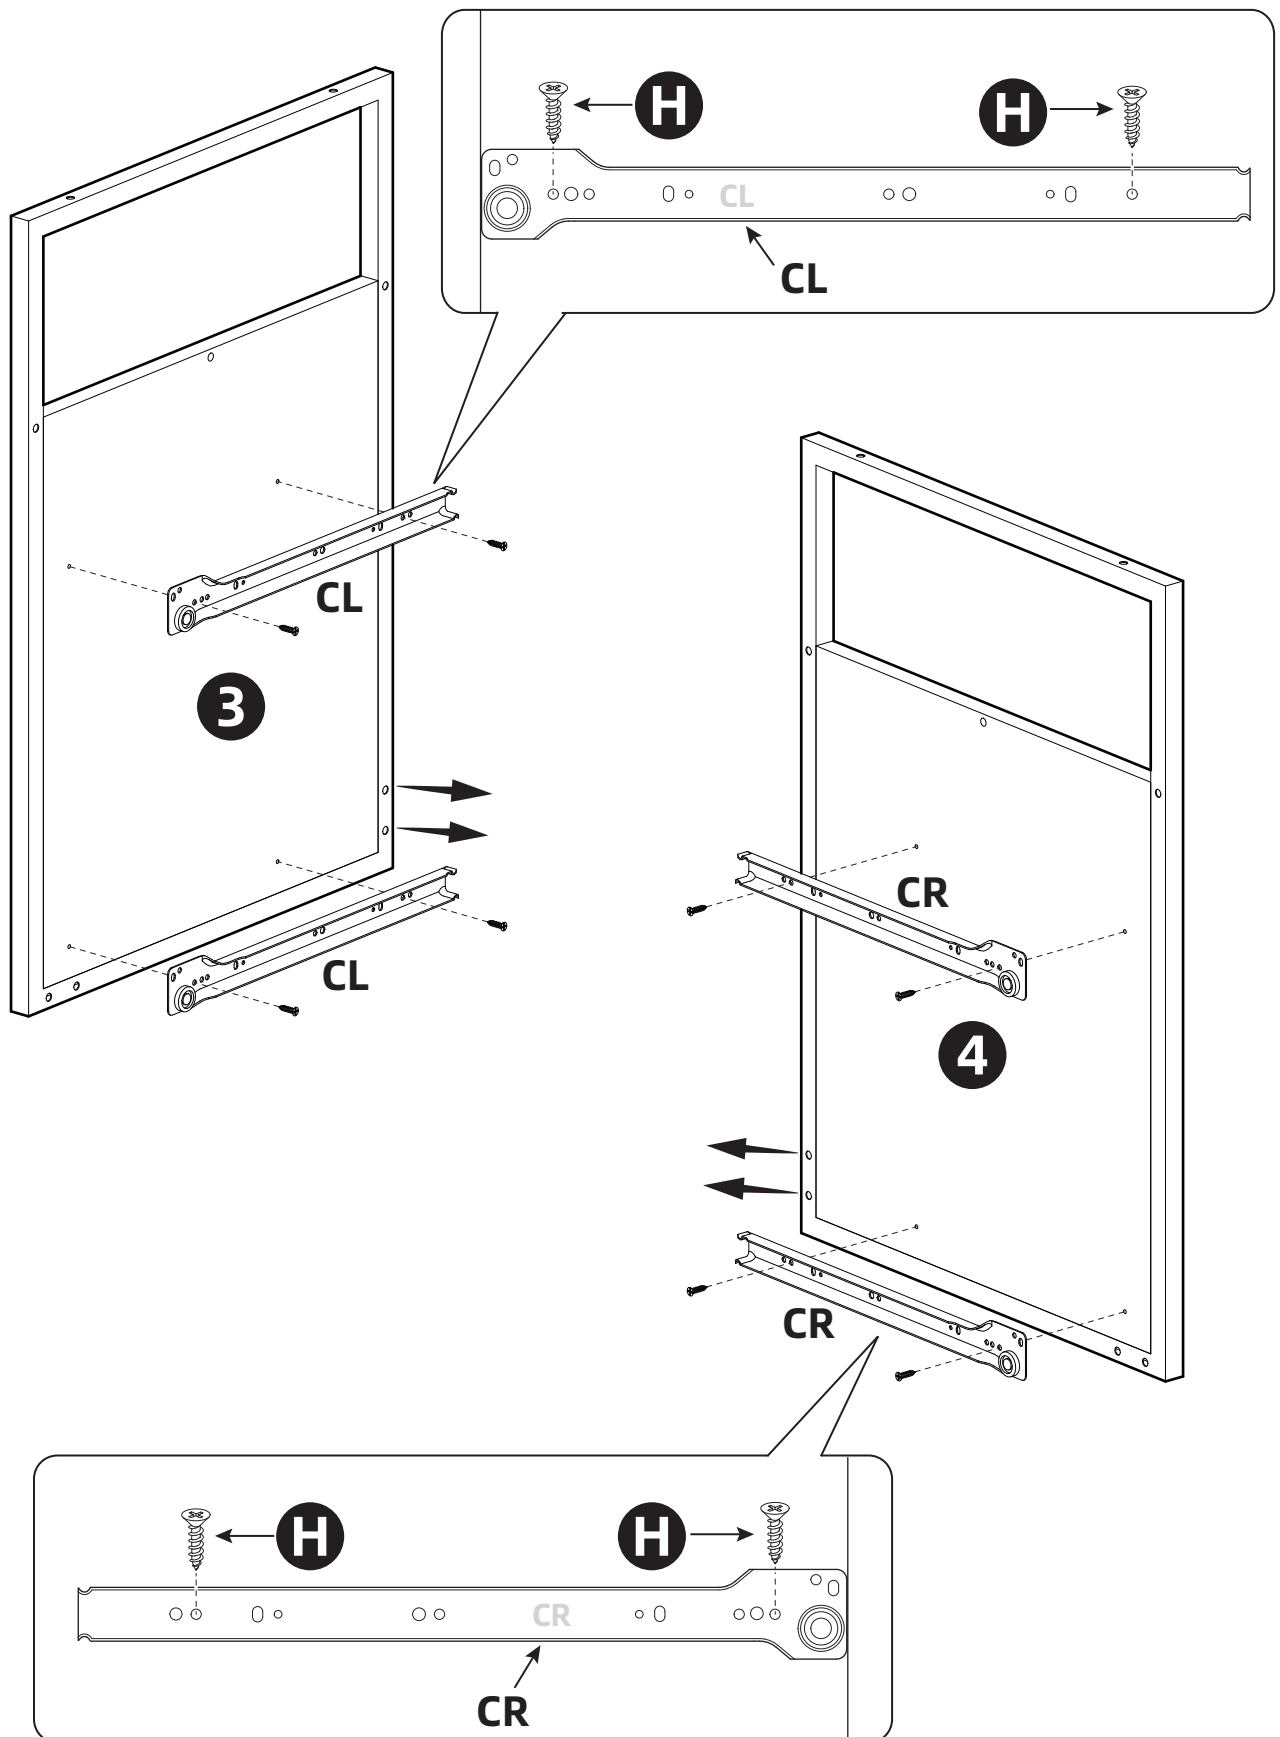


3 ATTENTION


Please note the direction of the holes .

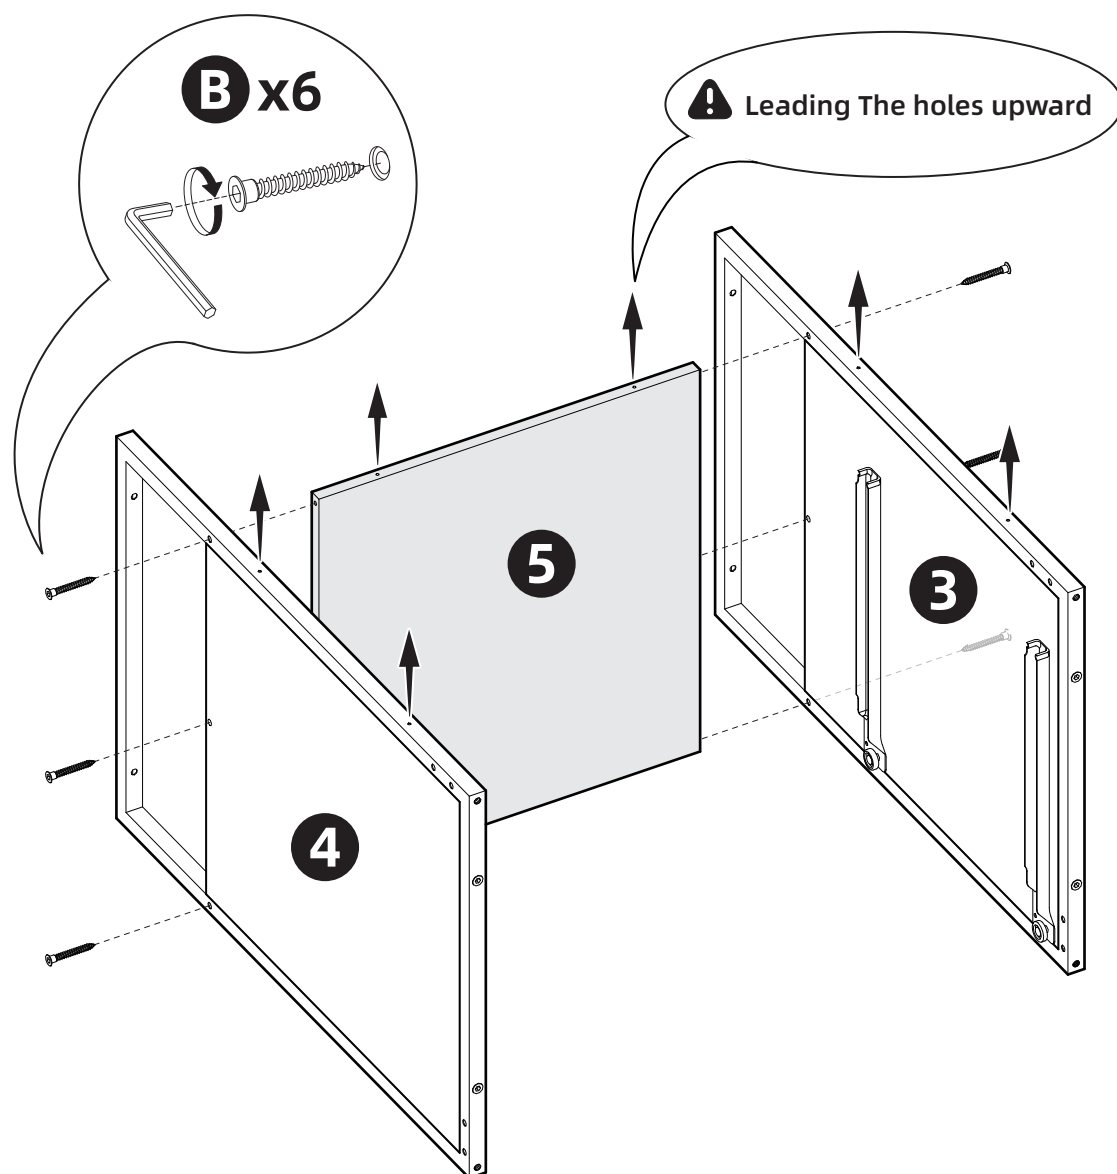


4

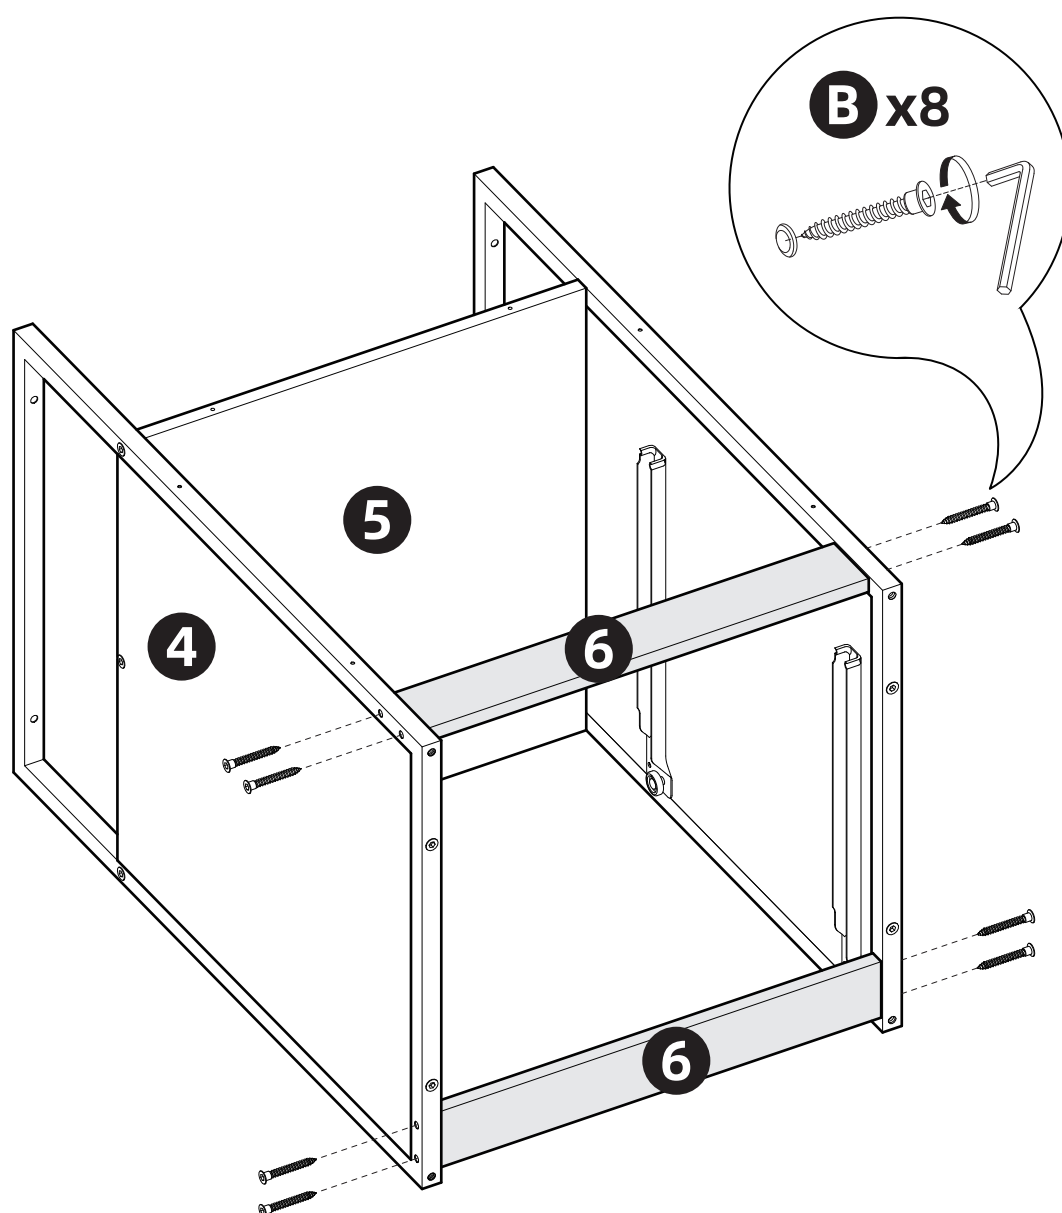



5

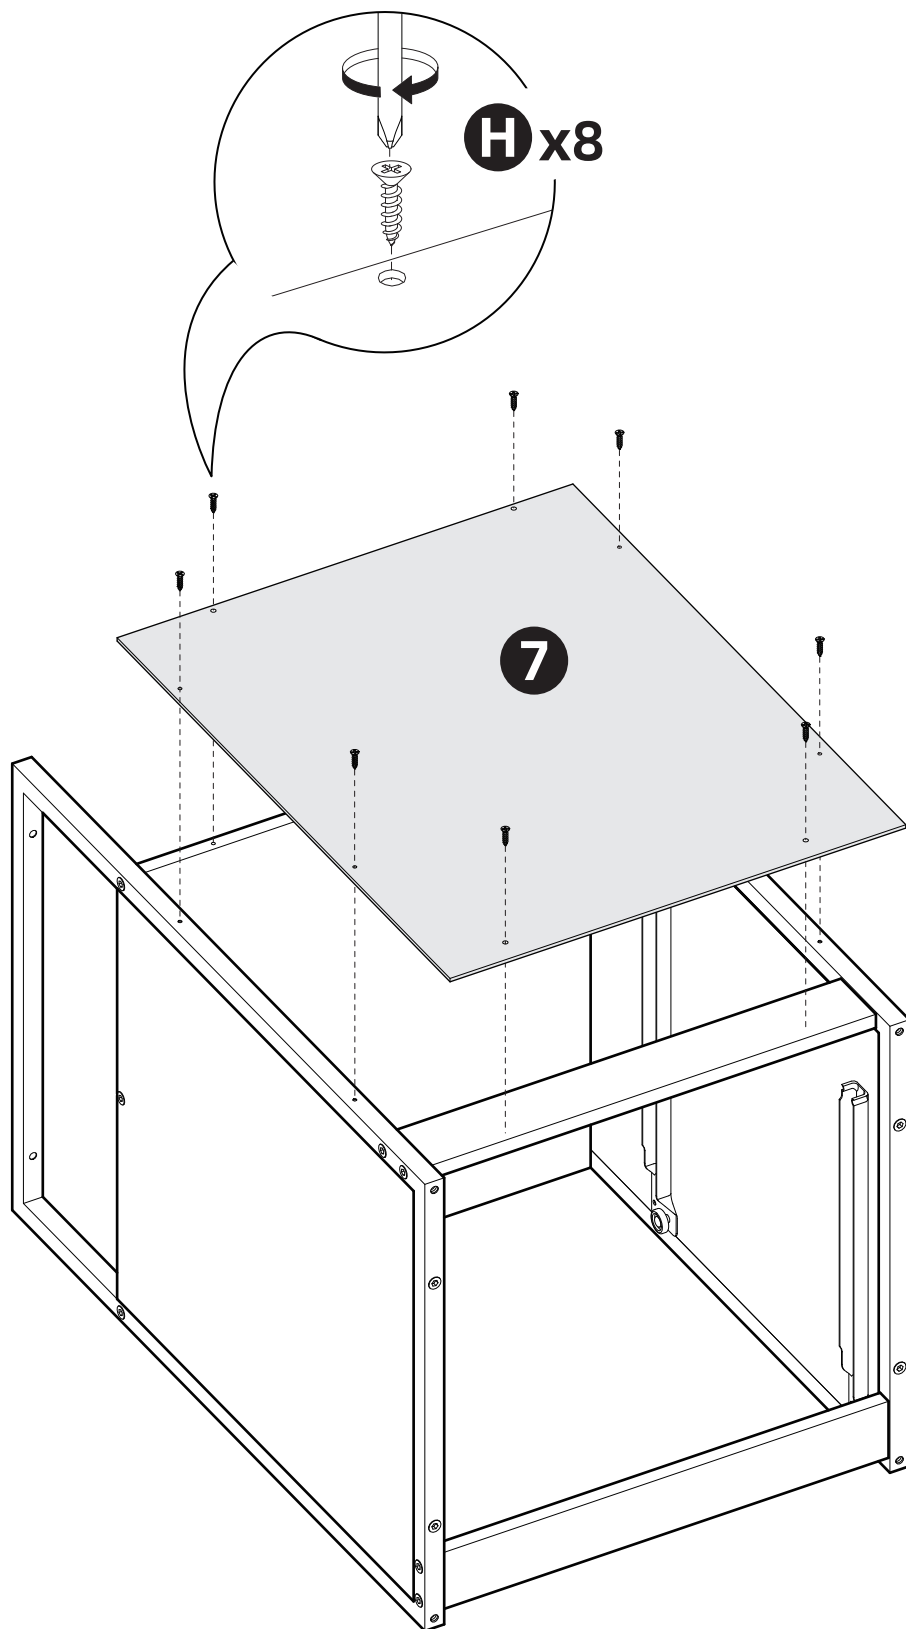



6

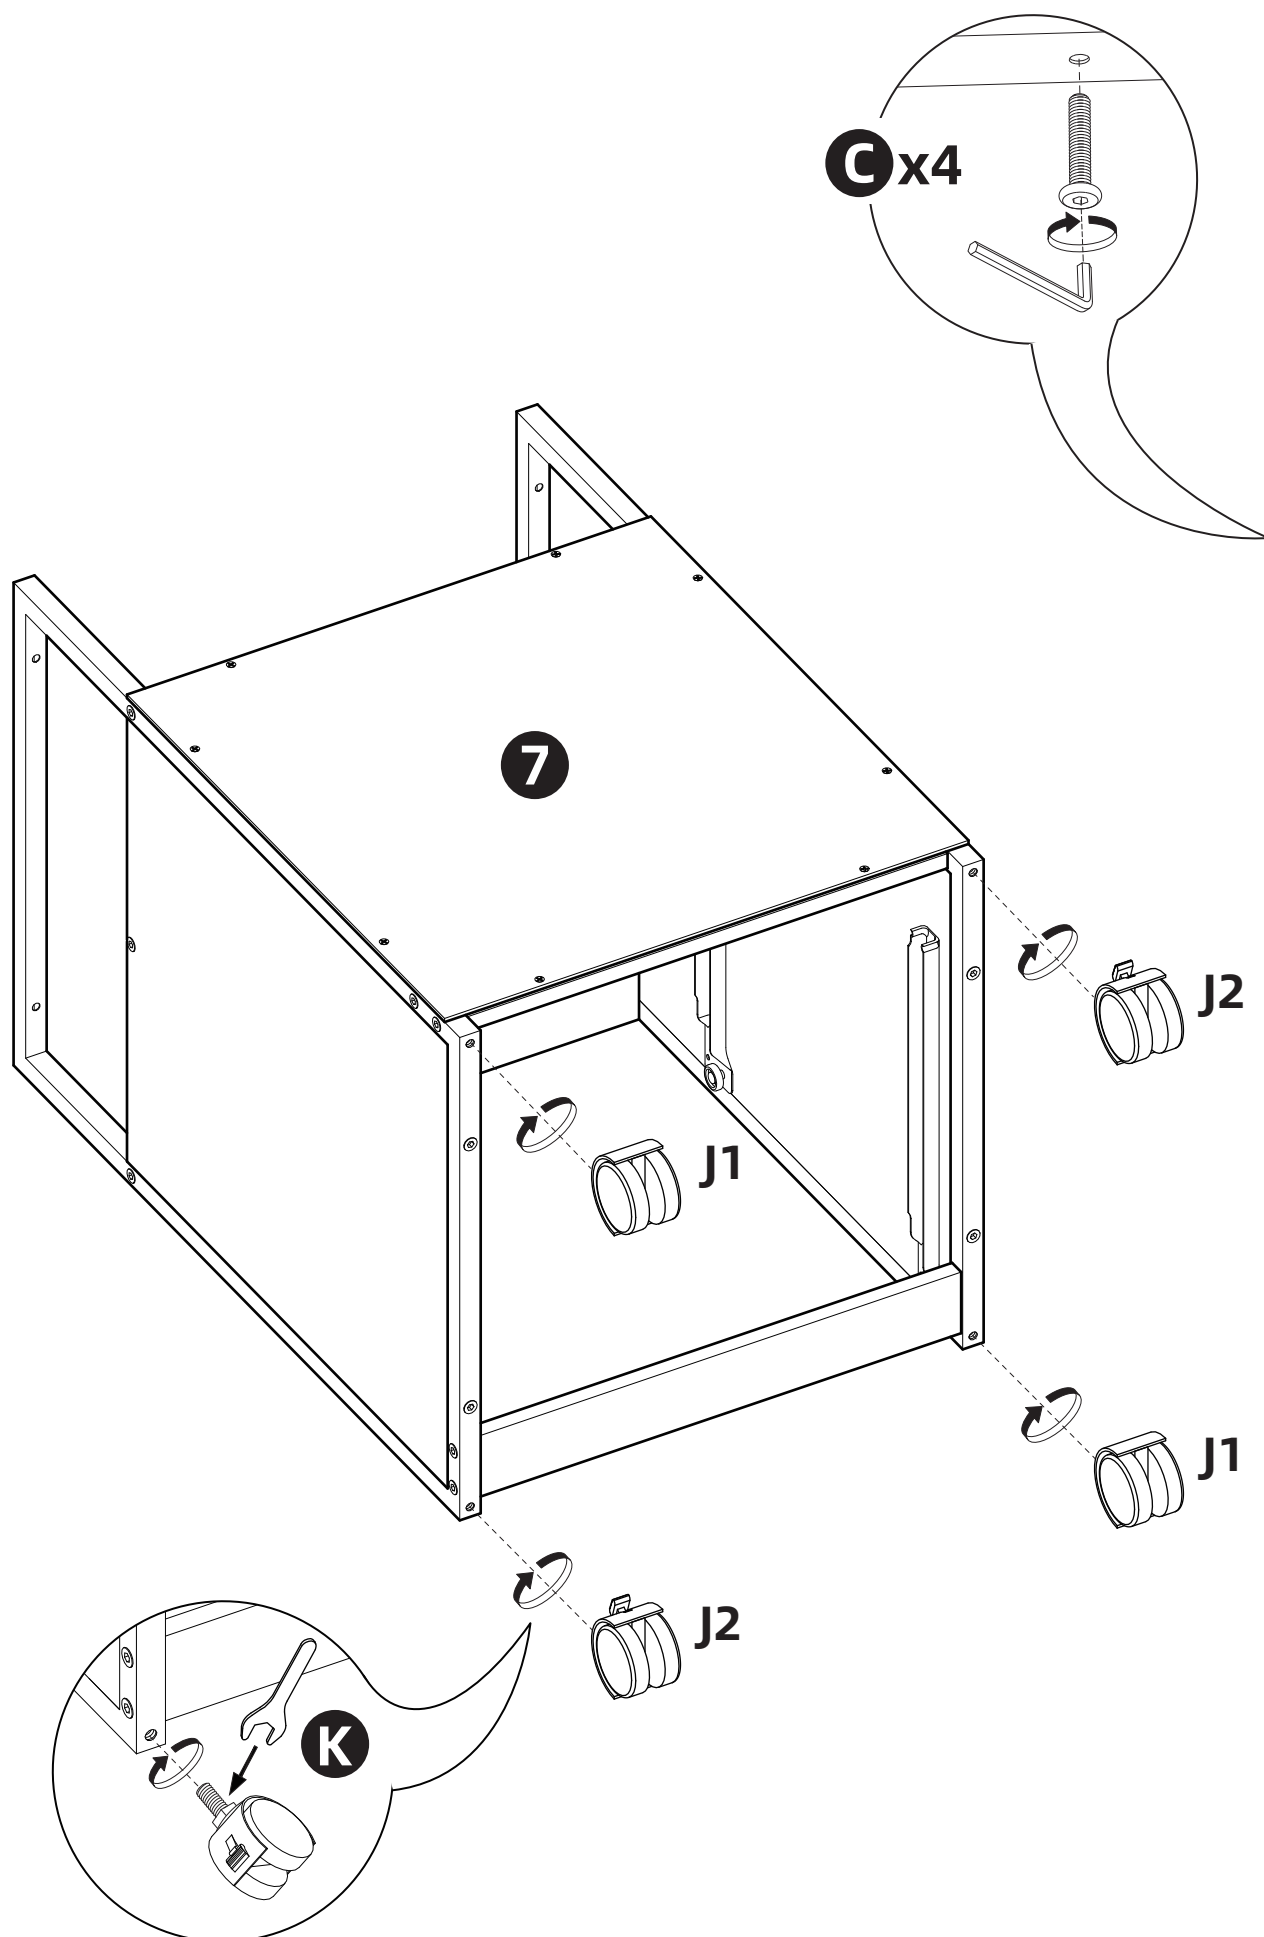




7

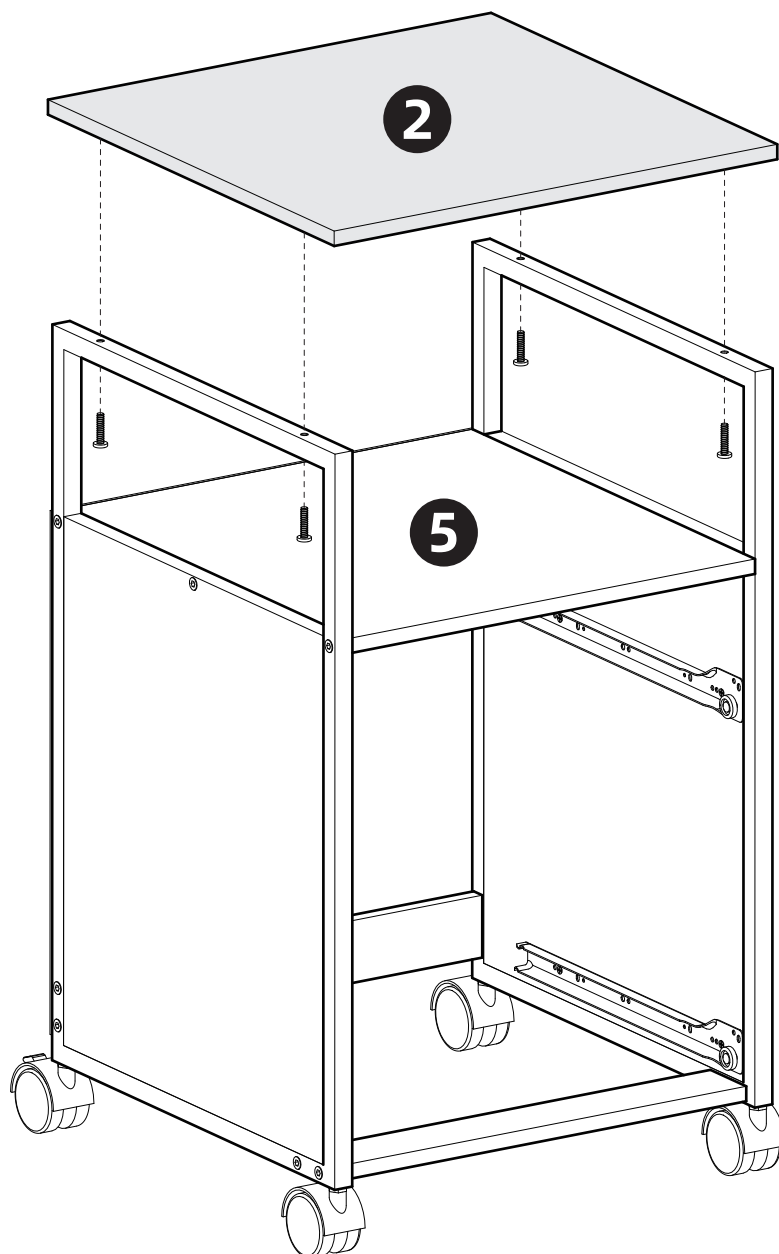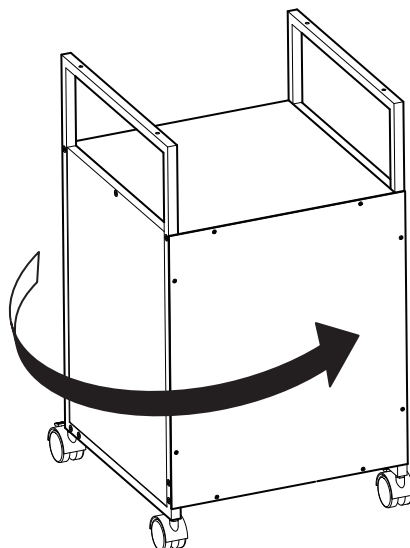


8

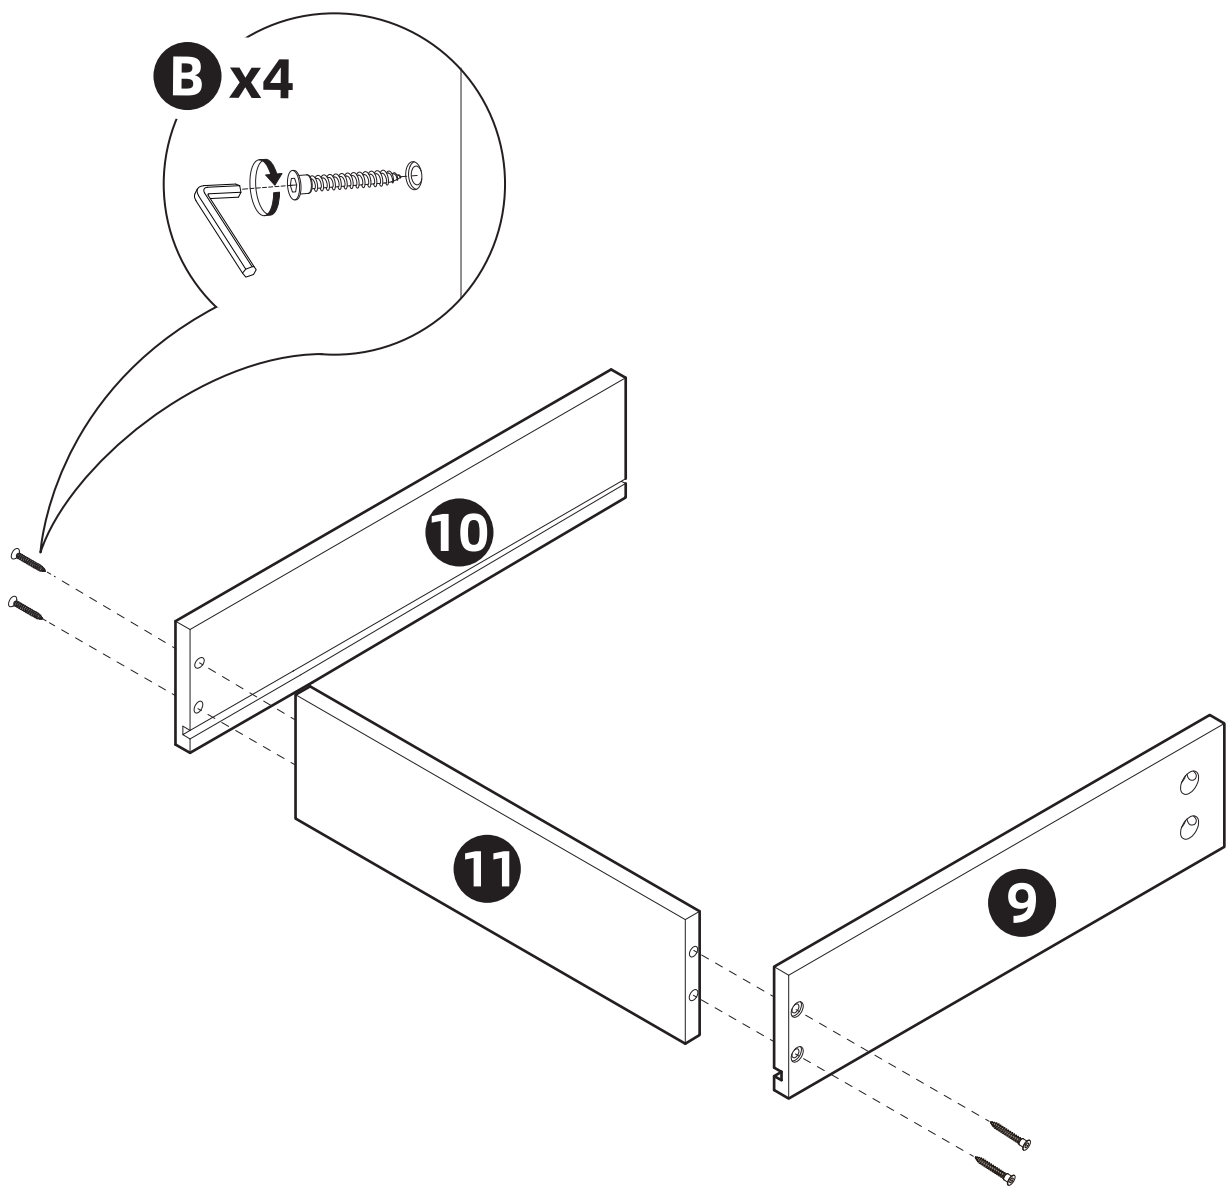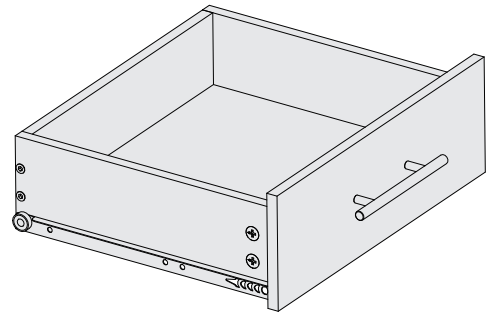



9

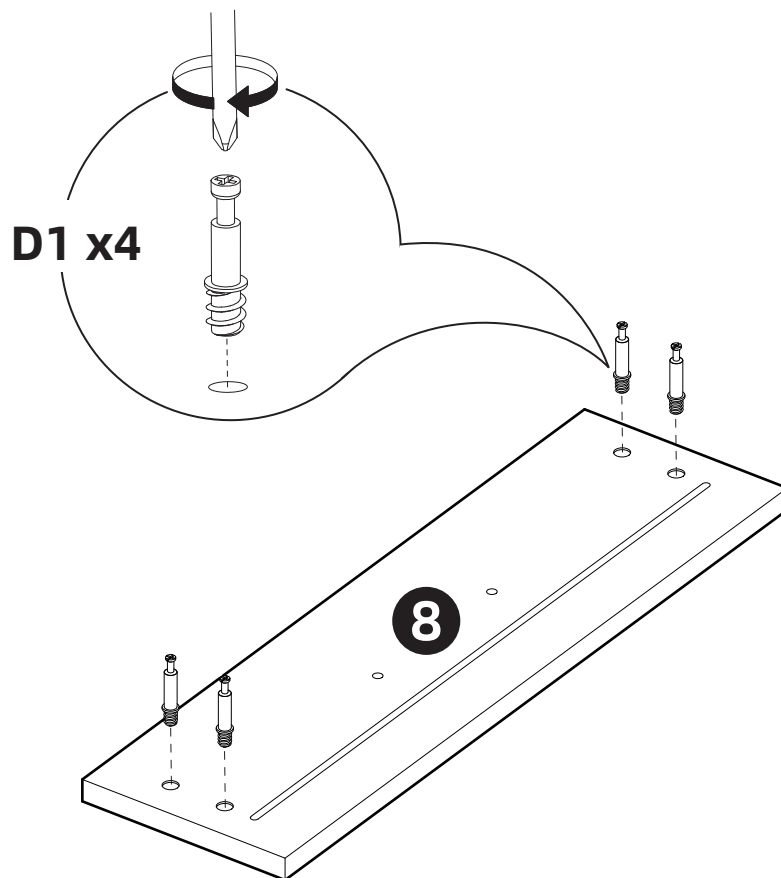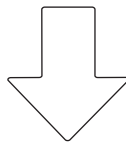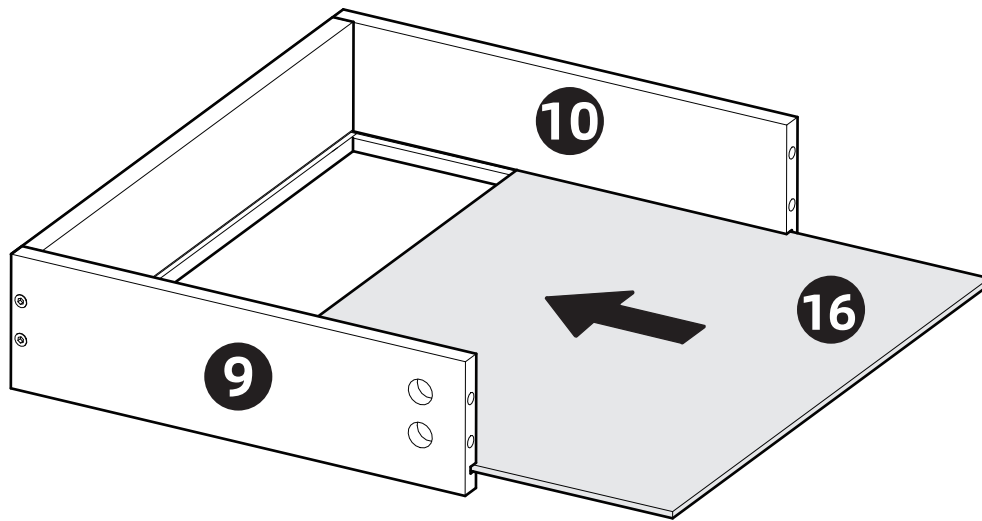



10

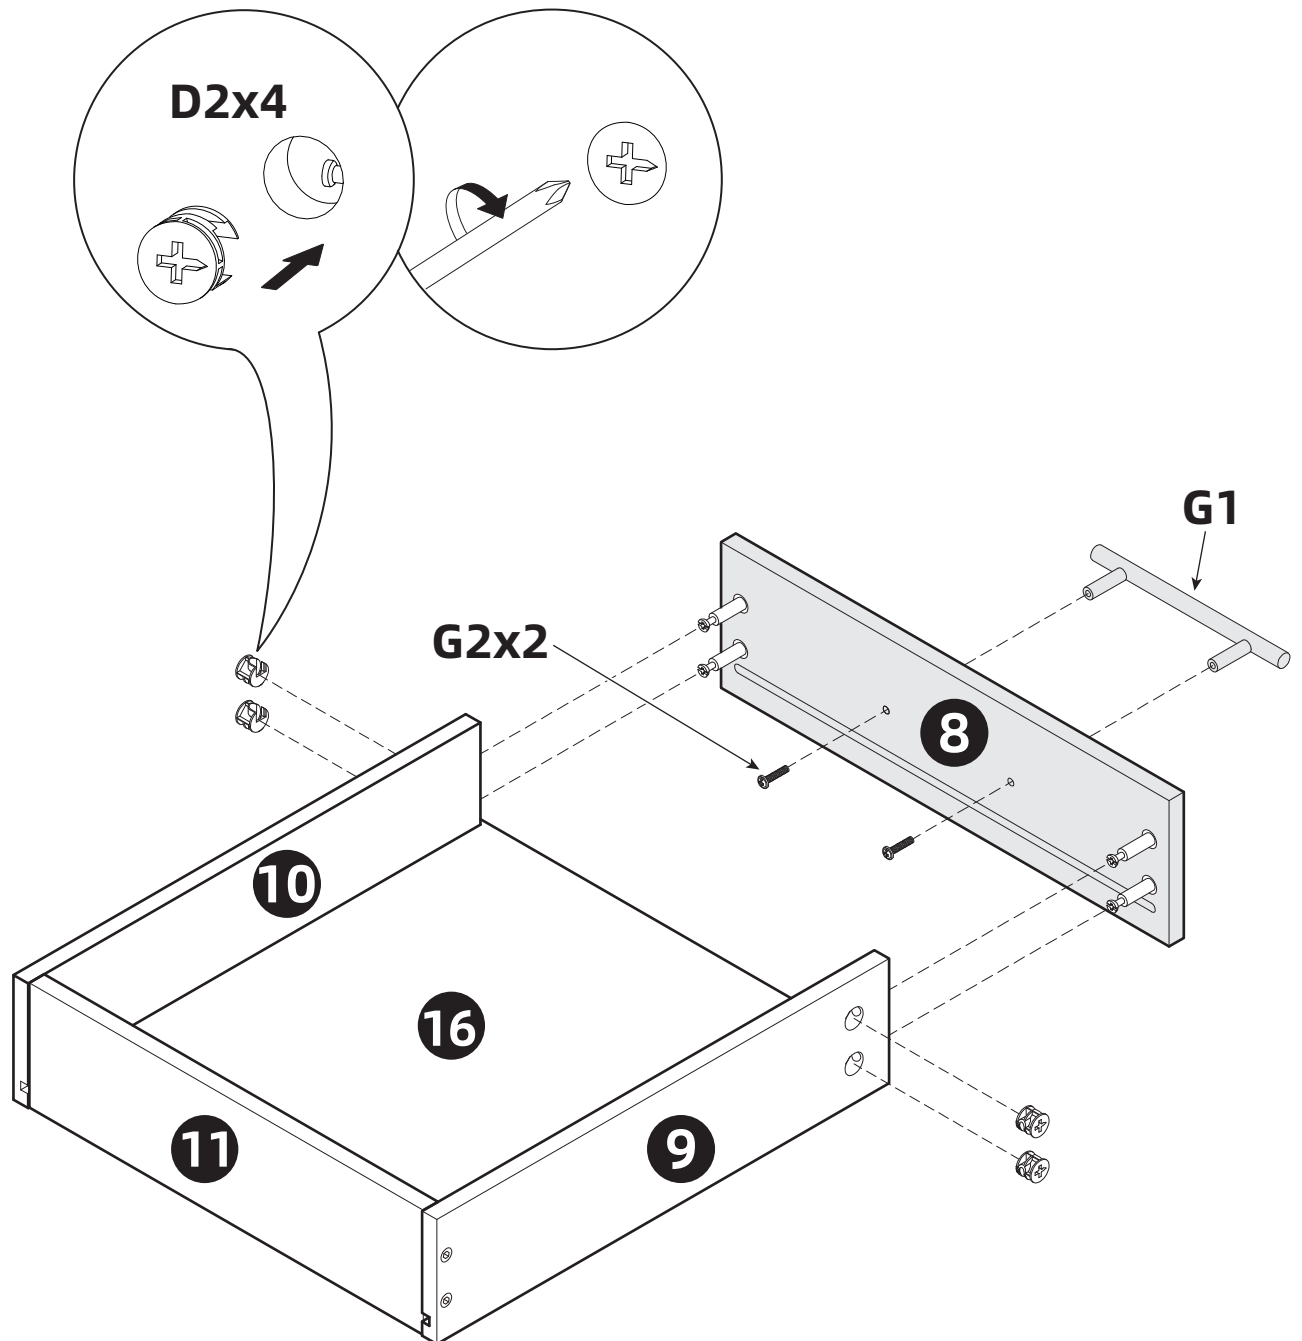


11

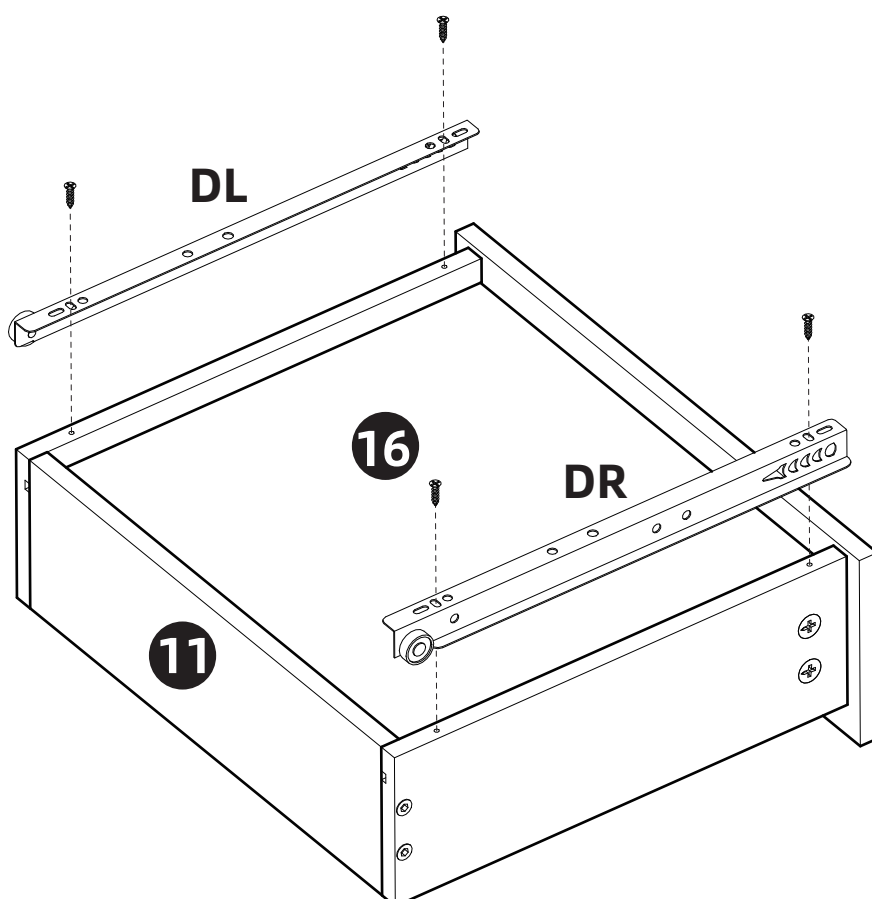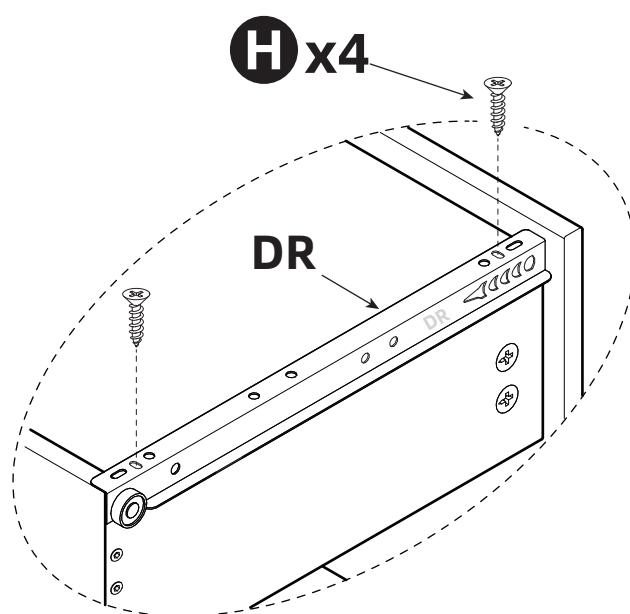


12

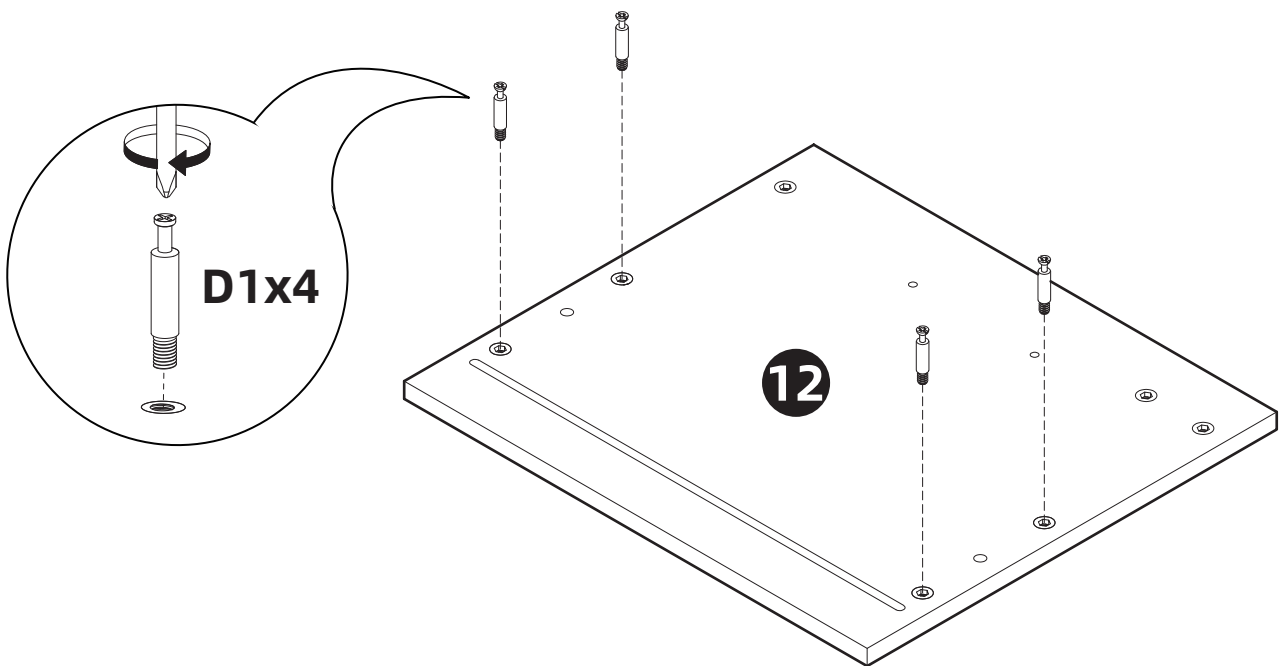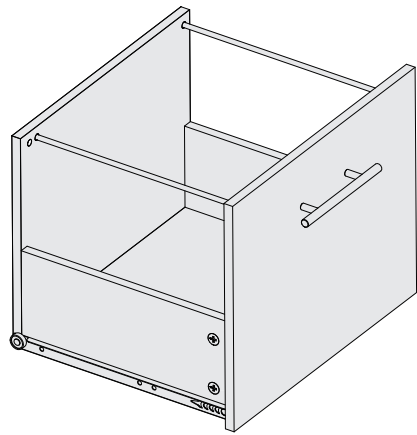


13

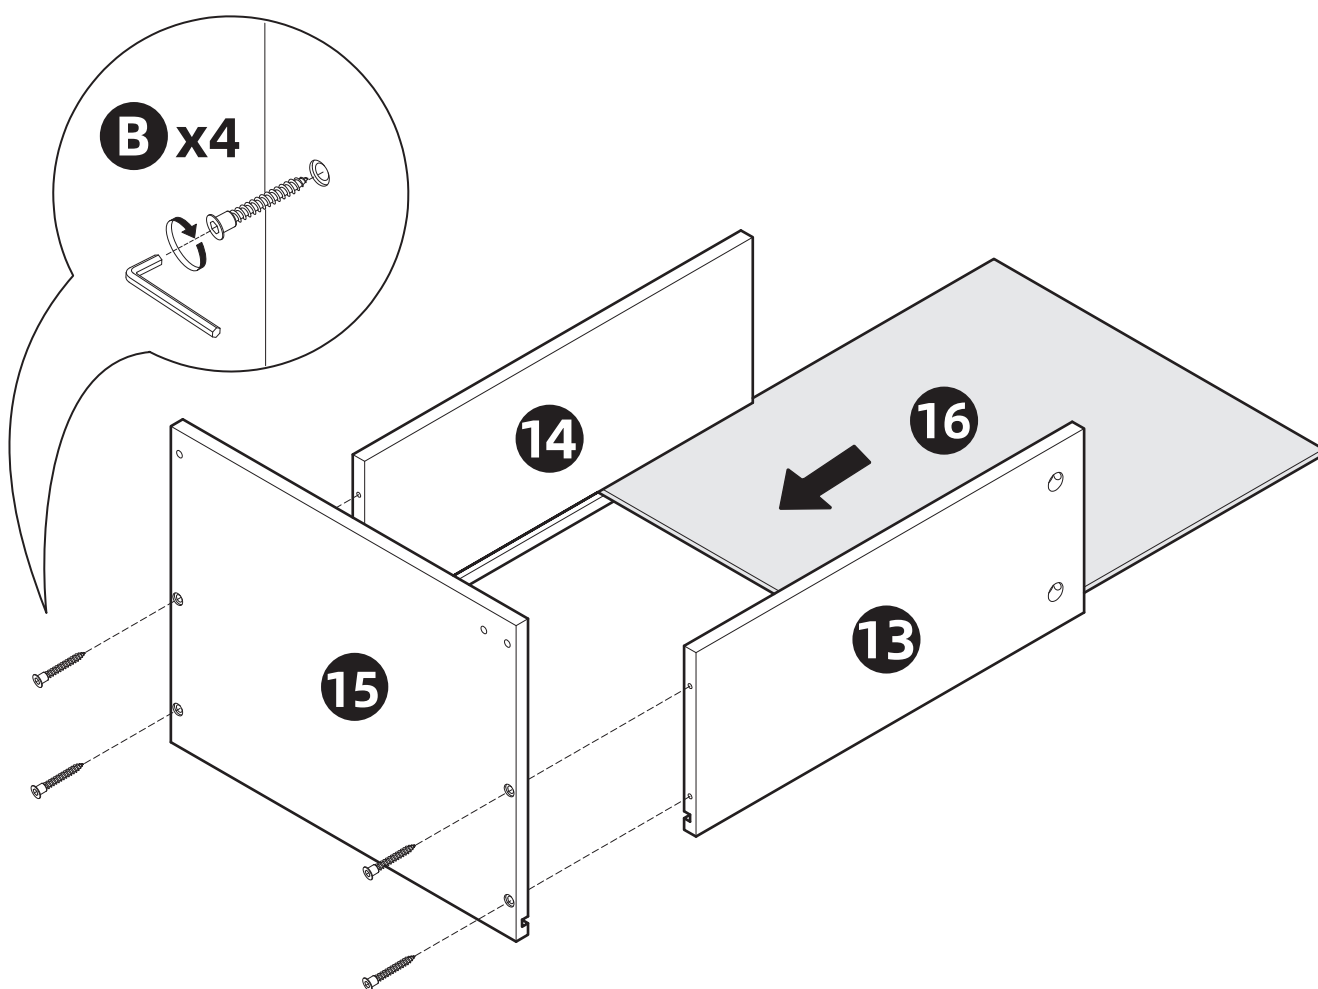



14

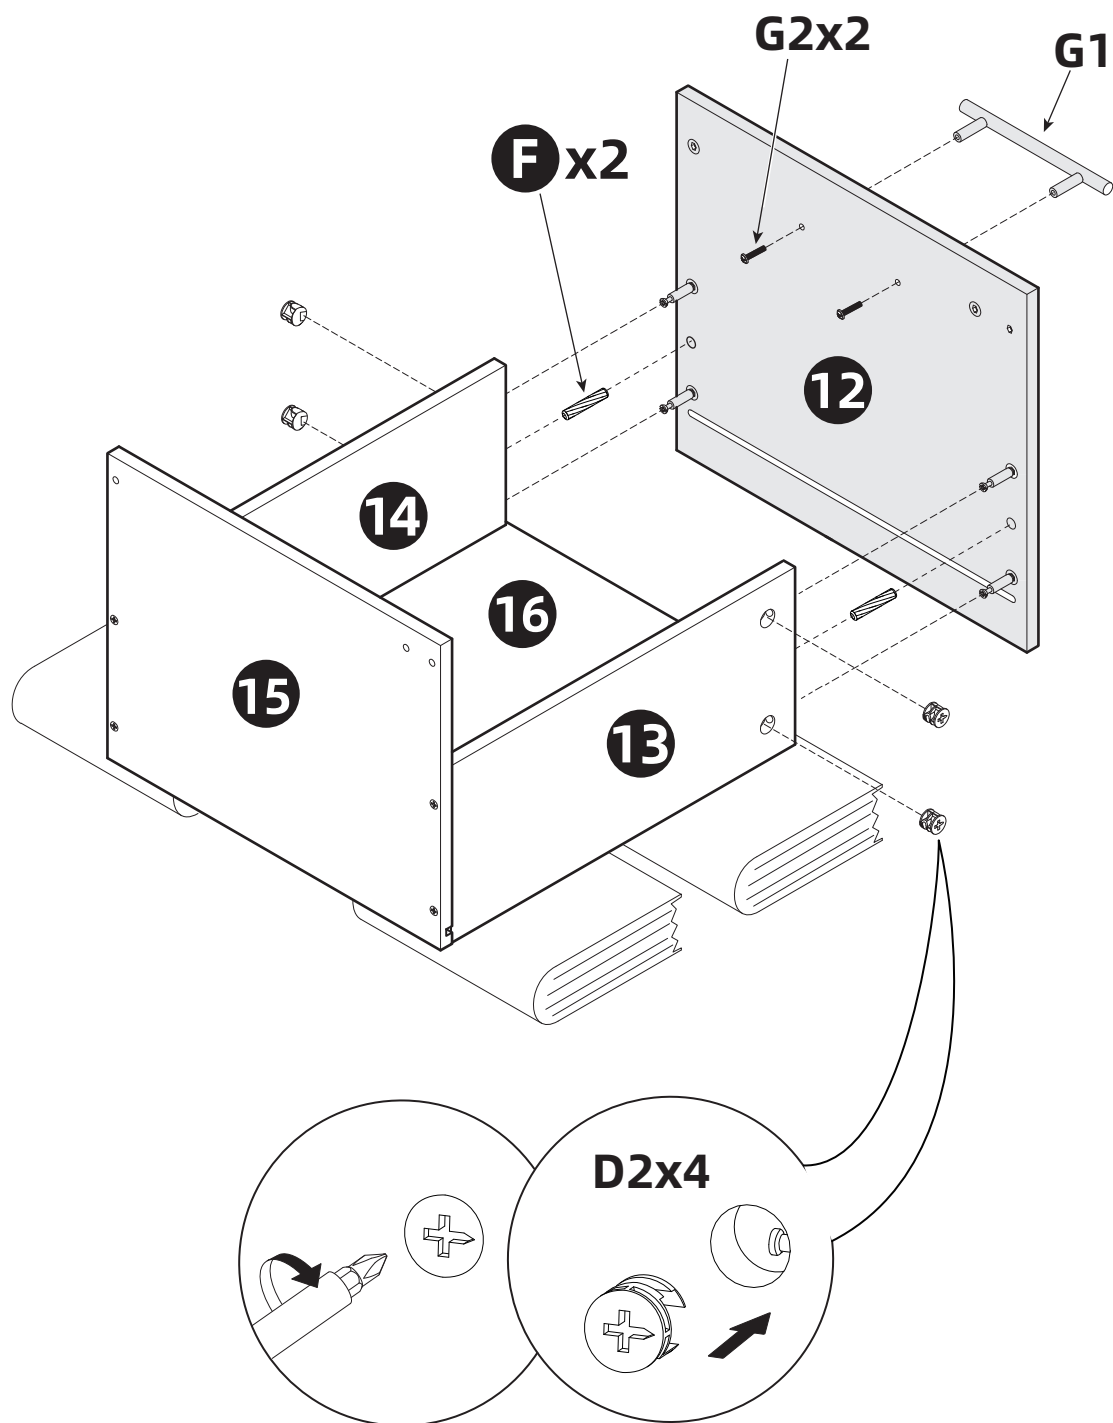

15

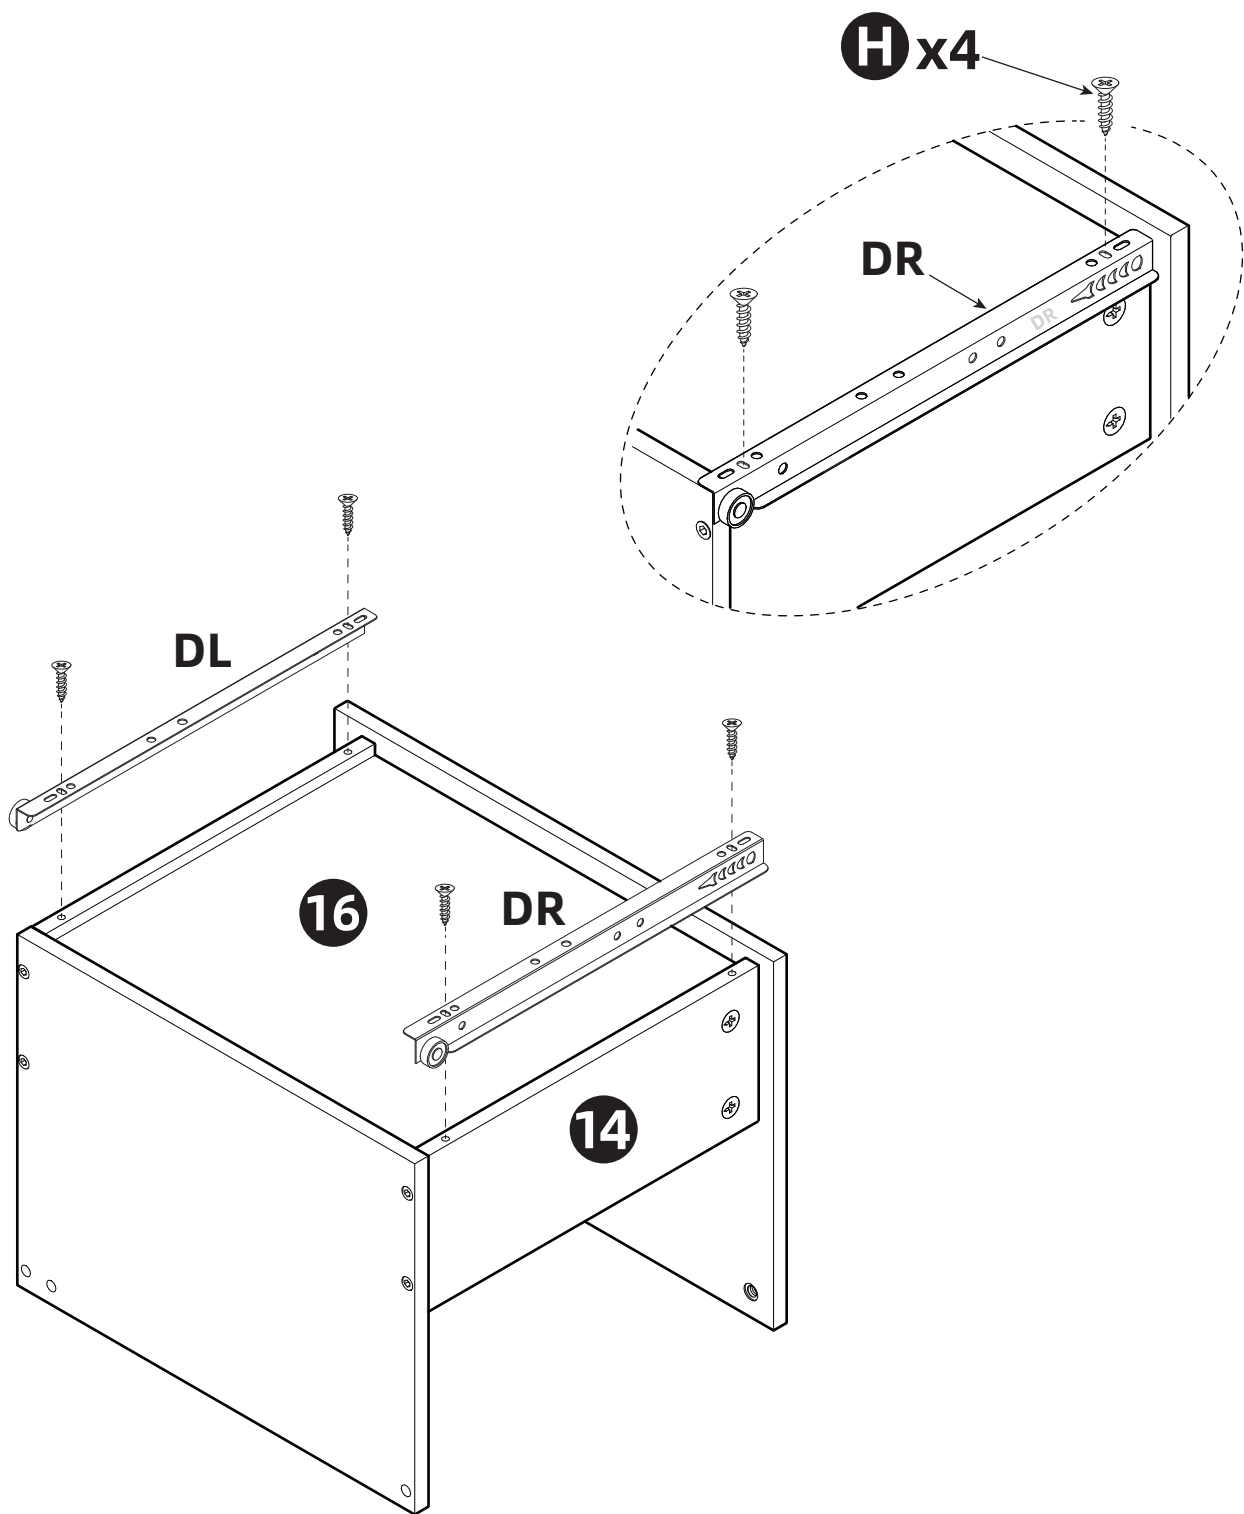

16

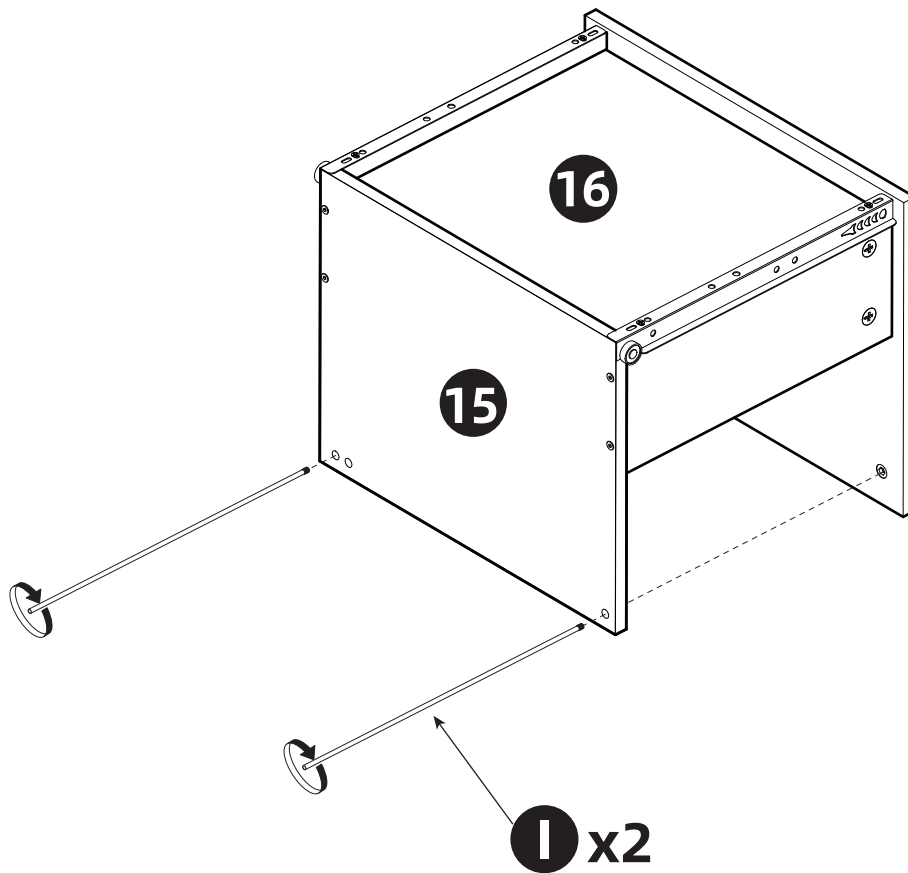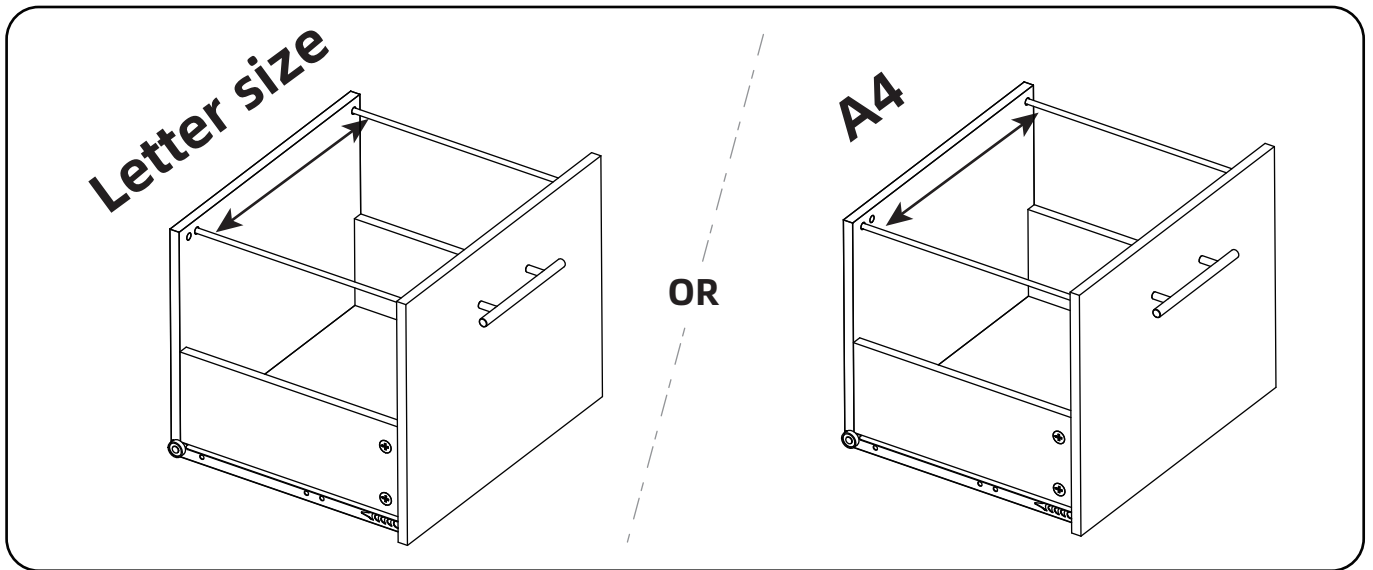

17

