










QZGF-V2

FTOFWF-0000
FTOFWF-0010
FTOFWF-0011
FTOFWF-0067
FTOFWF-0001














MOBILE 3-DRAWER LATERAL FILING CABINET

ASSEMBLY INSTRUCTIONS






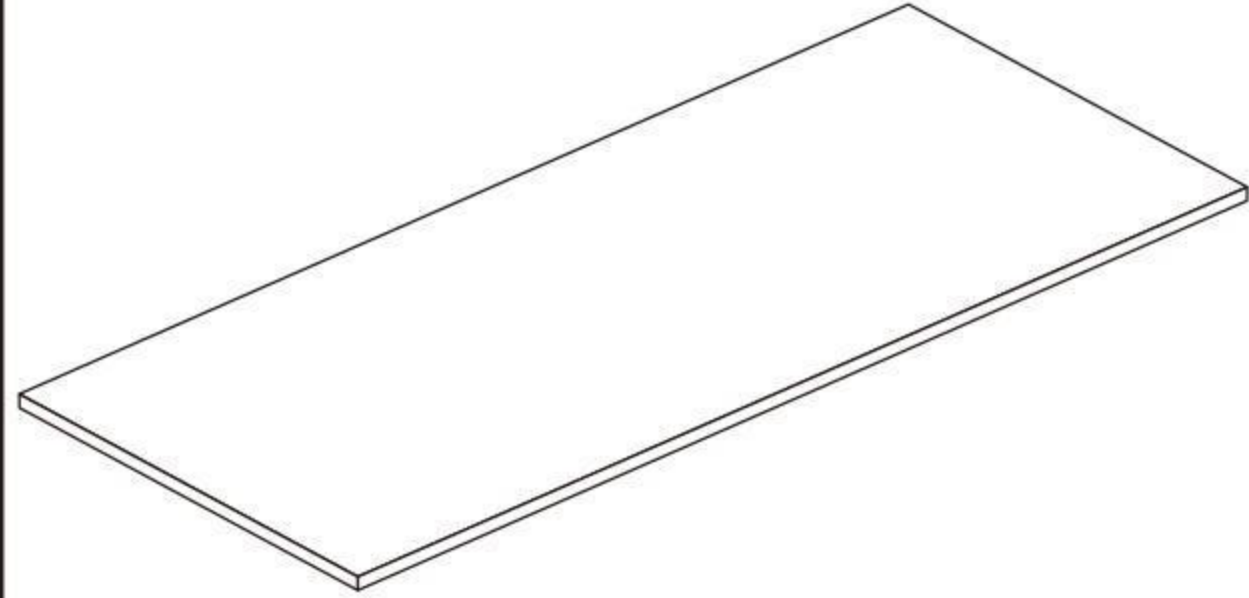
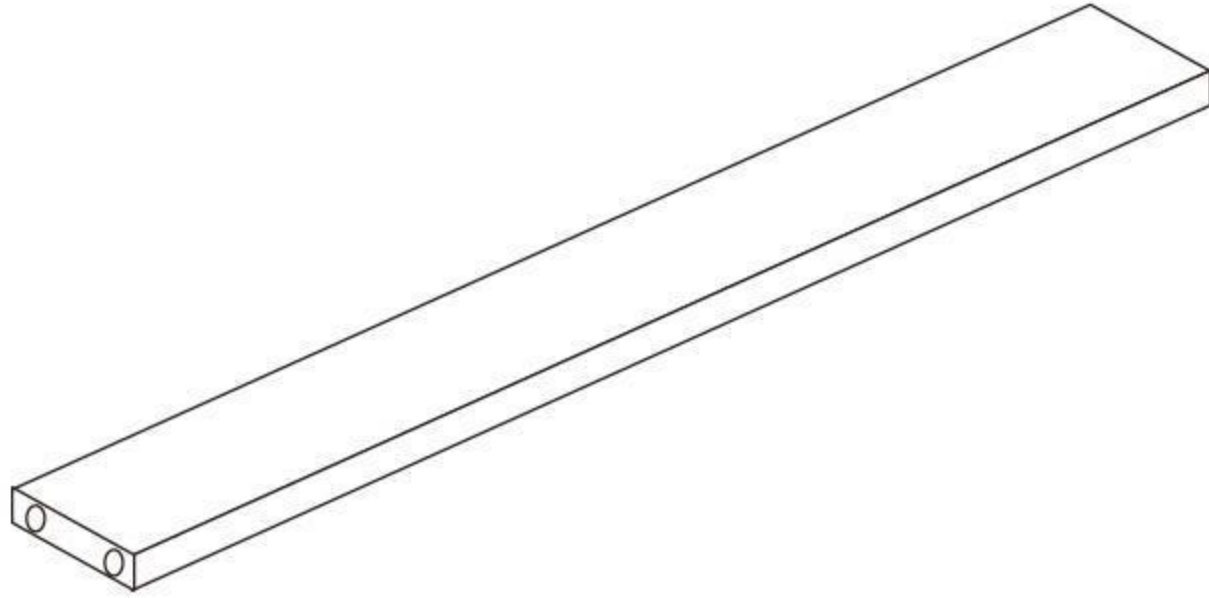
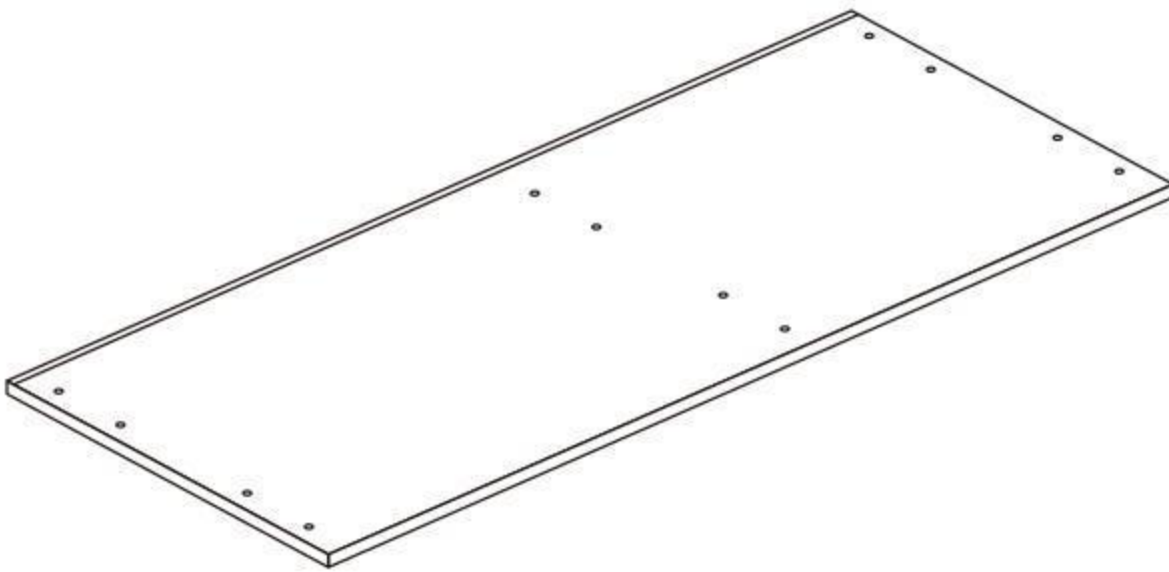
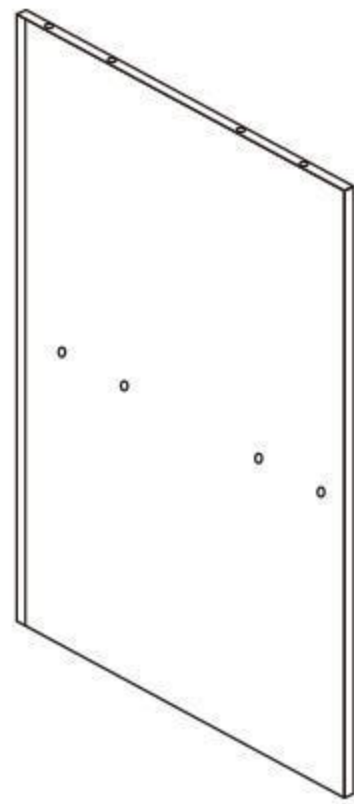
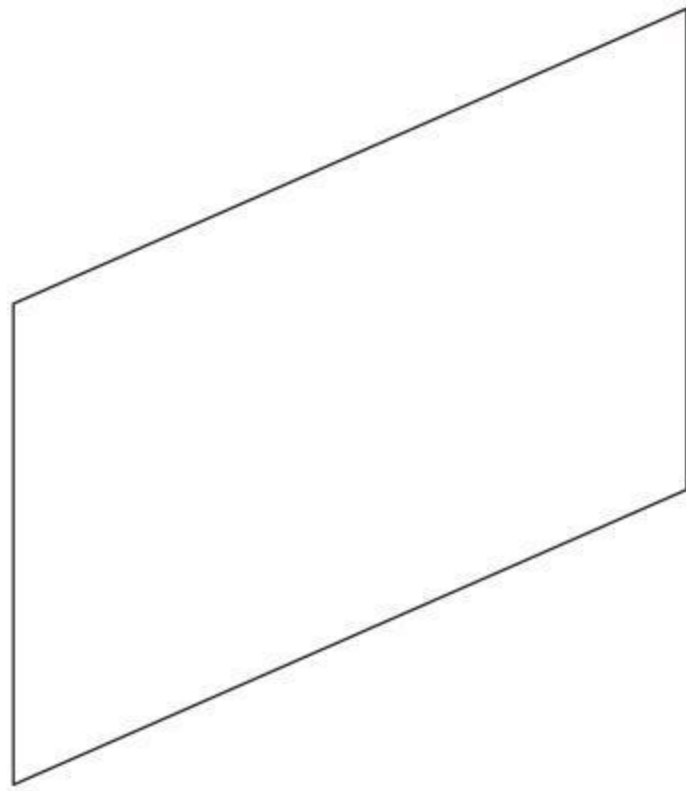
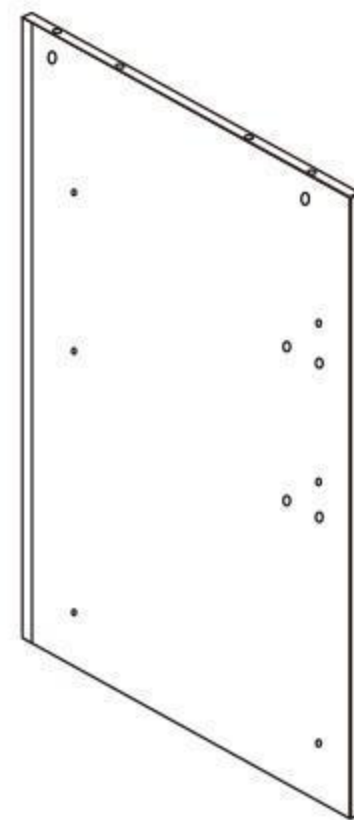
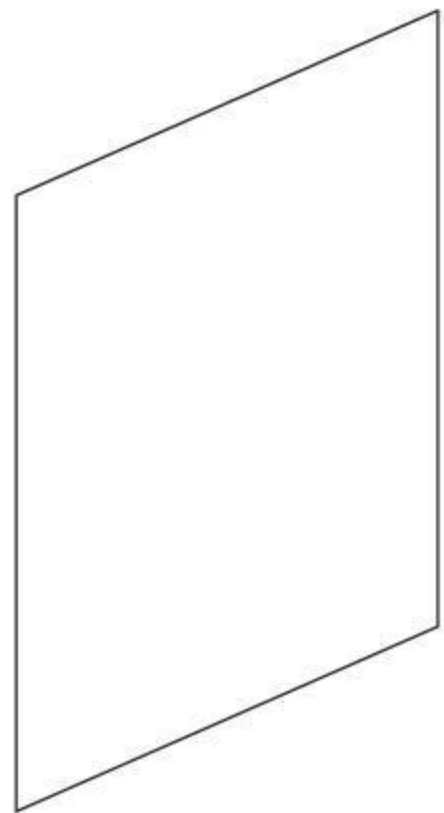
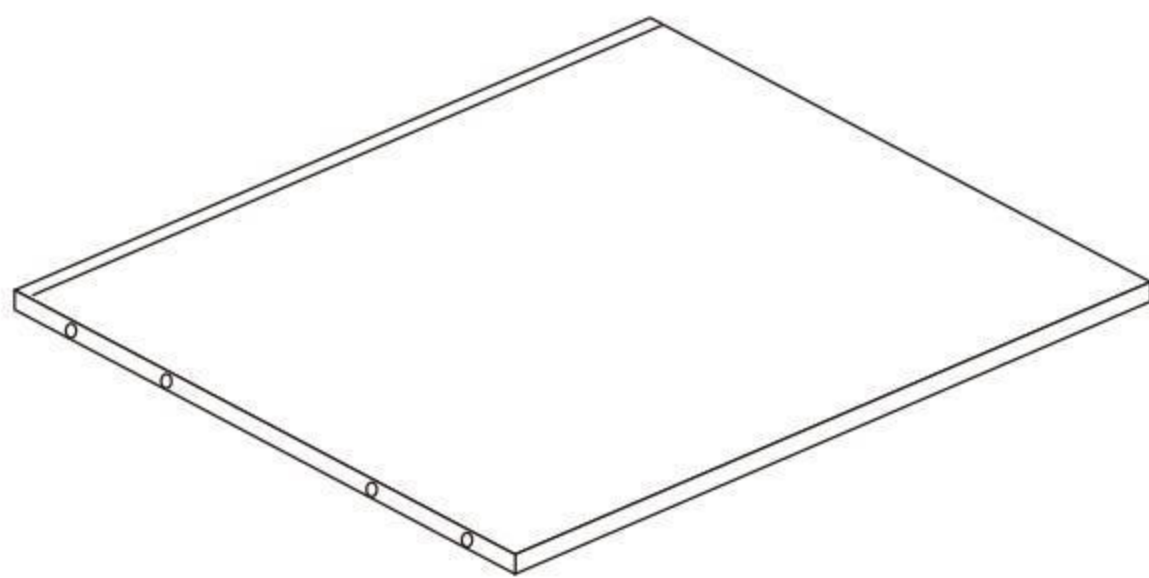
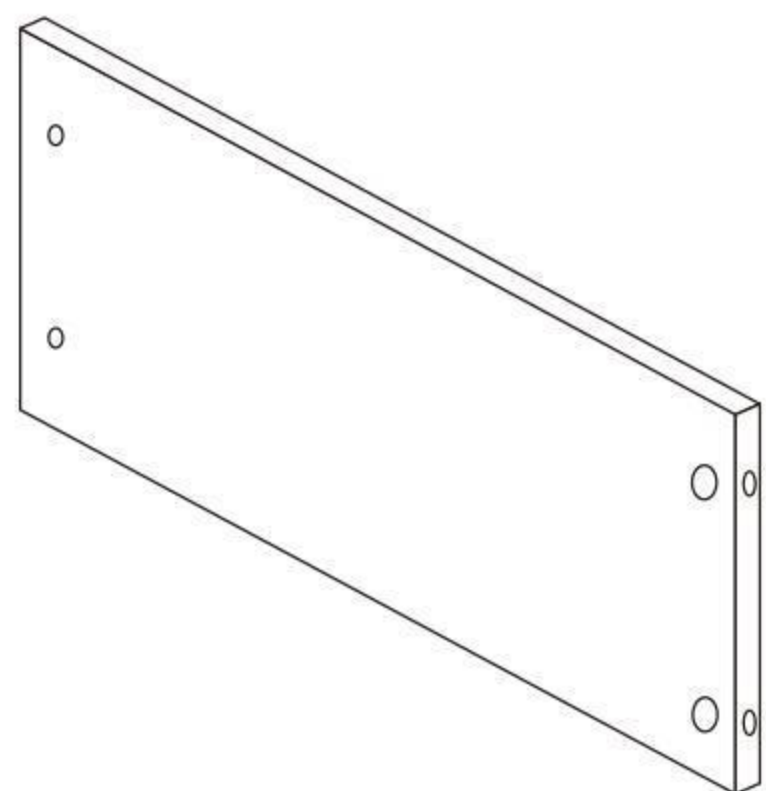
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X 1	F		X2
B		X1	G		X1
C		X1	H		X1
D		X1	I		X1
E		X1	J		X2

ASSEMBLY INSTRUCTIONS

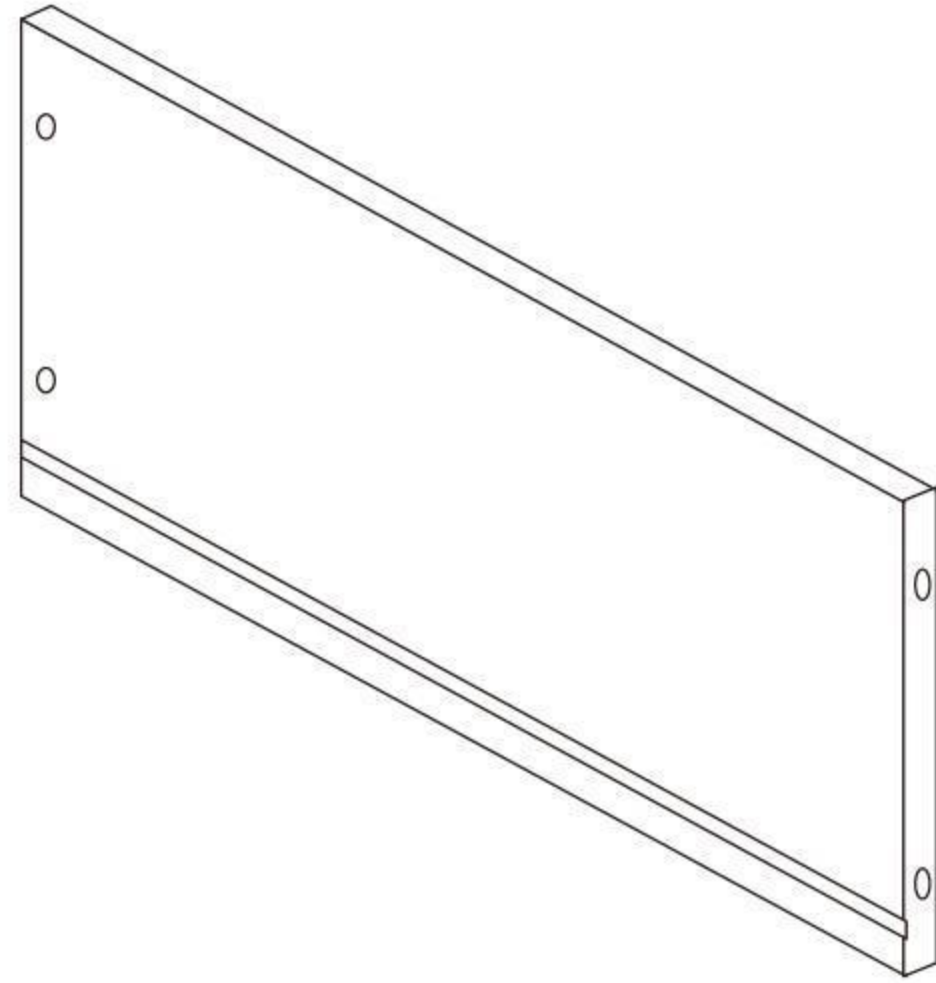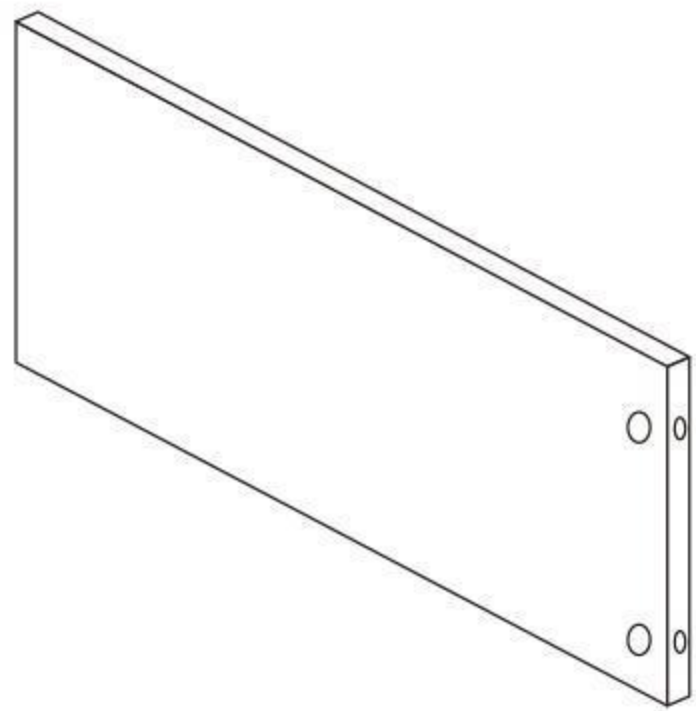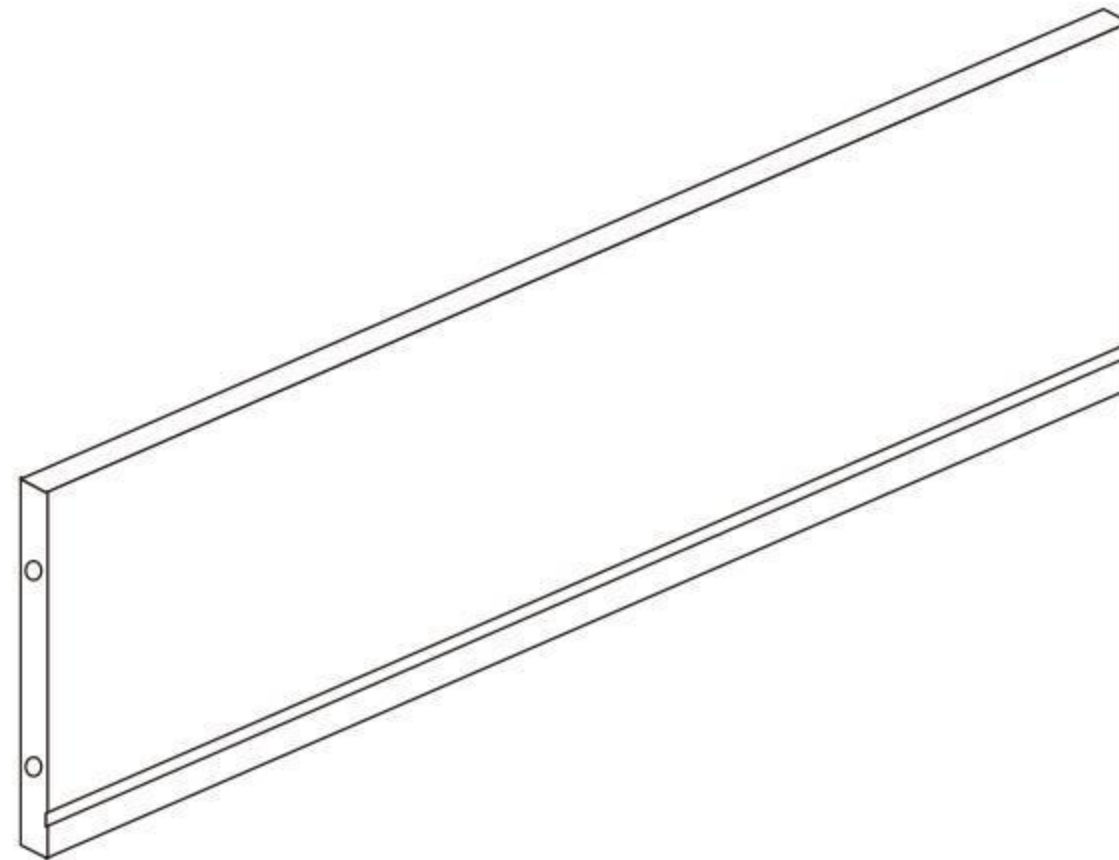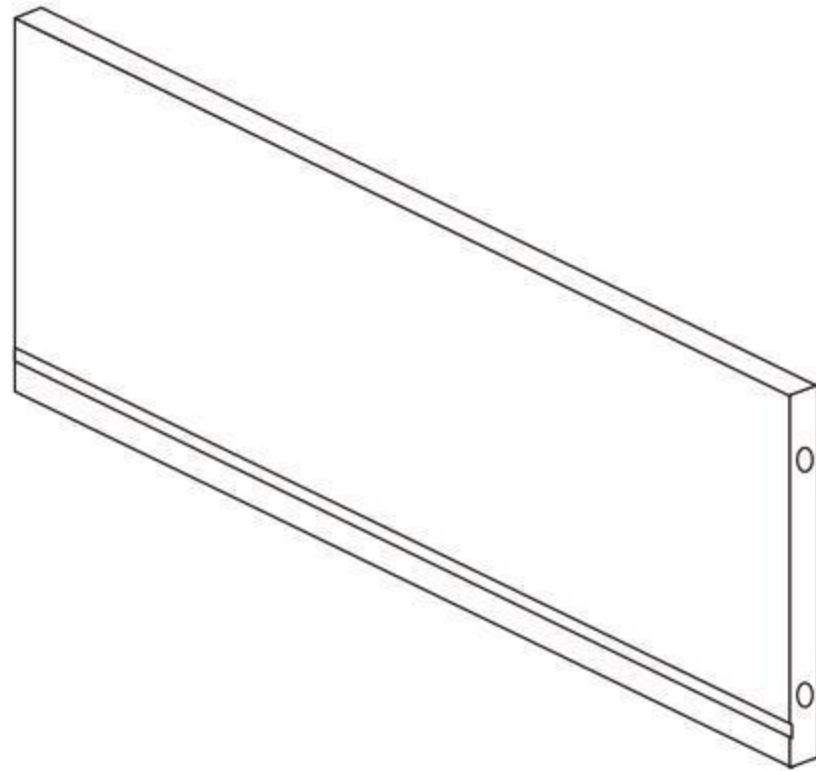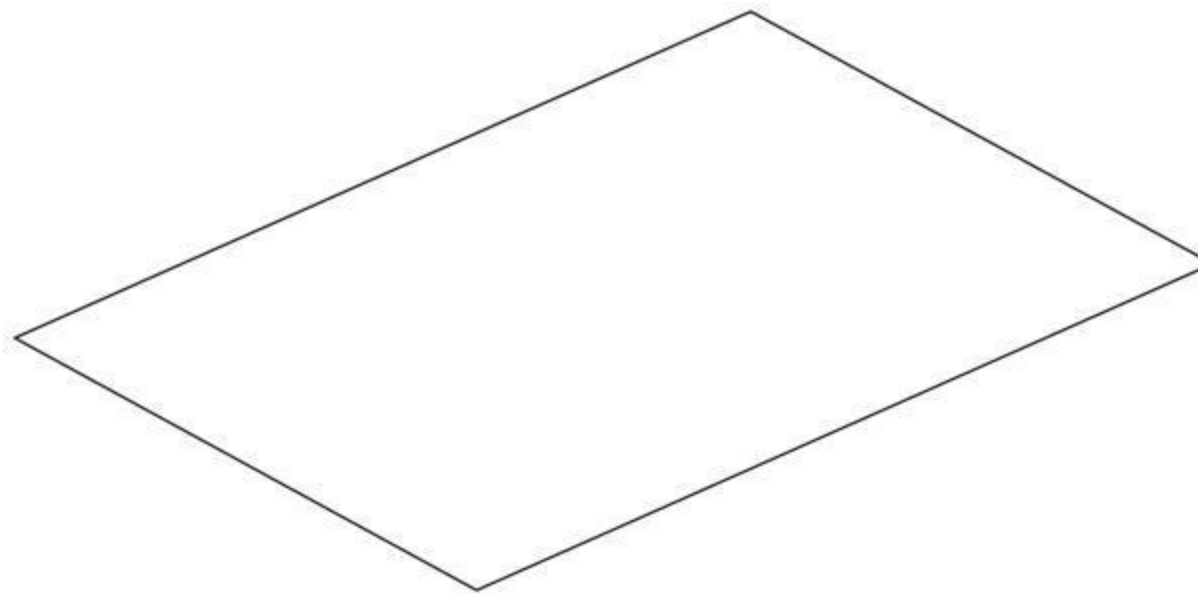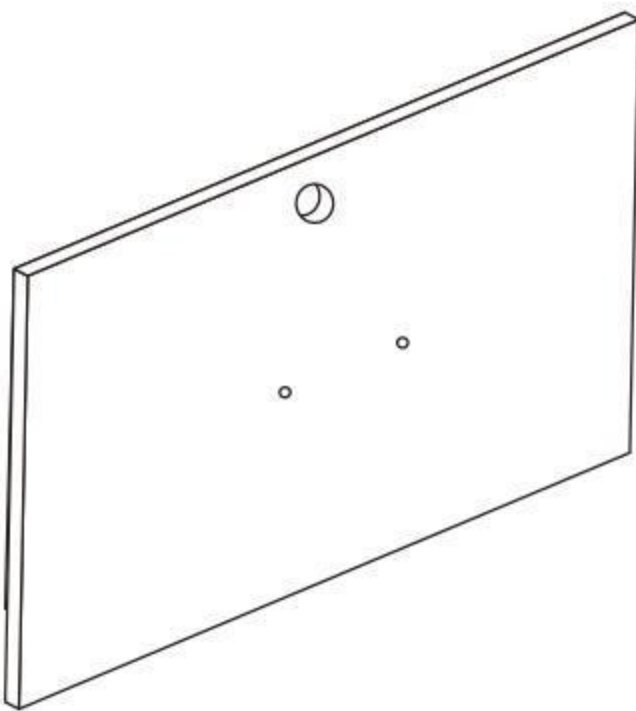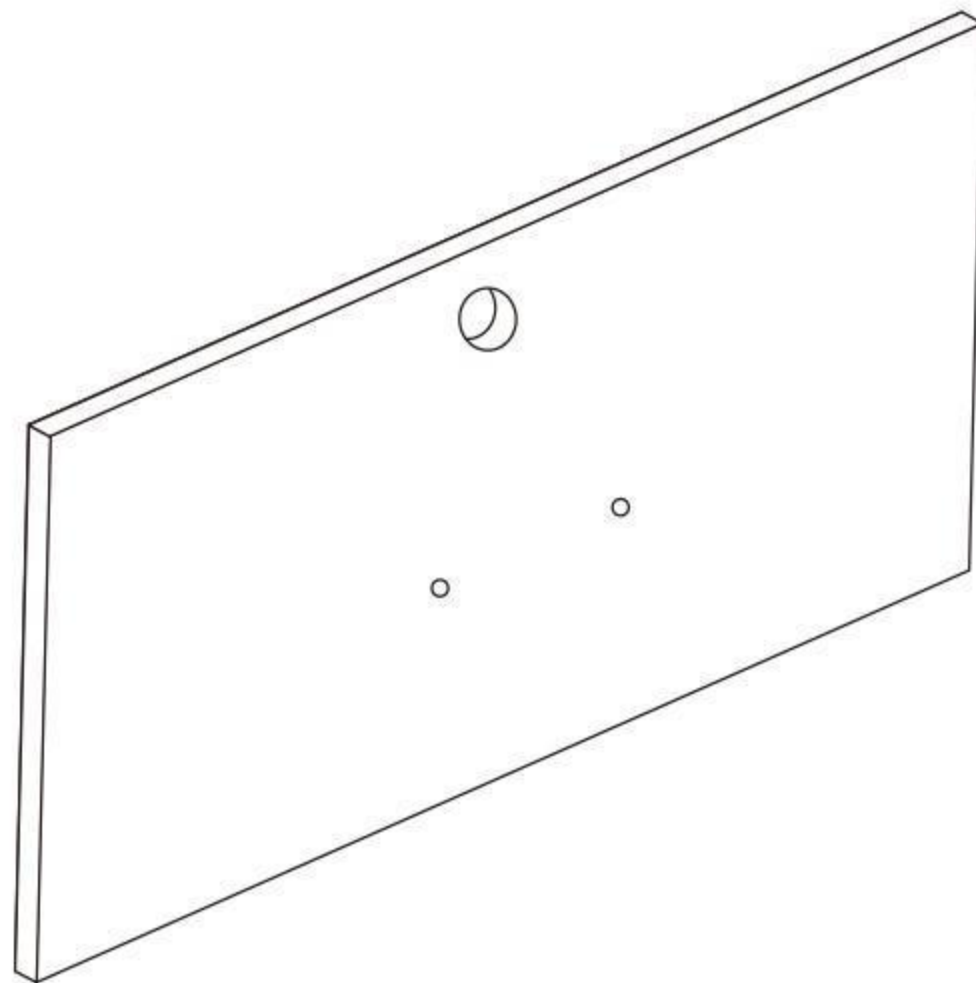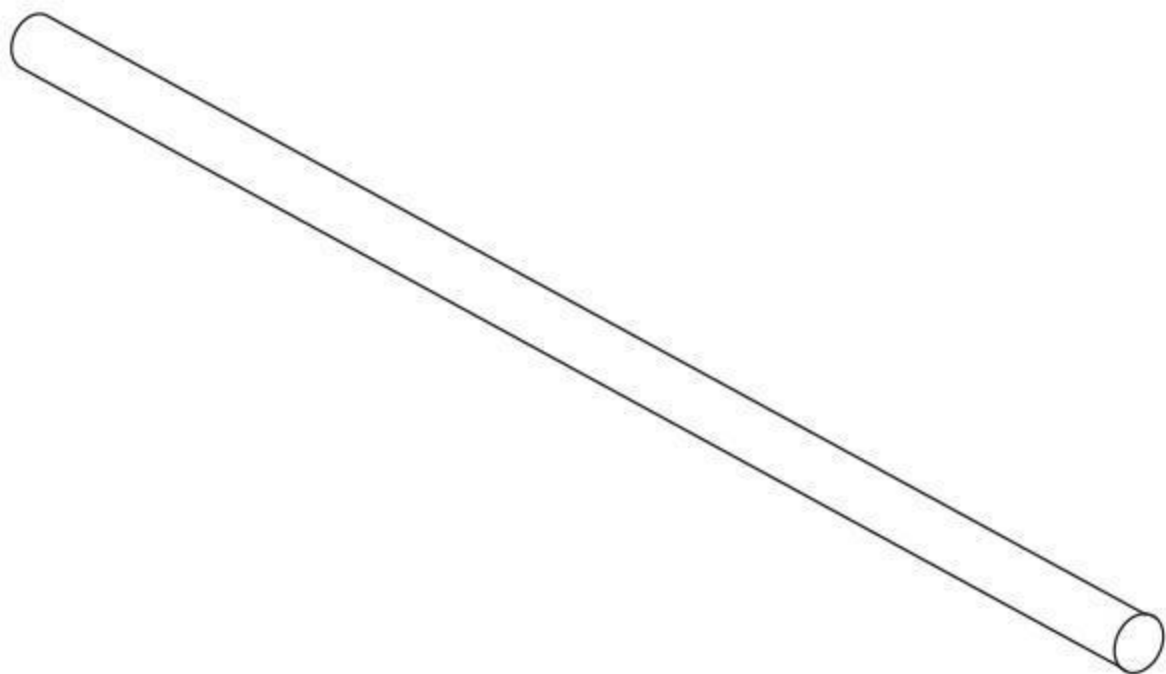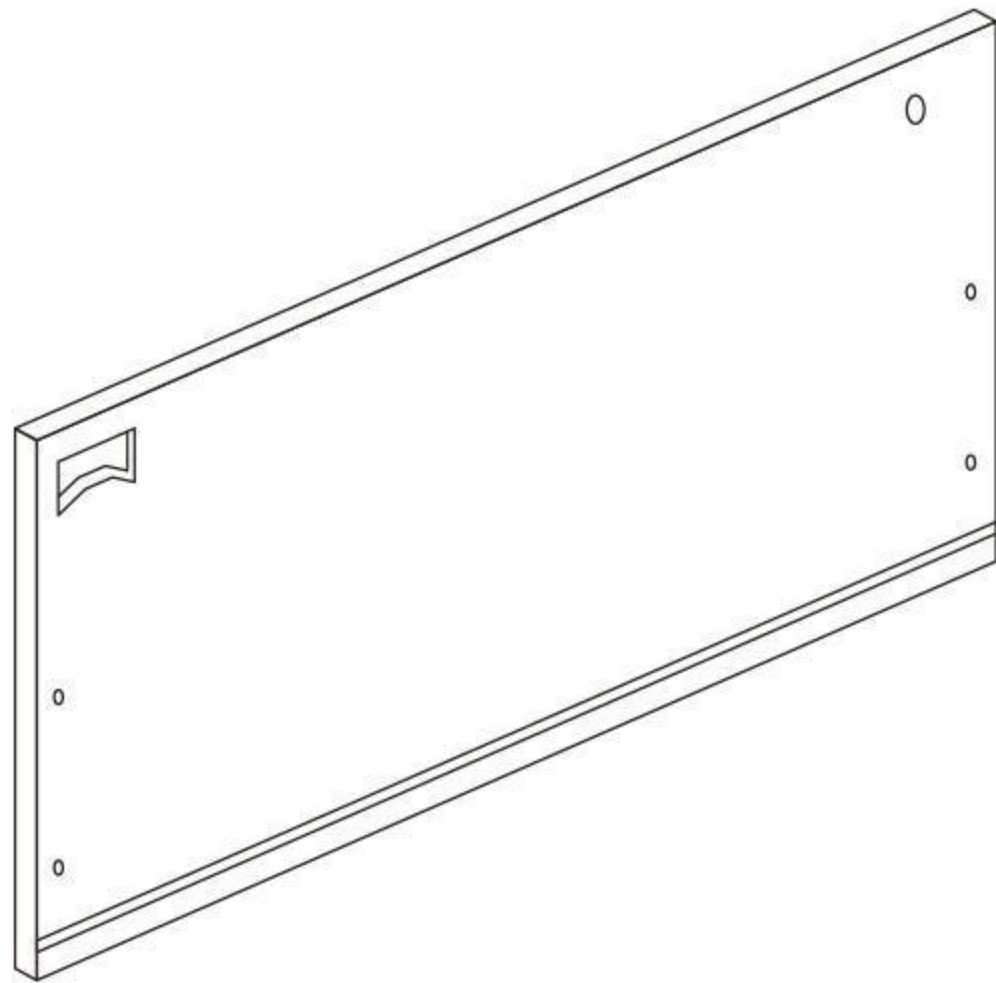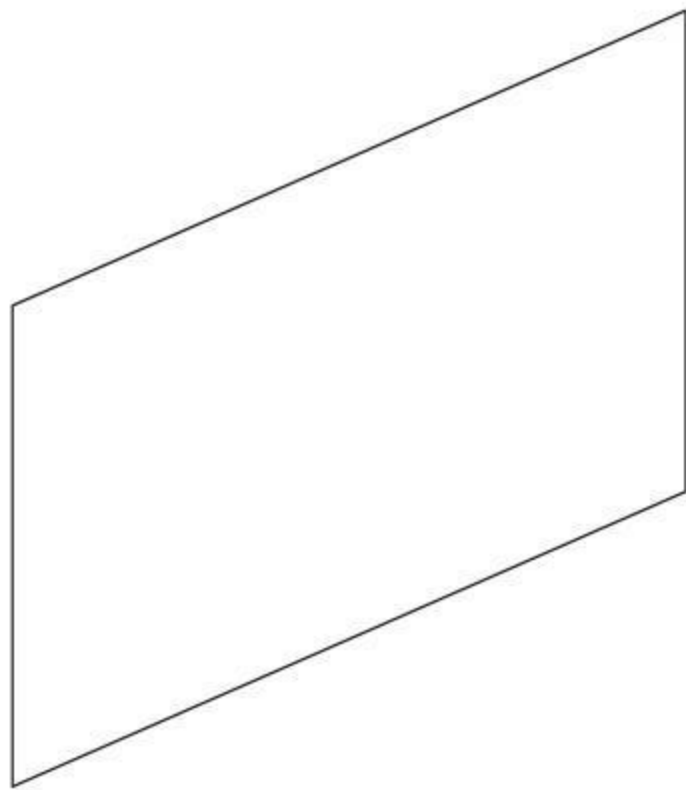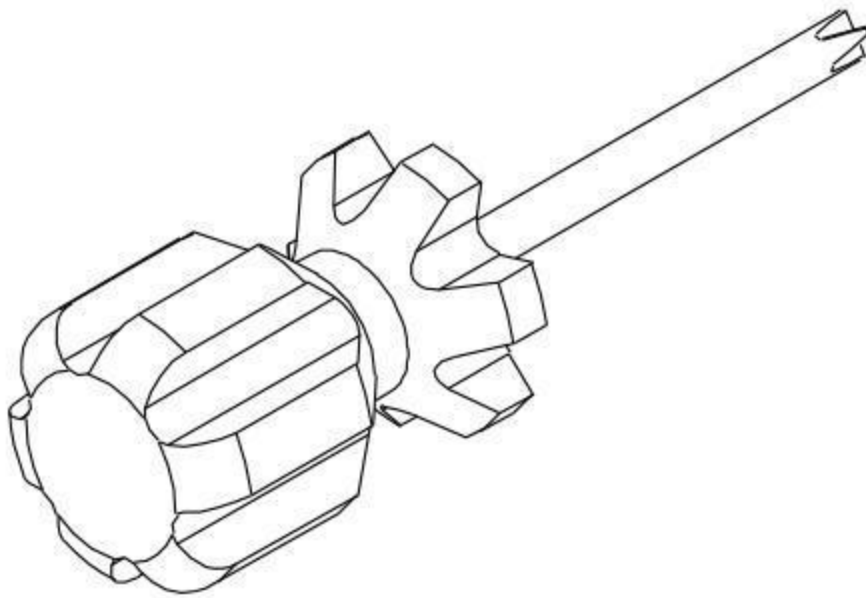Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
K		X2	P		X1
L		X2	Q		X1
M		X3	R		X1
N		X2	S		X2
O		X1	T		X1
			U		X1


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

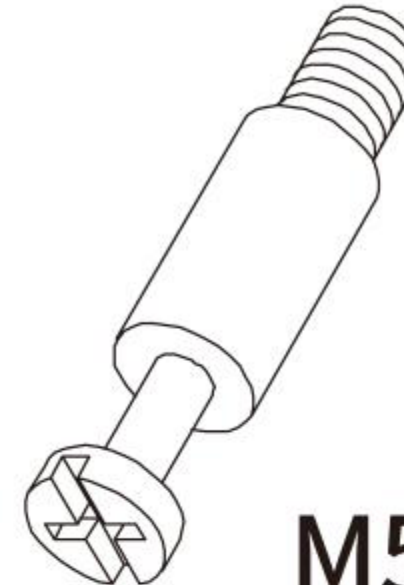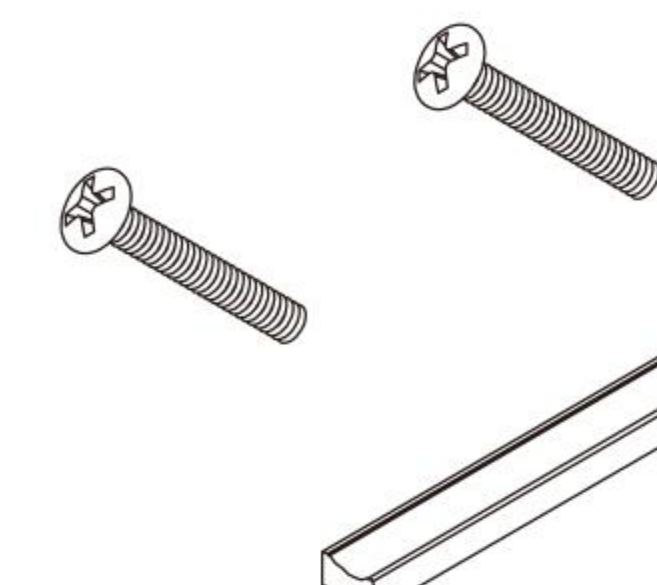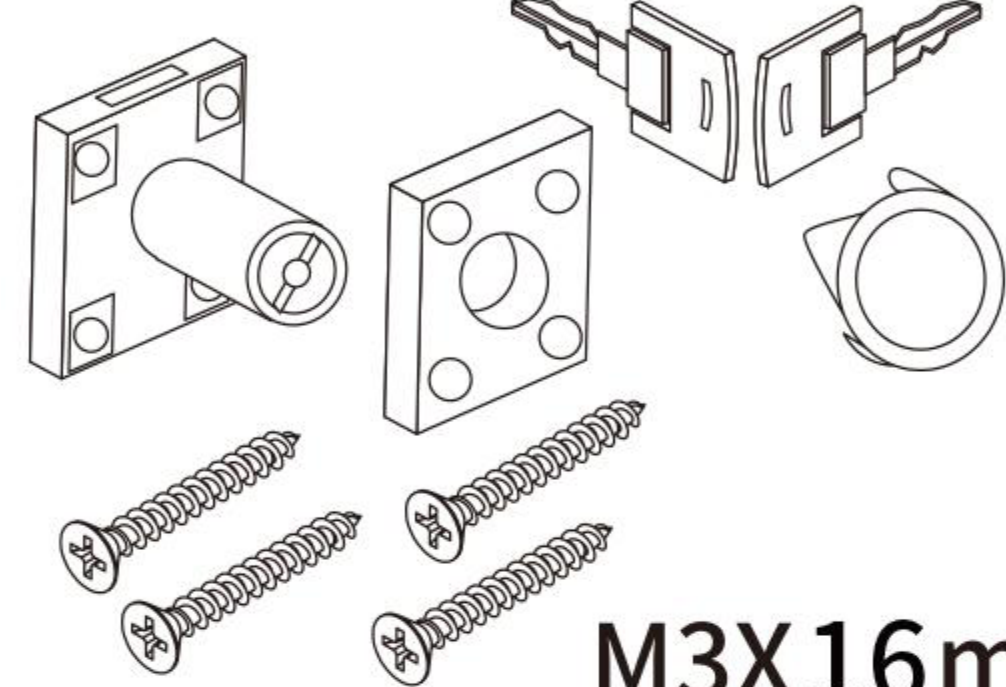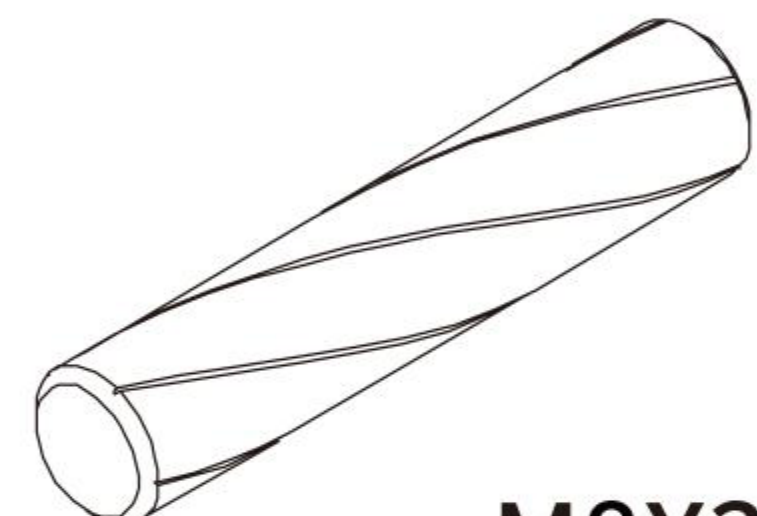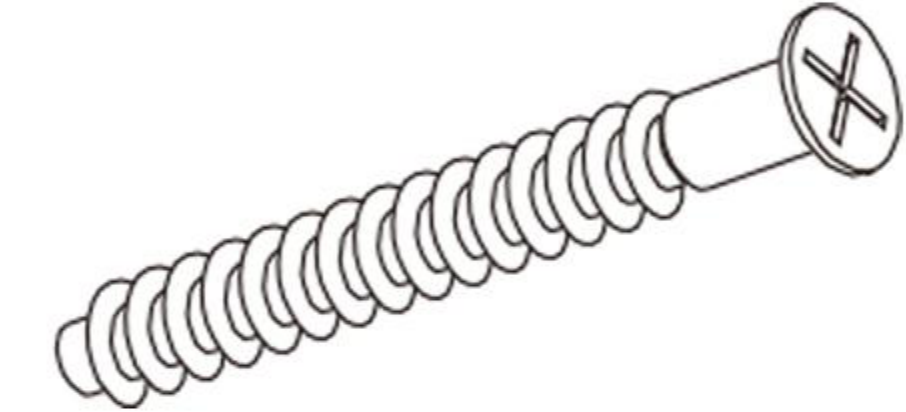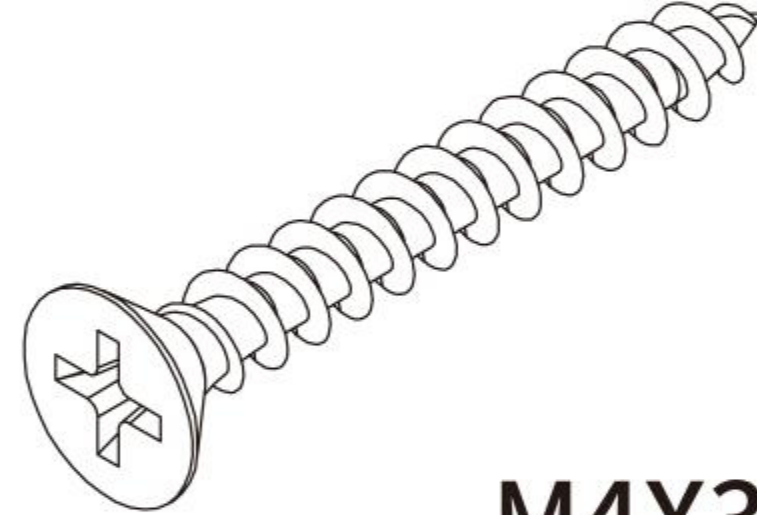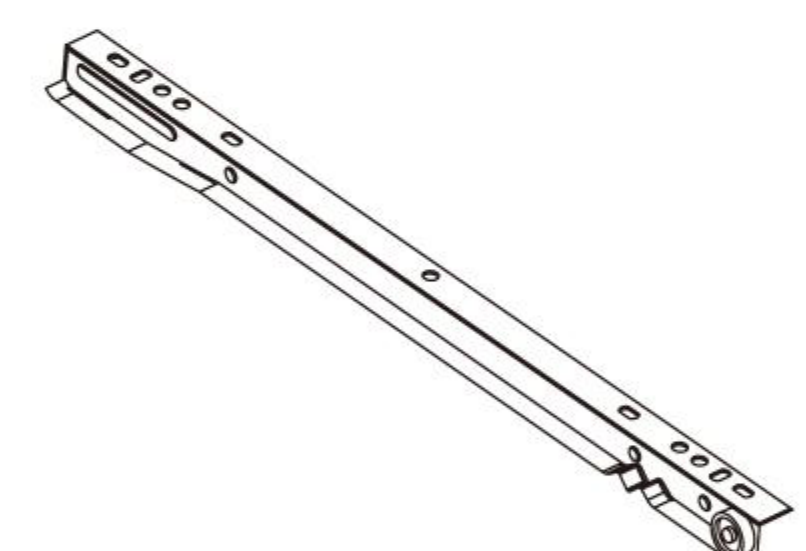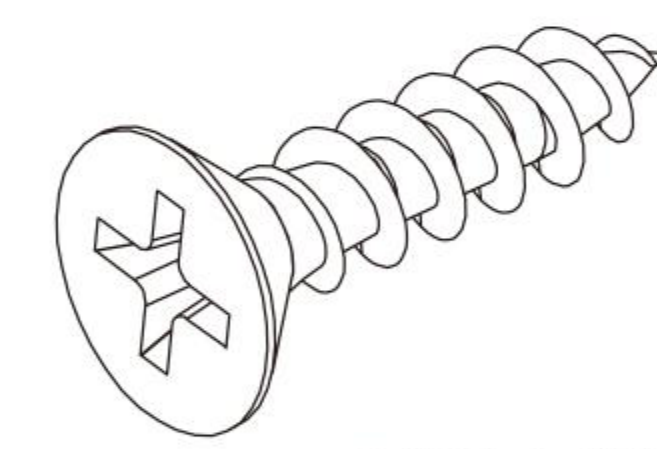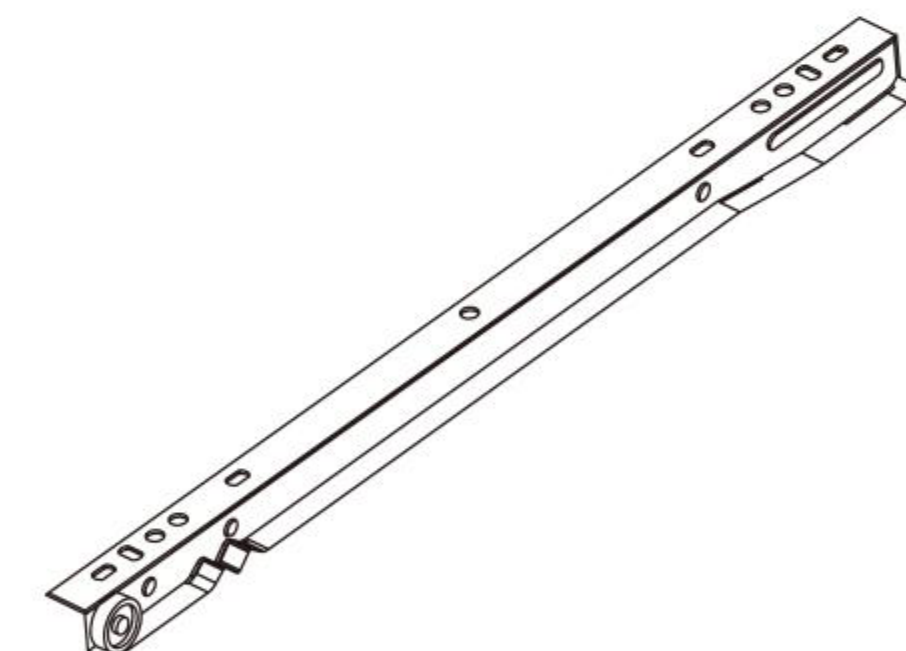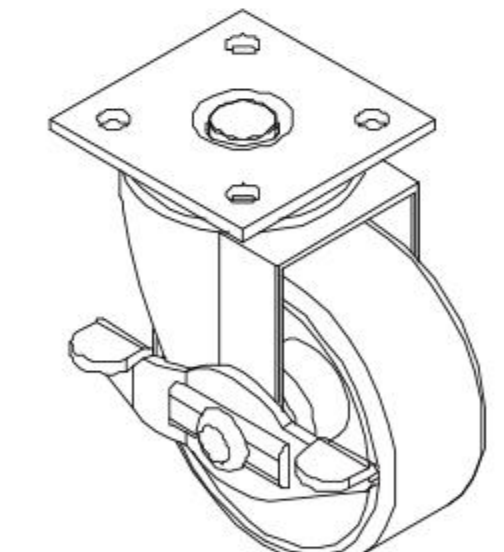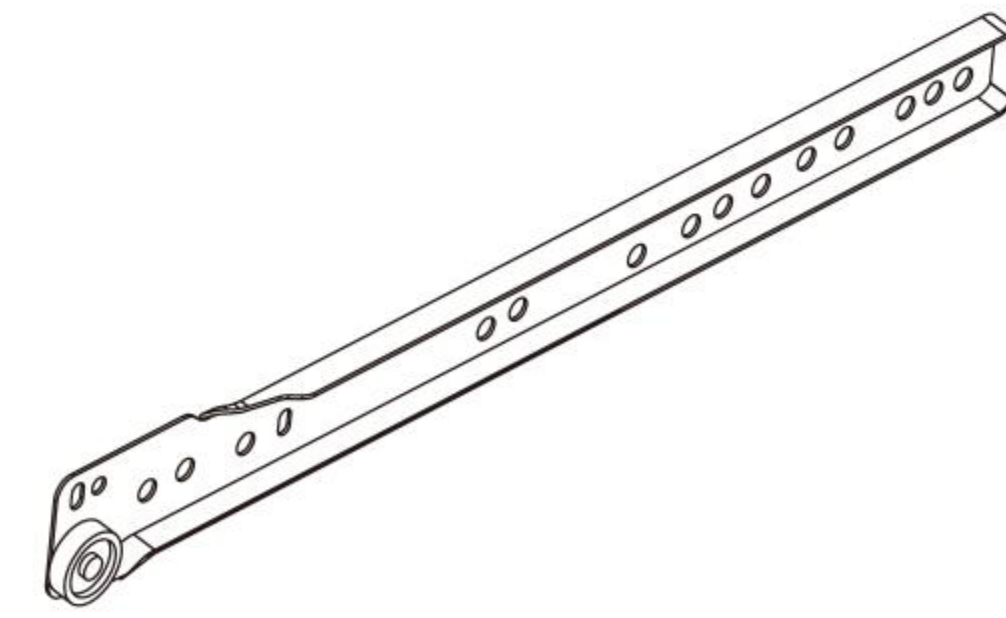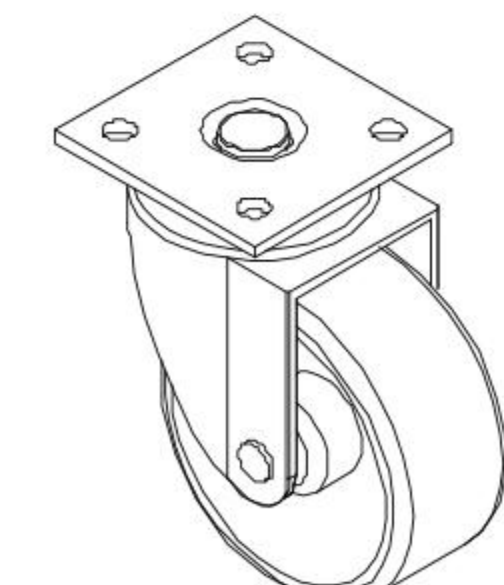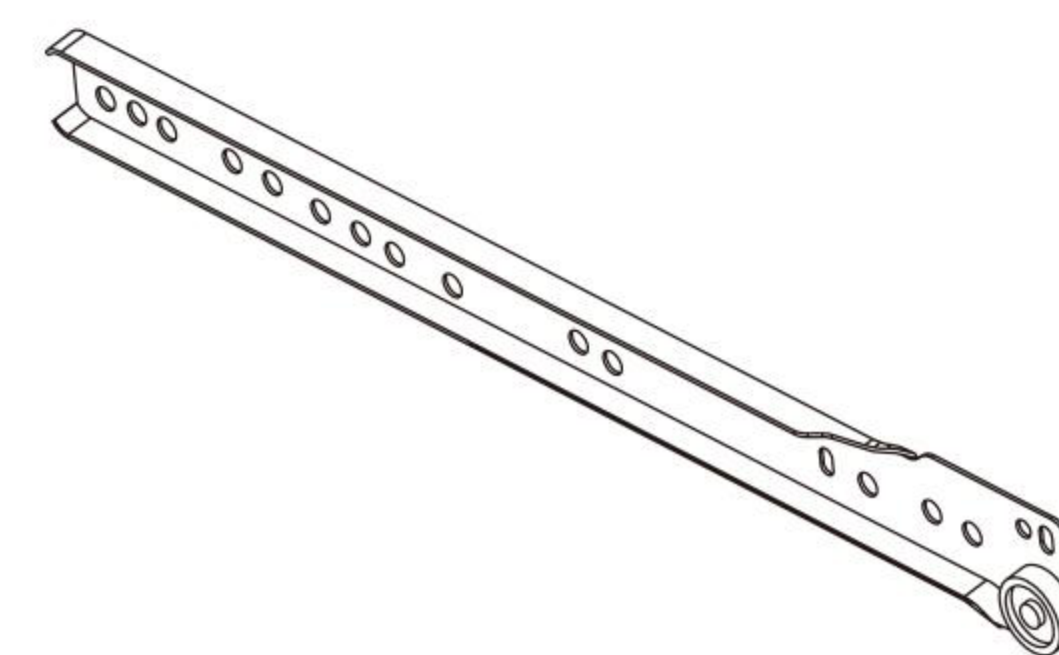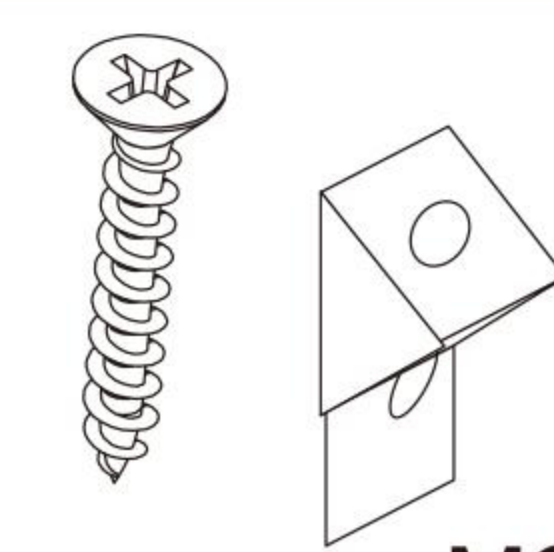
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5X35mm	X26 (+2)	i	 M4X18mm	X3
b	 M12X9.5mm	X26 (+2)	j	 M3X16mm	X3
c	 M8X30mm	X20 (+2)	k	 M6×38	X 6
d	 M4X35mm	X12 (+1)	DL	 	X3
e	 M3.5X14mm	X44 (+2)	DR	 	X3
l	 	X2	CL	 	X3
g	 	X3	CR	 	X3
h	 M3X16mm	X8 (+1)			

Use the Cam Lock and Eccentric Wheel
ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

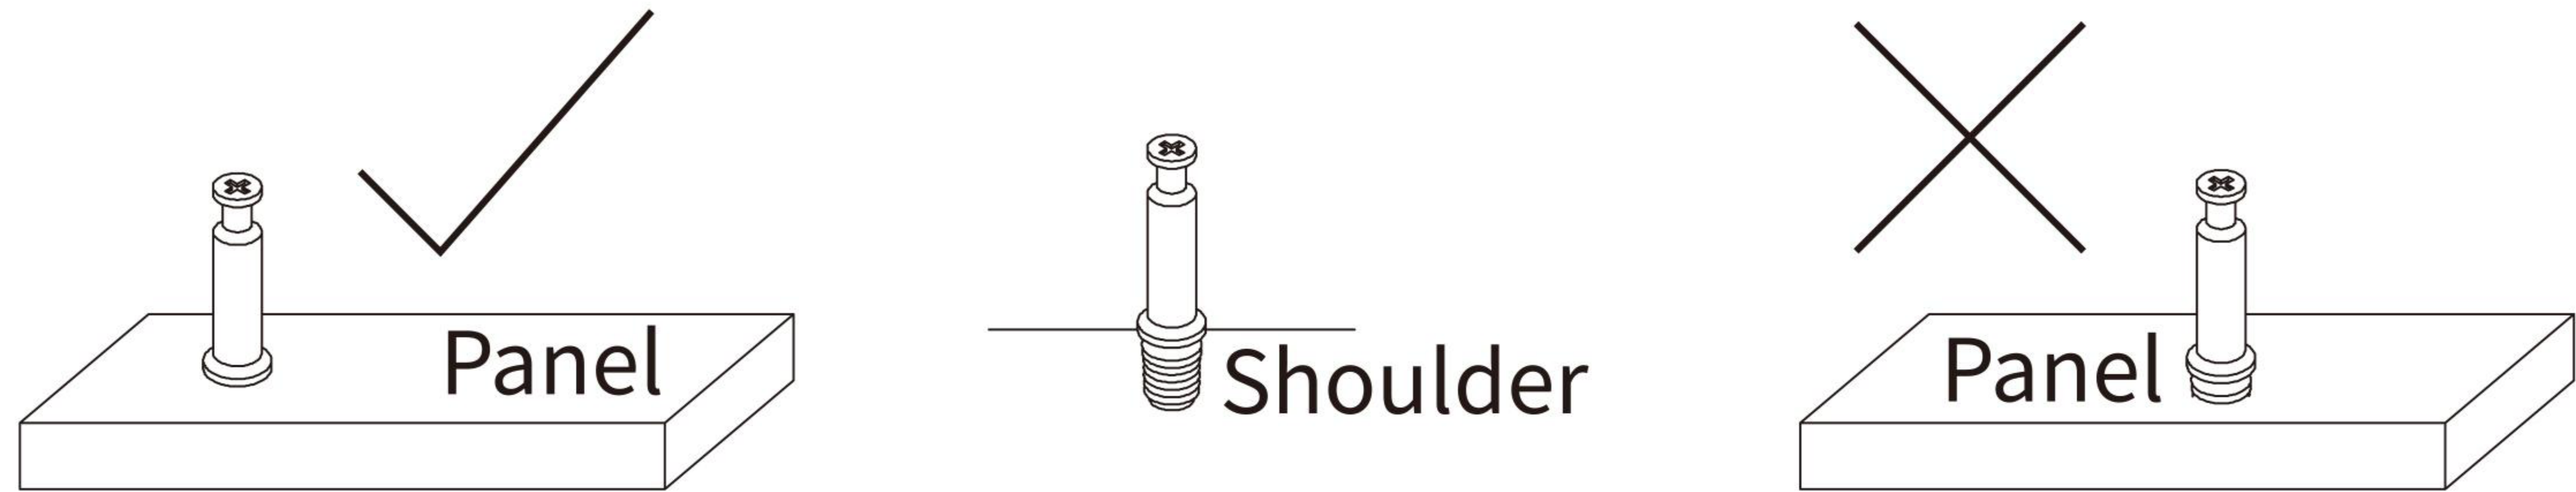

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

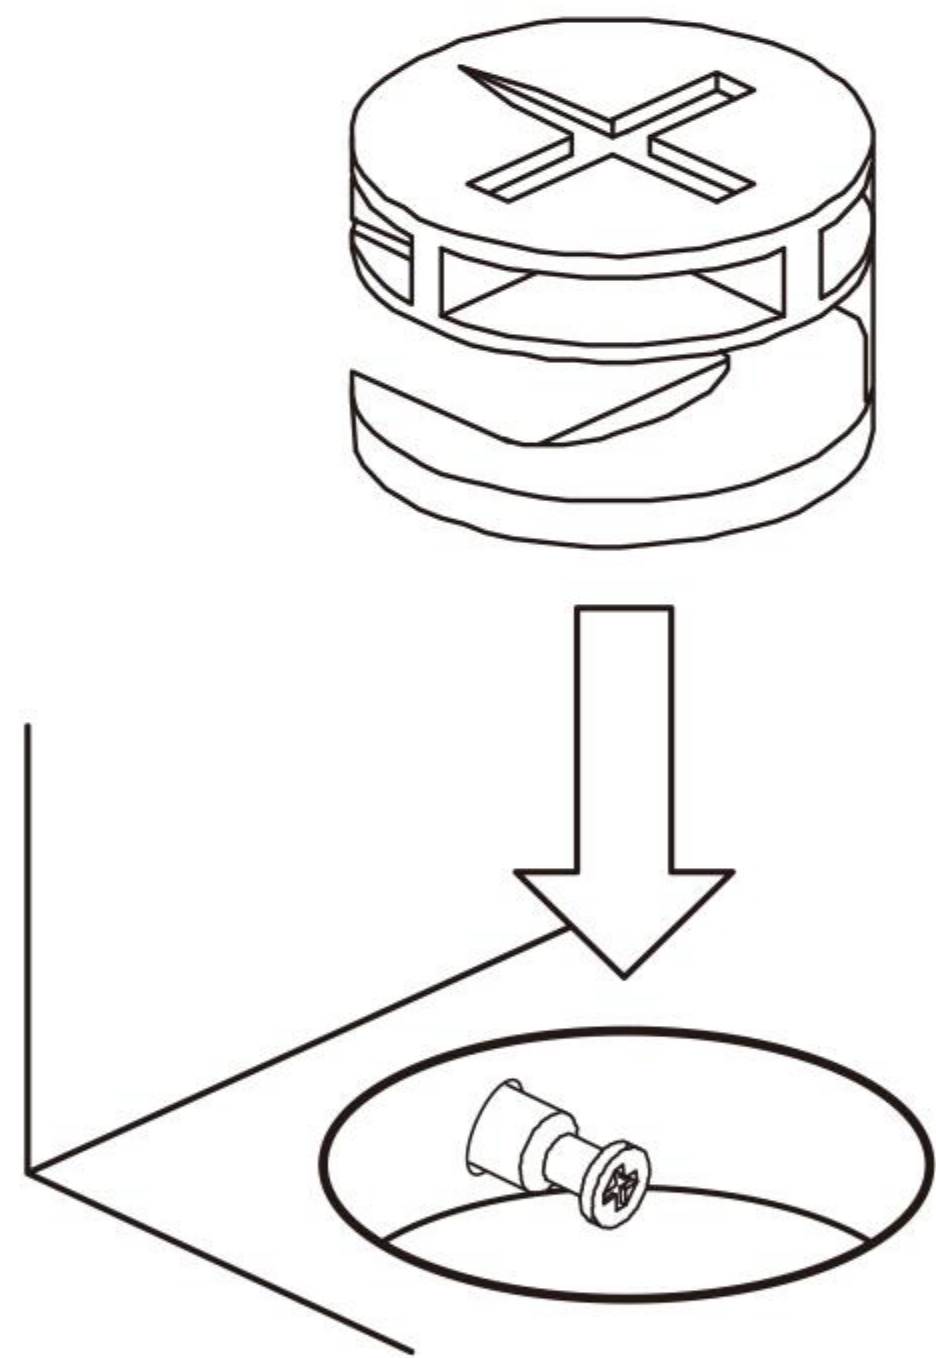



Turn the cam lock clockwise to tighten.

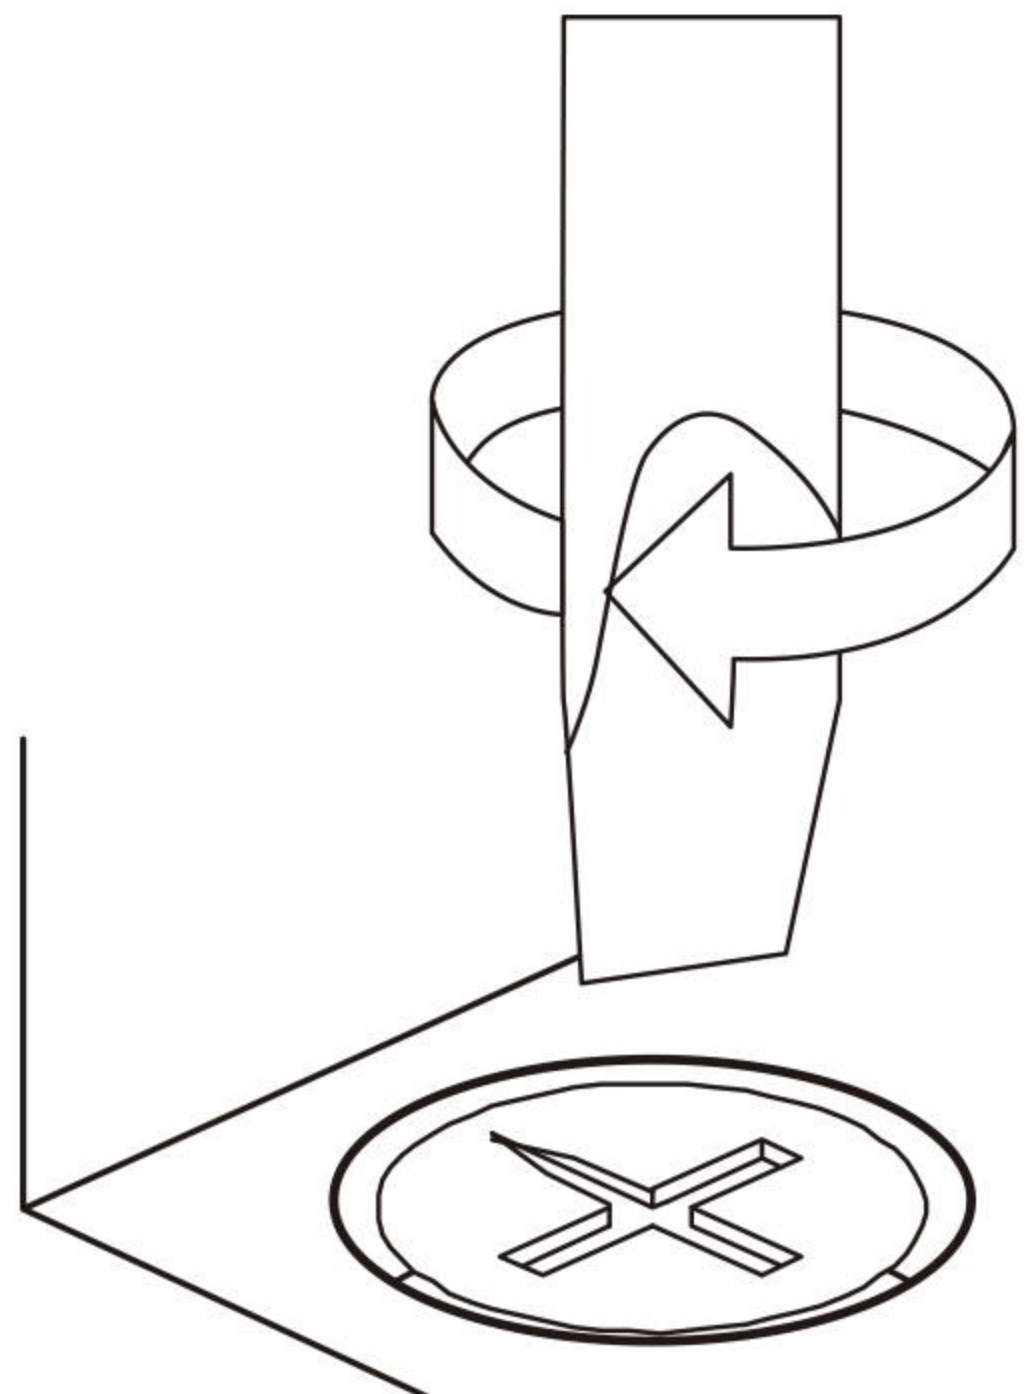



ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

1

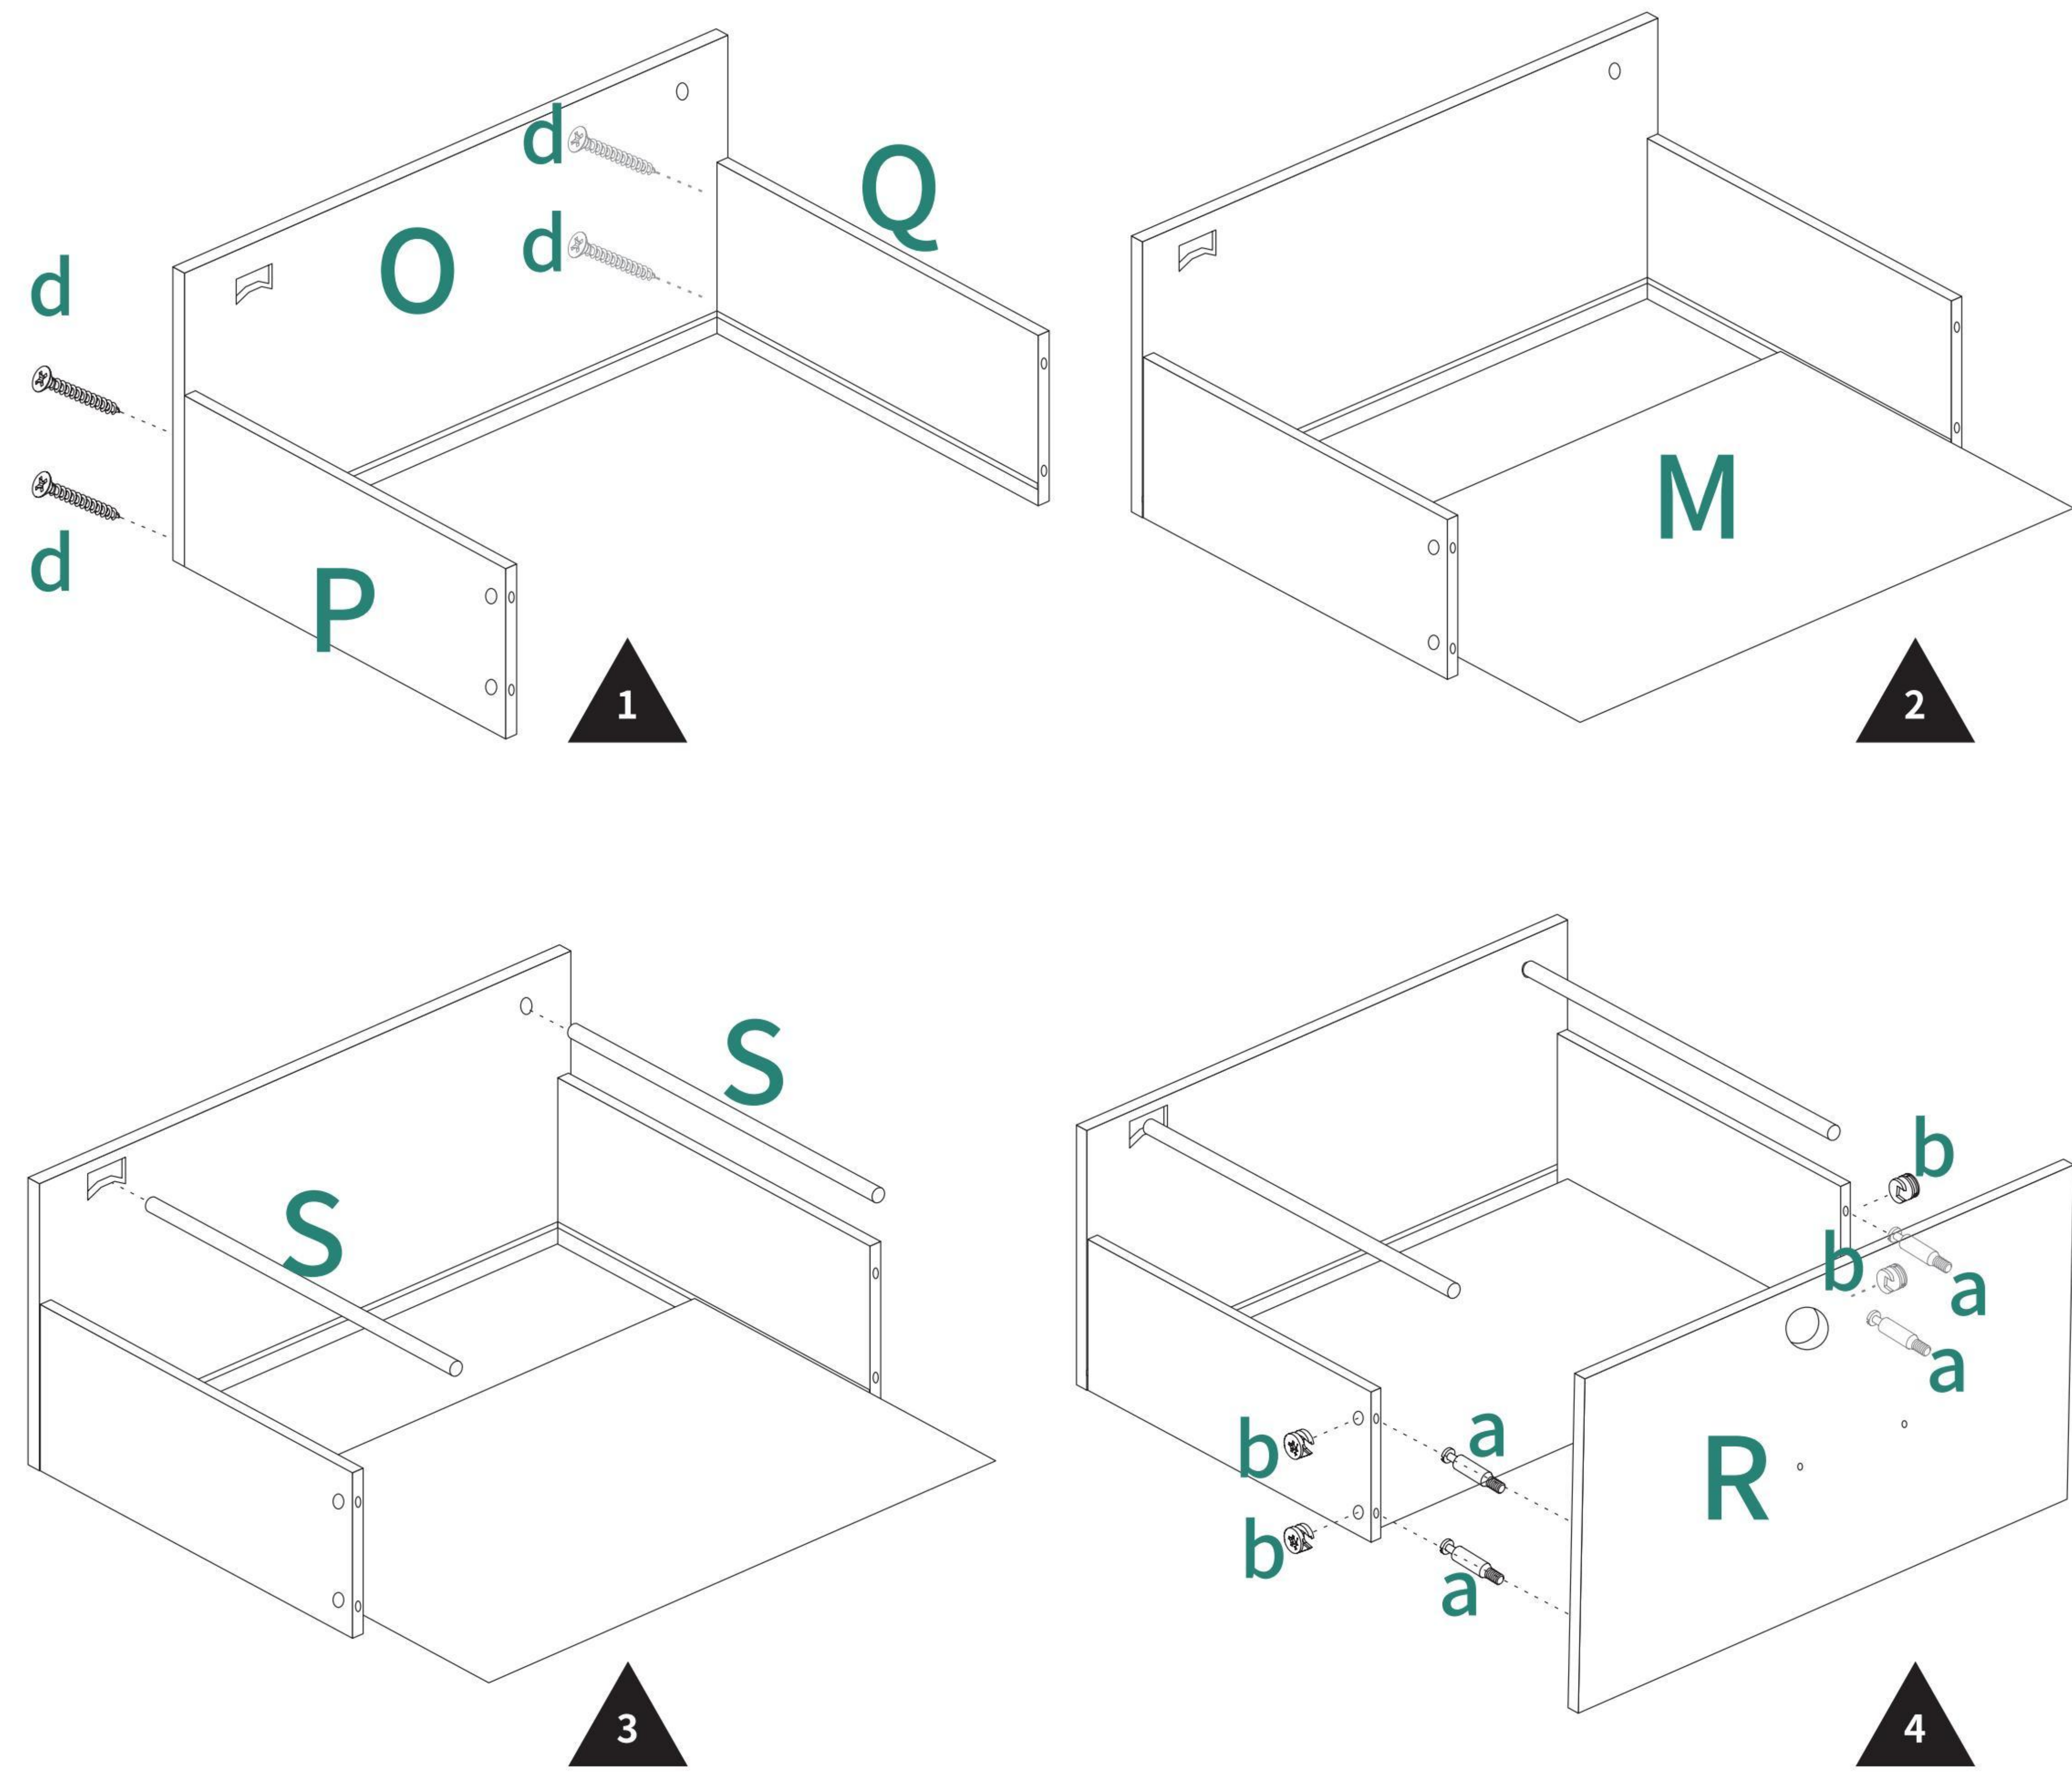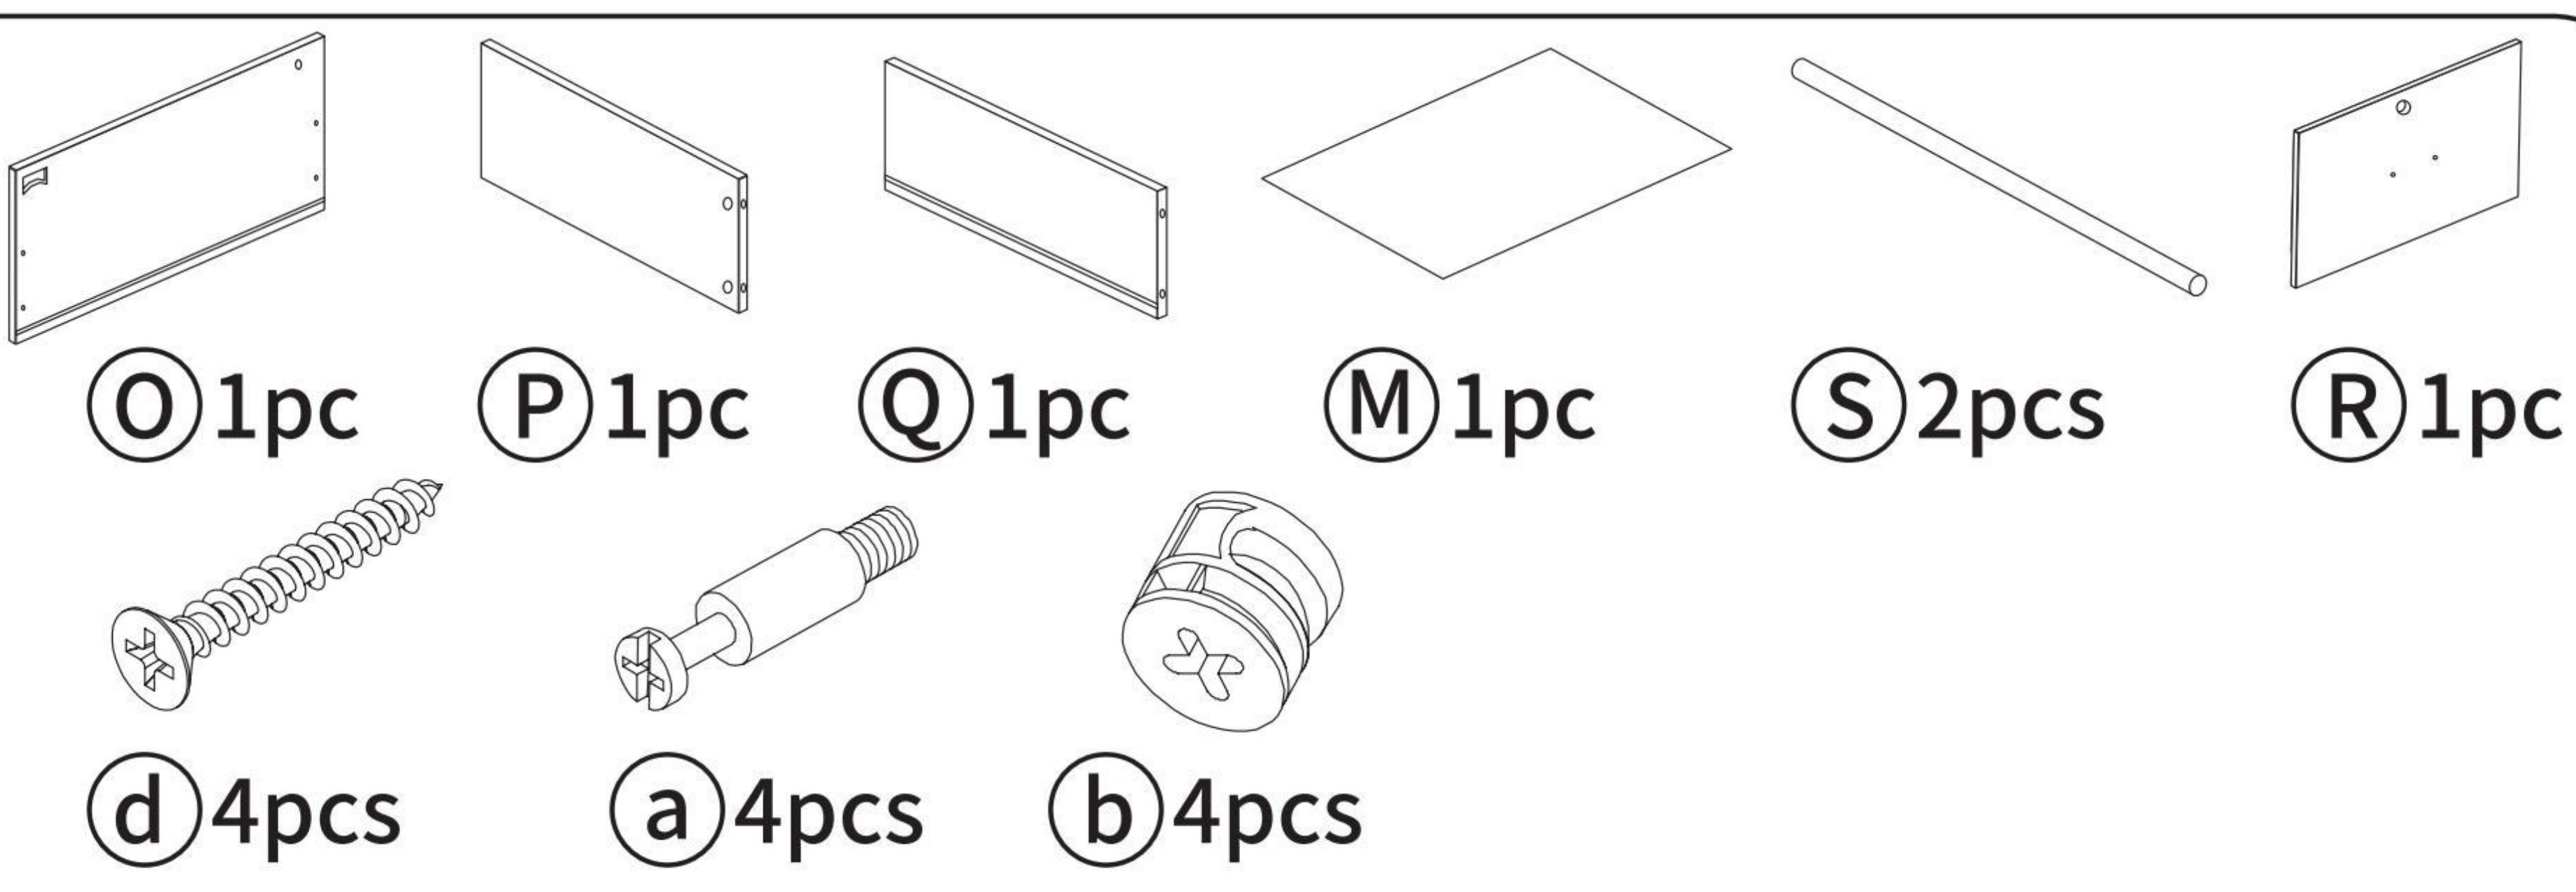

2

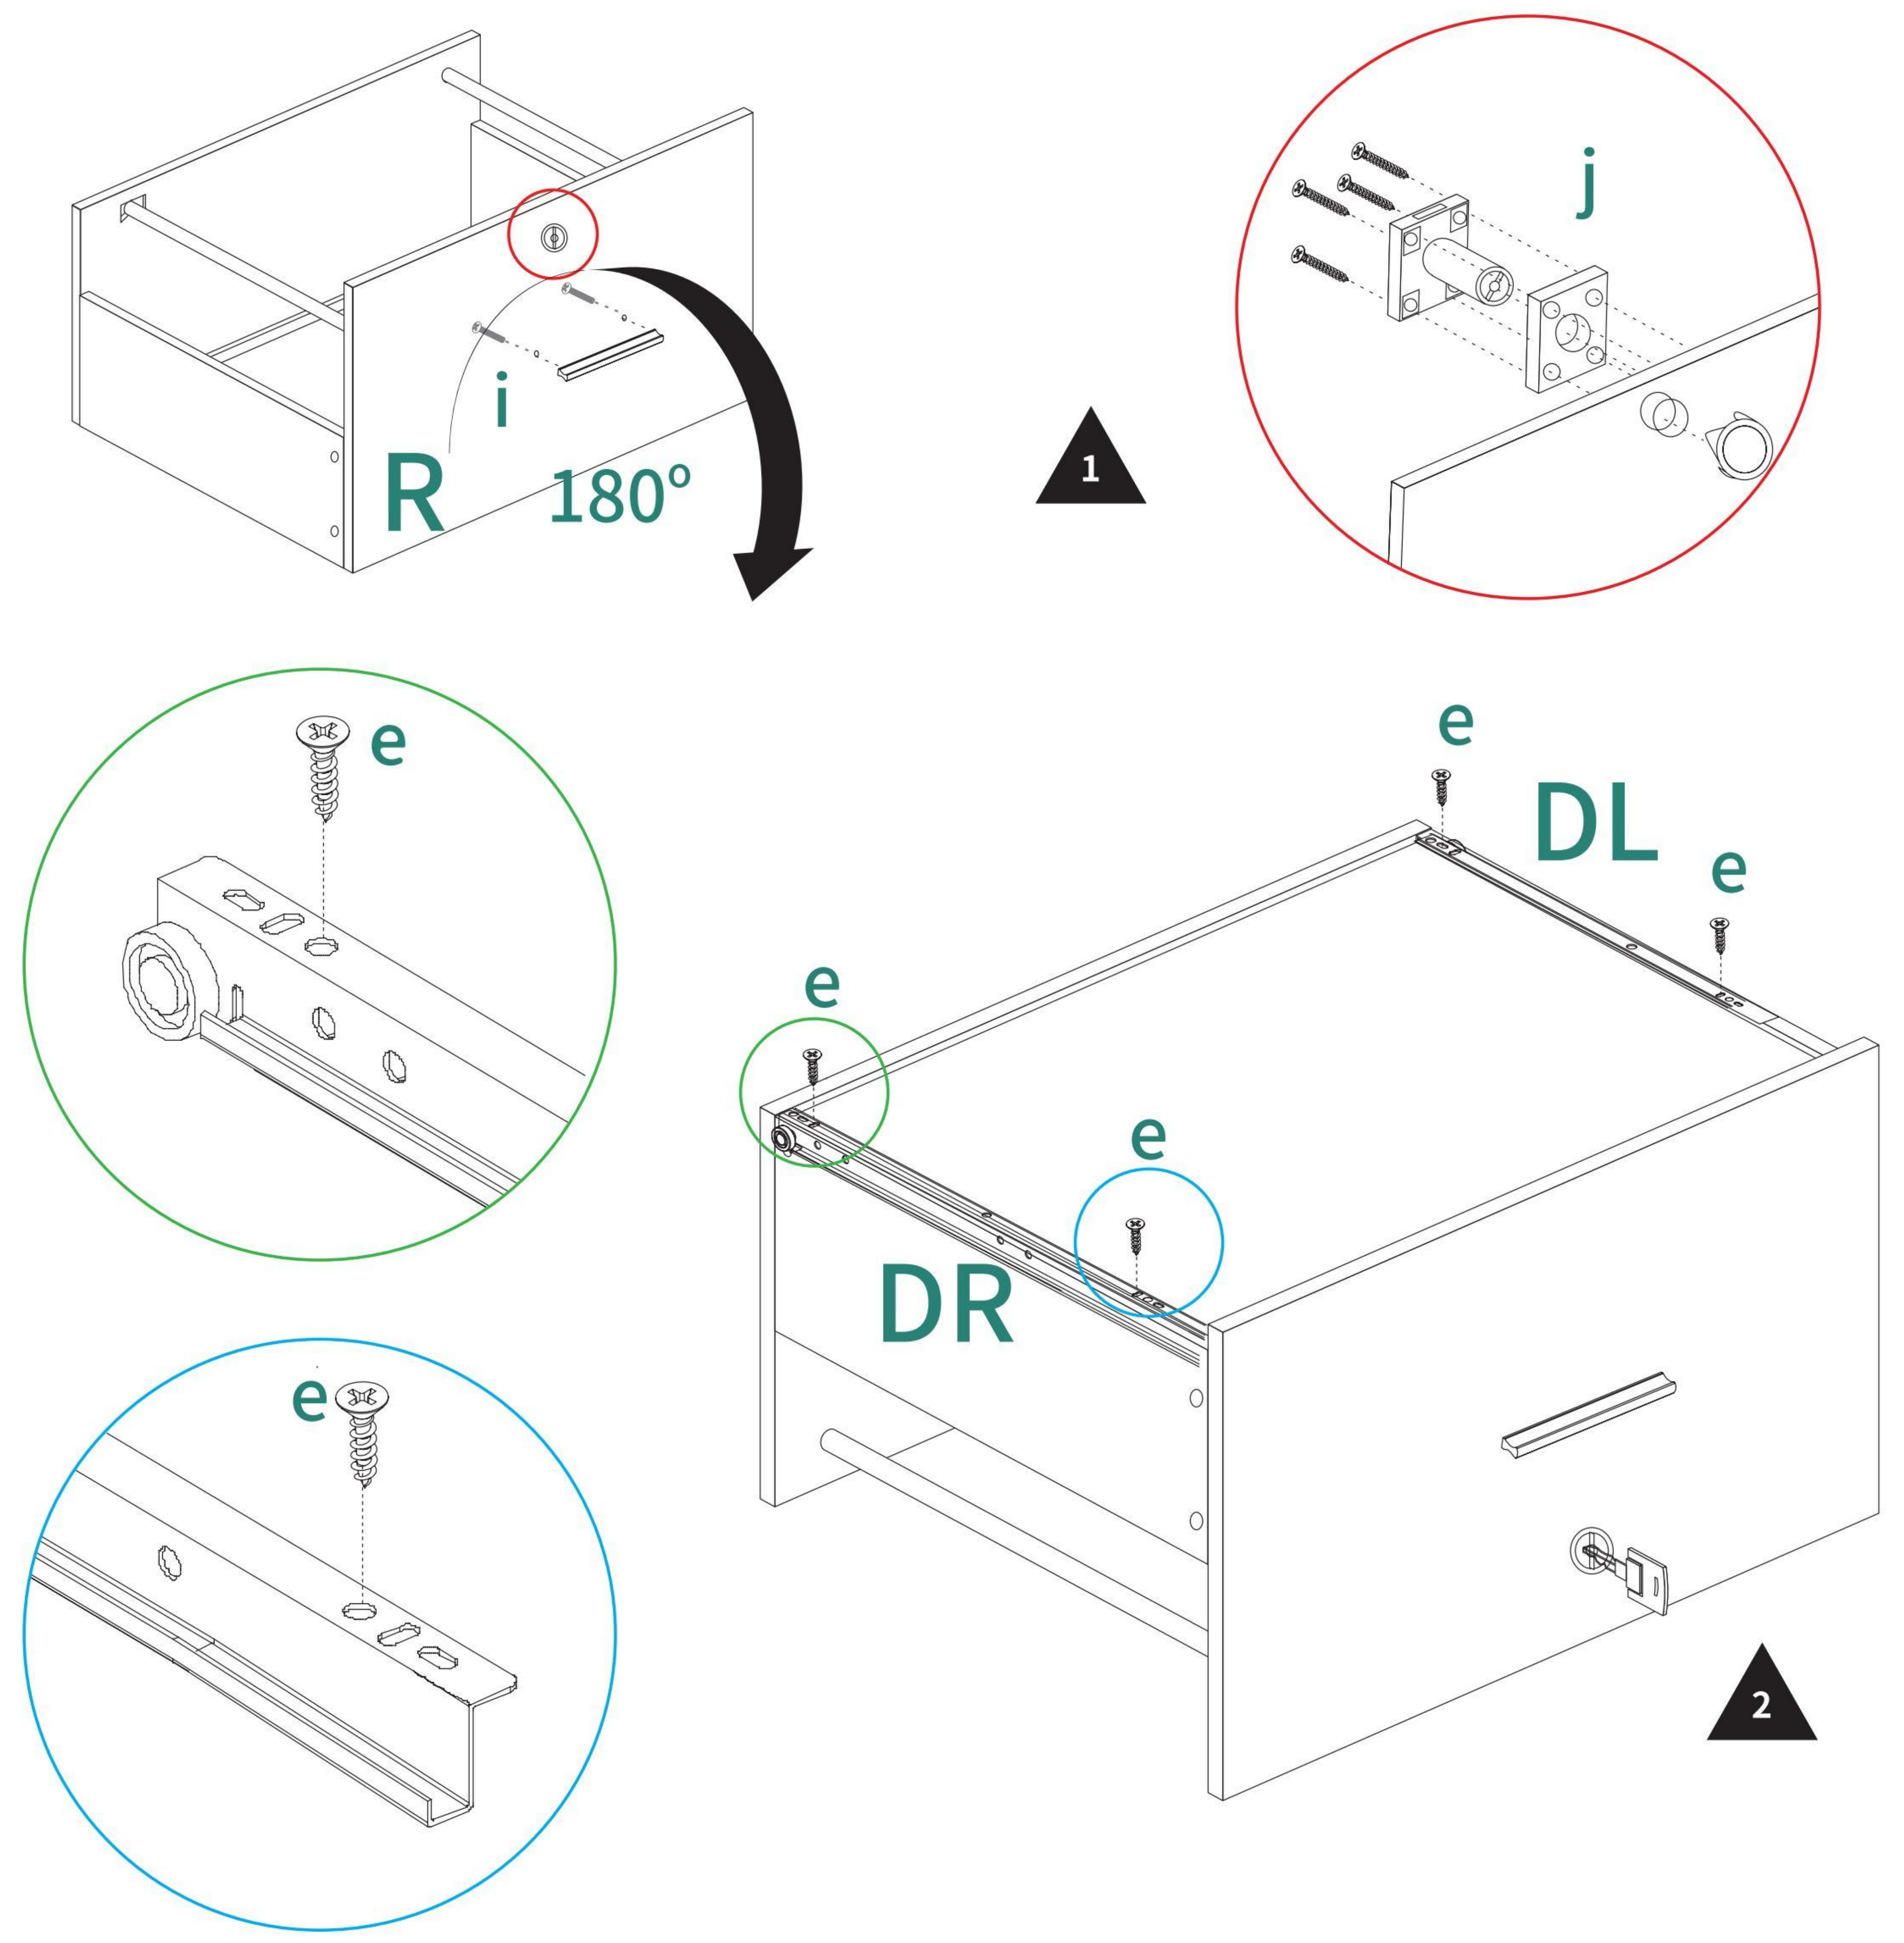
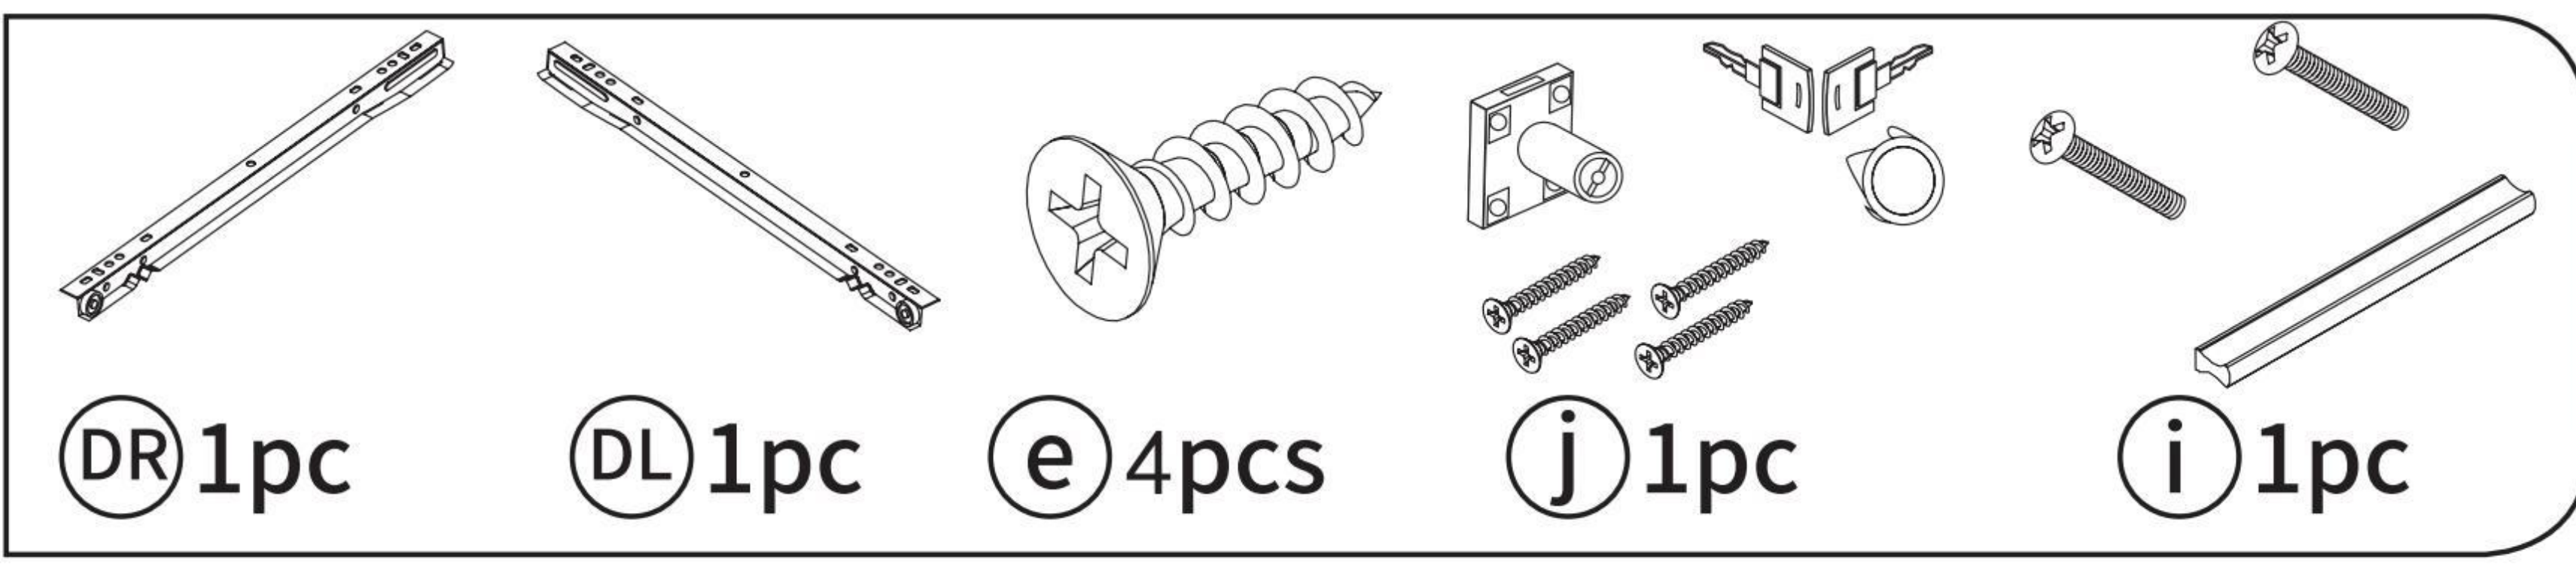


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

3



X2

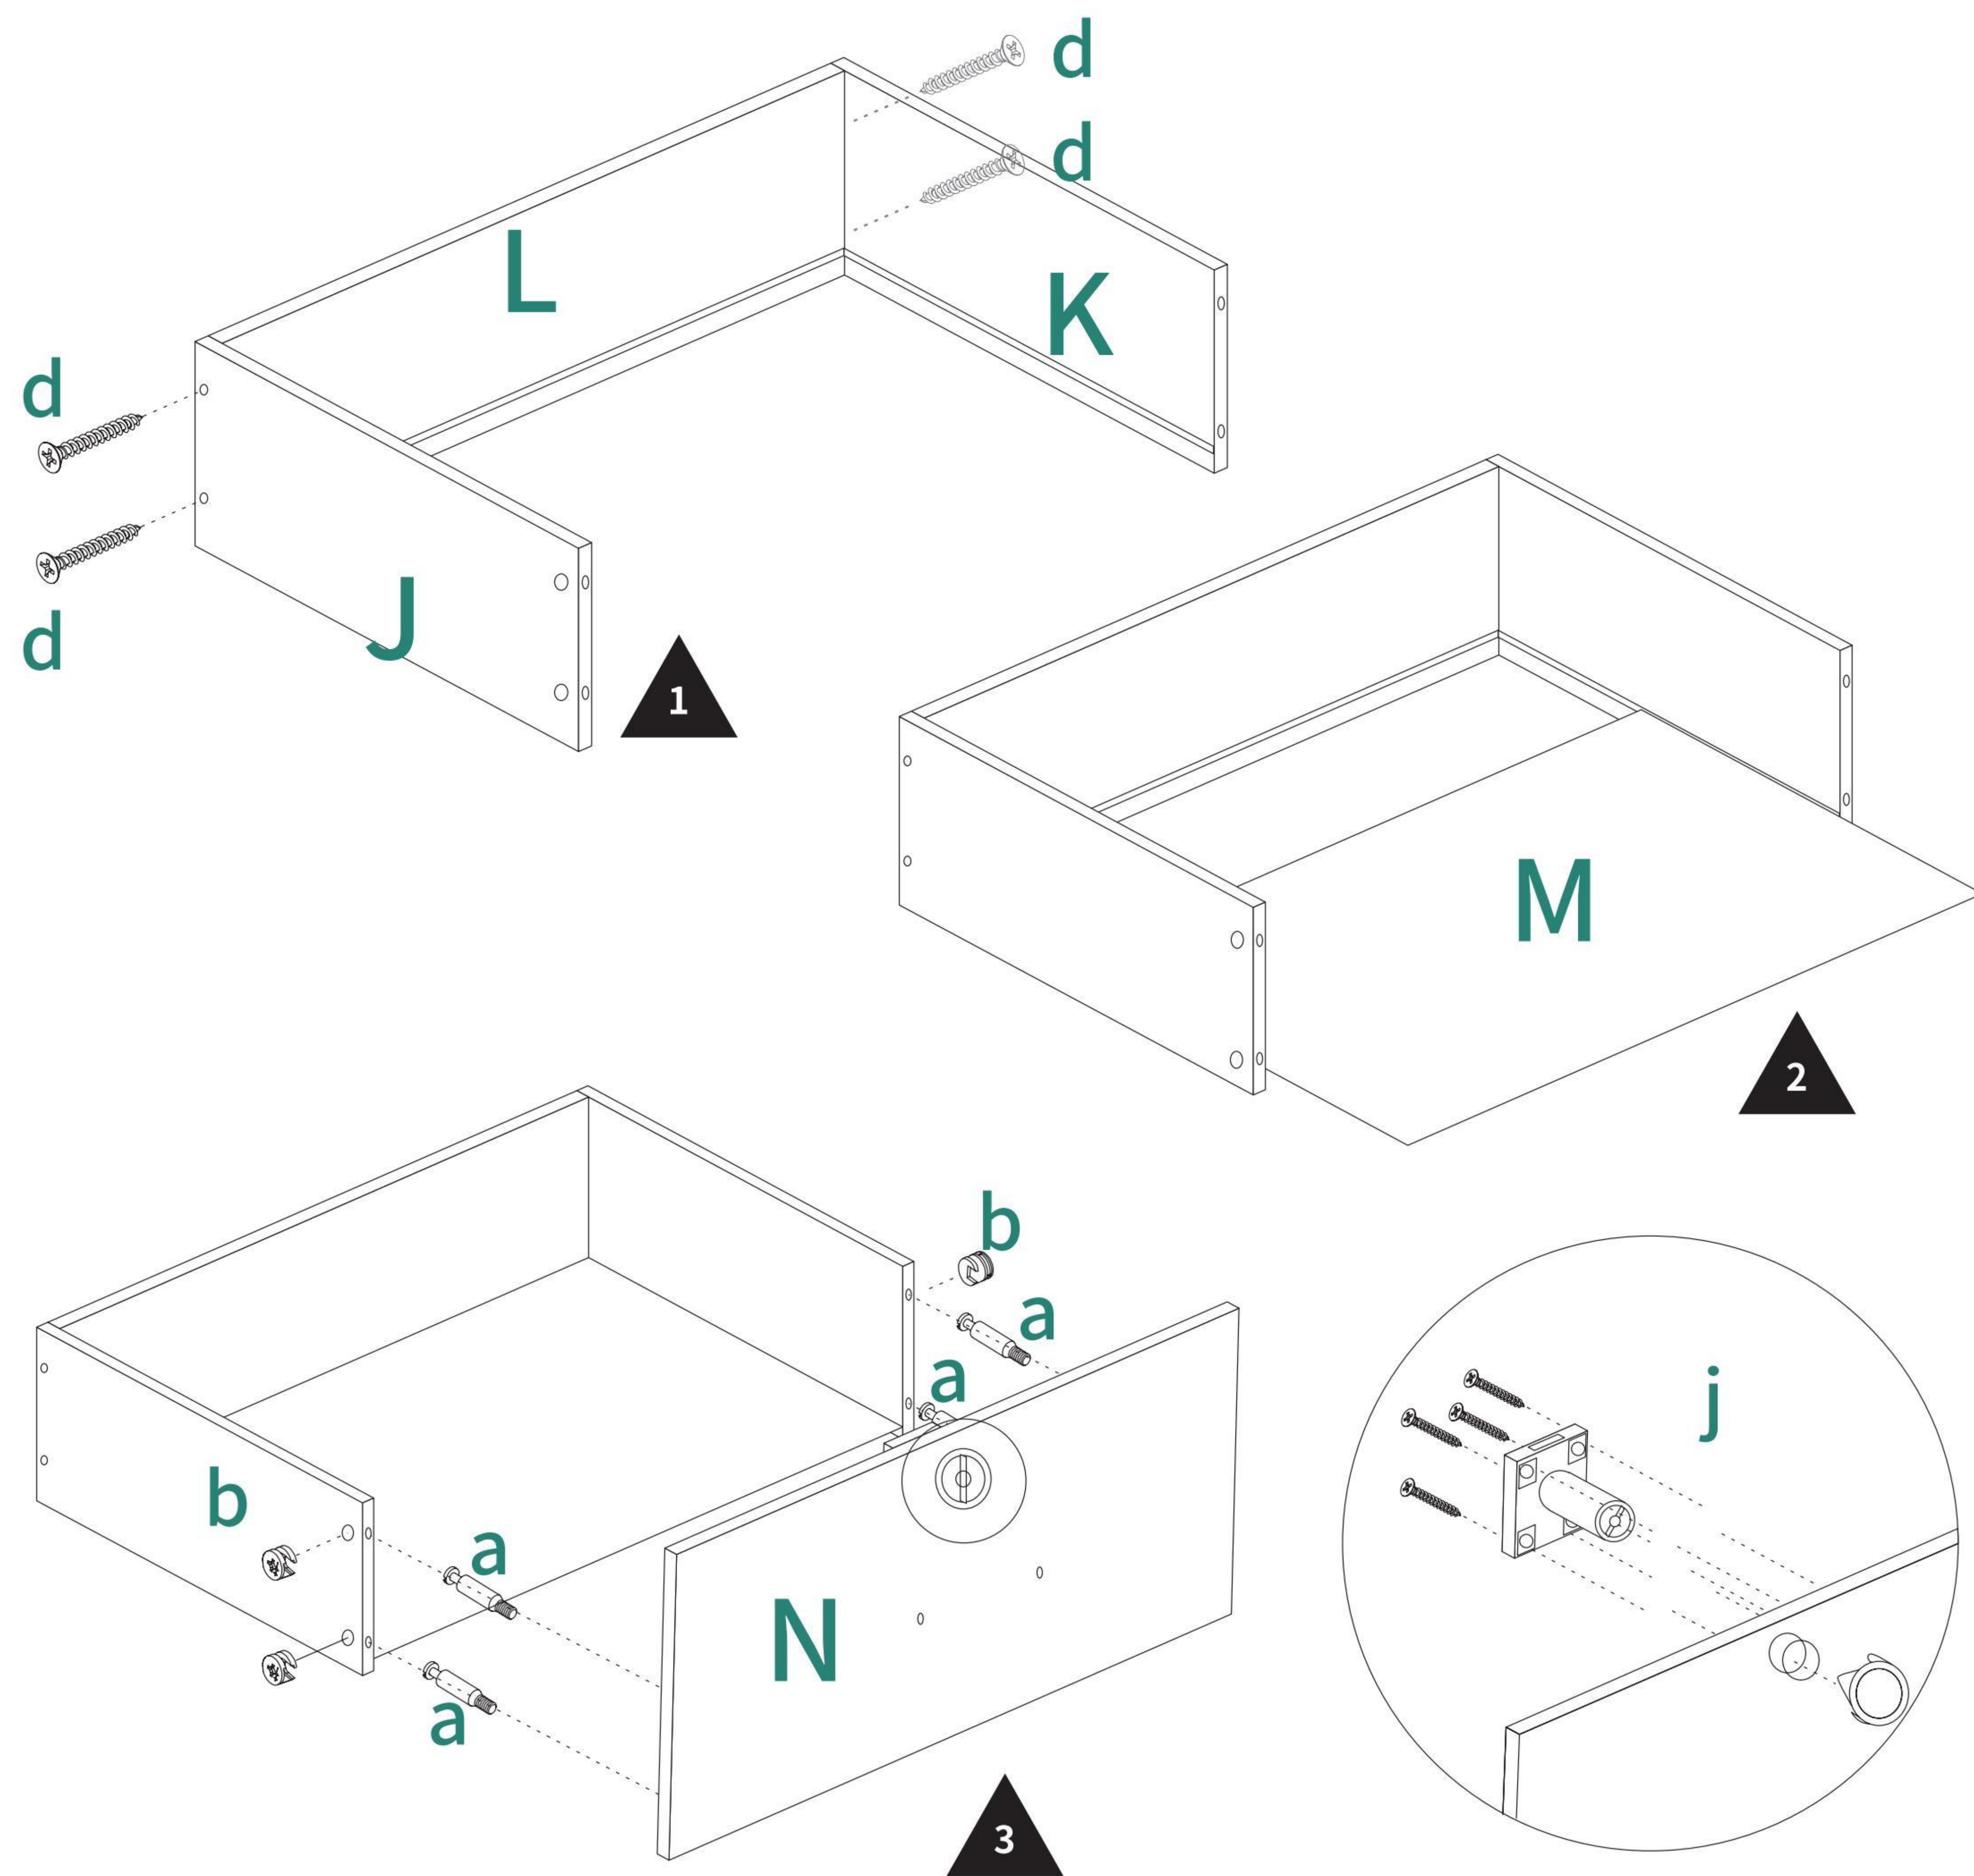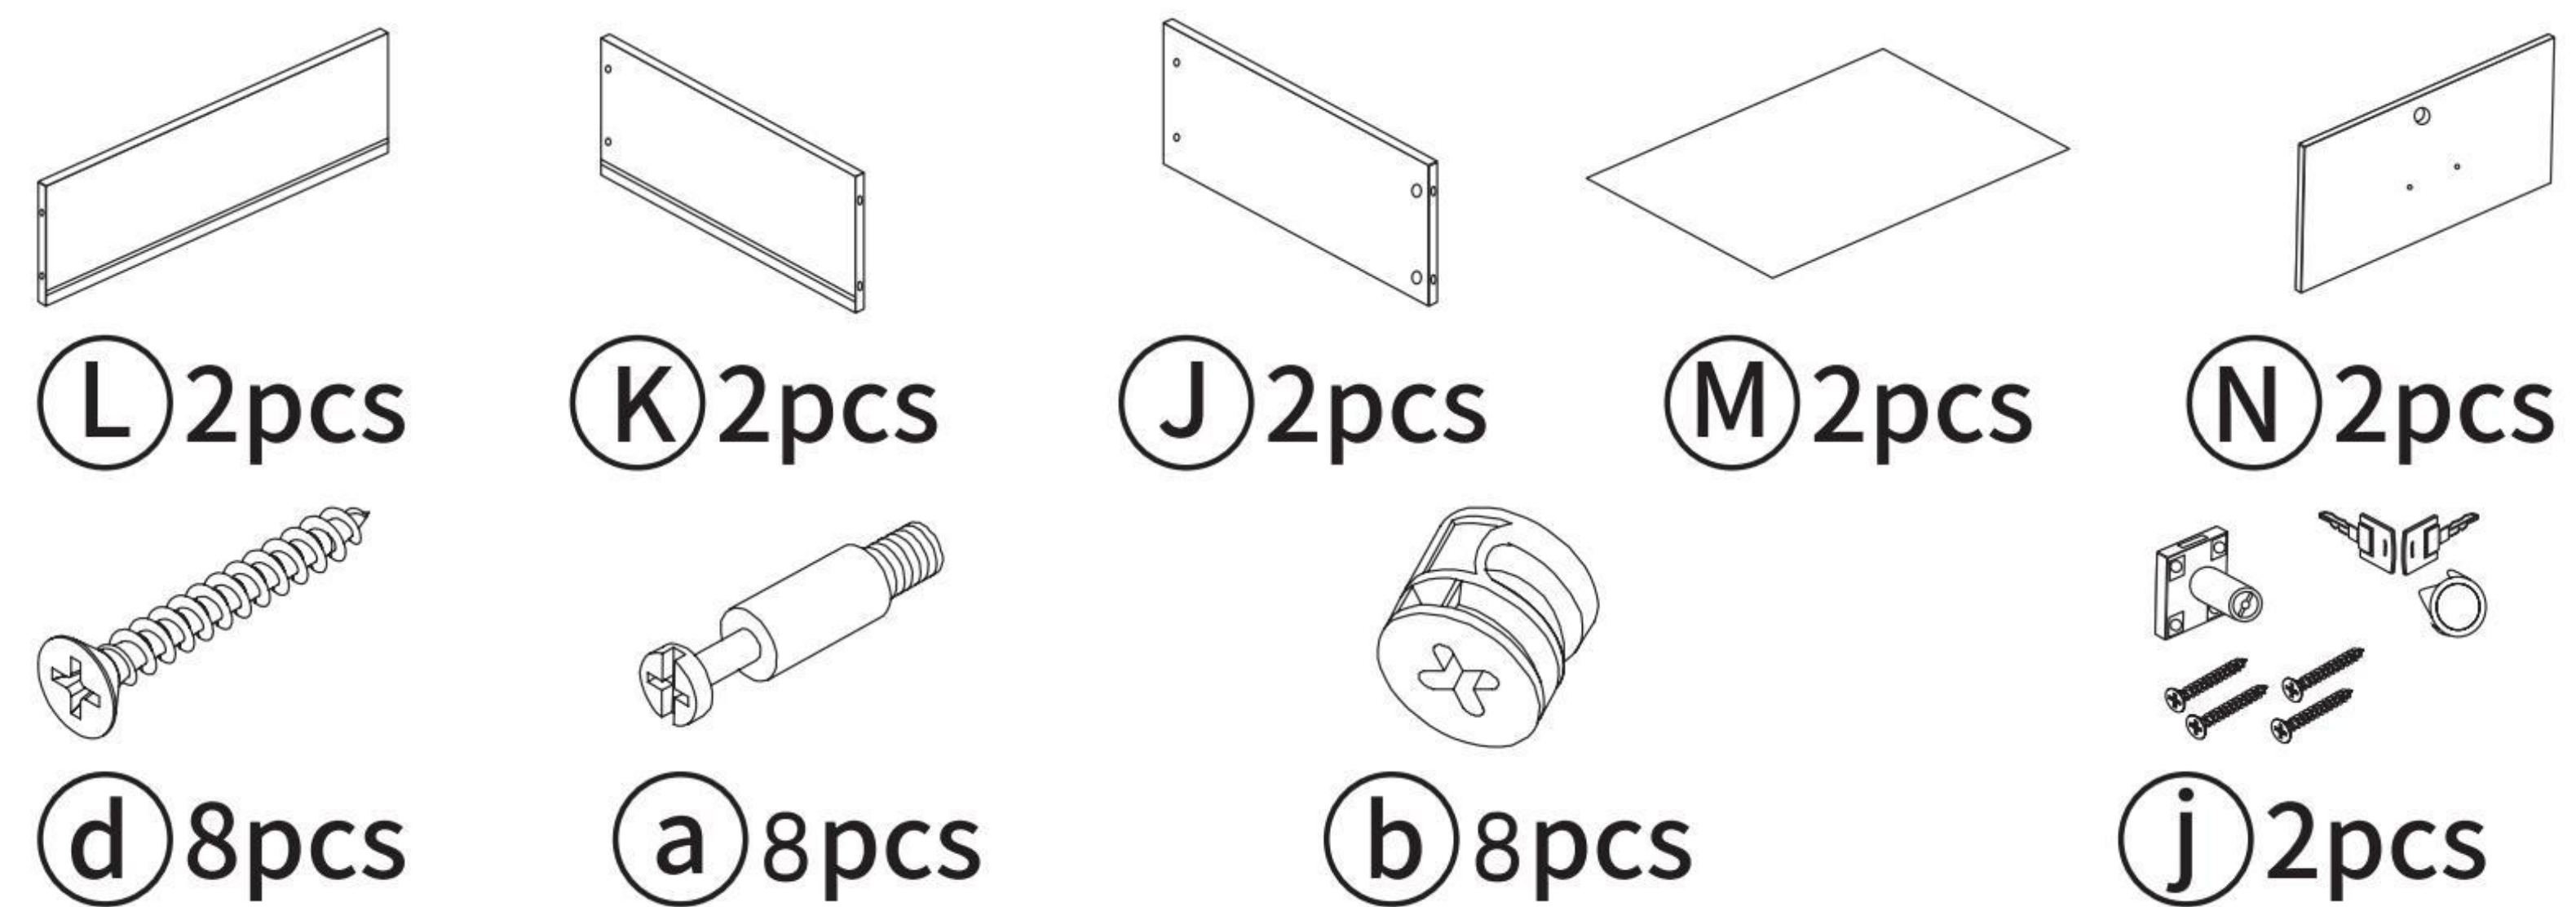

7

4


X2

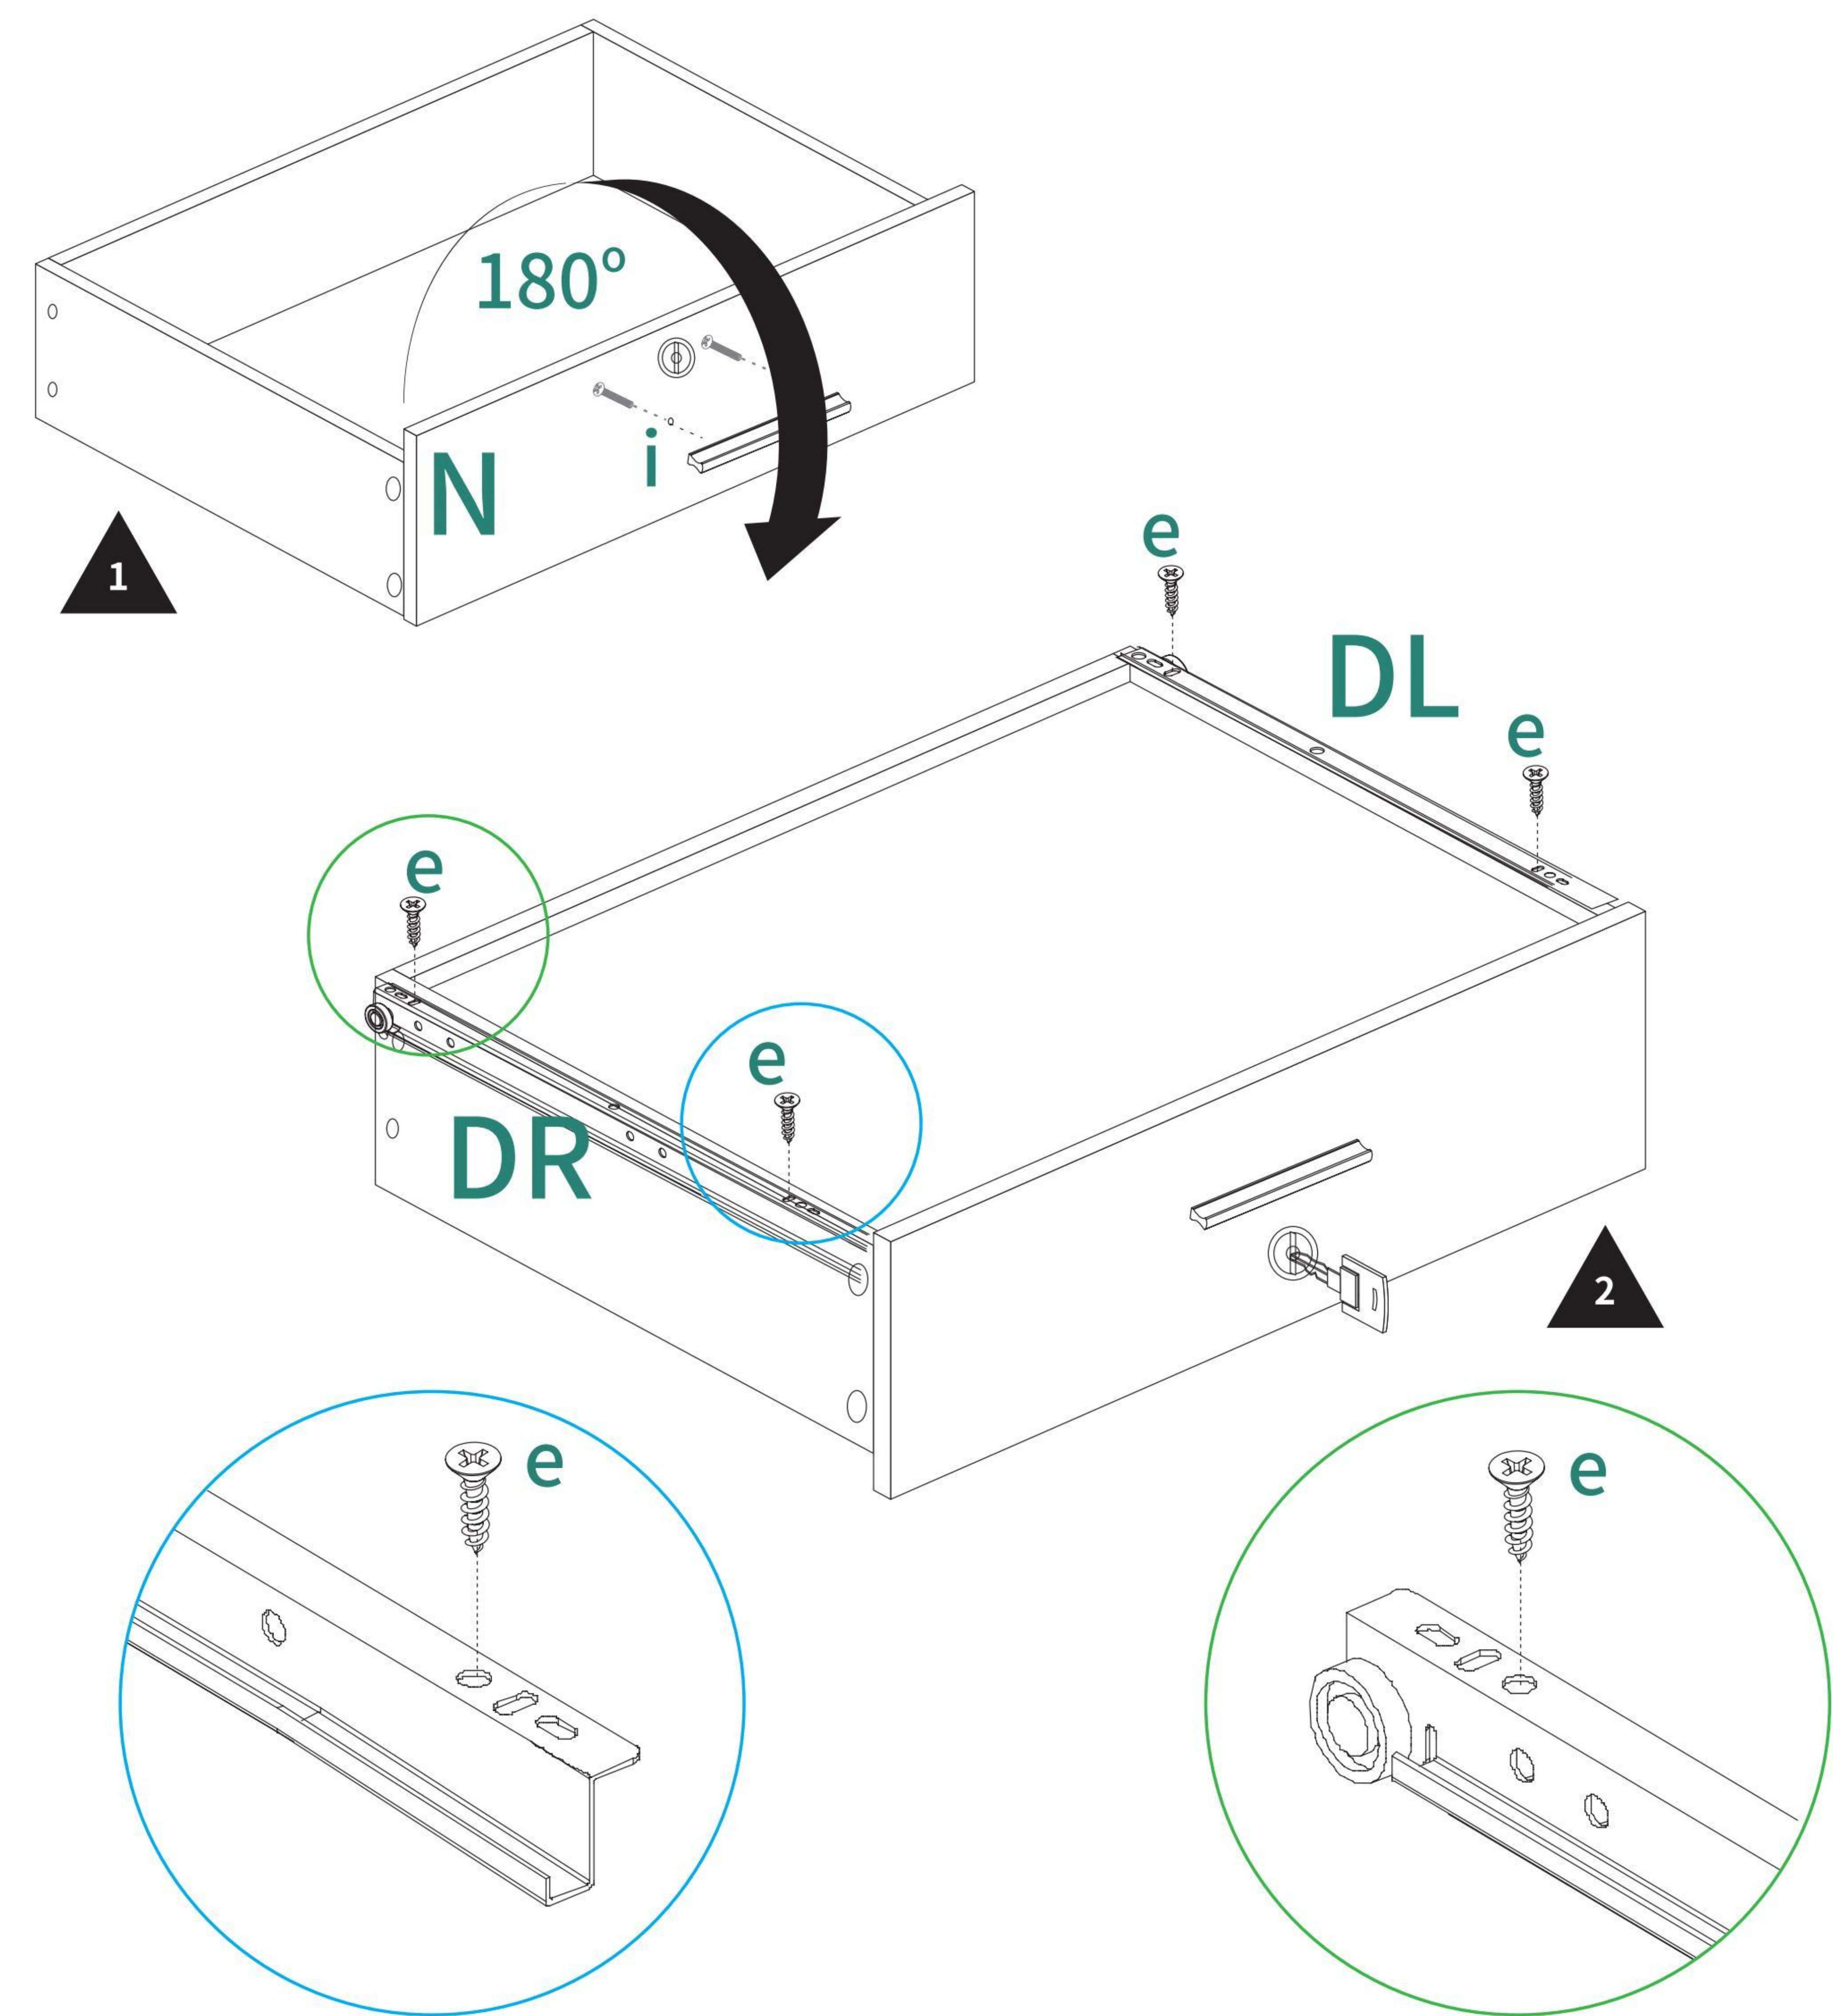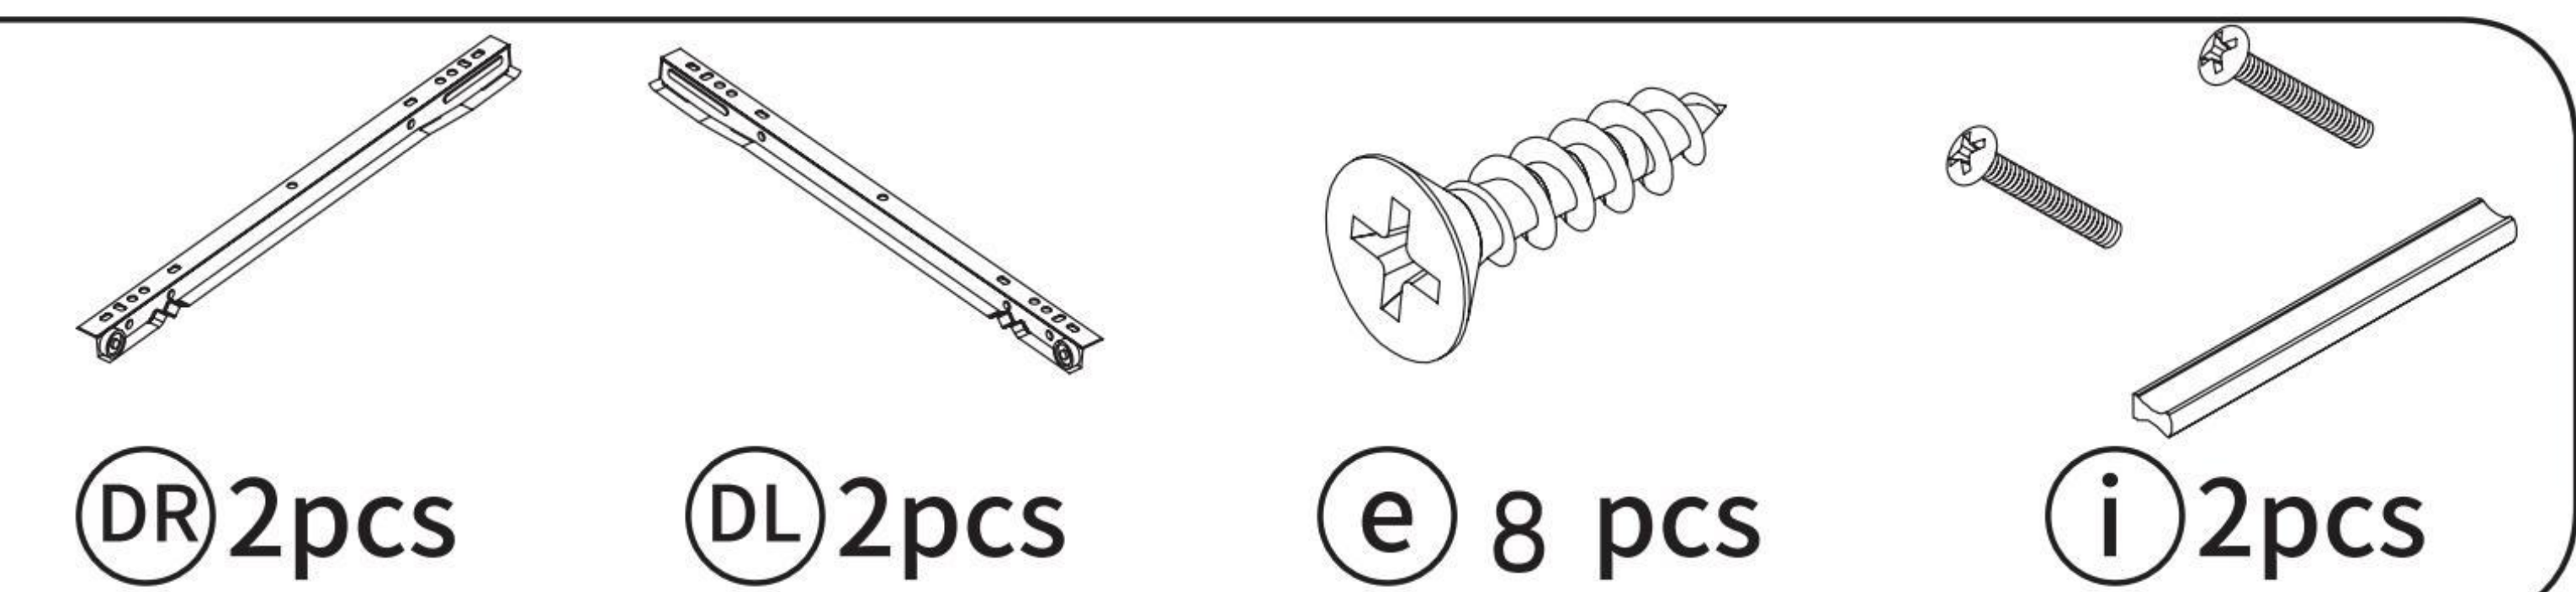


8

ASSEMBLY INSTRUCTIONS


5

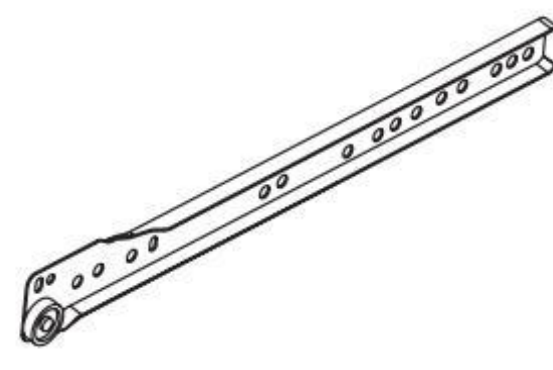


CL 3pcs

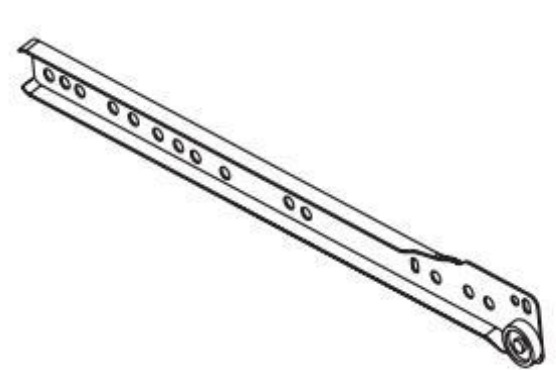


CR 3pcs

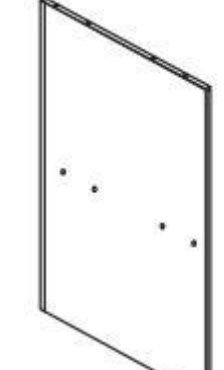




C 1pc

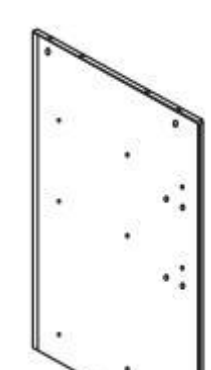

D 1pc

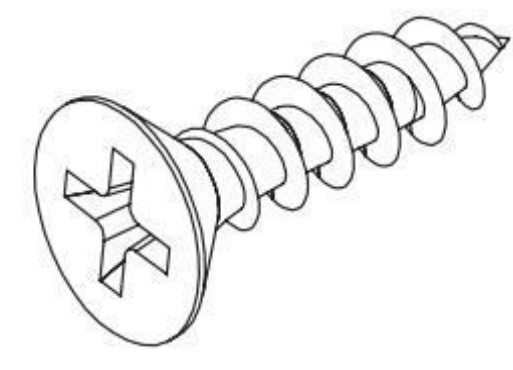


e 12PCS

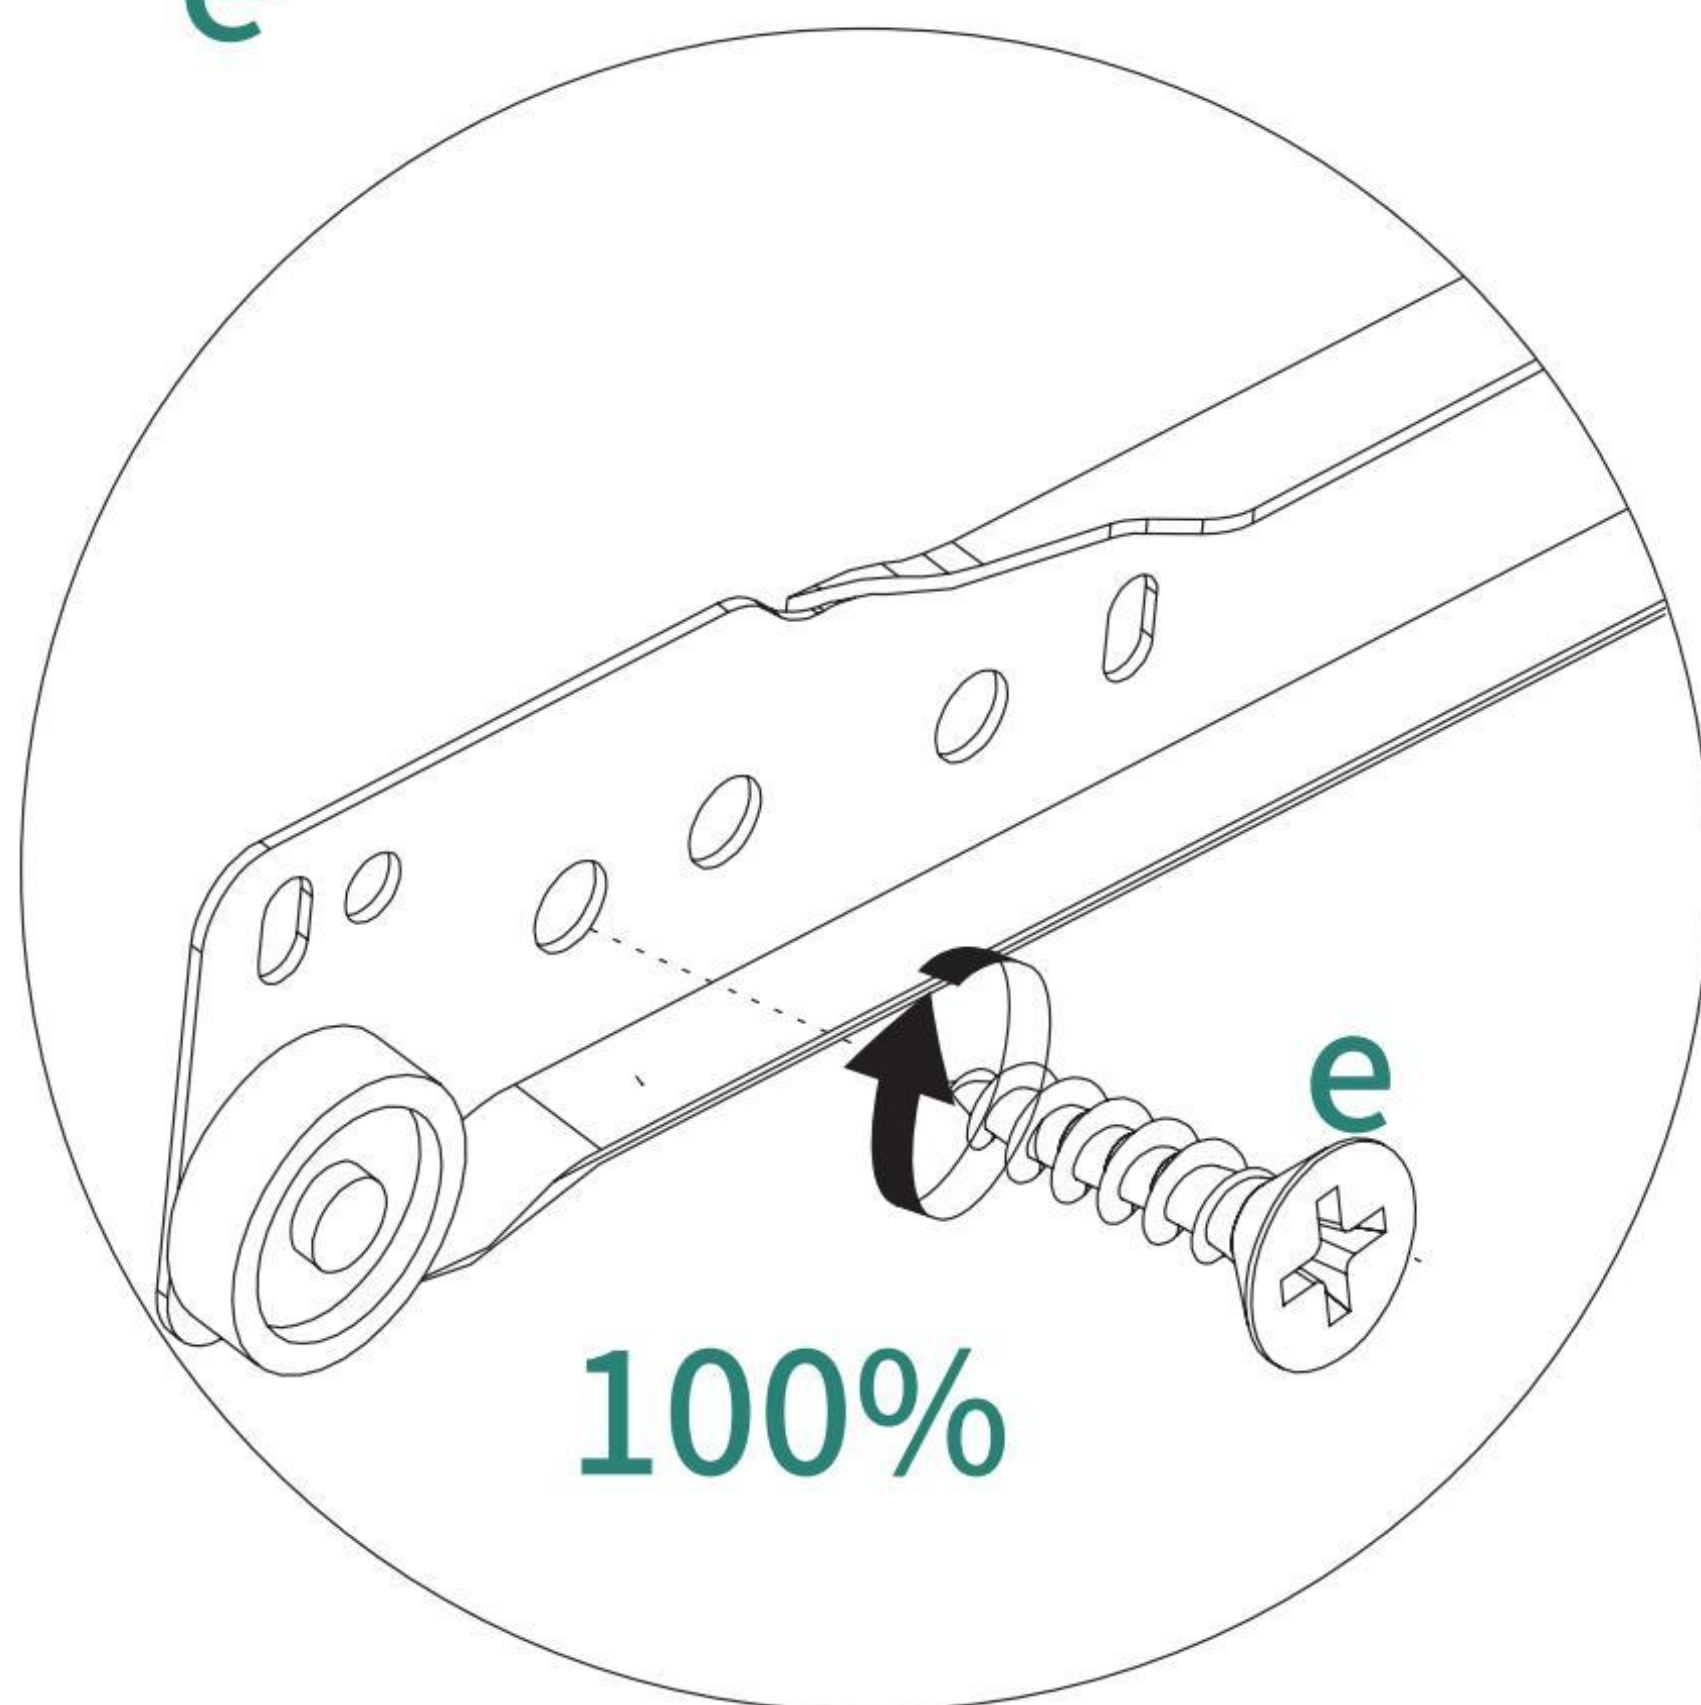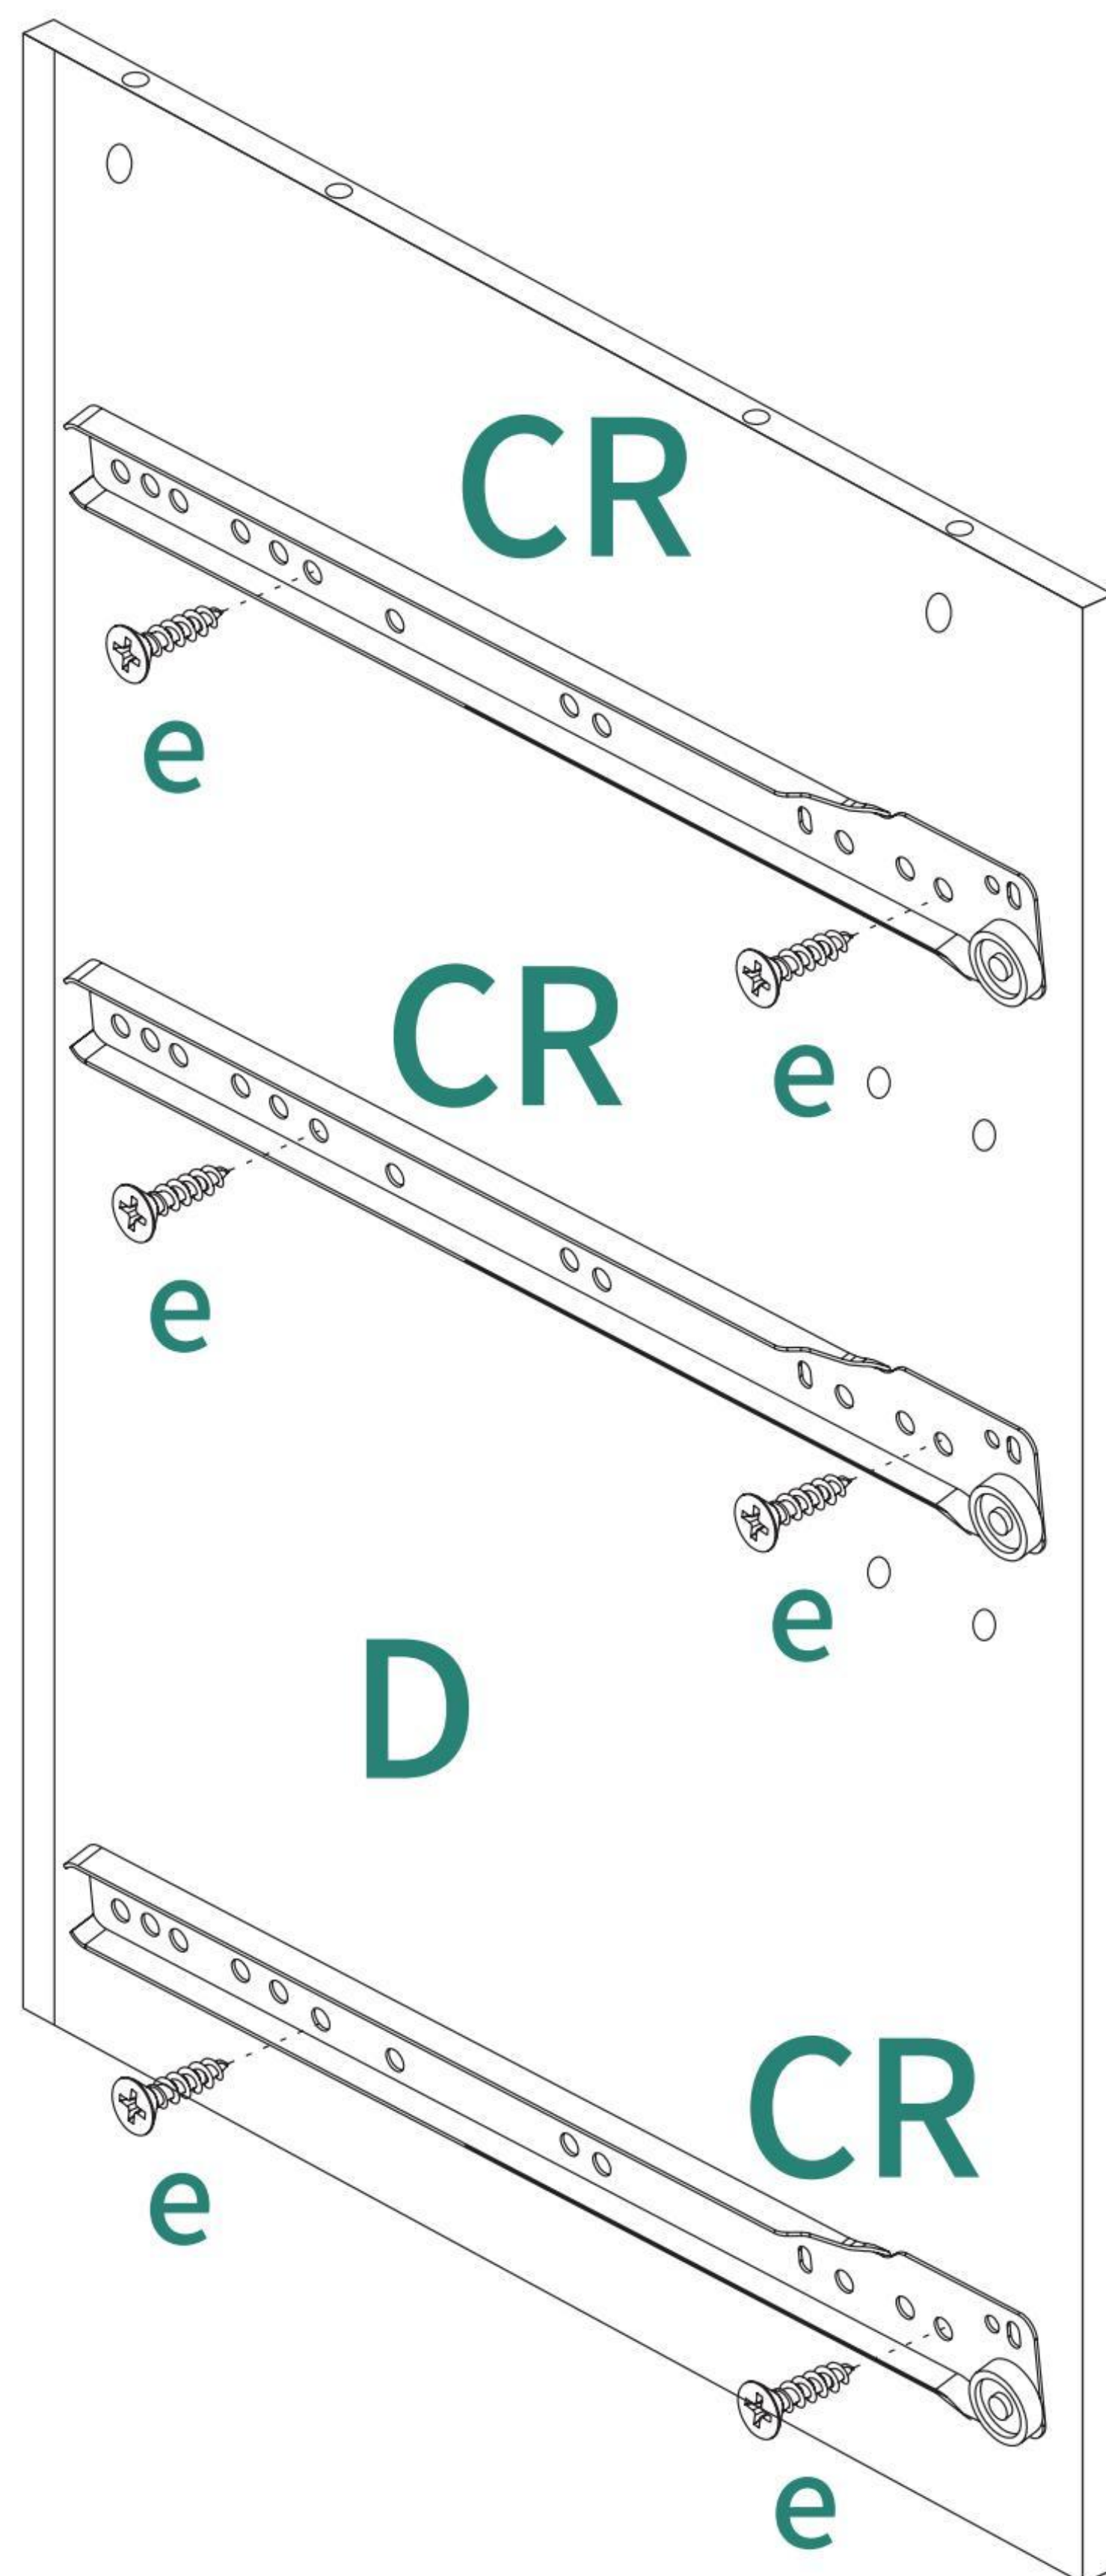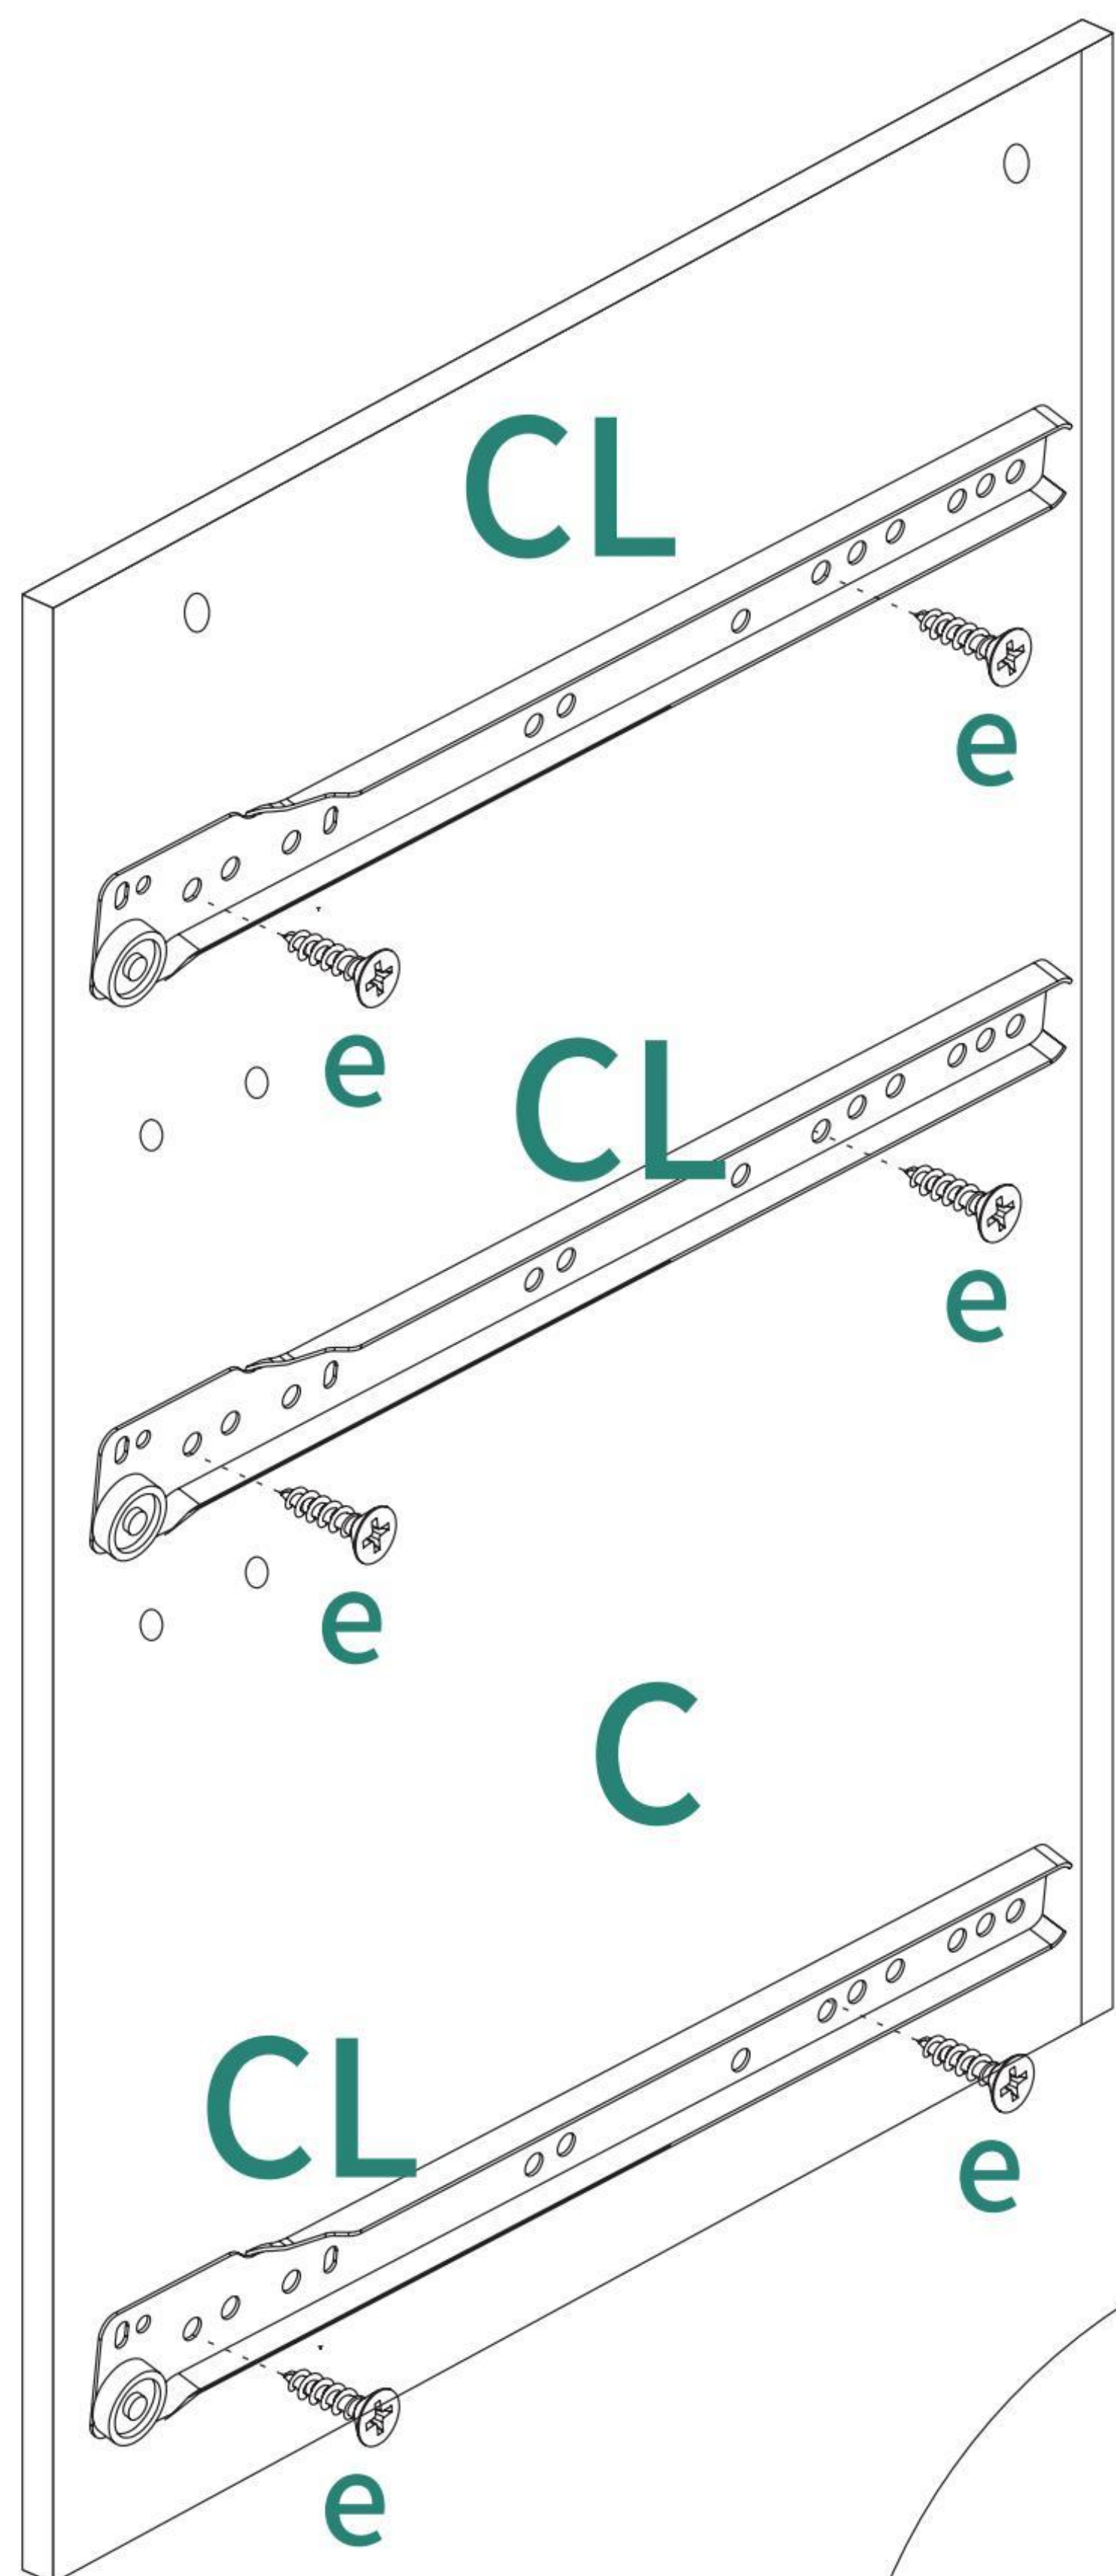


ASSEMBLY INSTRUCTIONS

6

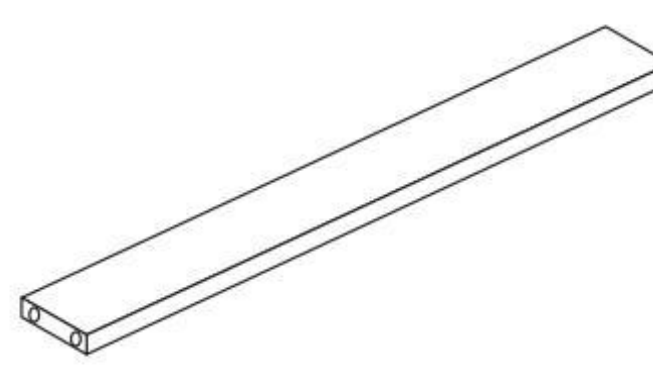


F 2pcs

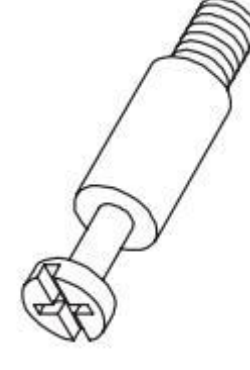


a 2pcs





b 2pcs

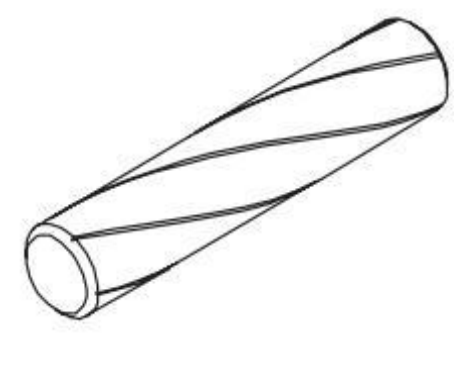

c 2pcs

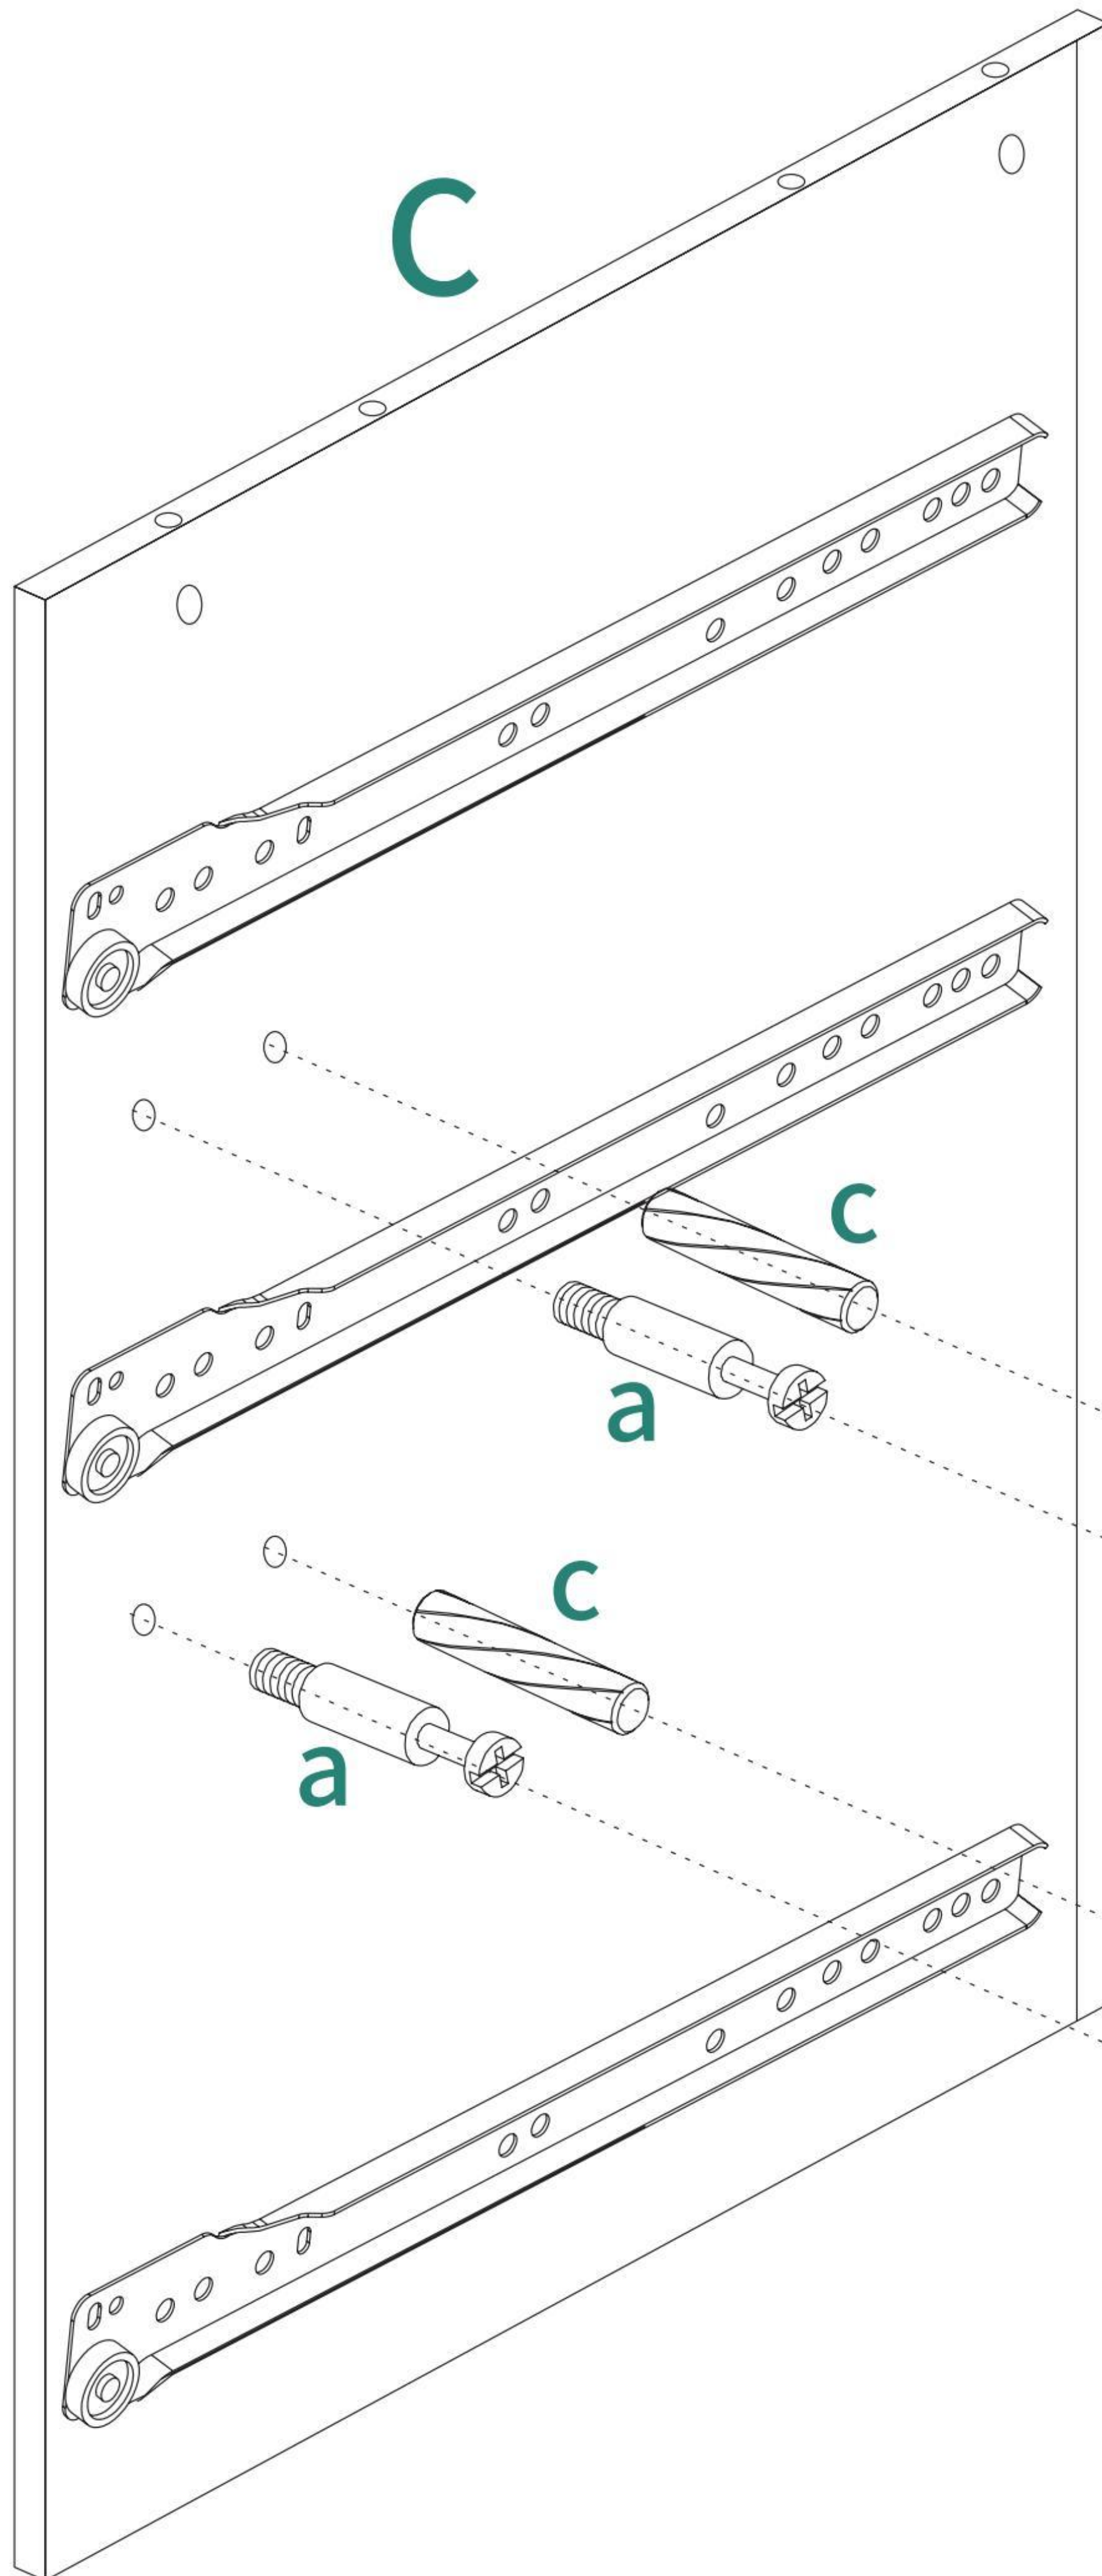


The panels with holes should face downward.

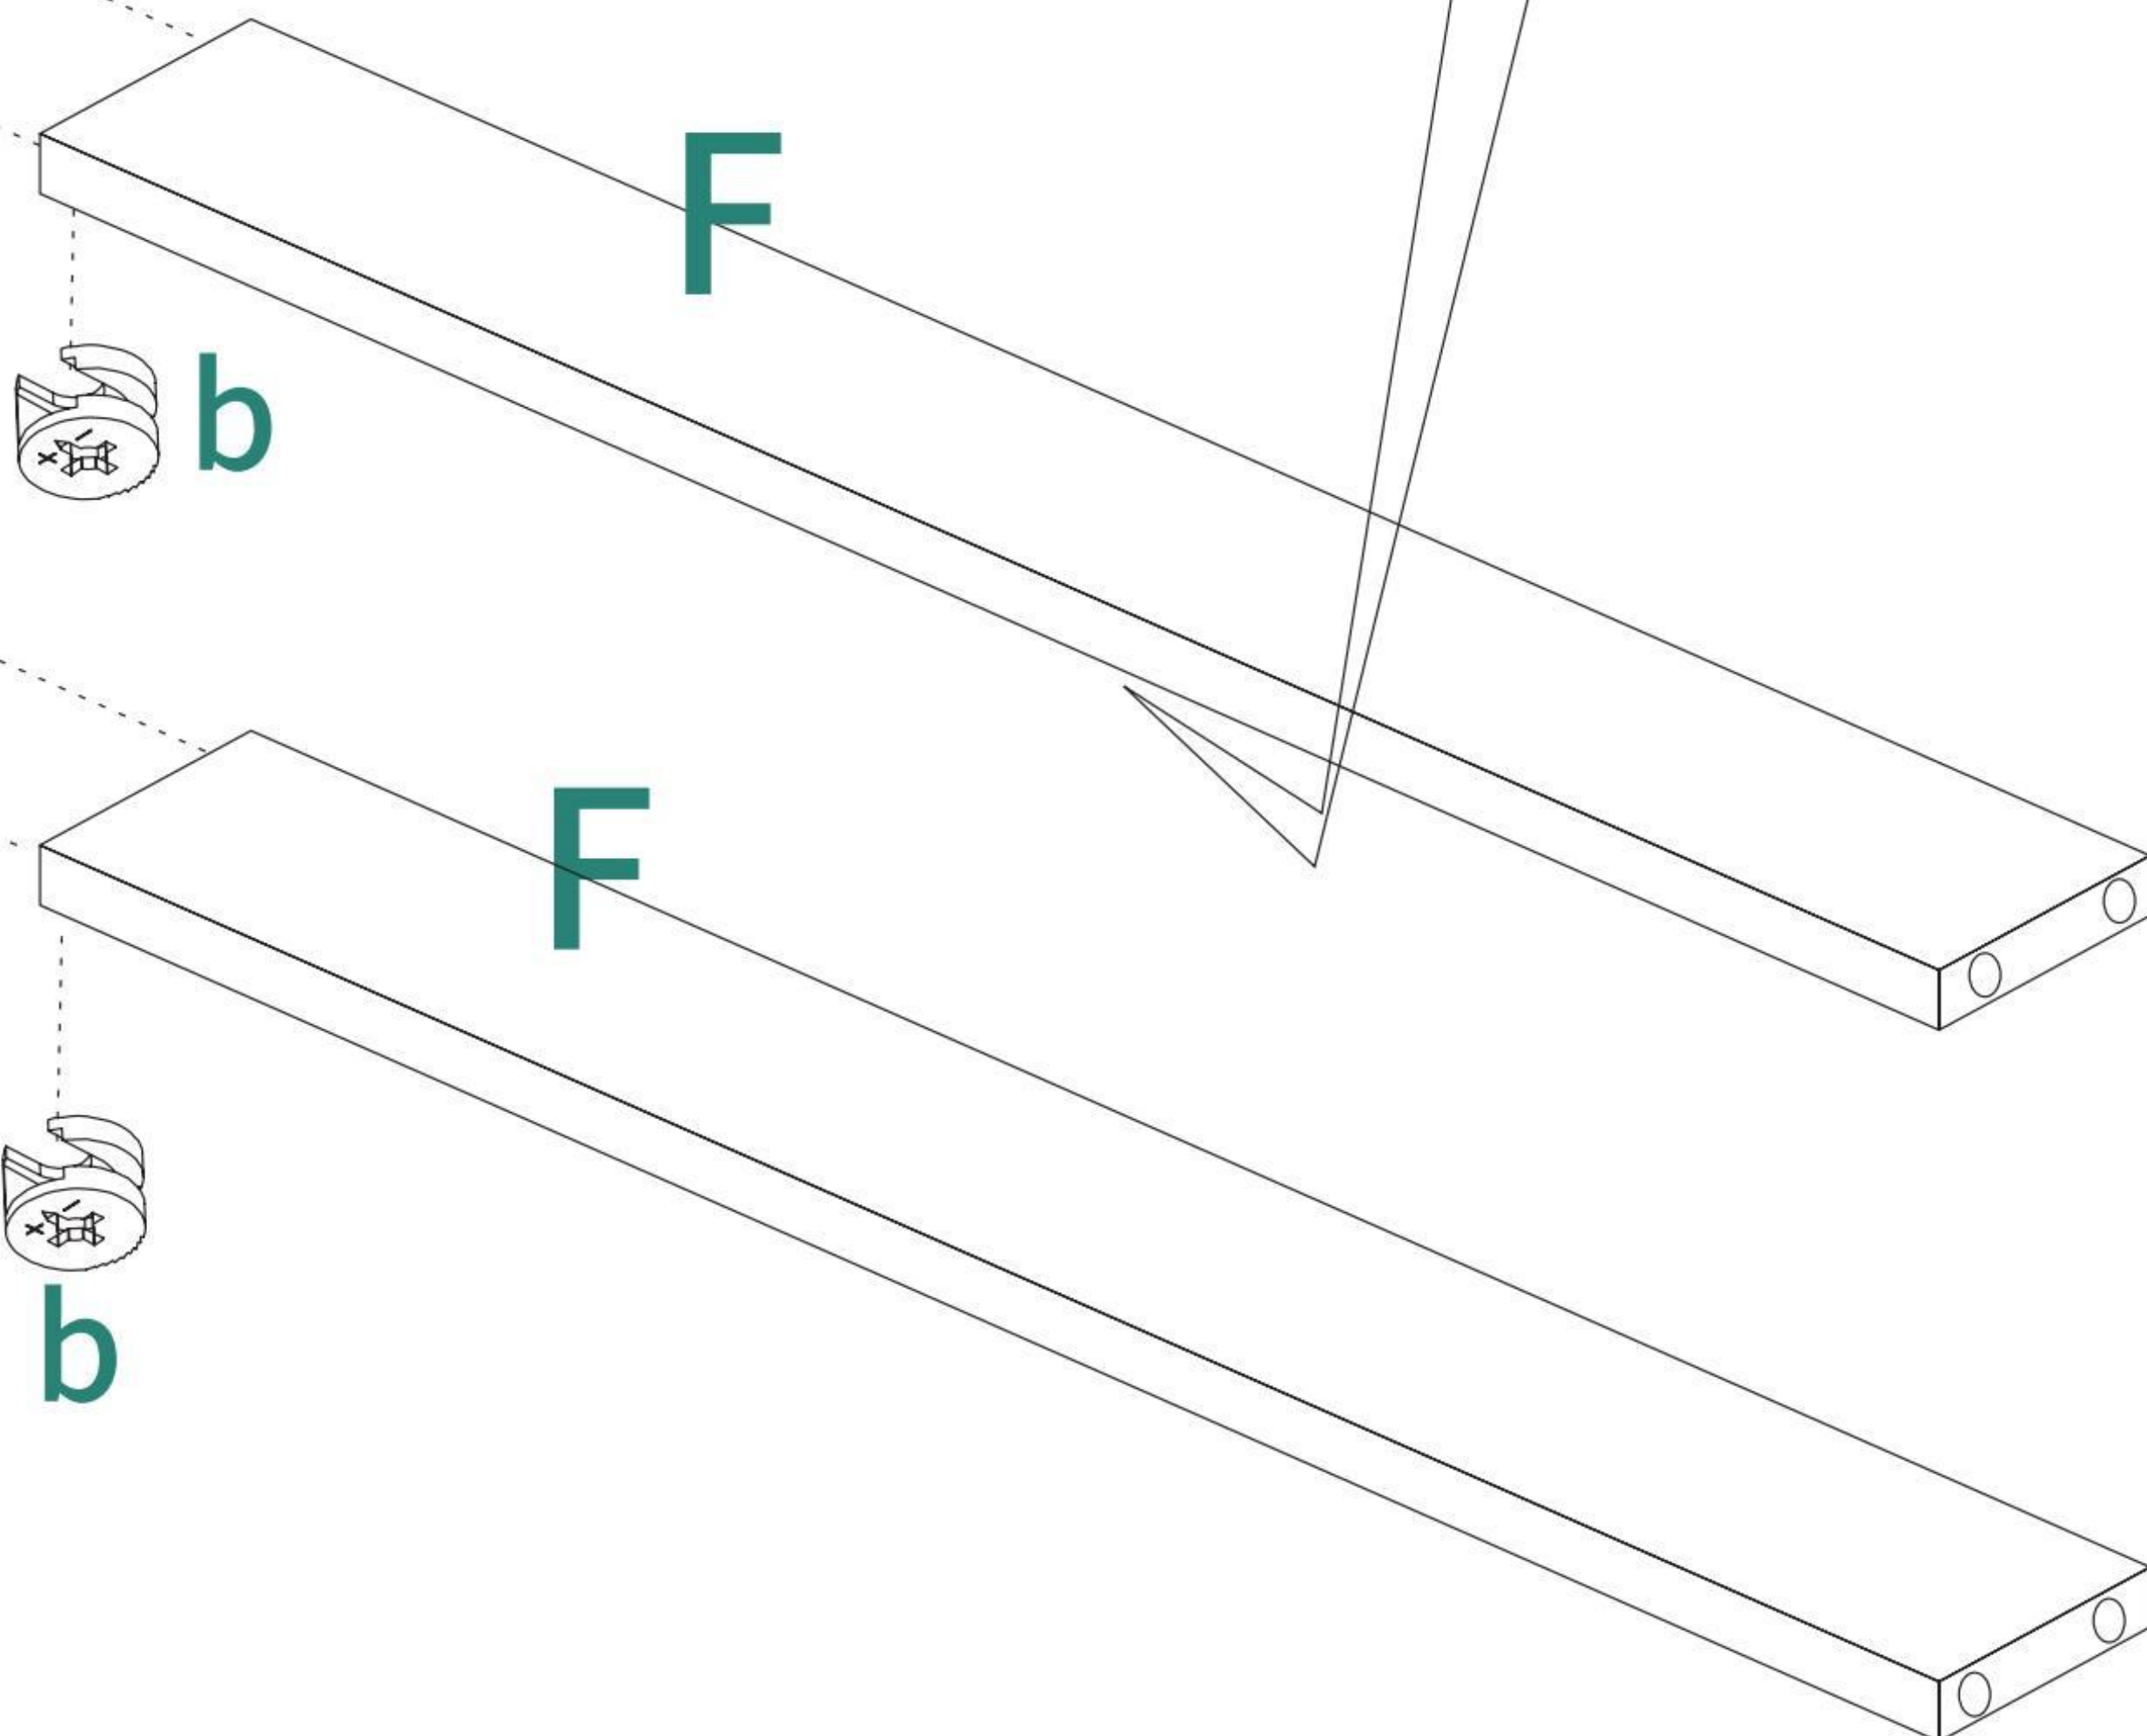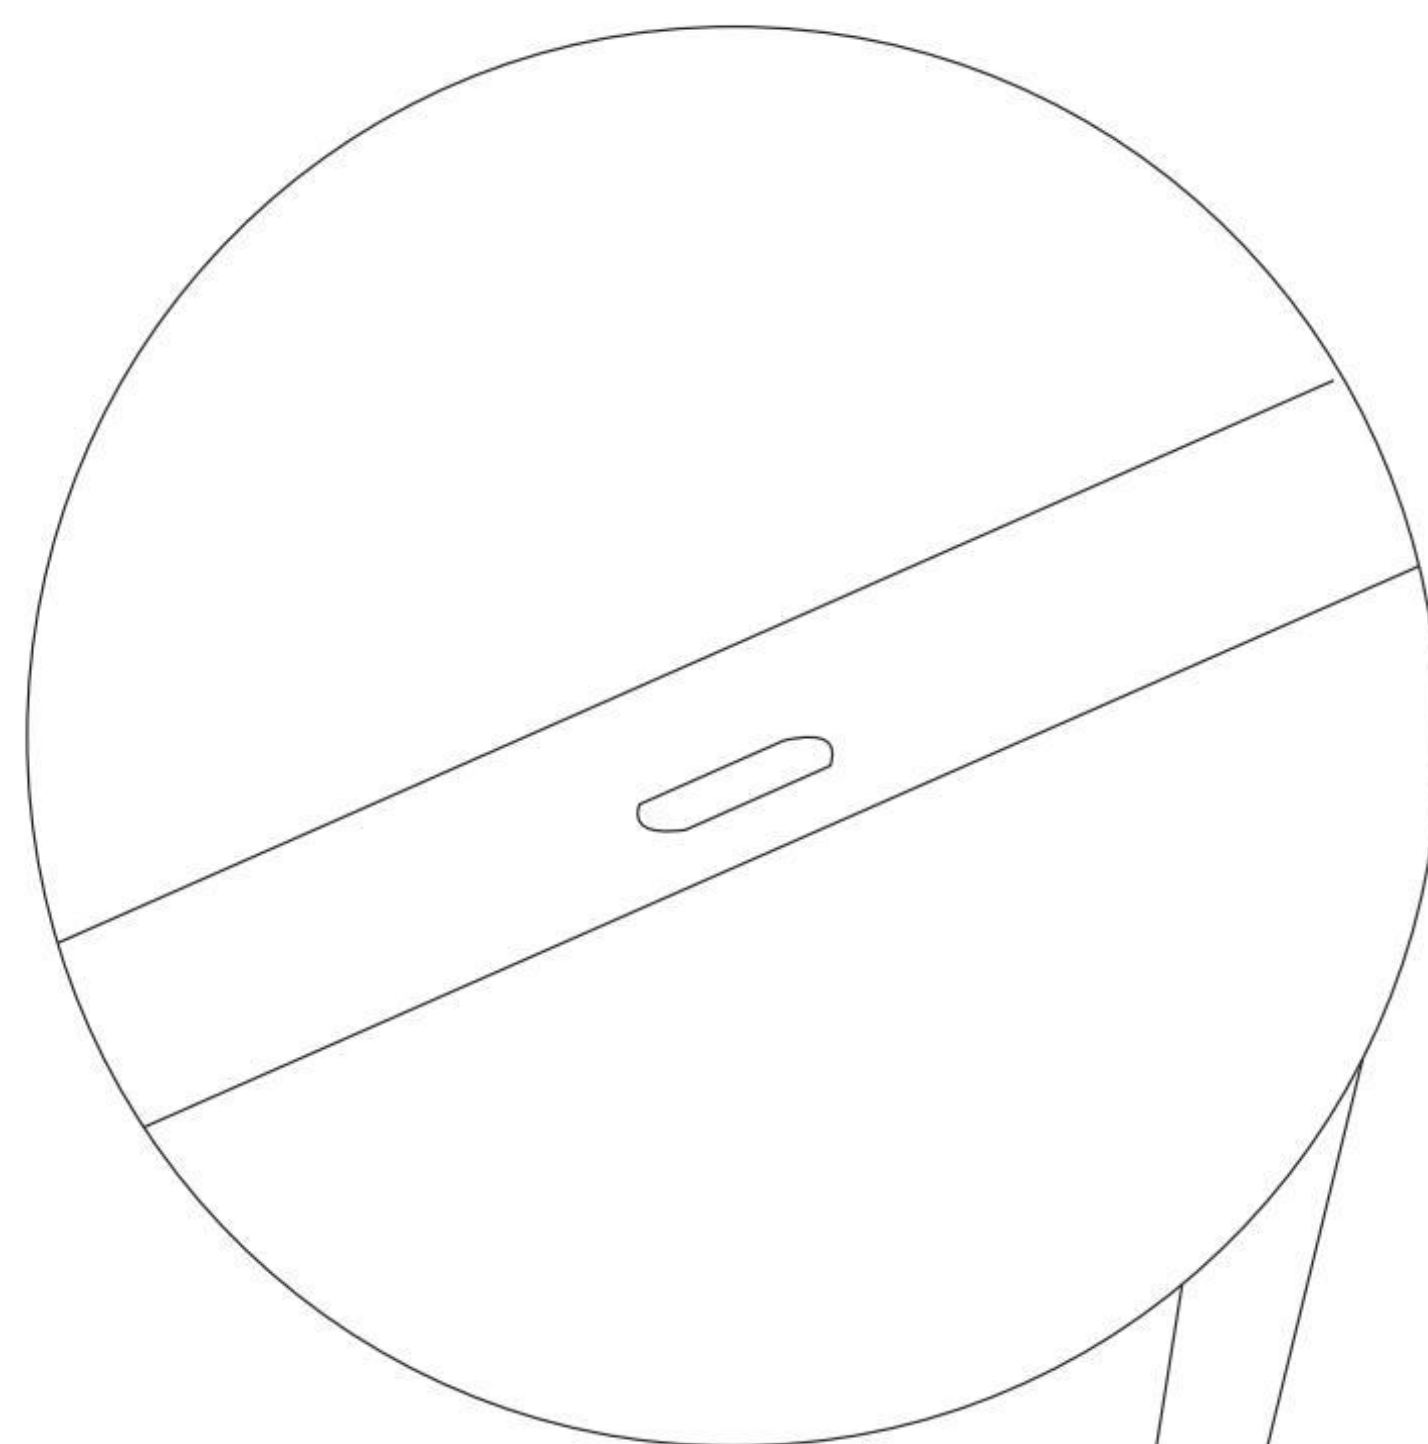



ASSEMBLY INSTRUCTIONS

7


a 2pcs

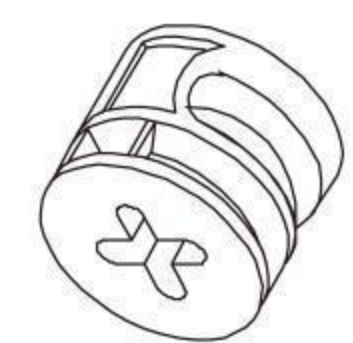

b 2pcs

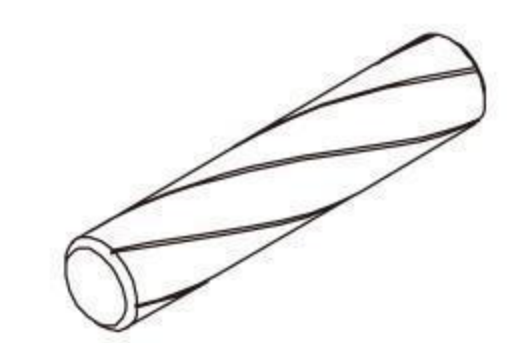
c 2pcs

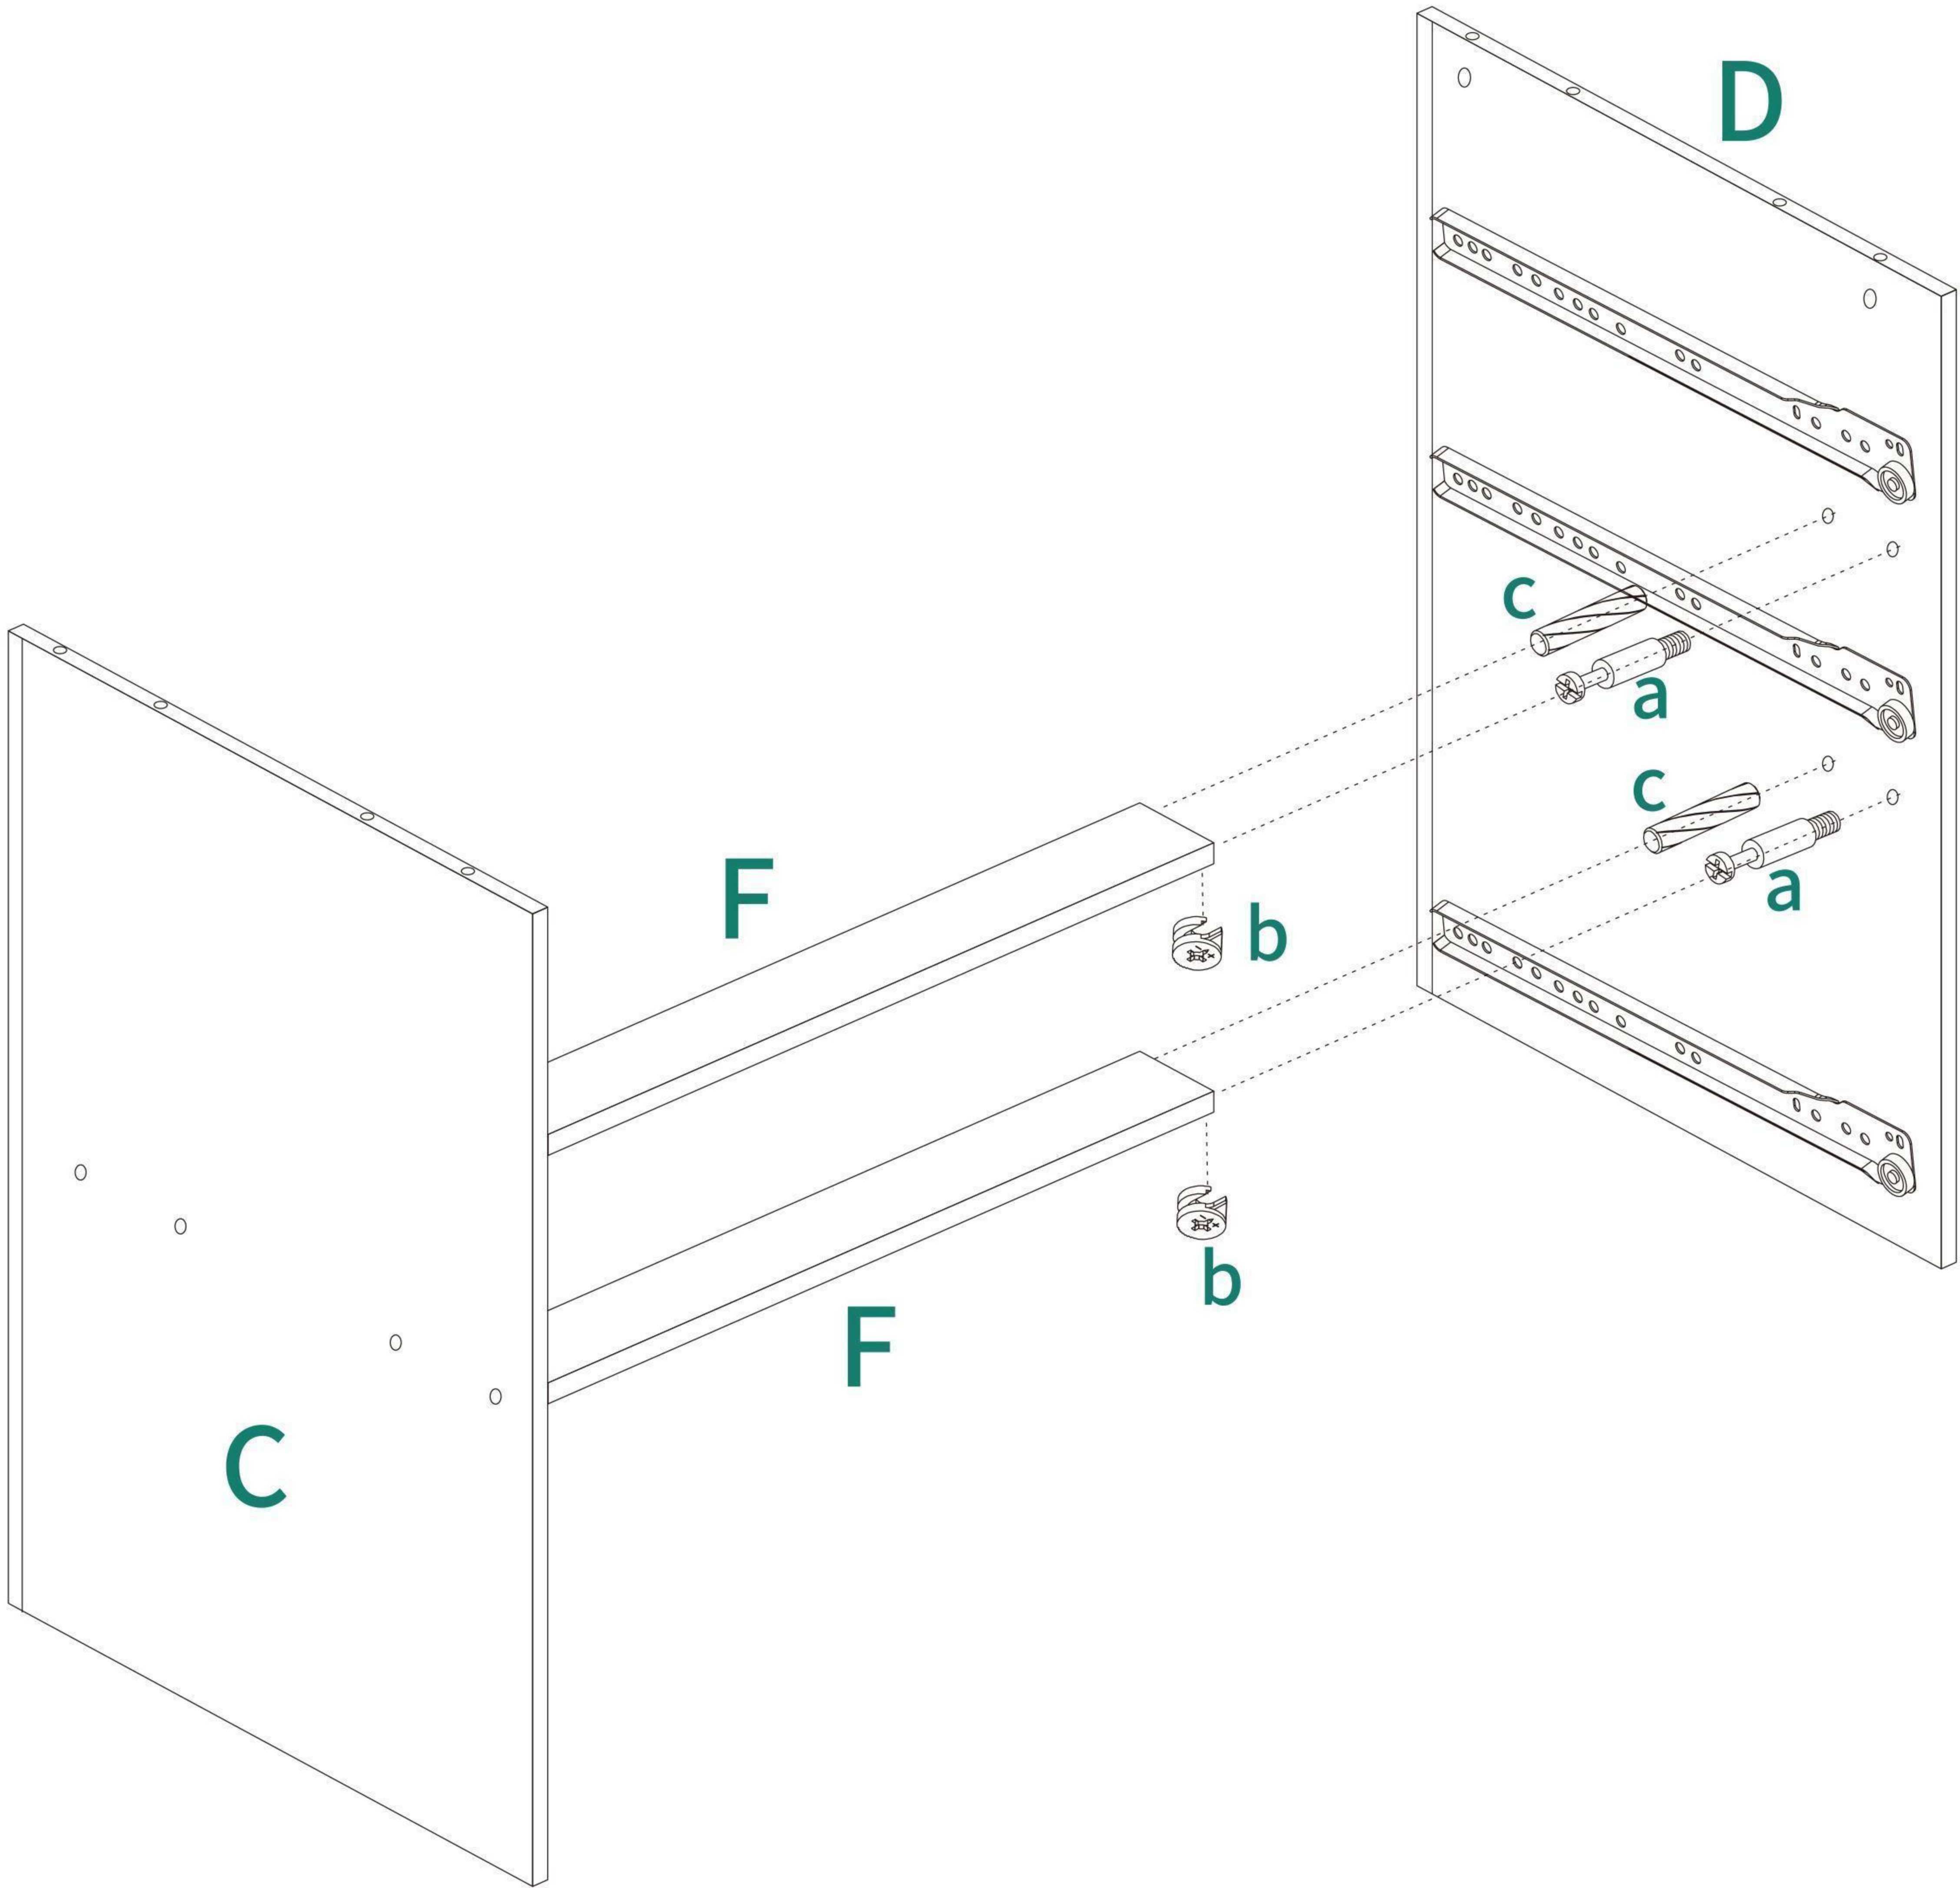


ASSEMBLY INSTRUCTIONS


8

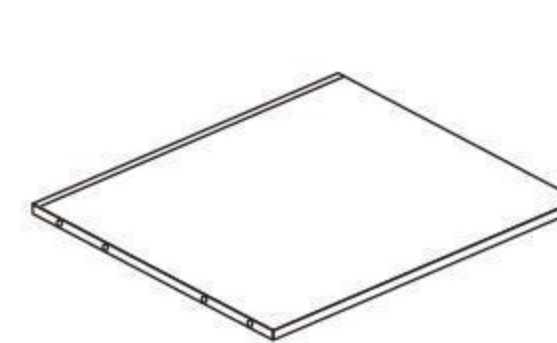

E 1pc


B 1pc


a 4pcs

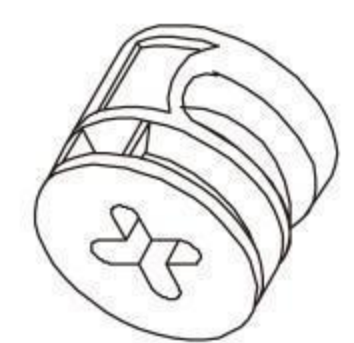

b 4pcs

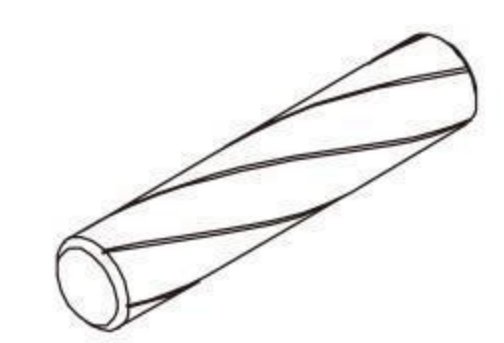

c 4pcs

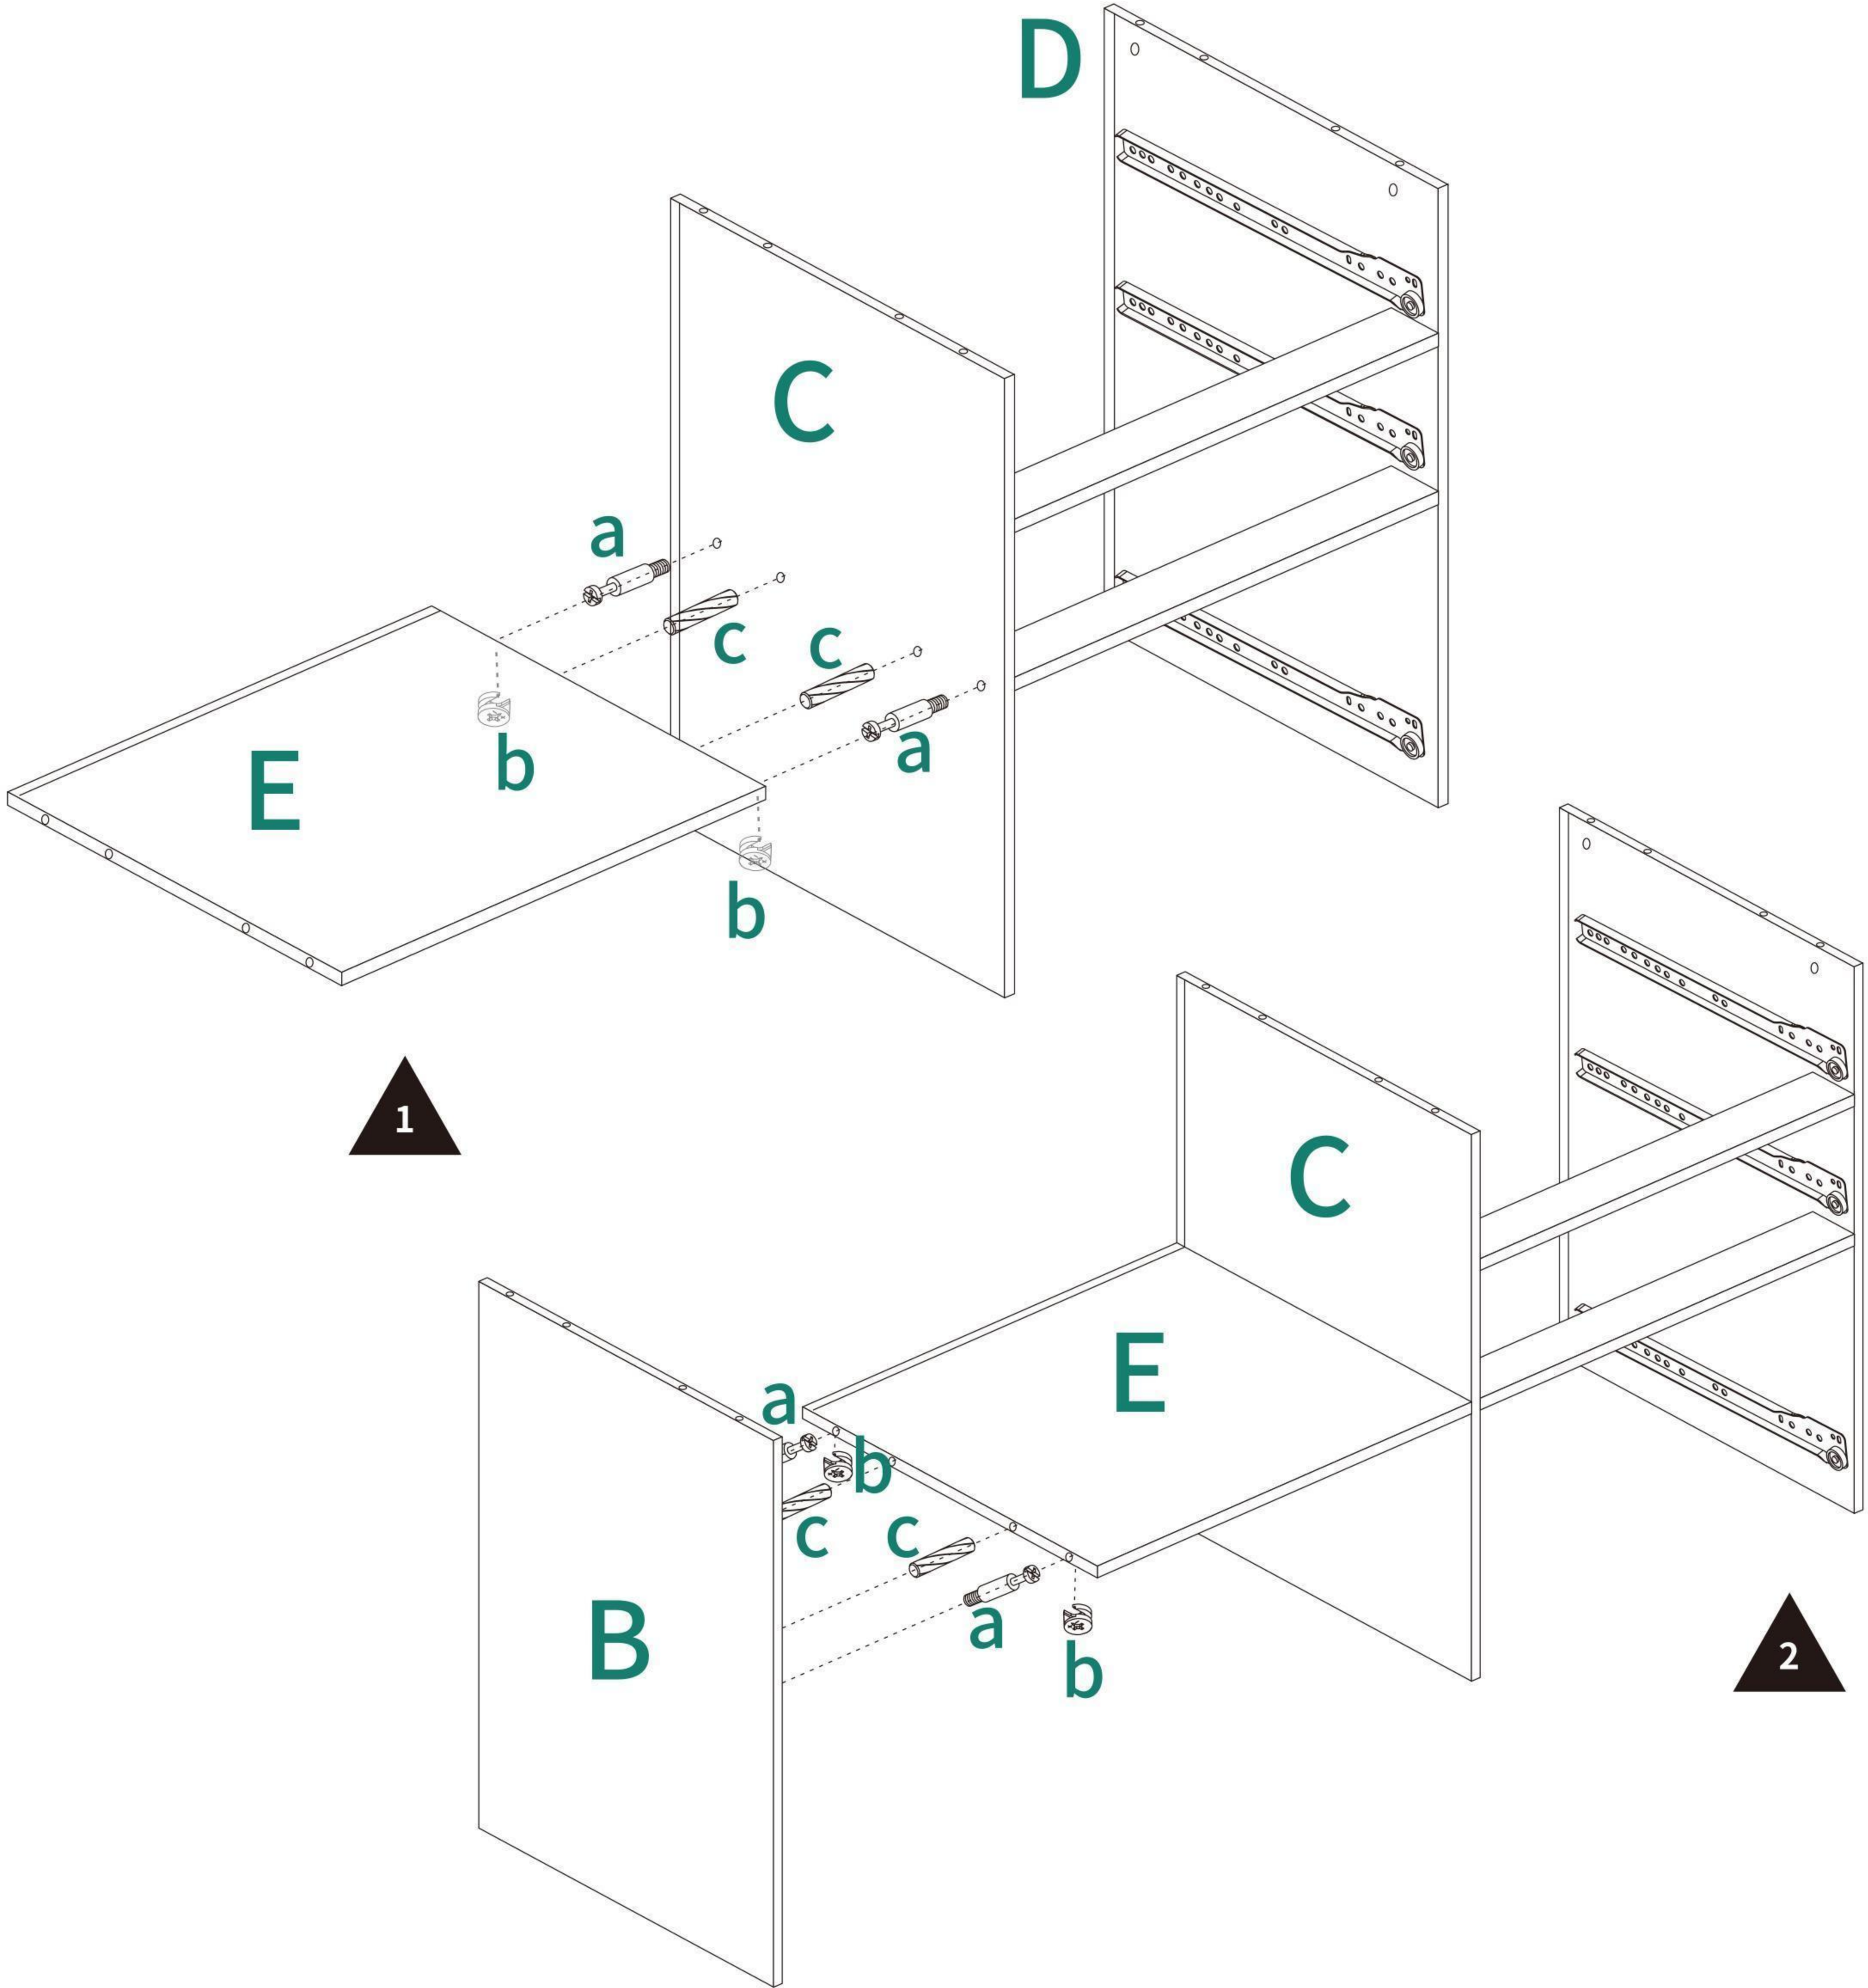

ASSEMBLY INSTRUCTIONS


9

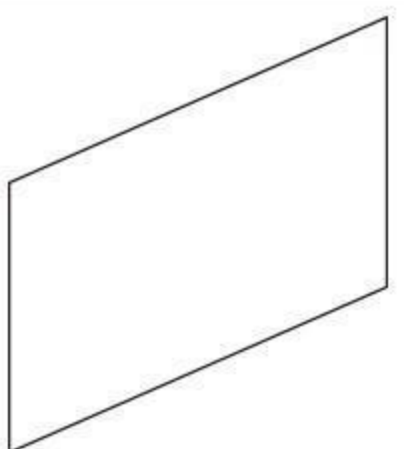

Ⓣ 1pc

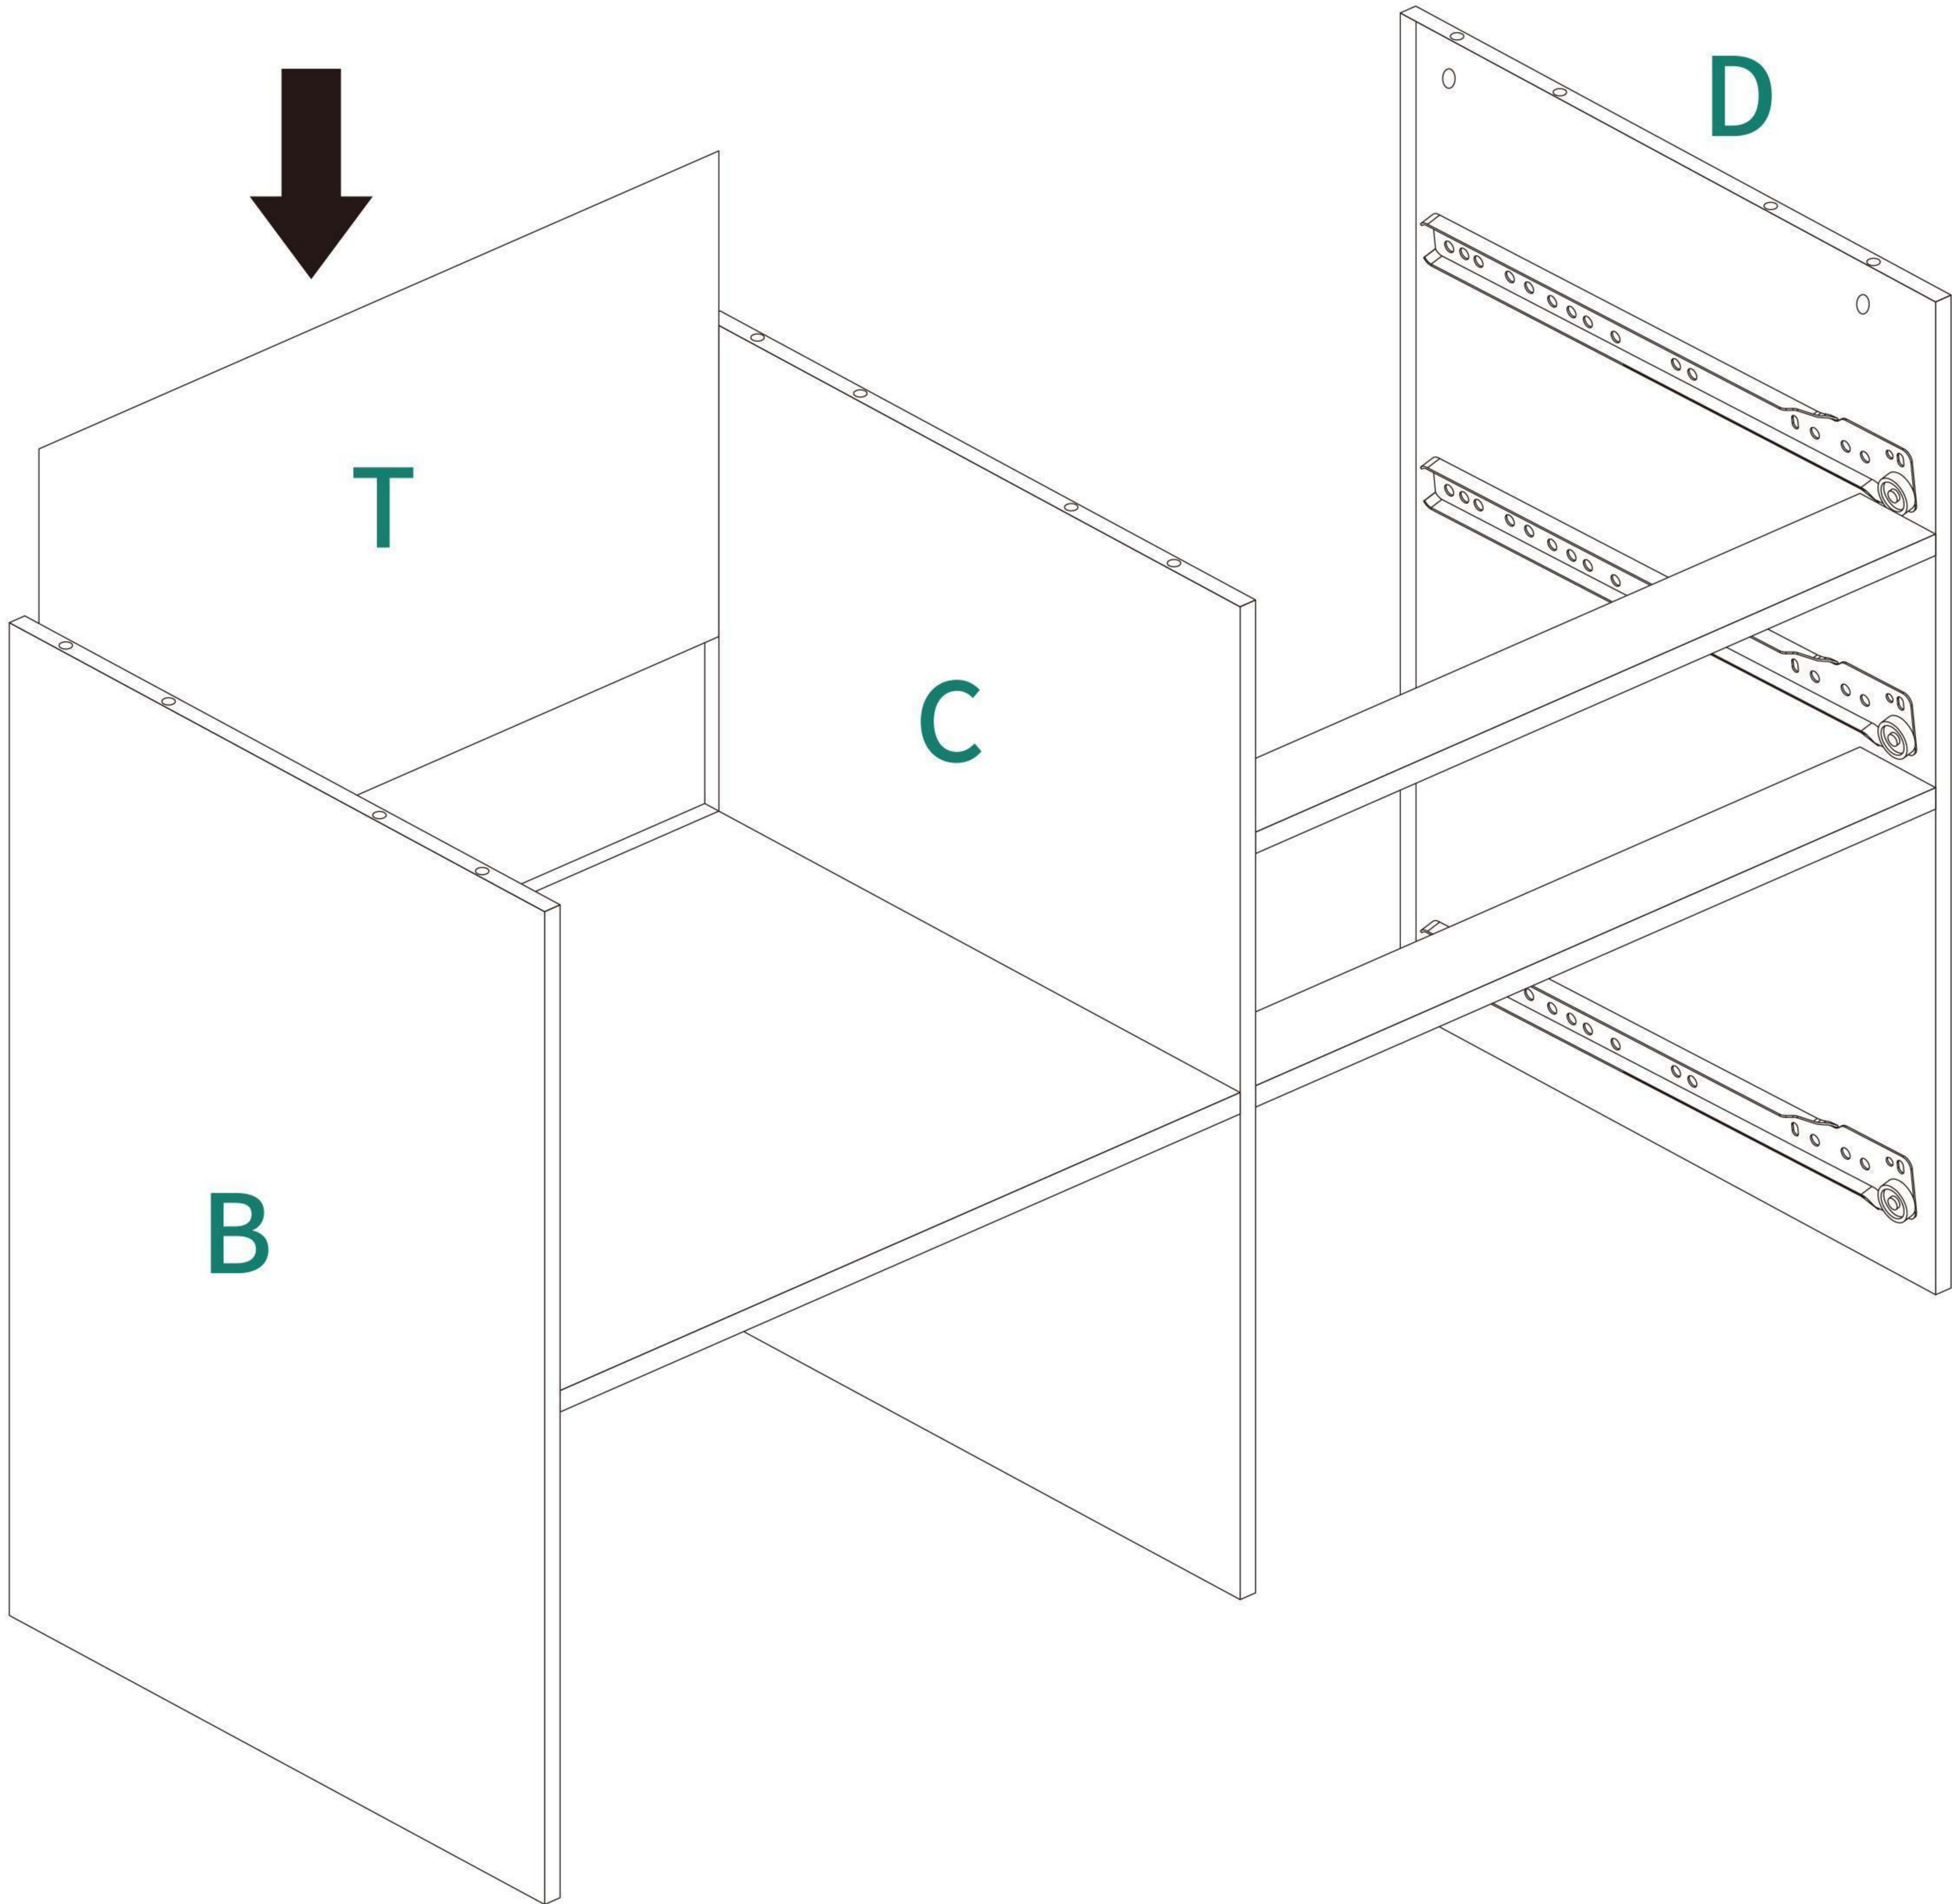



ASSEMBLY INSTRUCTIONS


10

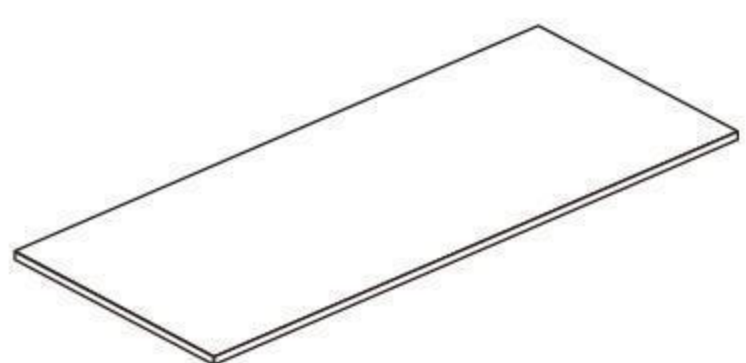
Ⓐ 1pc

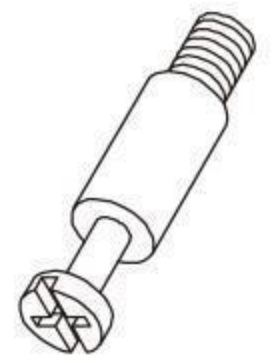
ⓐ 6pcs

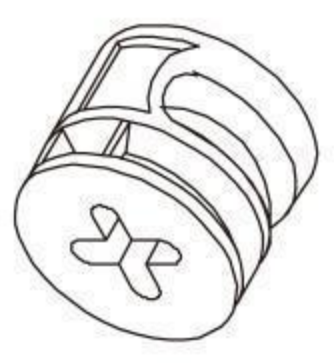

ⓑ 6pcs

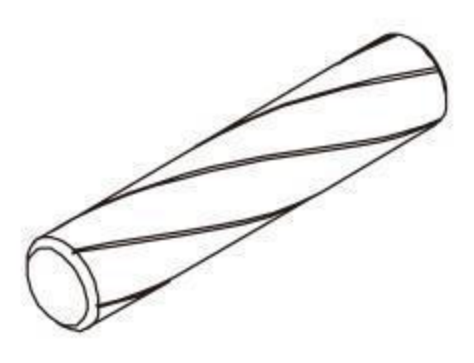
ⓒ 6pcs

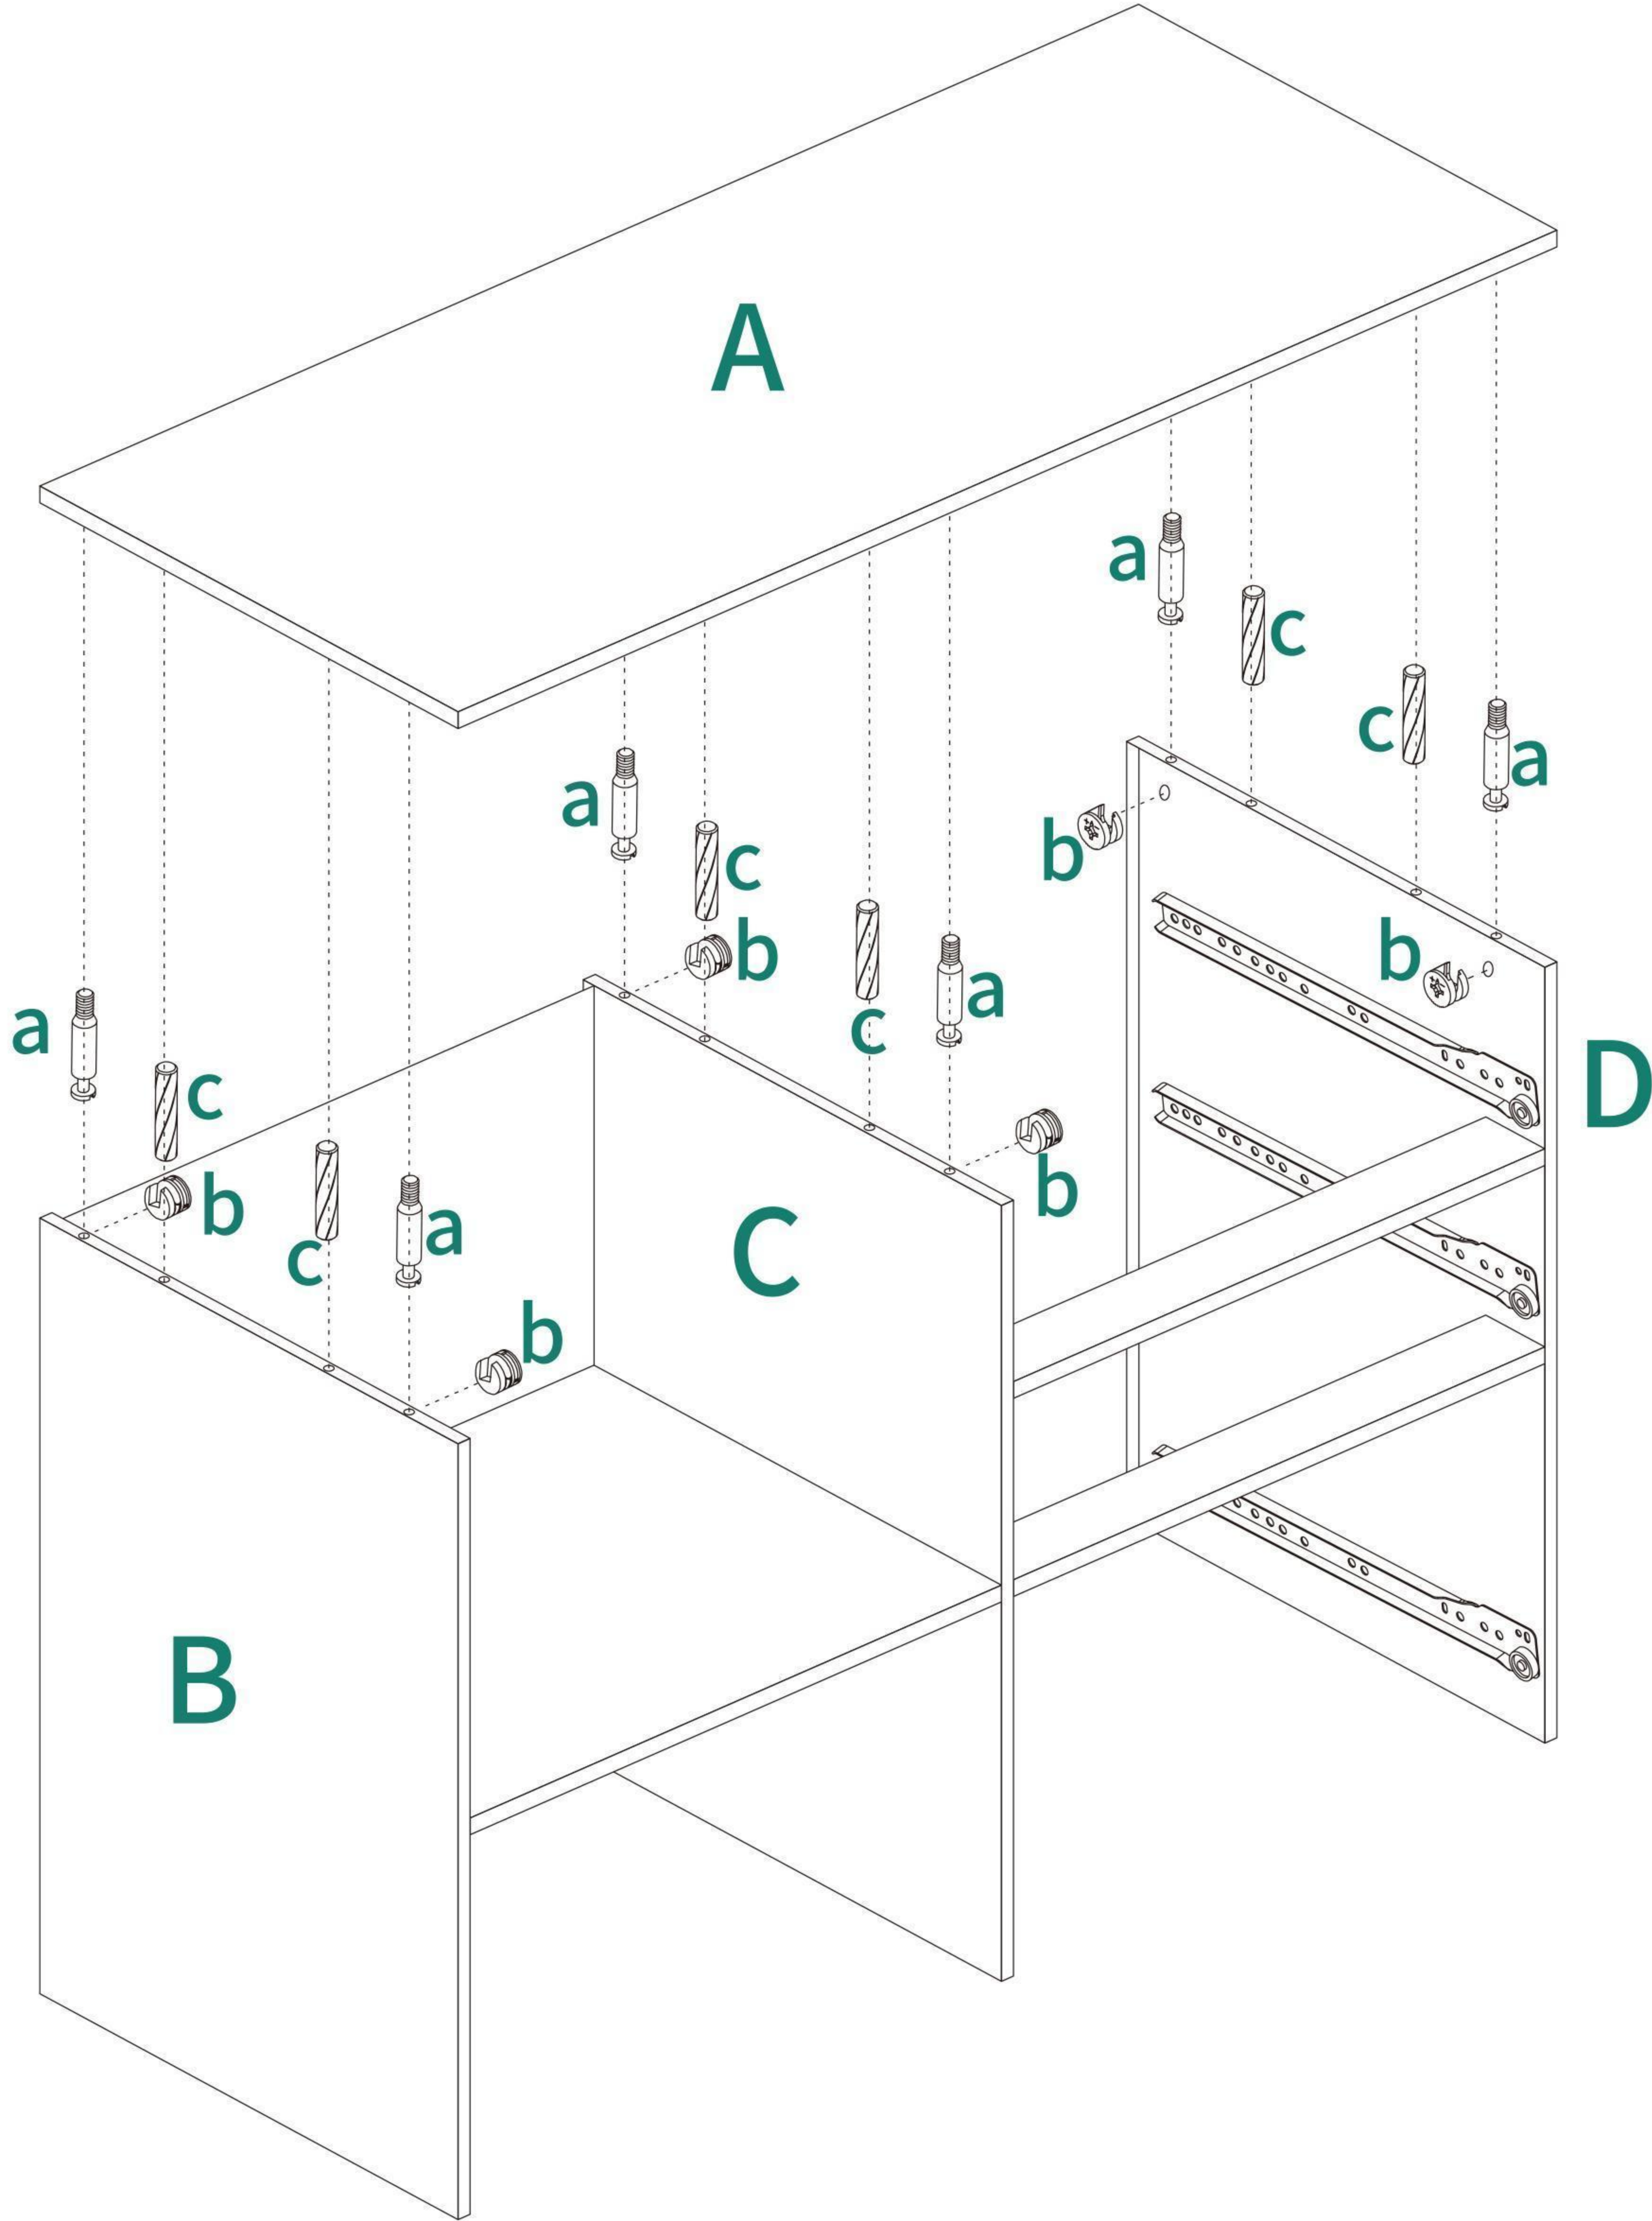


ASSEMBLY INSTRUCTIONS



11

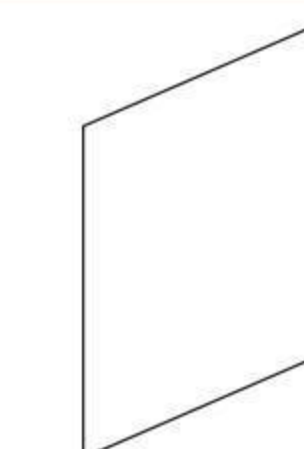

I 1pc

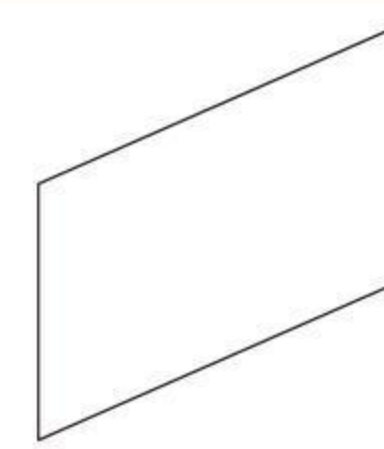


H 1pc

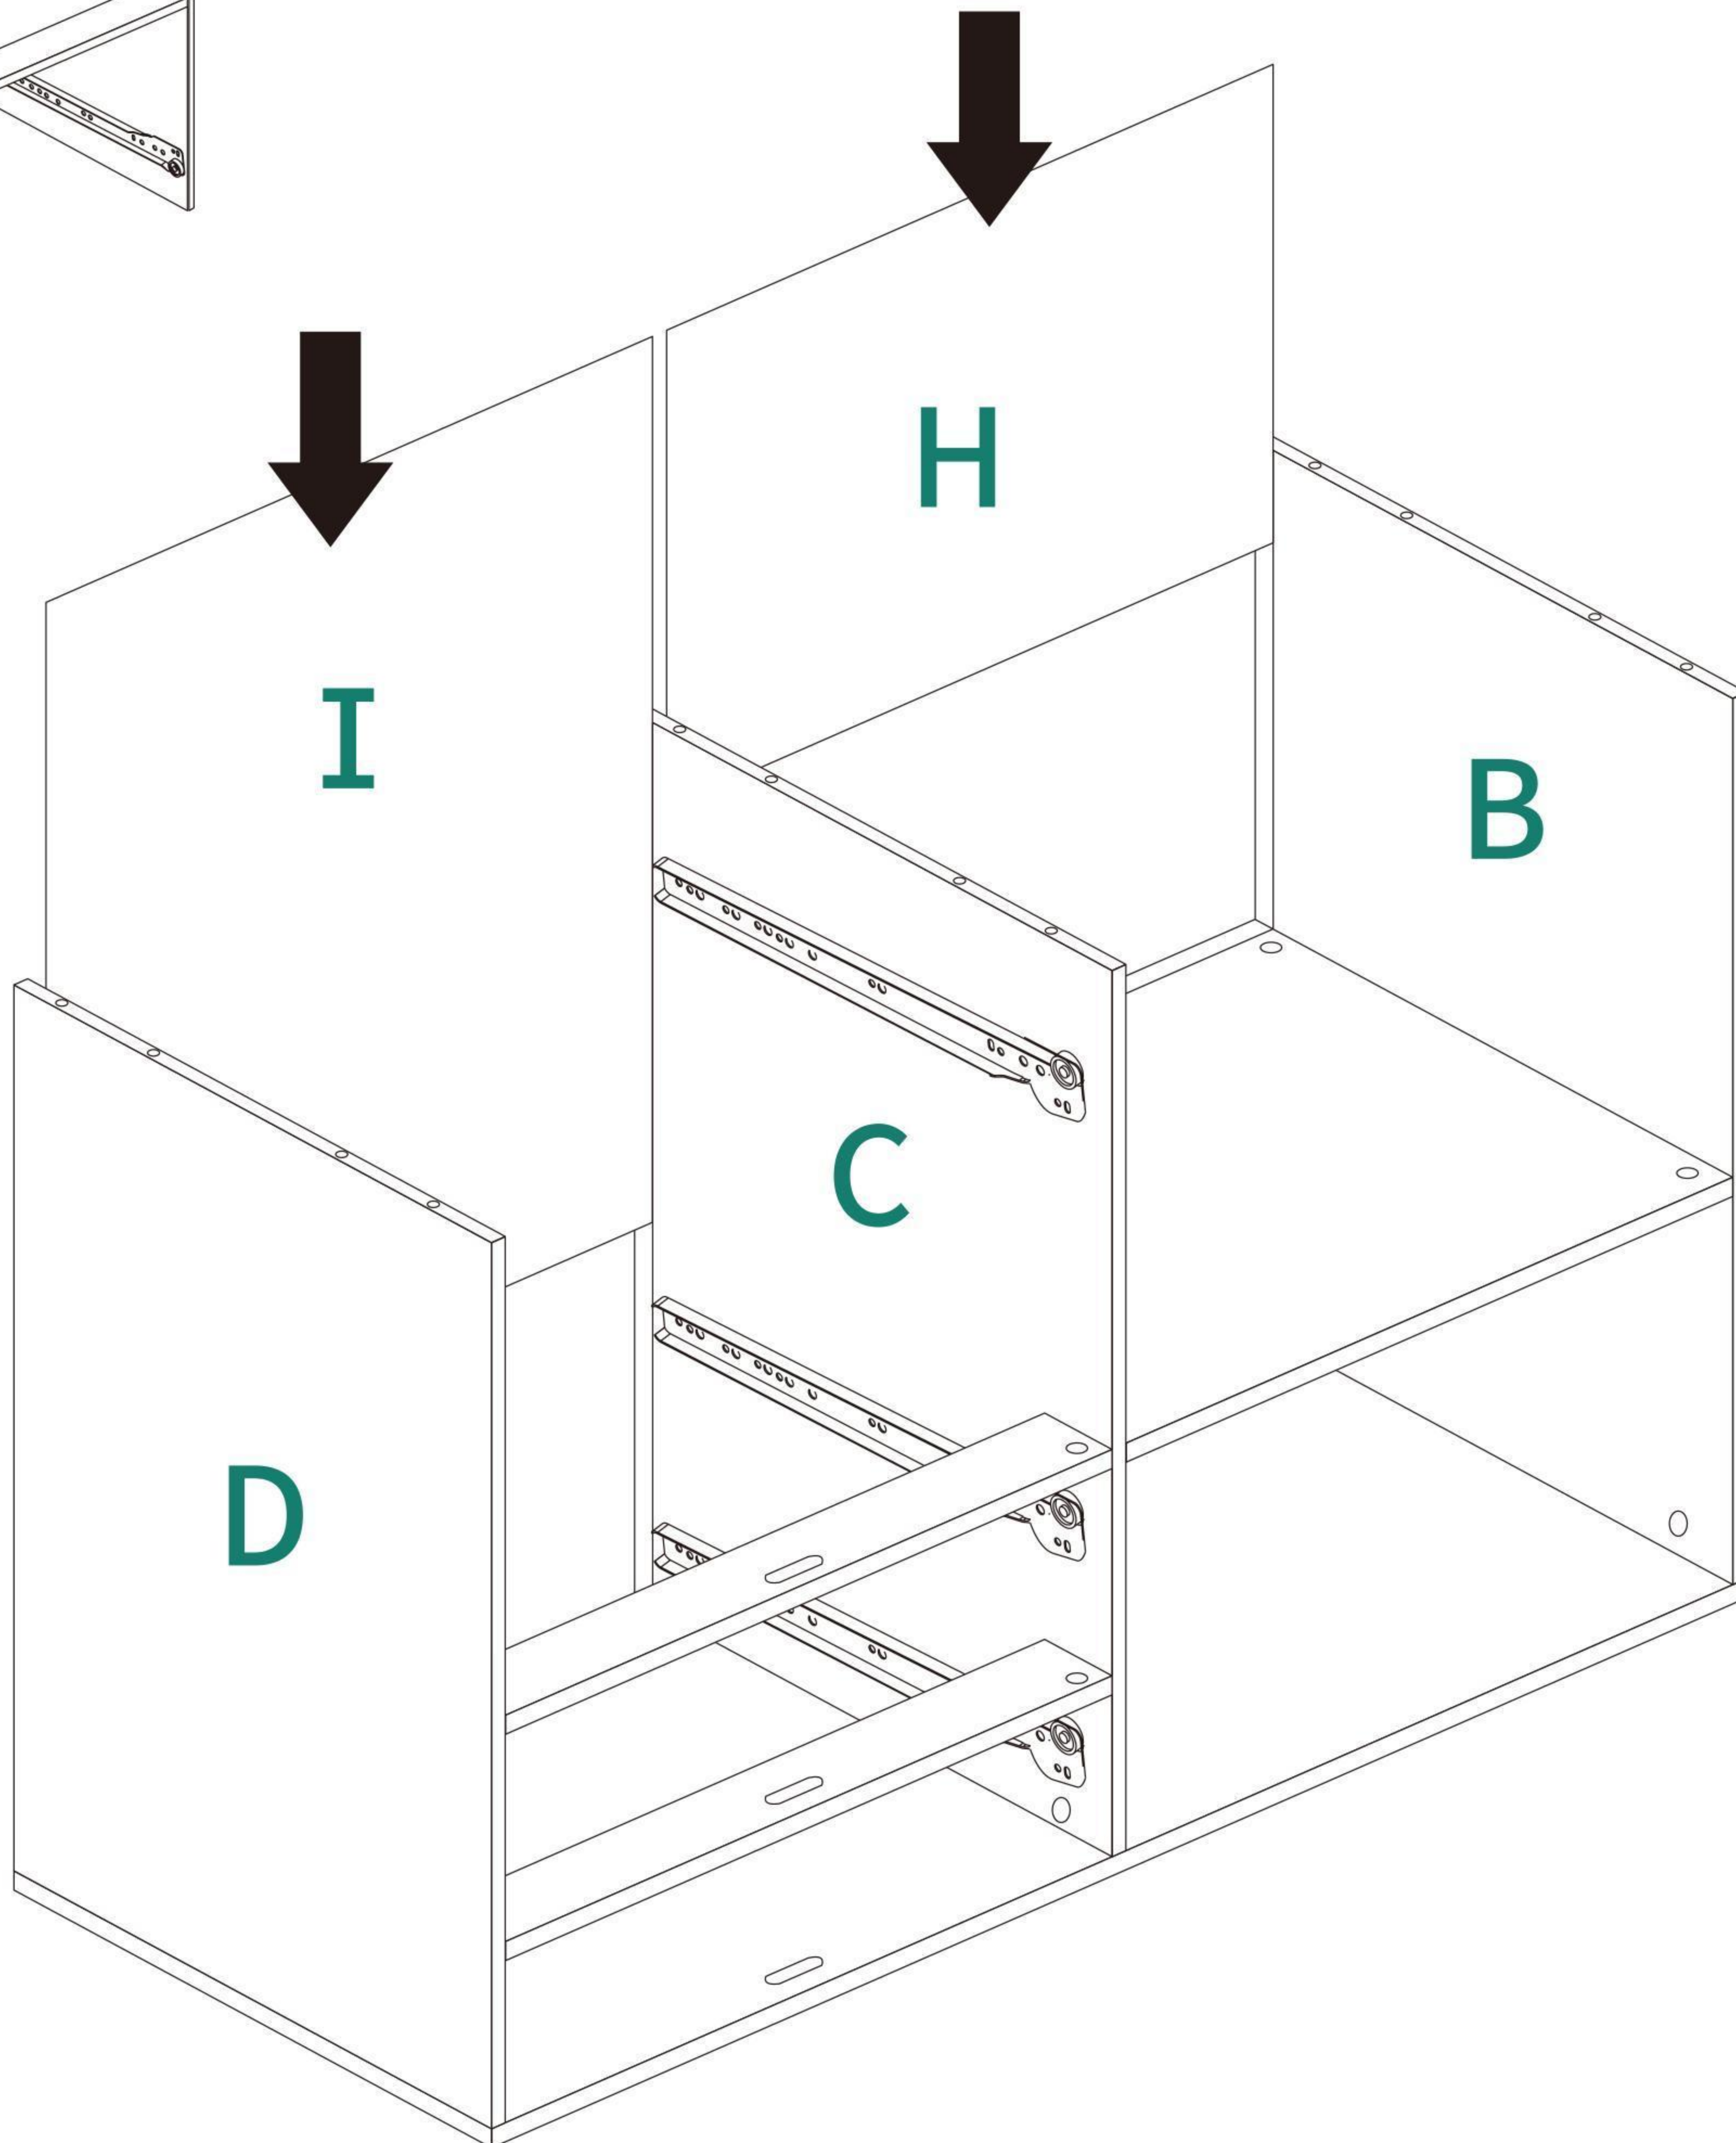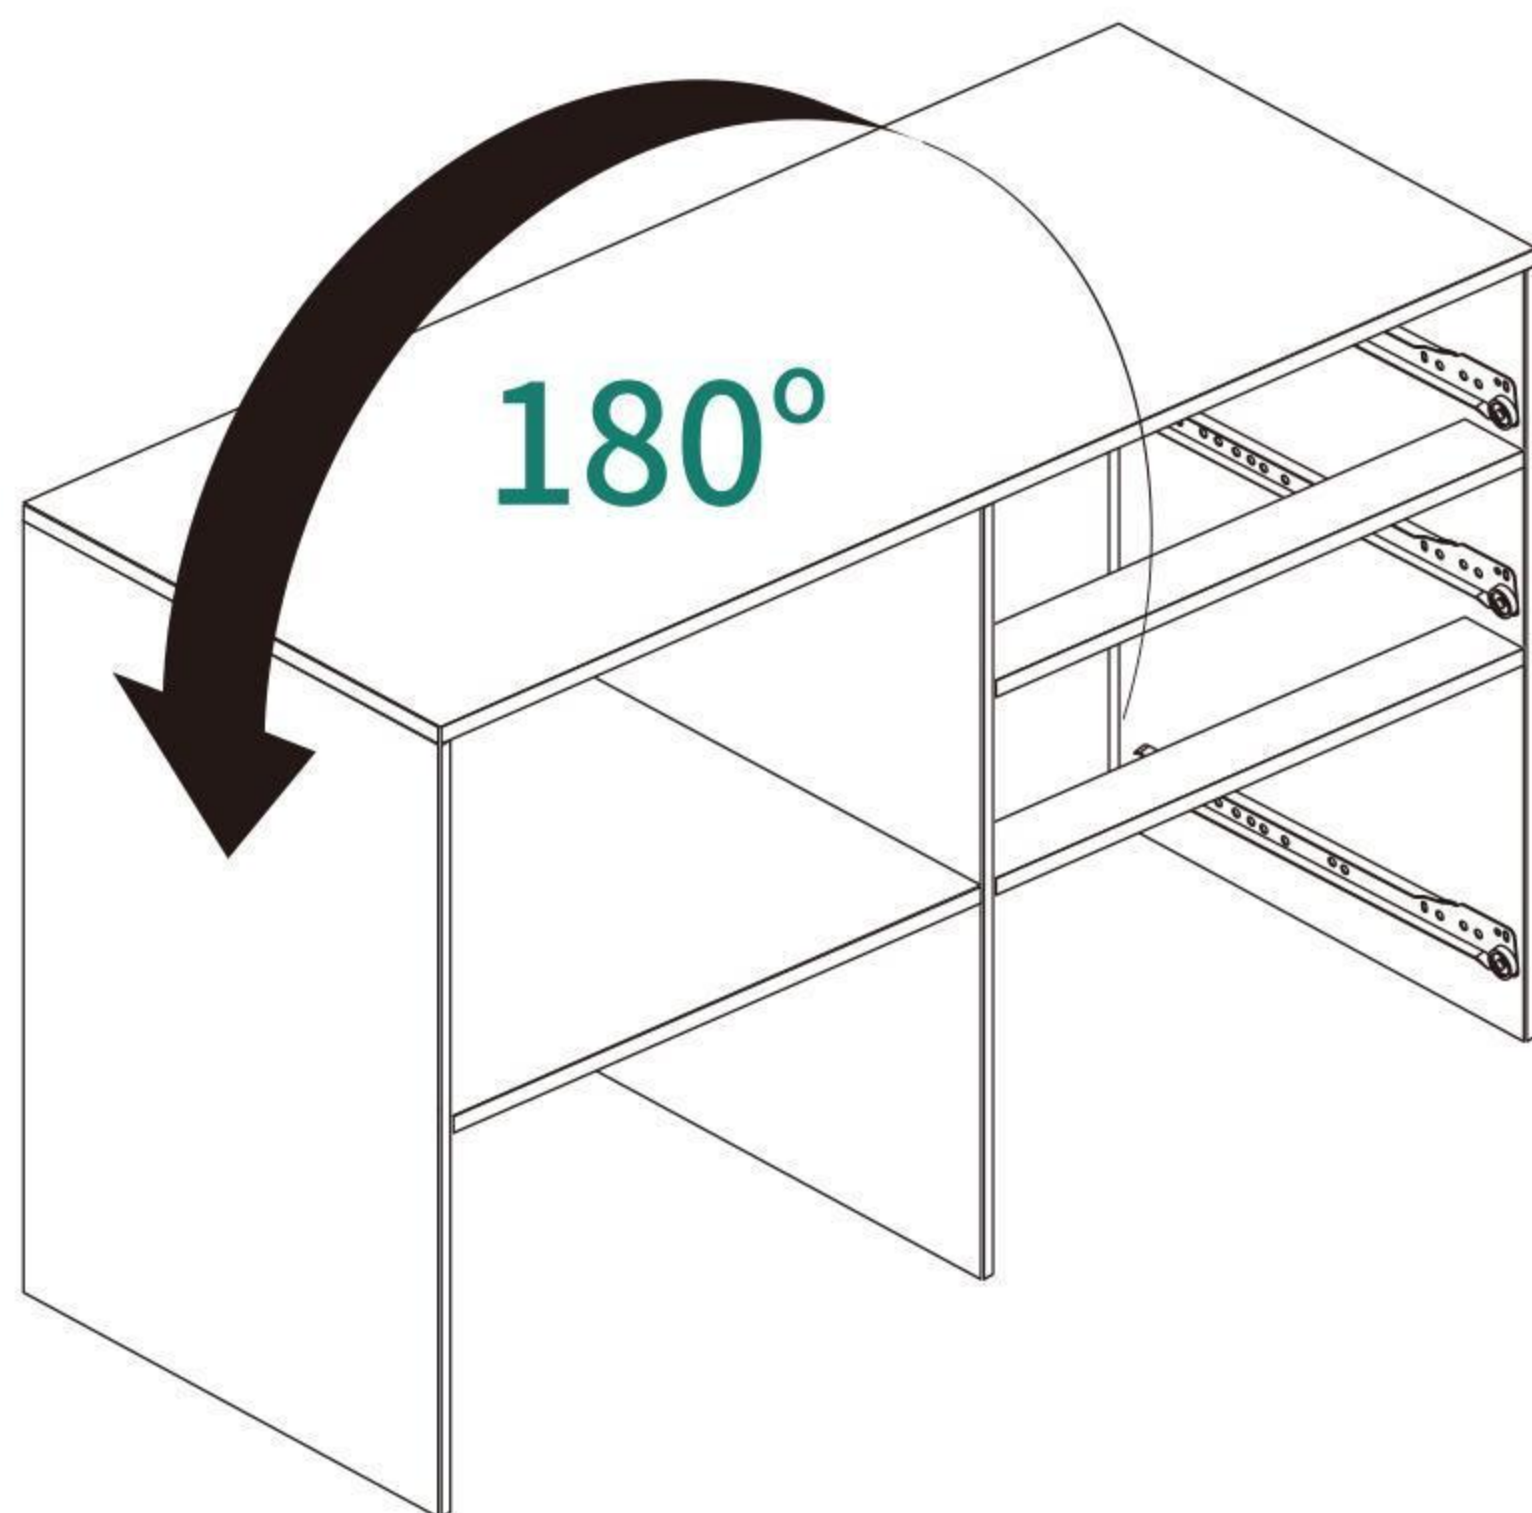


ASSEMBLY INSTRUCTIONS

12

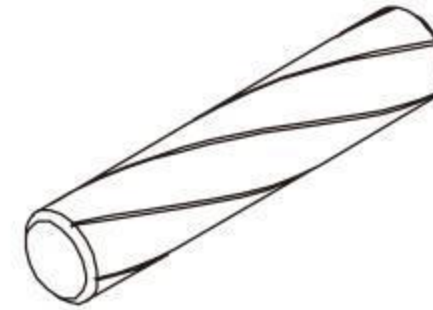


C 6pcs

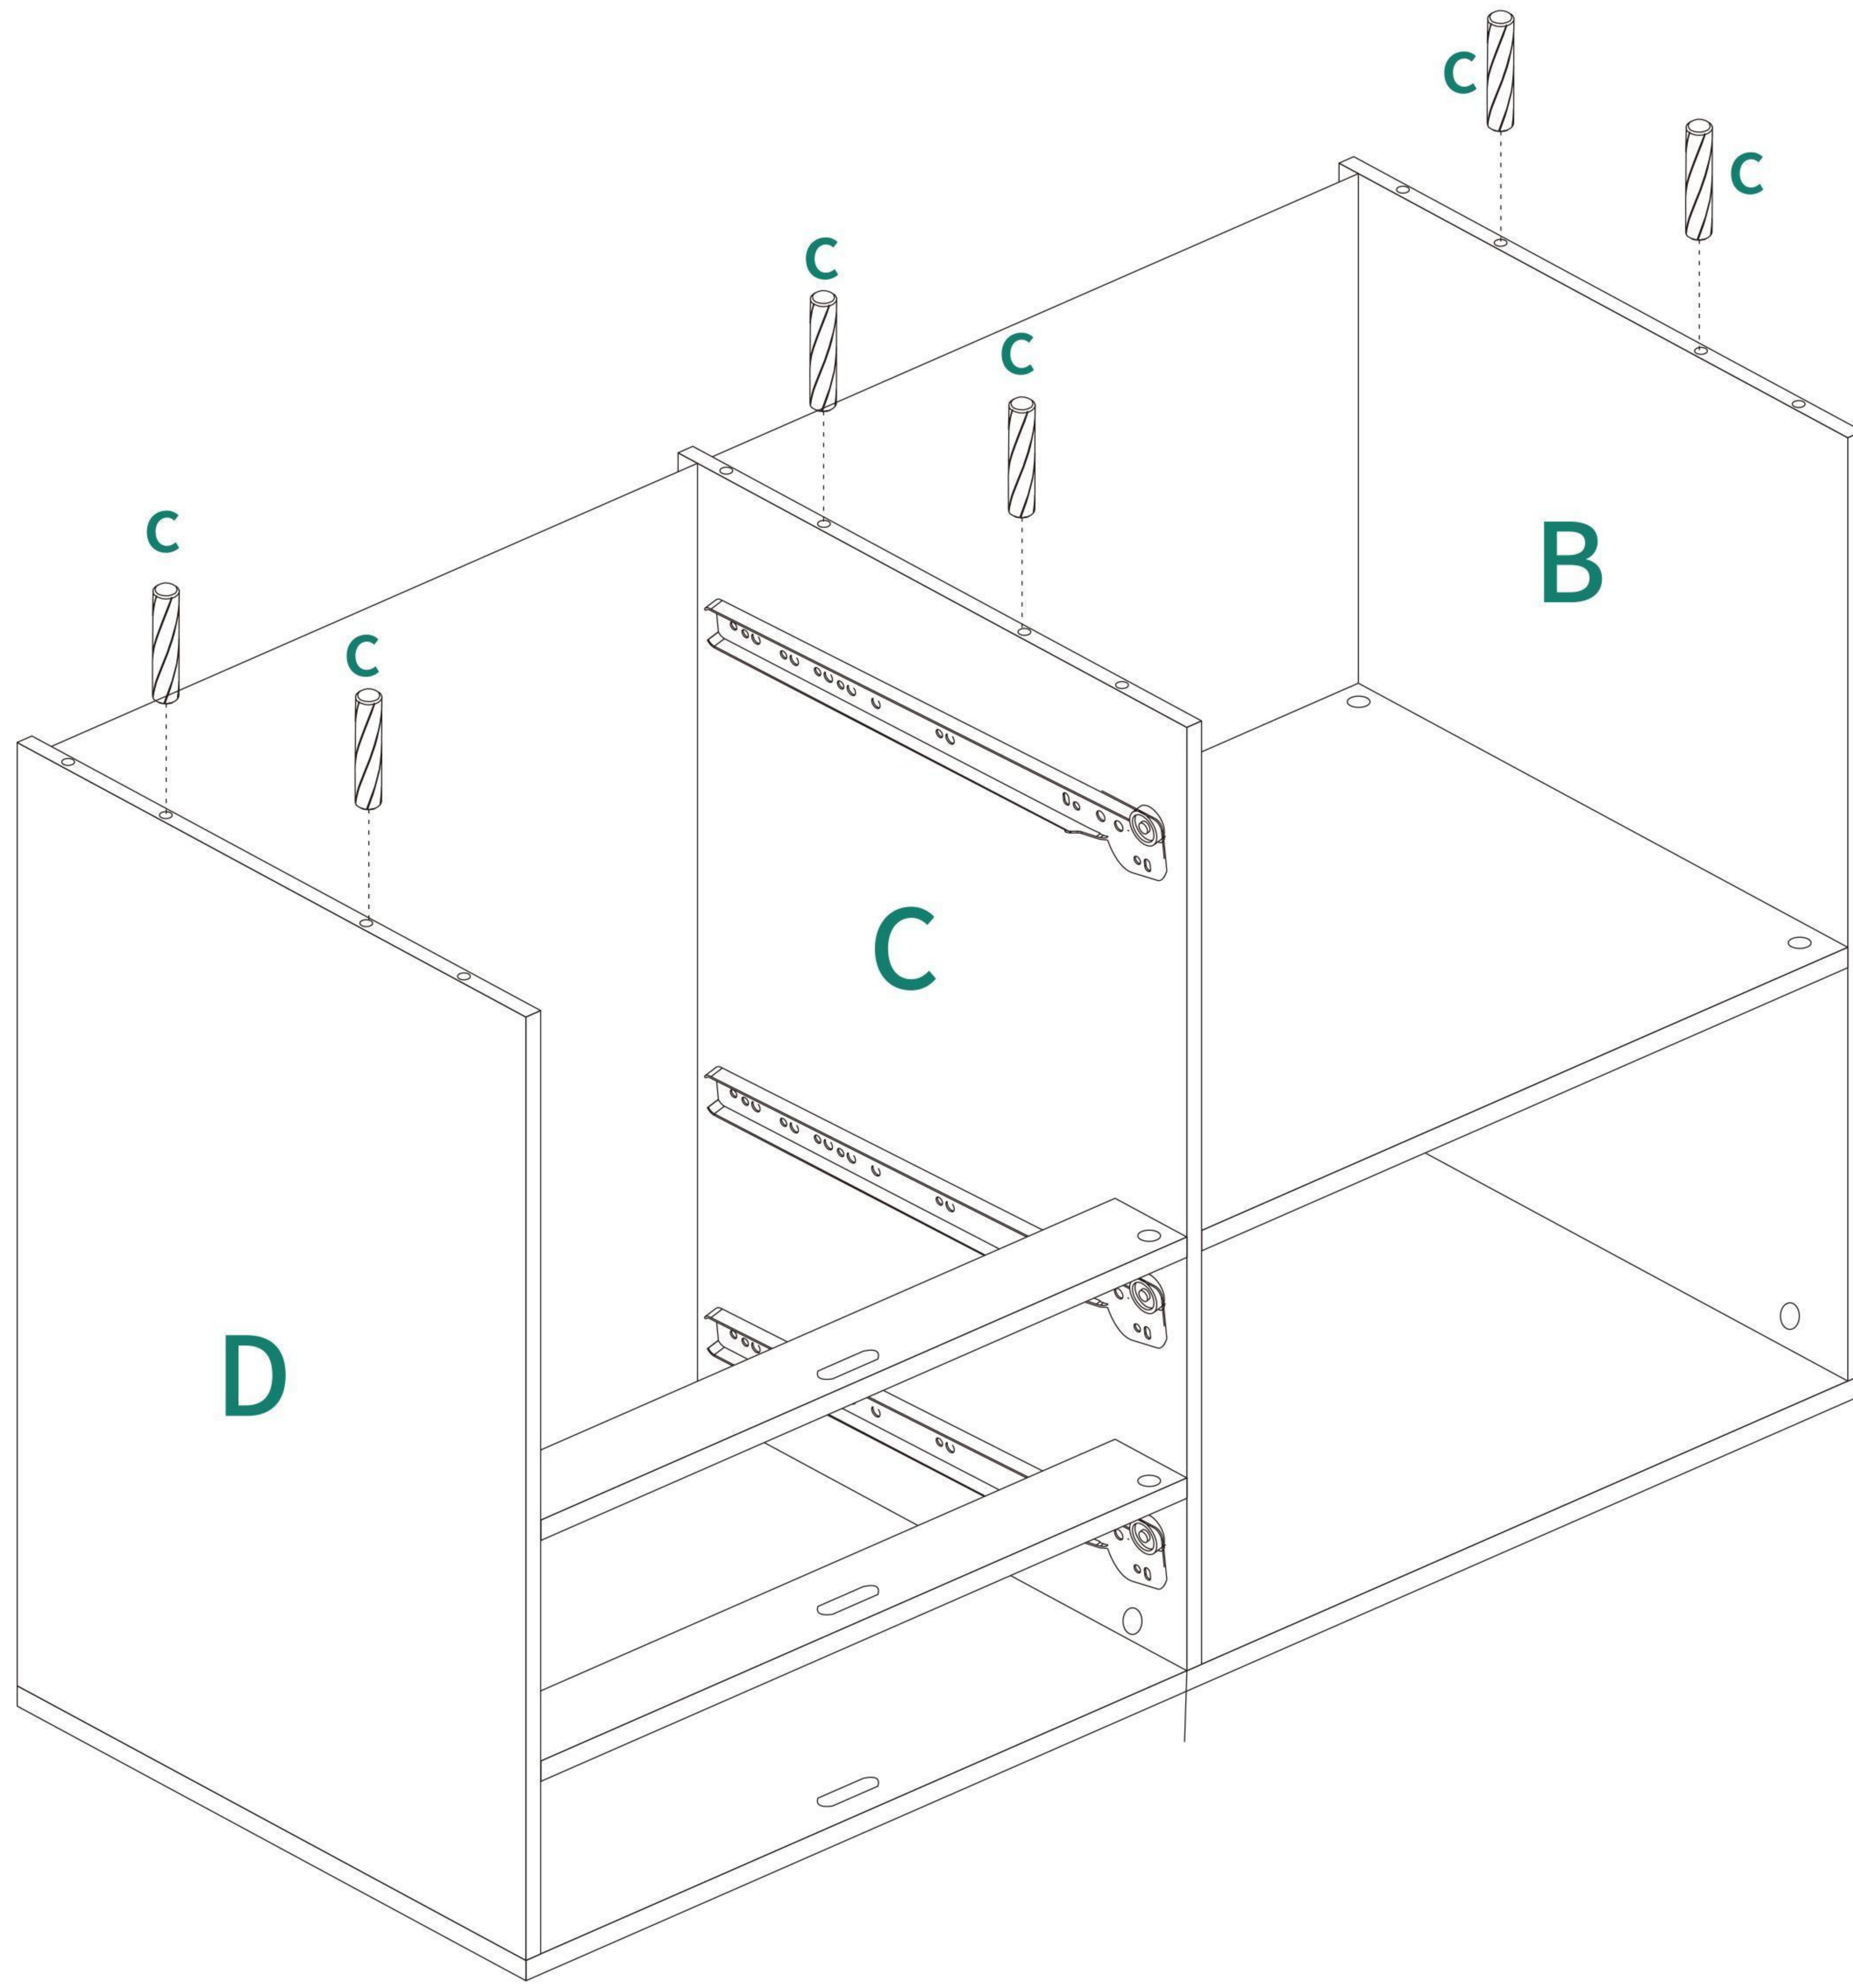


ASSEMBLY INSTRUCTIONS


13

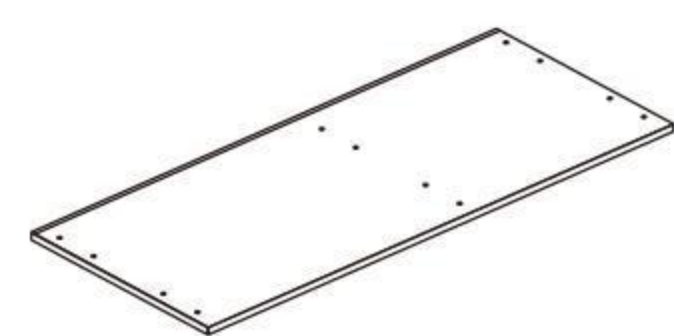

Ⓔ 1pc

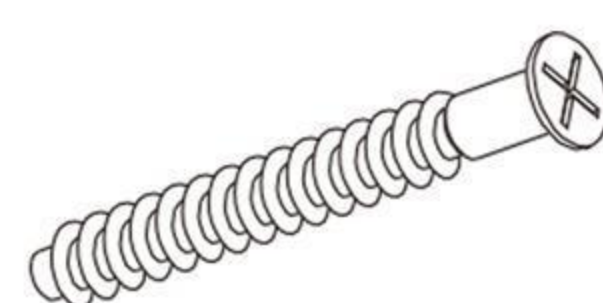


Ⓚ 6pcs

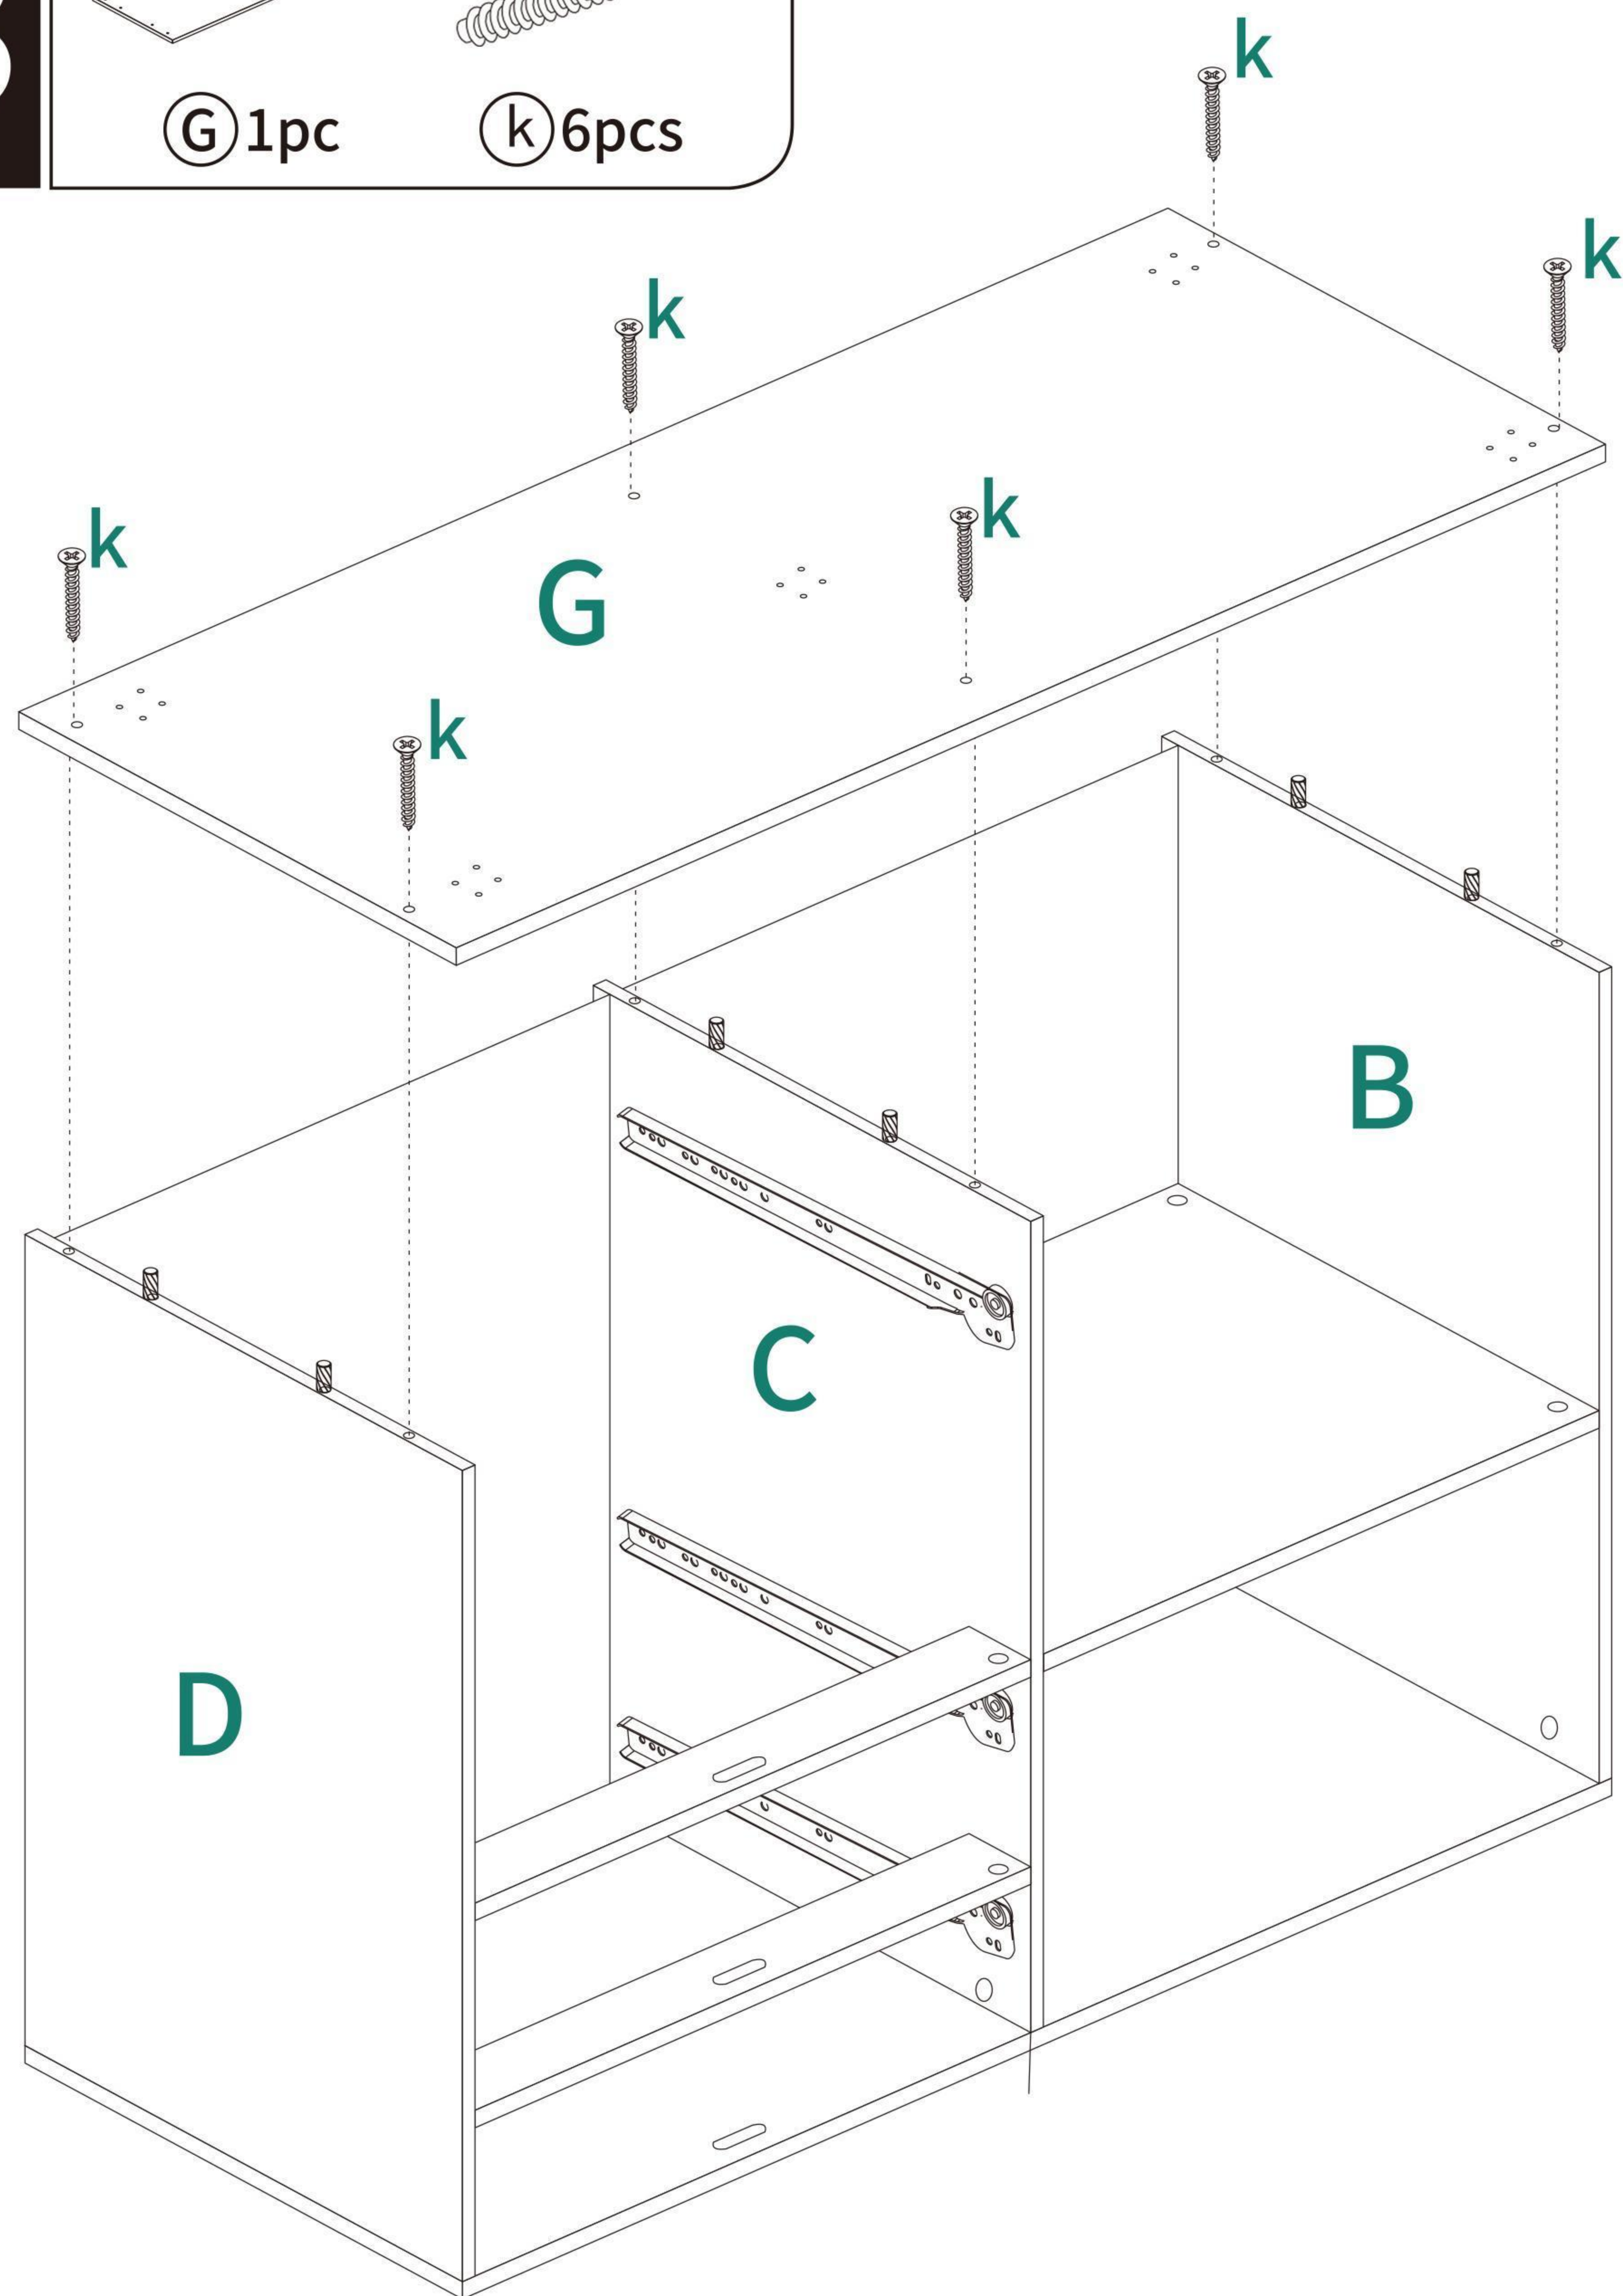


ASSEMBLY INSTRUCTIONS


14

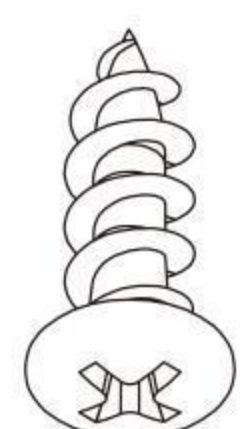


ⓔ 20pcs



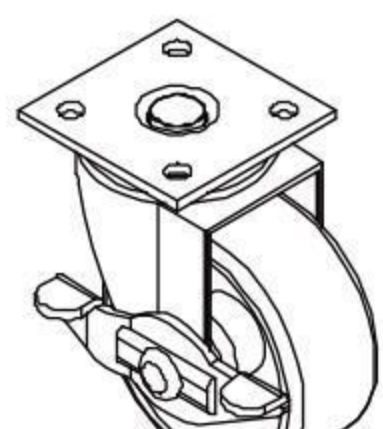


Ⓛ 2pcs

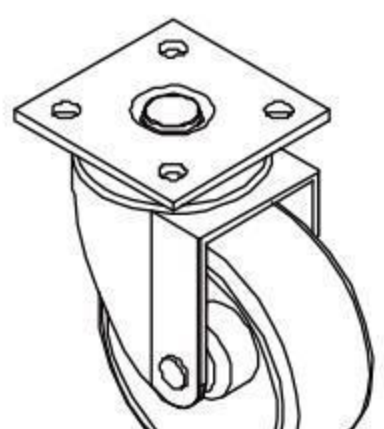


ⓖ 3pcs

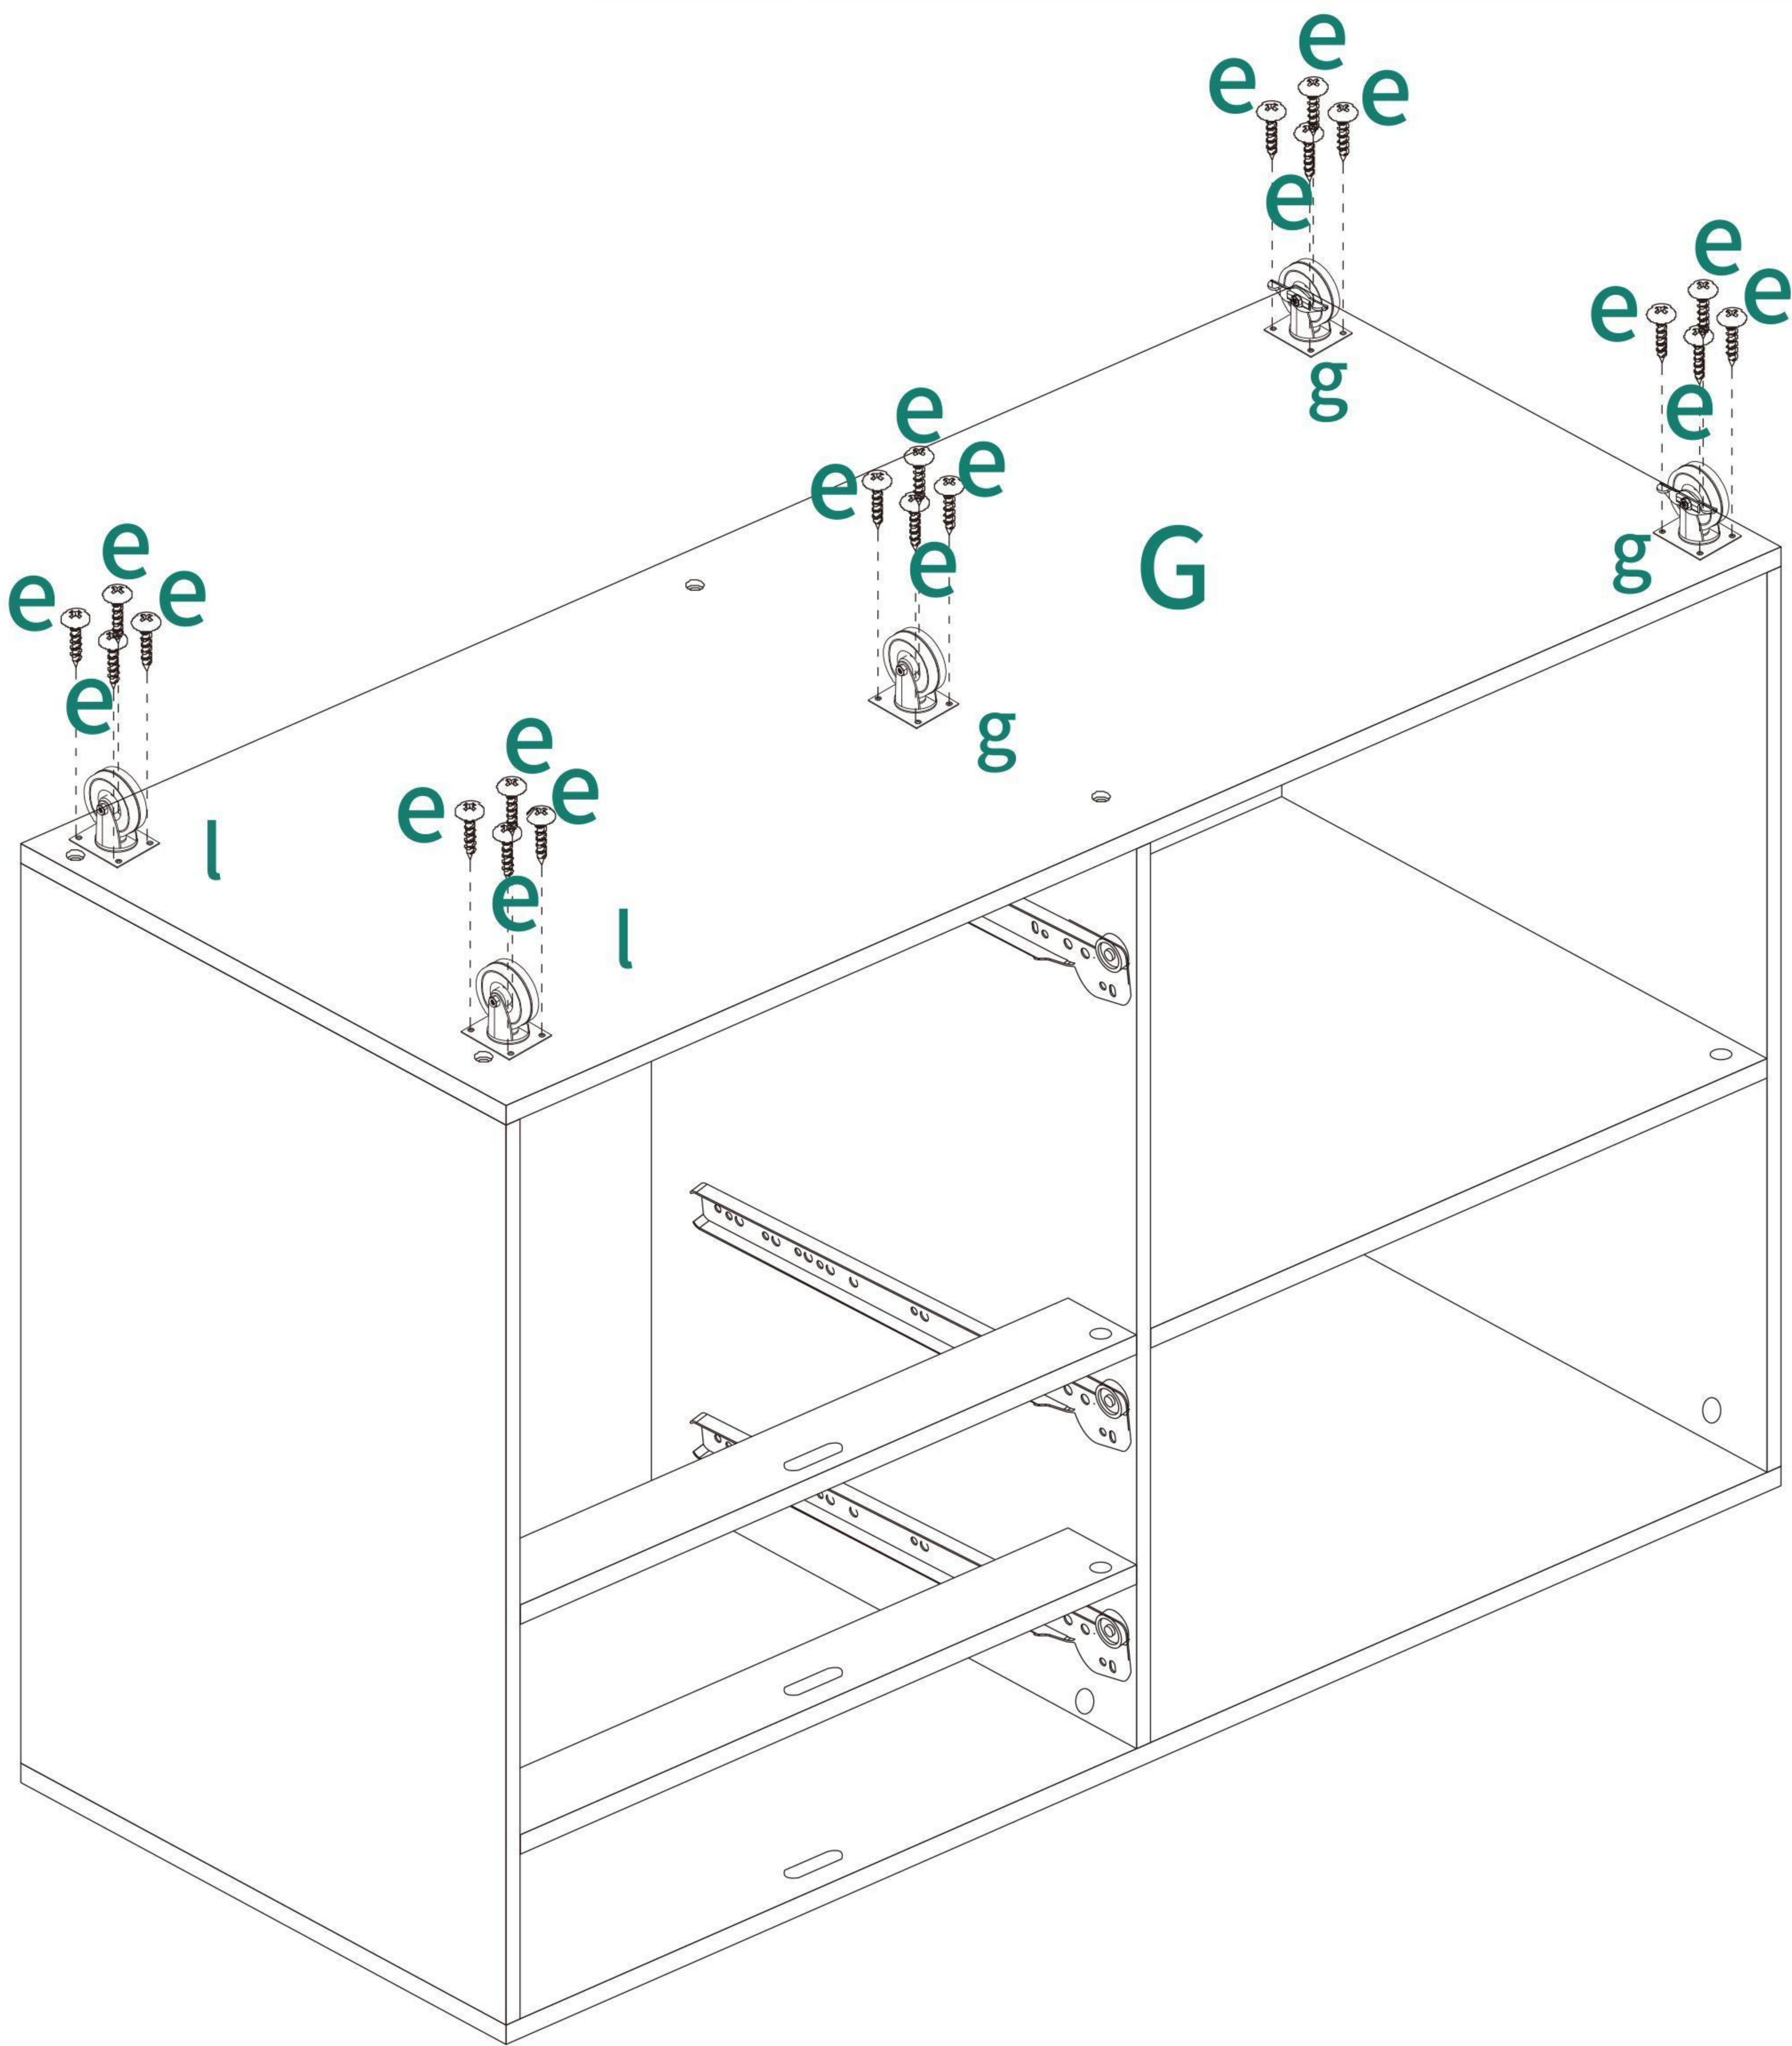

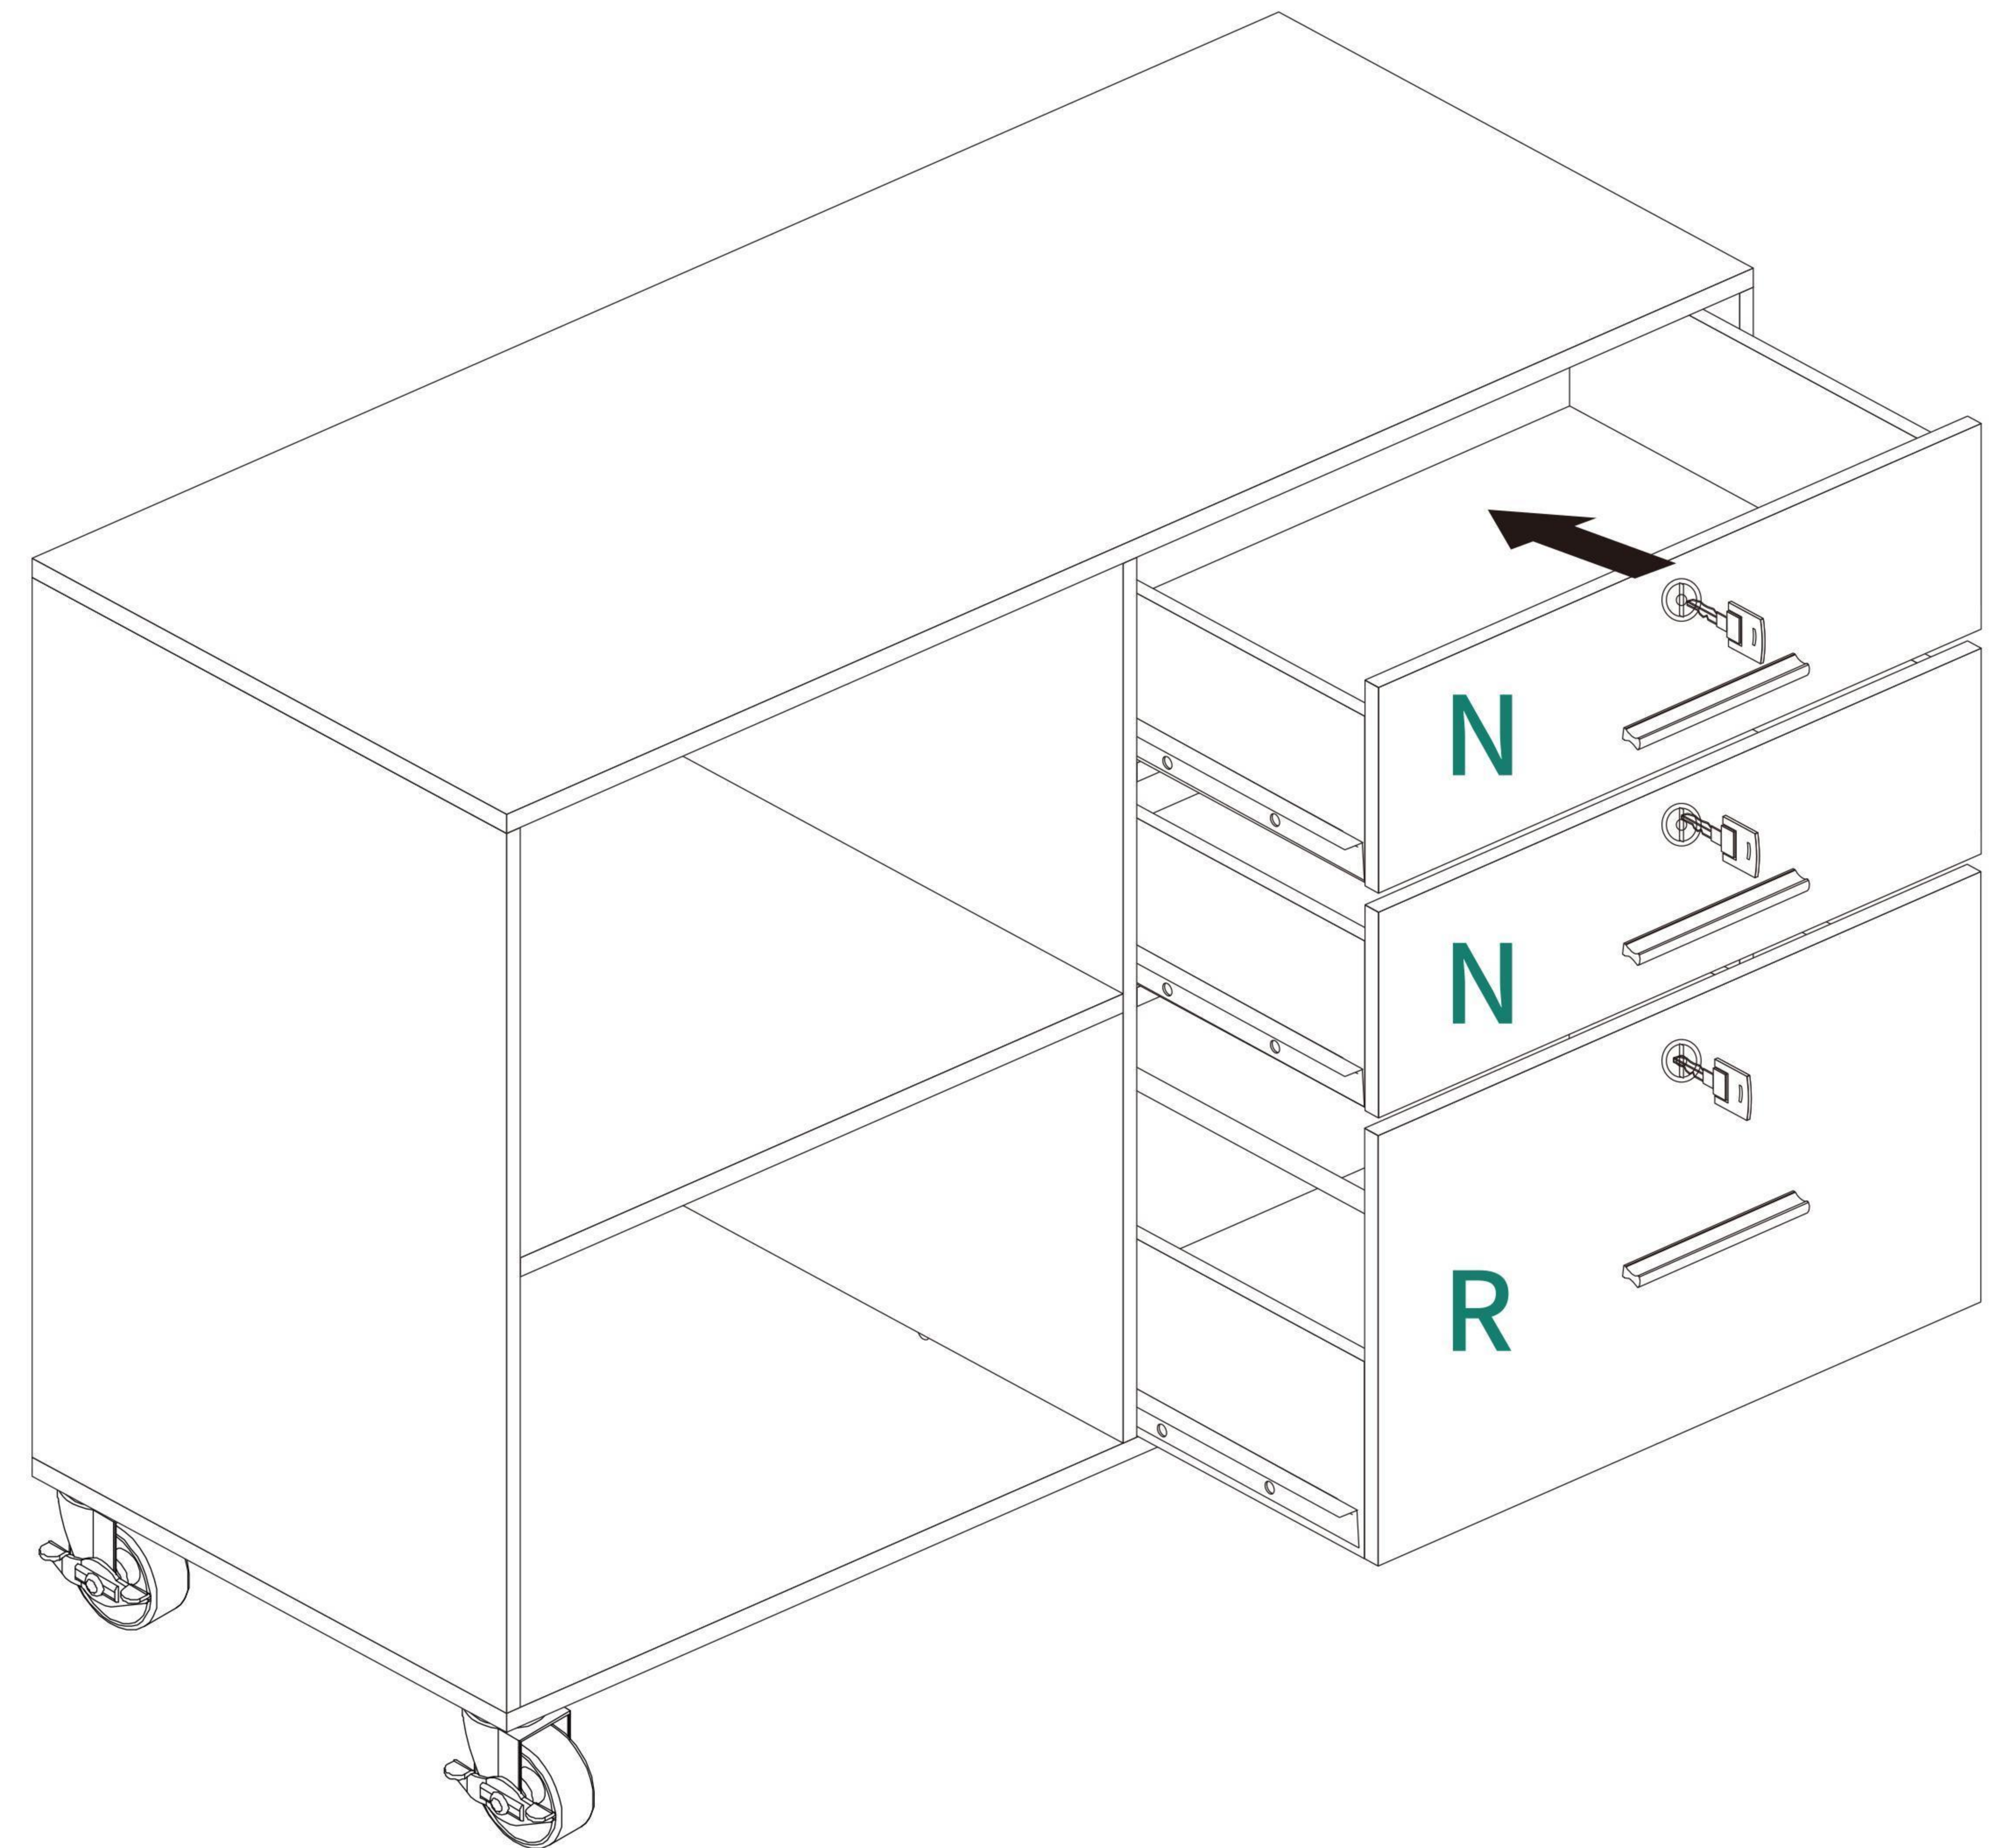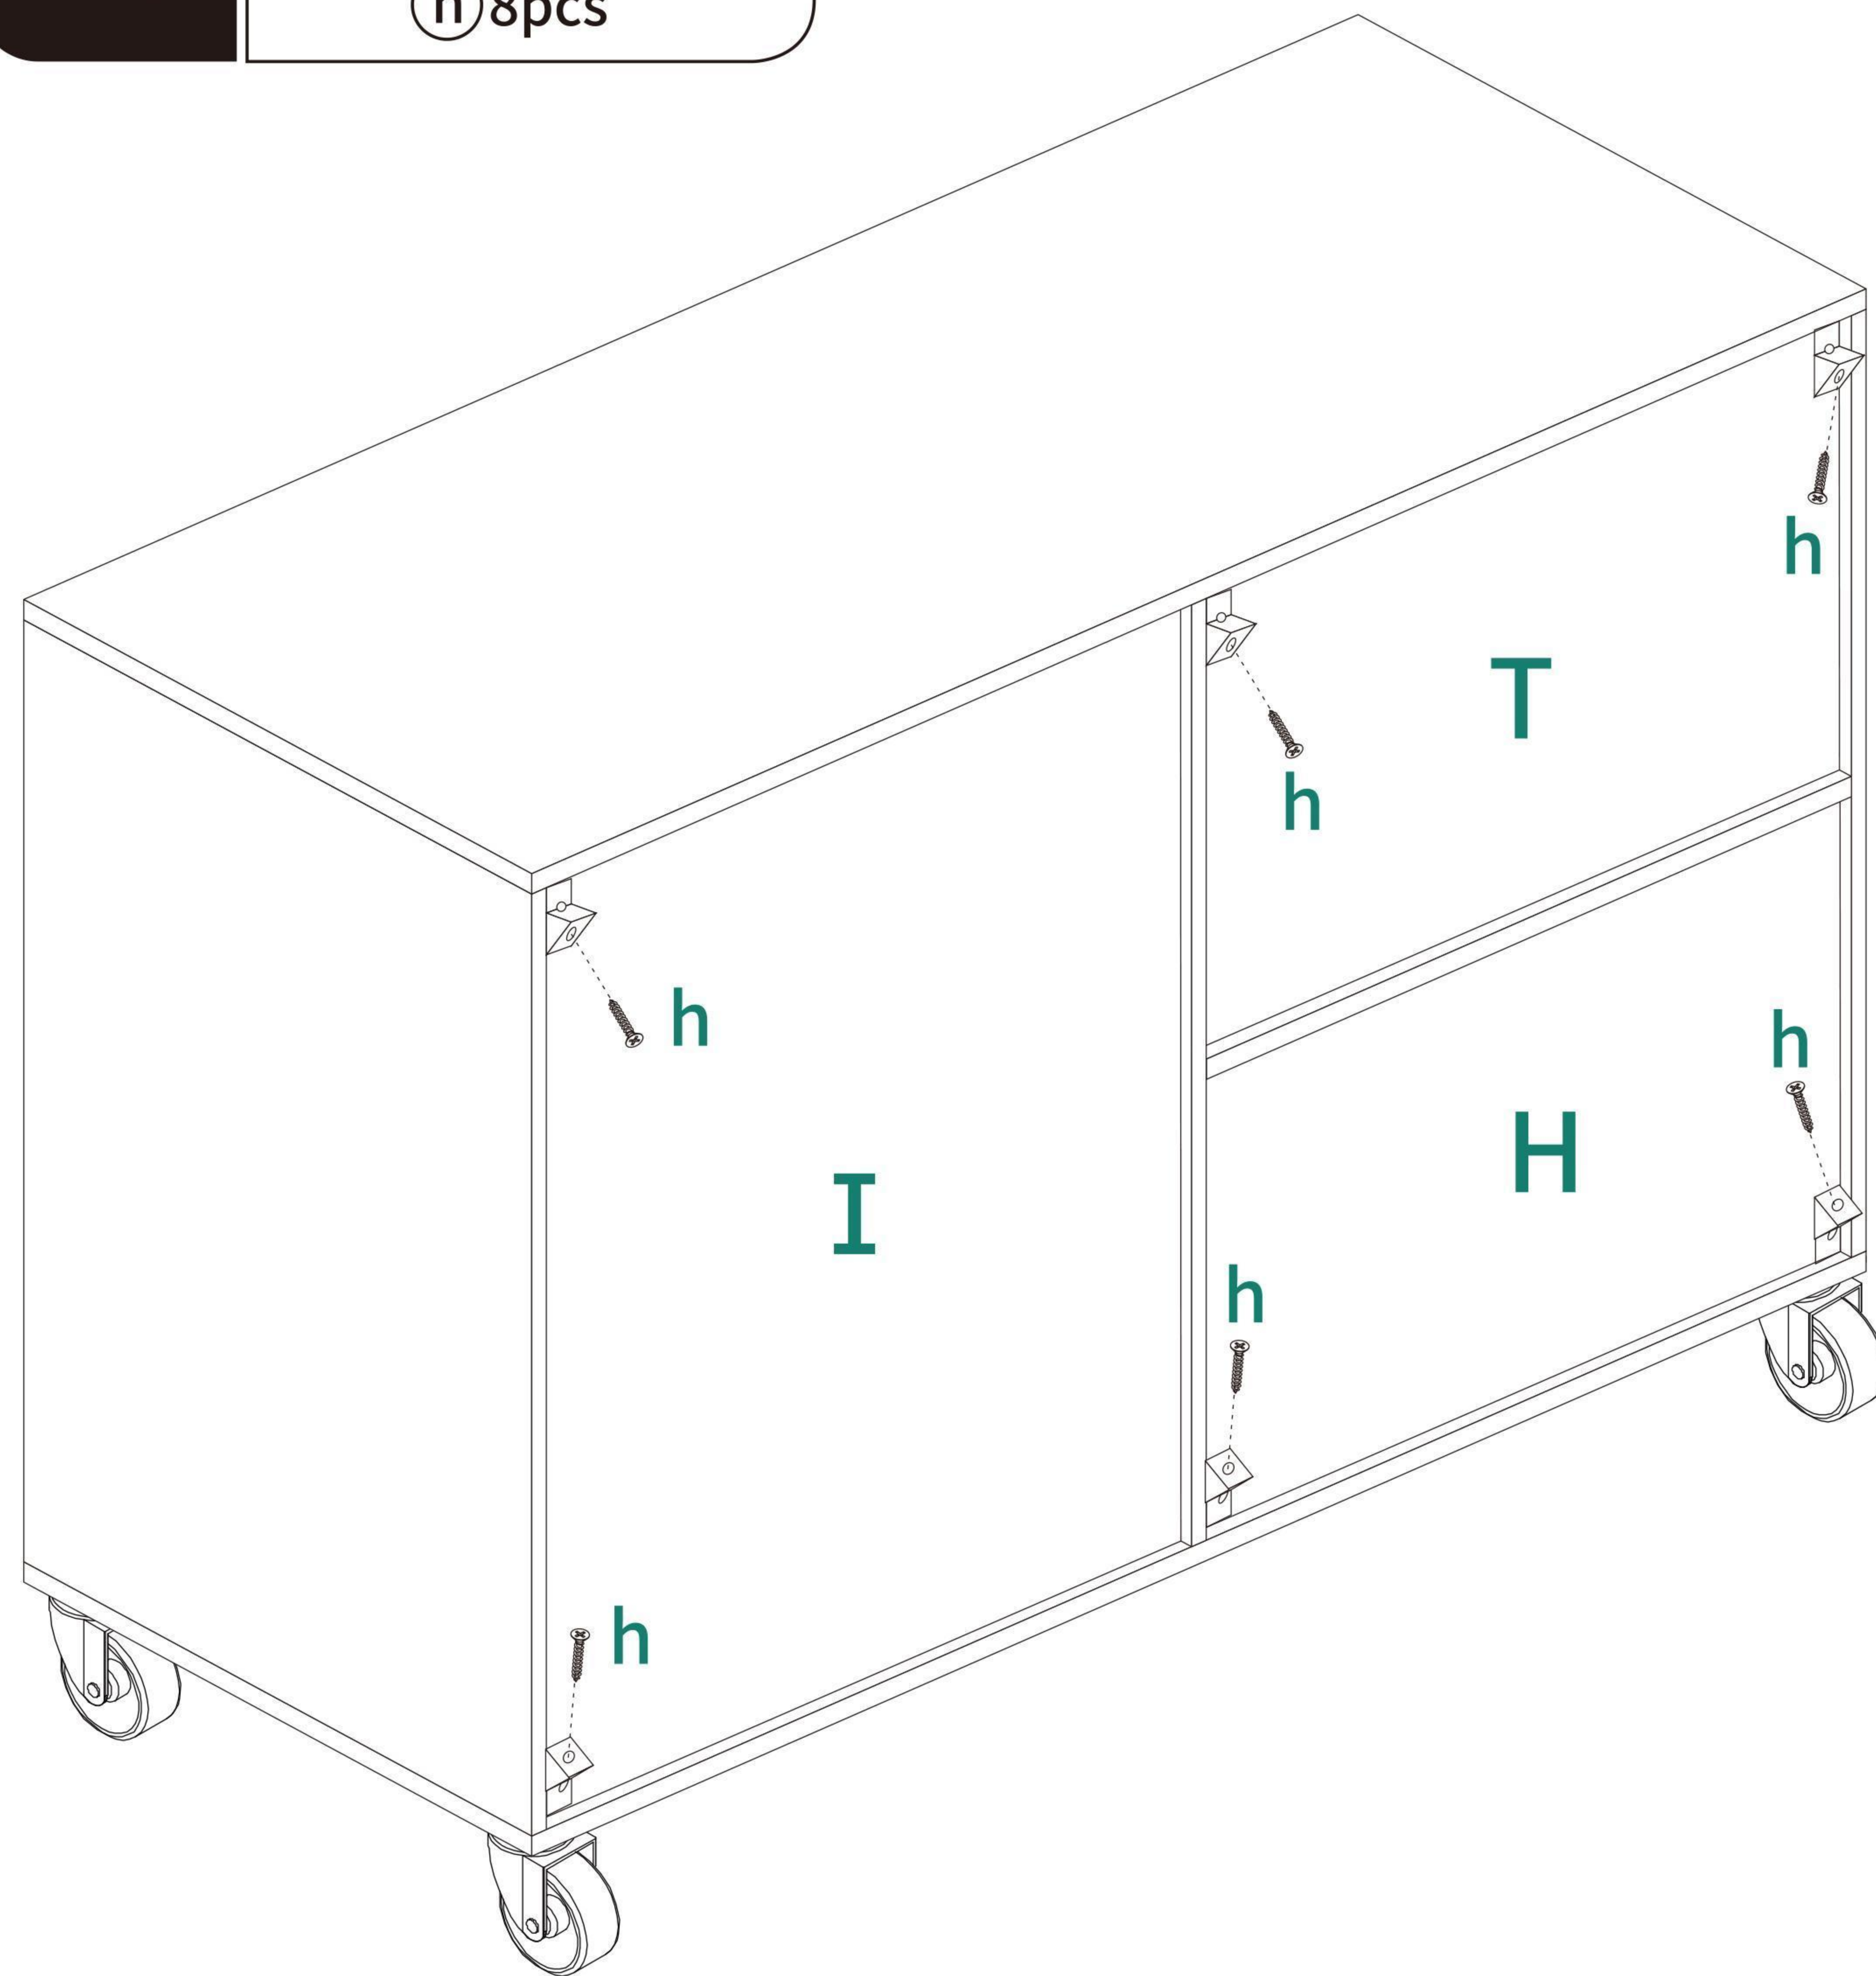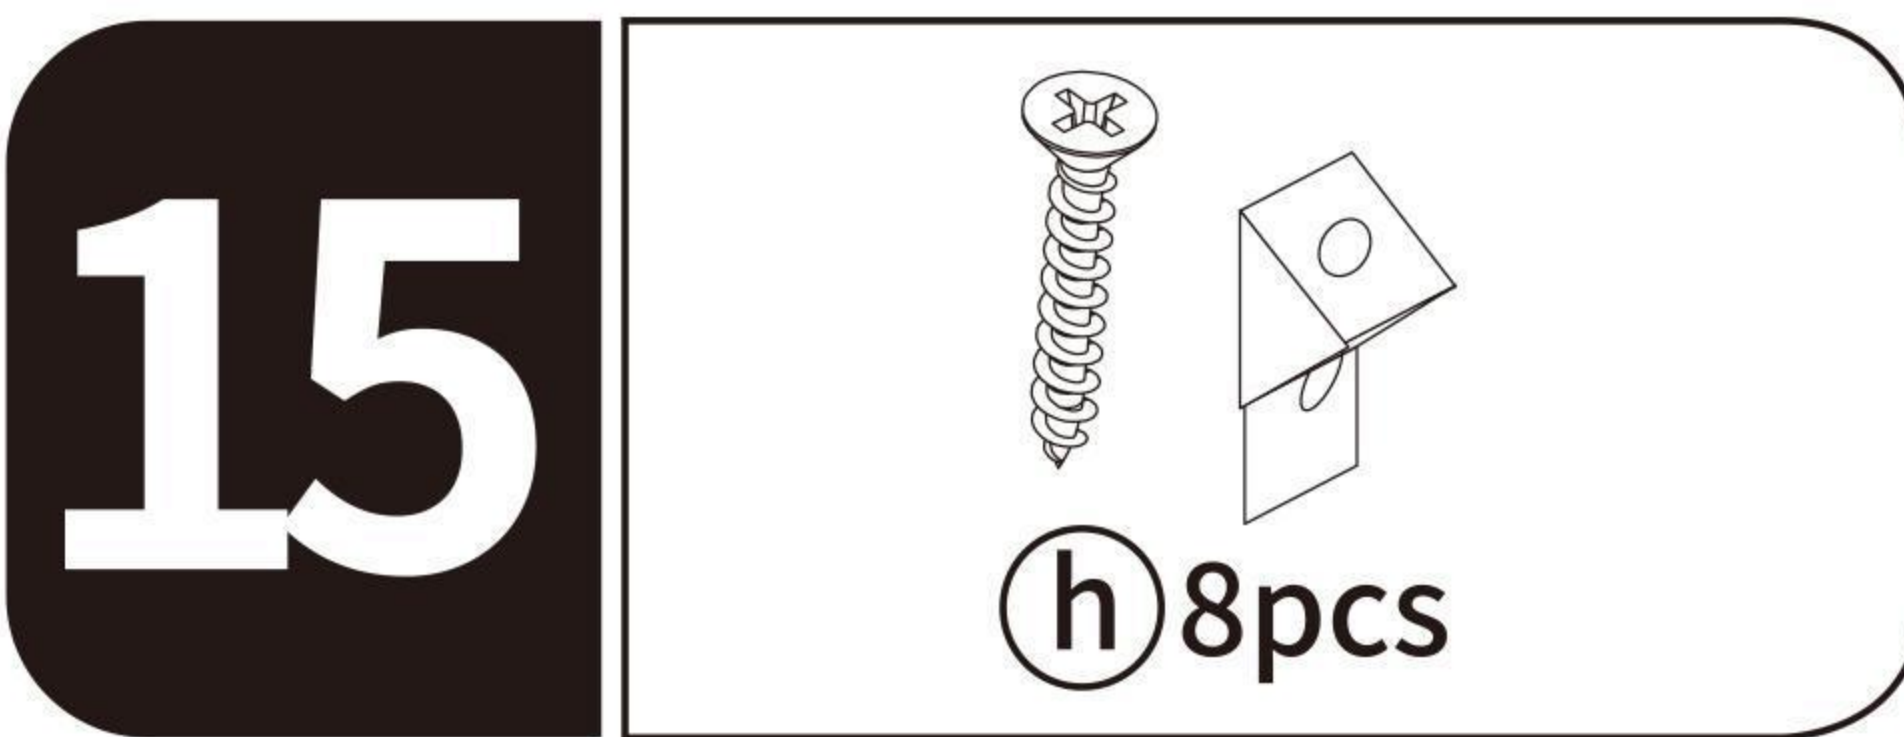

17

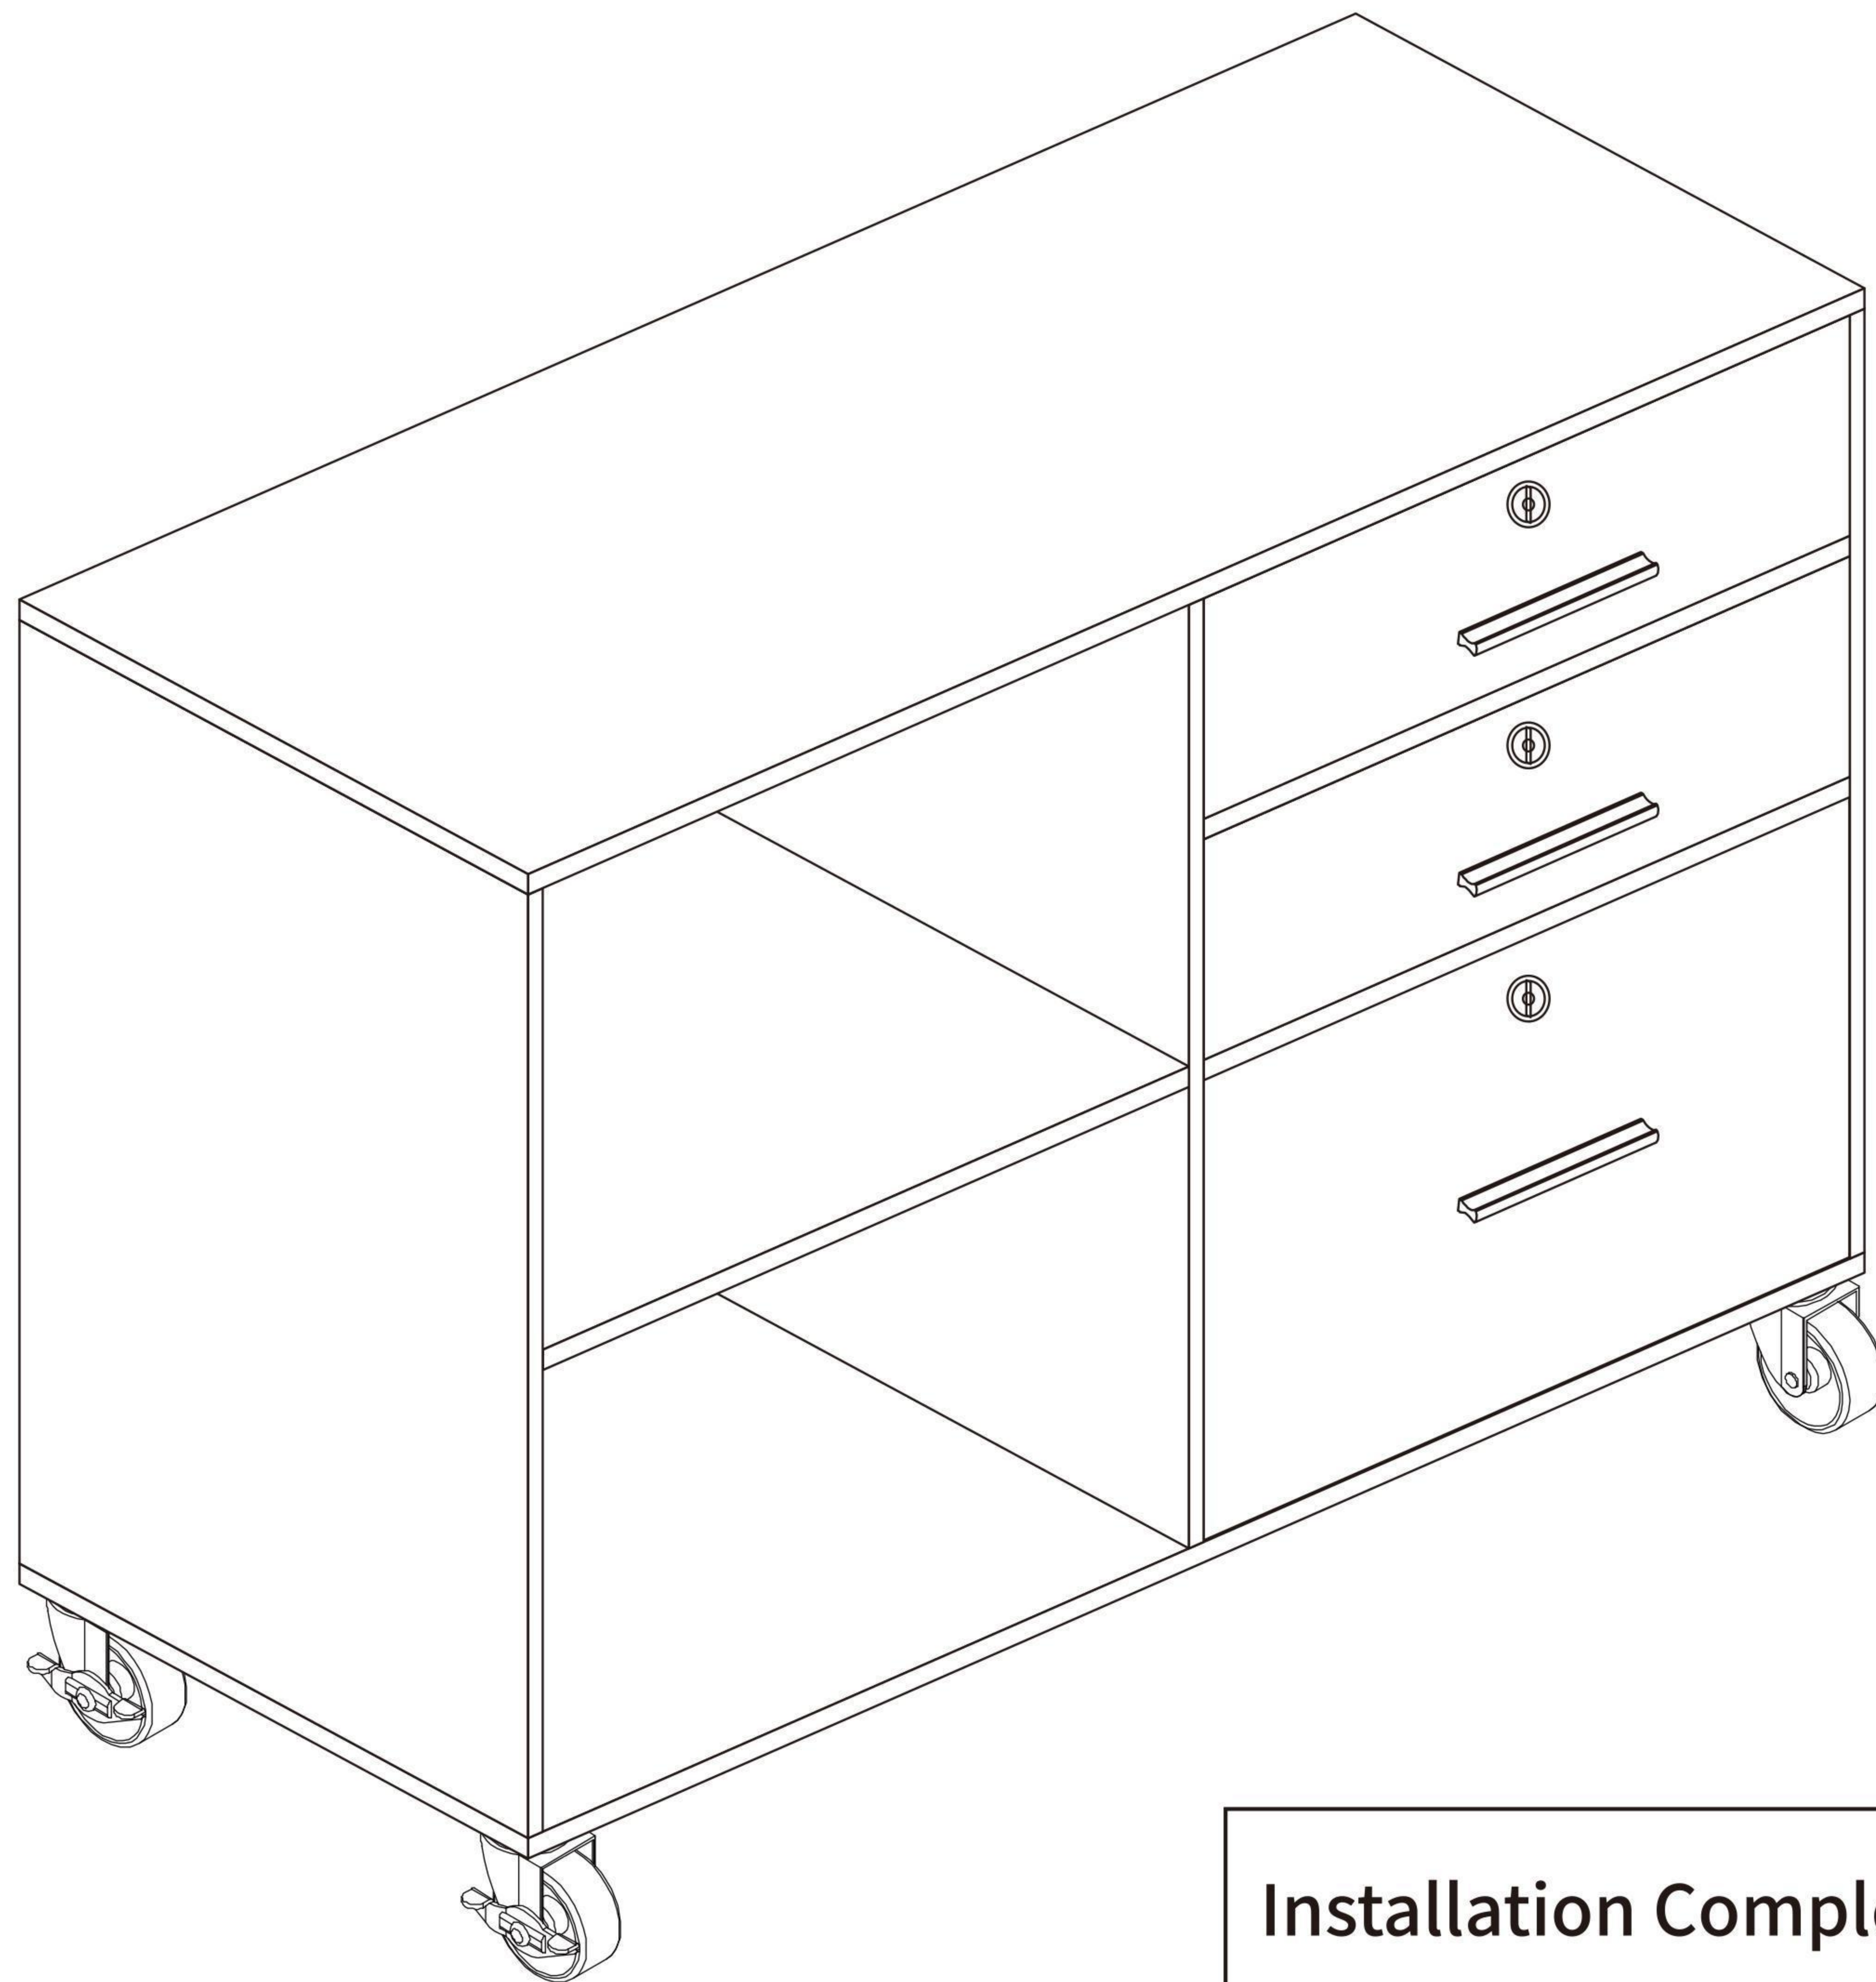

Installation Completed