


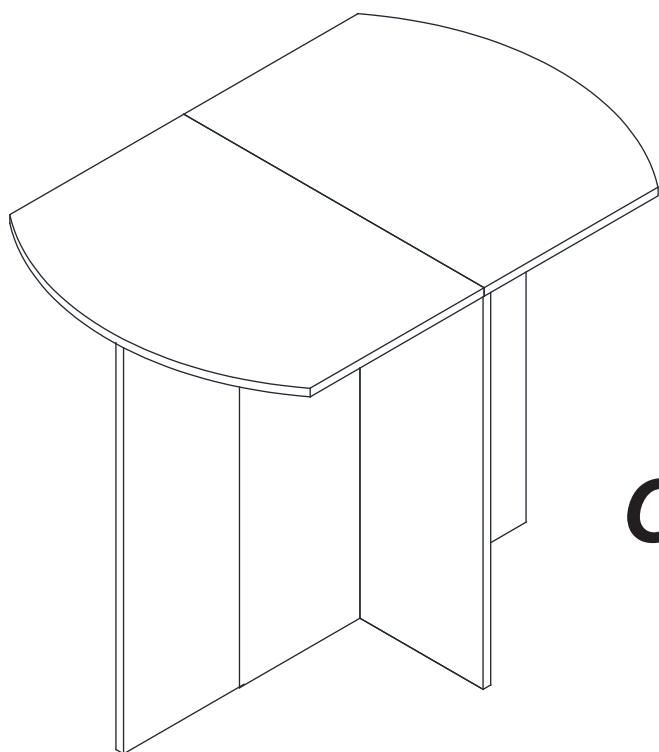
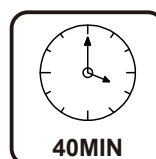


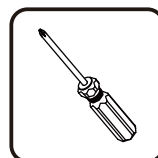


OR

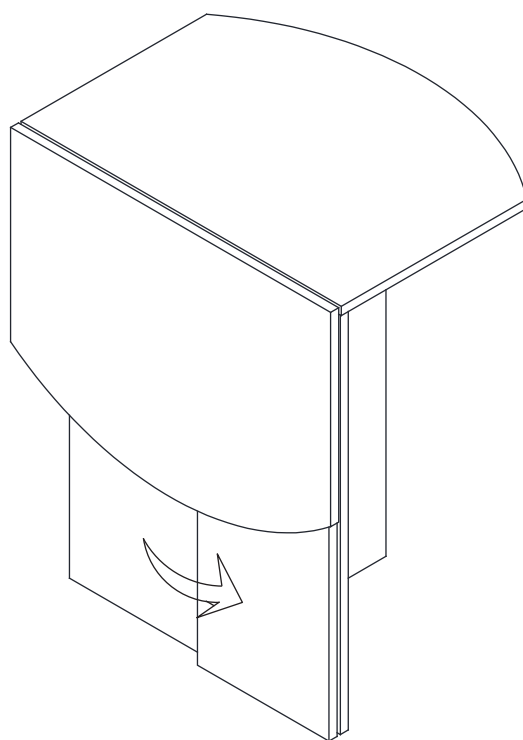


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

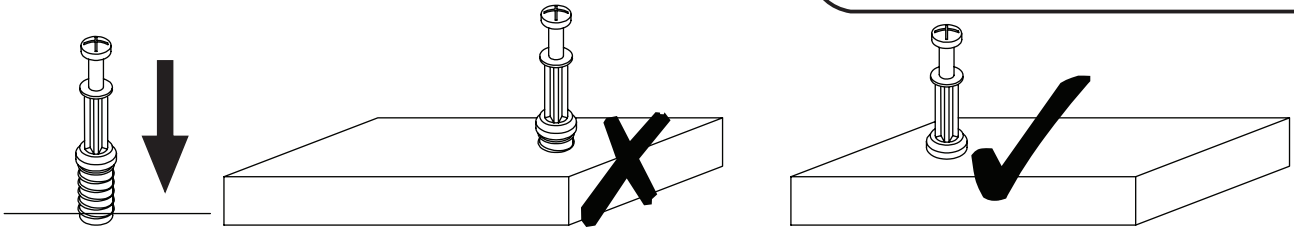


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

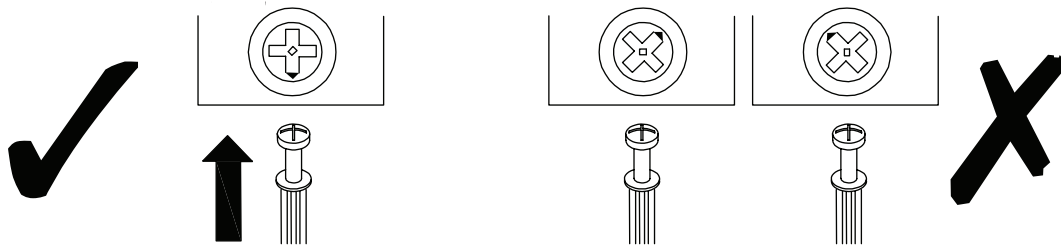

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

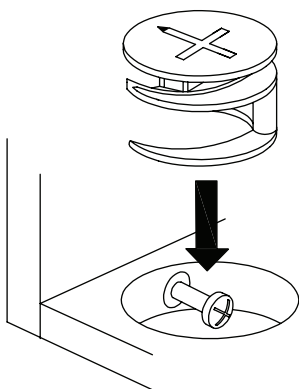


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

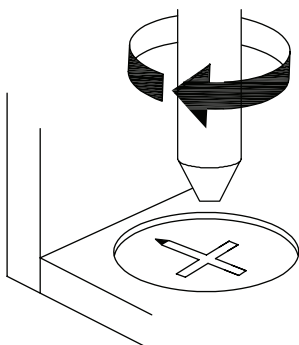


EN_Turn cam lock clockwise to tighten.


EXPLOSION FIGURE

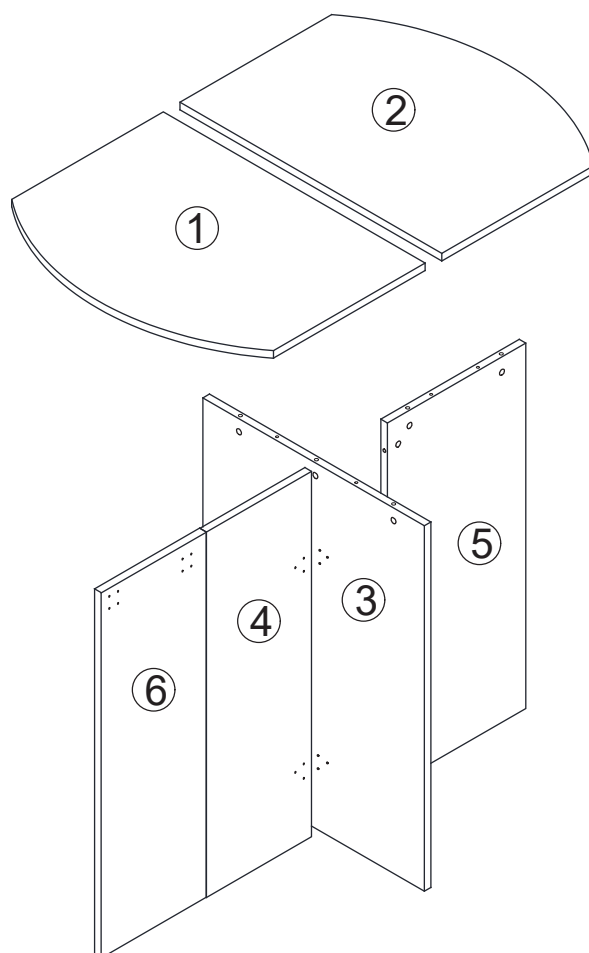

PARTS

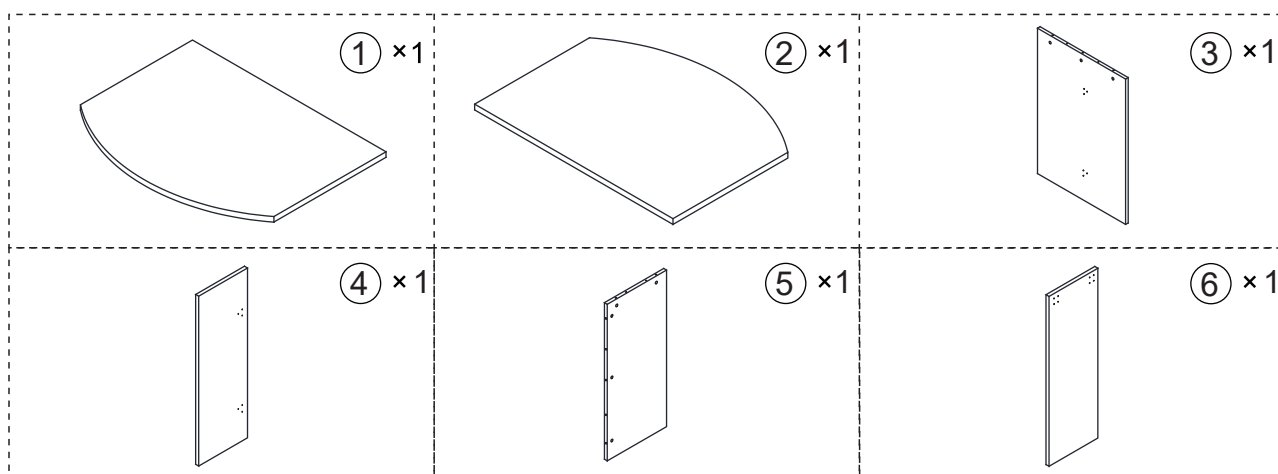

HARDWARE


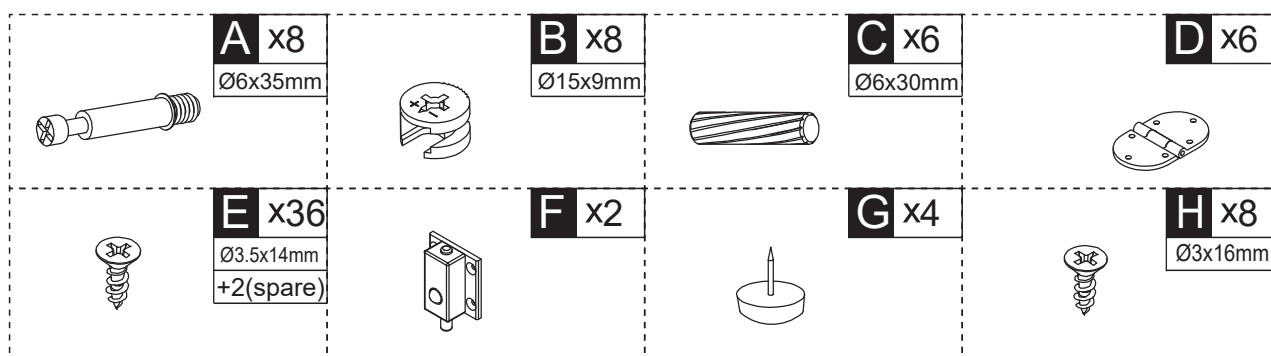


01

A x3



③ x1

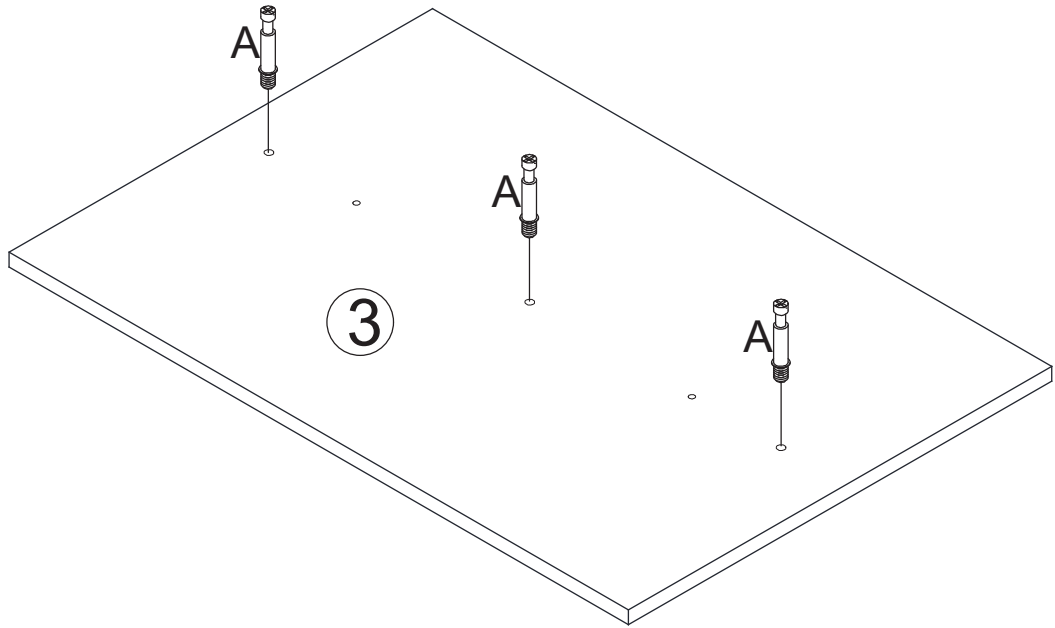

02

B x3




C x2




G x3



⑤ x1

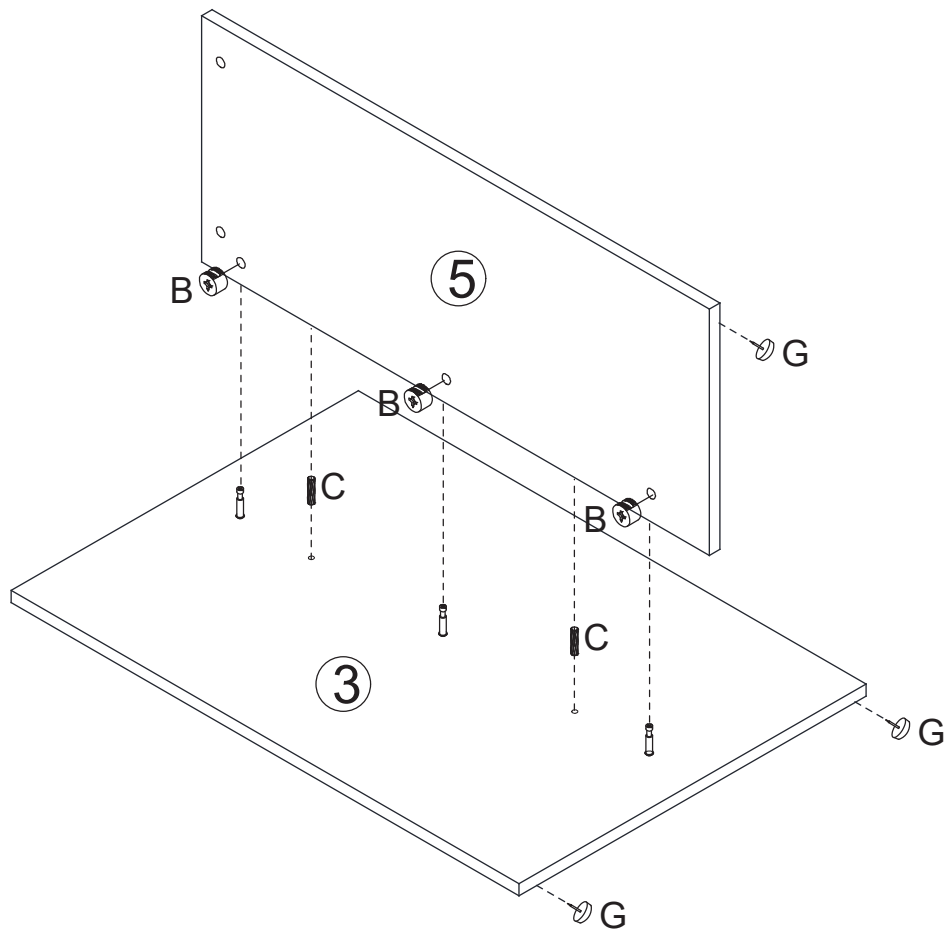



D x2



E x12



④ x1

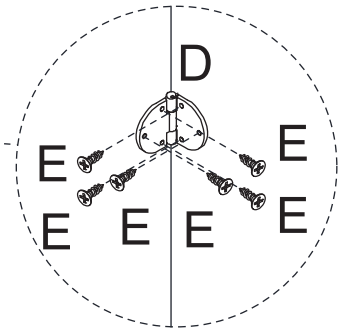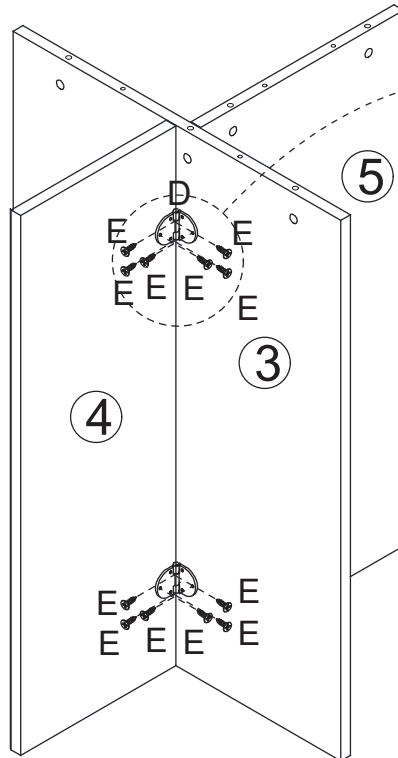

H x8




F x2







G x1



⑥ x1


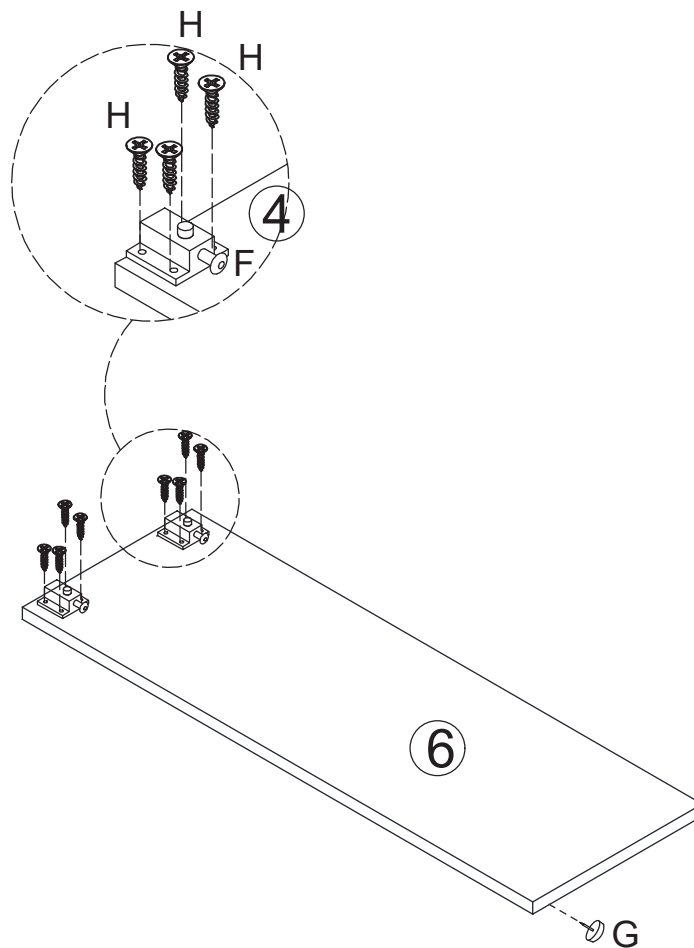


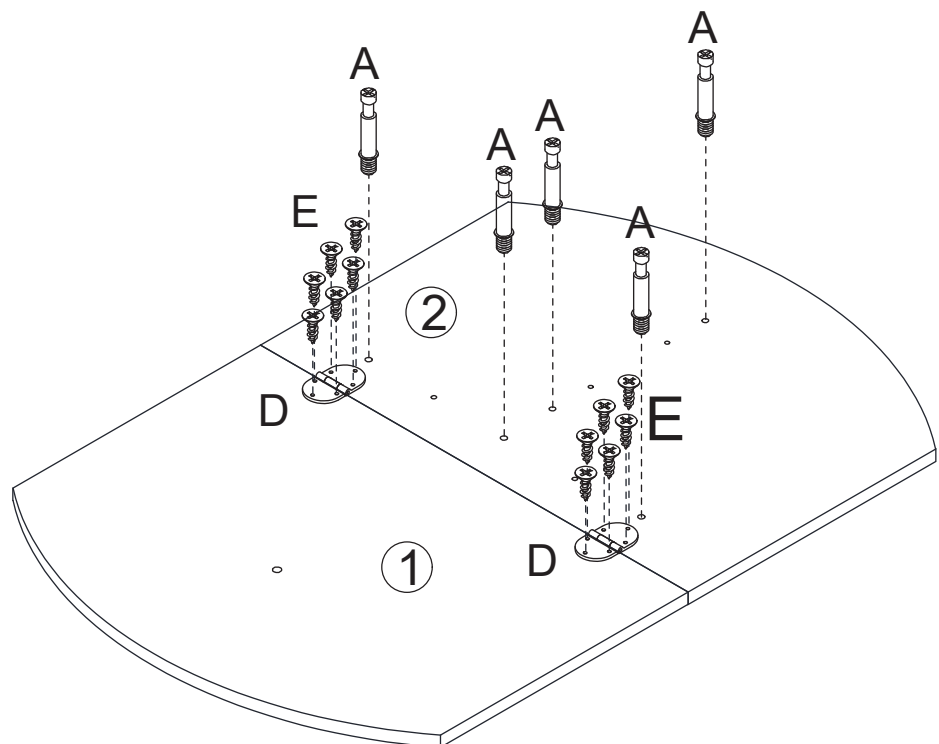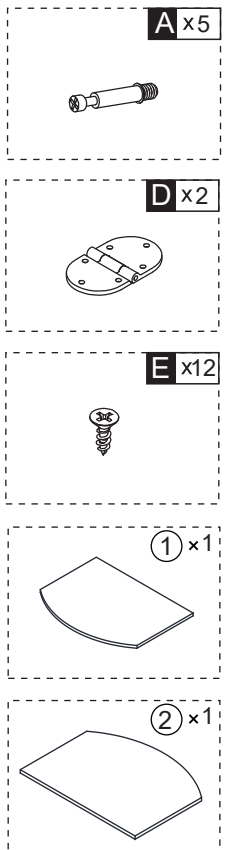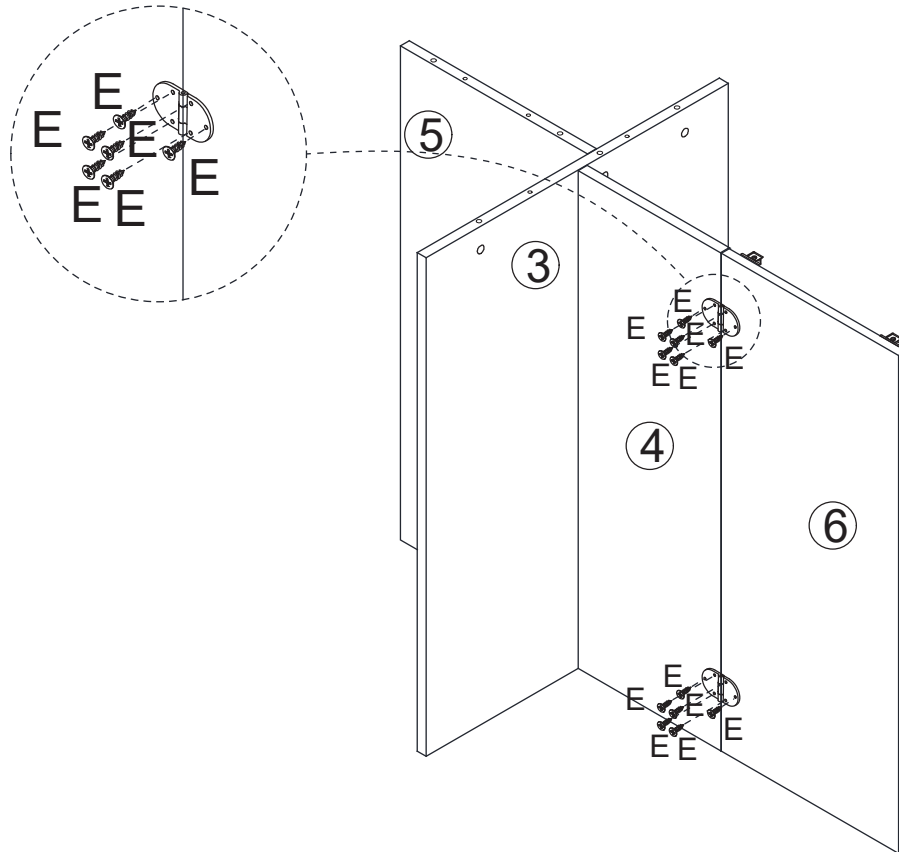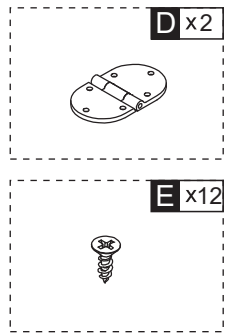


B x5



C x4

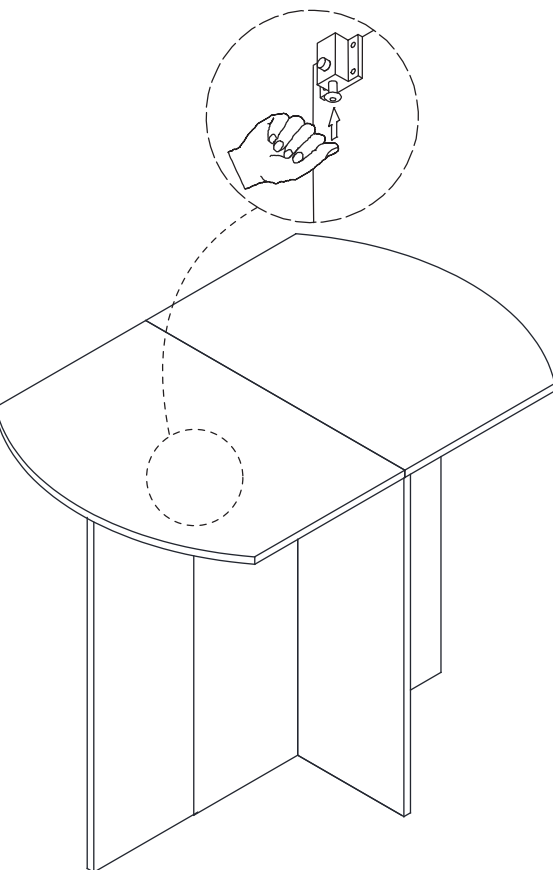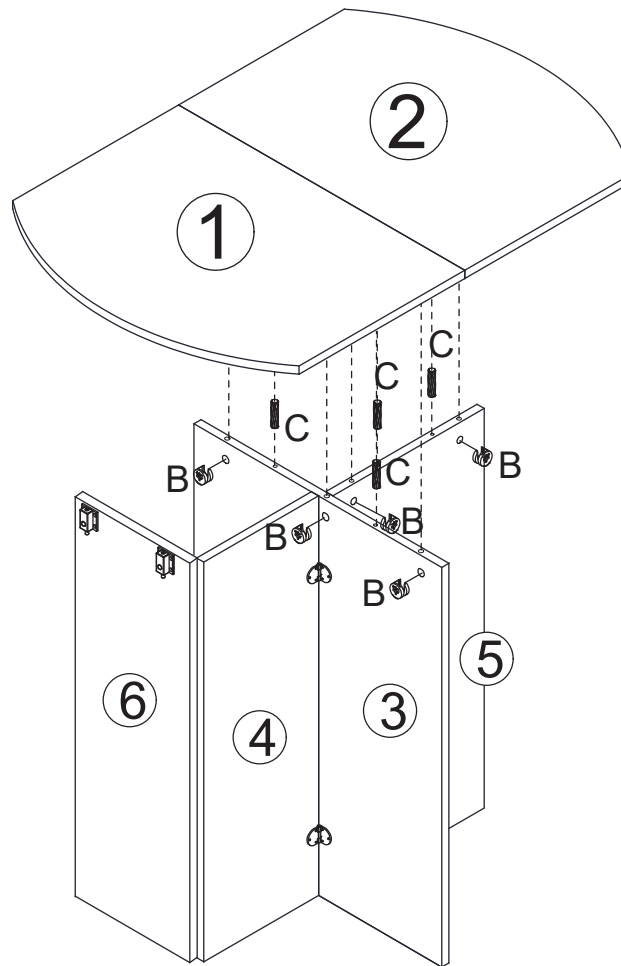

OR

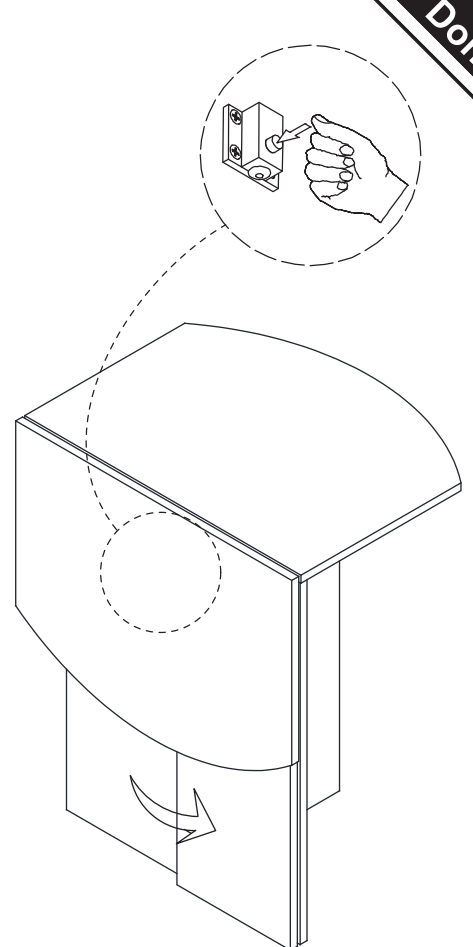

Done