ASSEMBLY INSTRUCTION

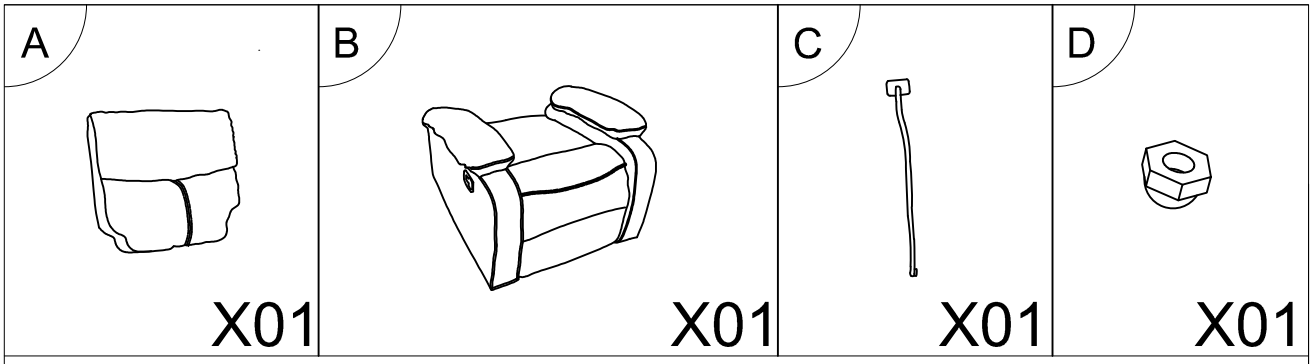

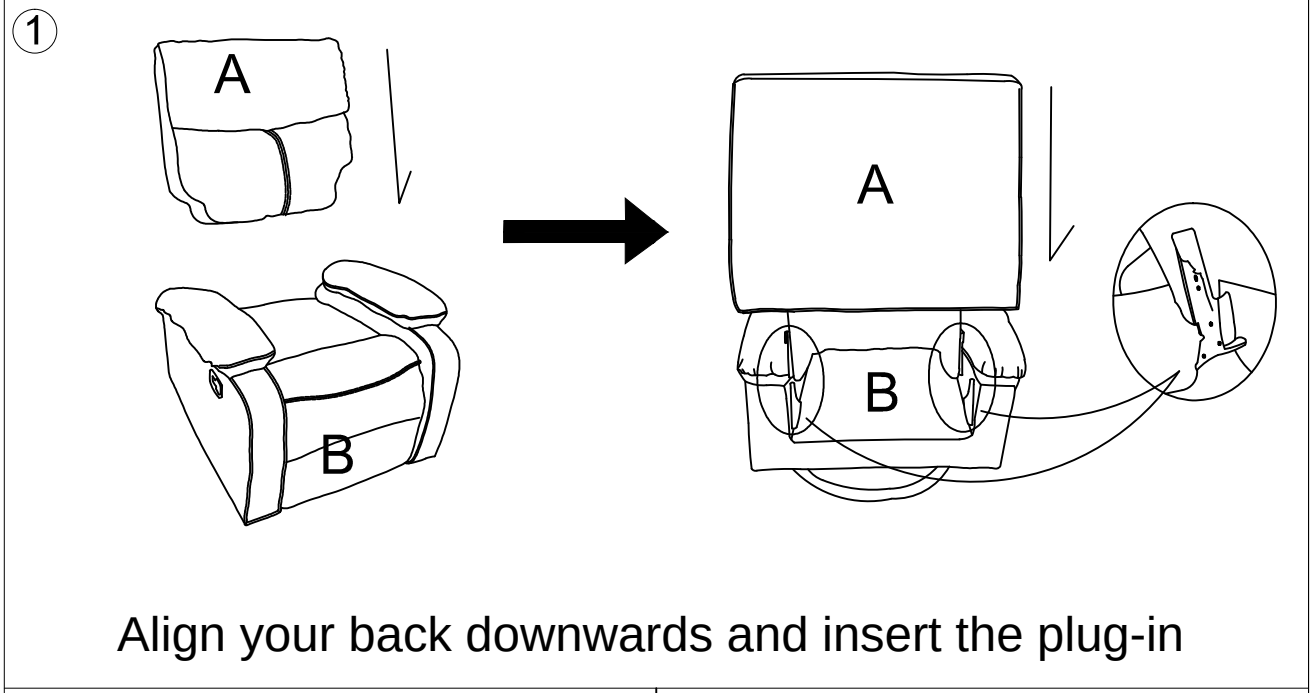
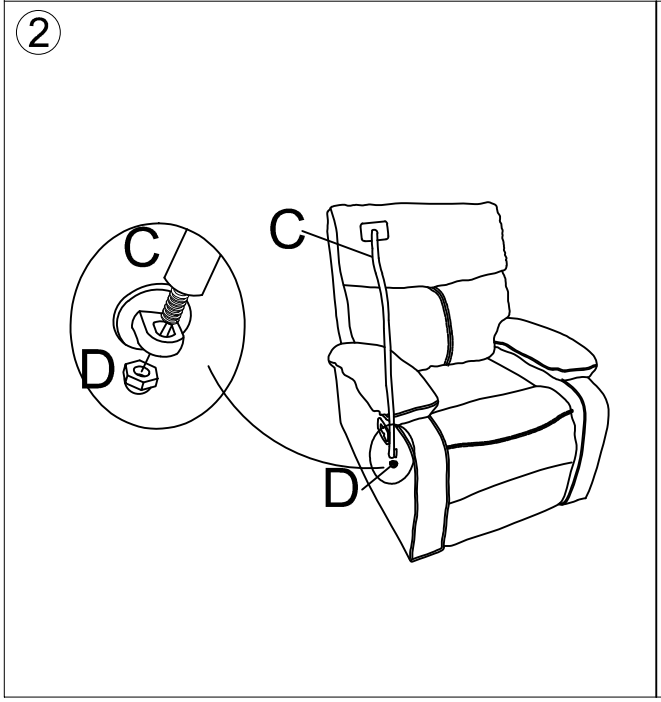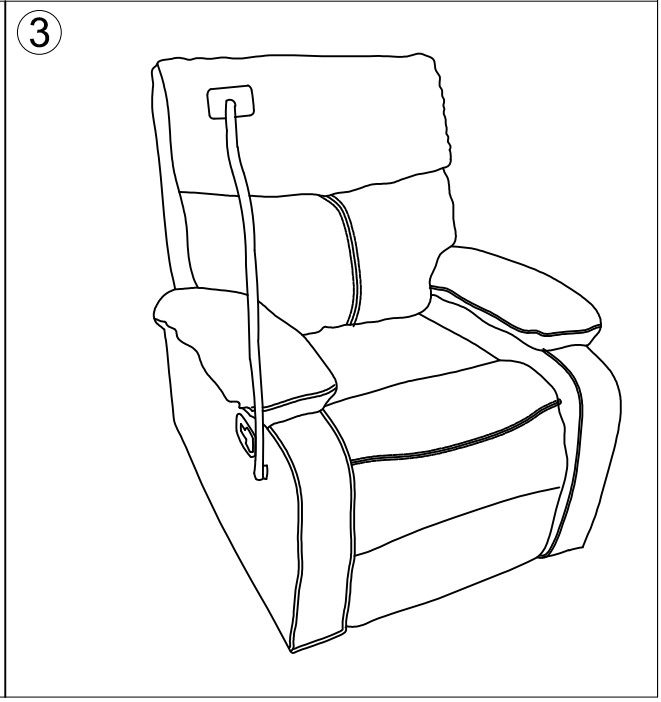
Align your back downwards and insert the plug-in