



ASSEMBLY INSTRUCTION


4PCS LAVAL SET

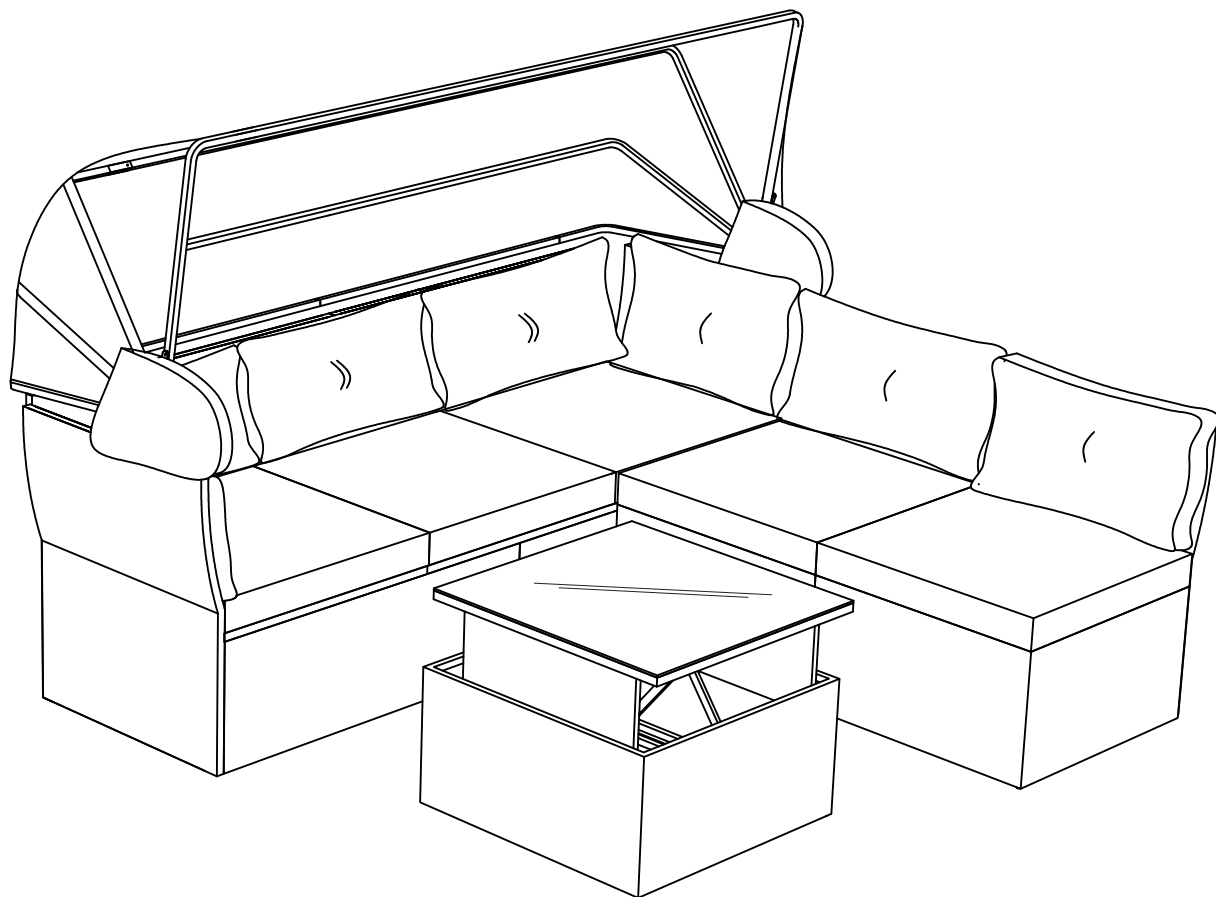


COMPONENTS:

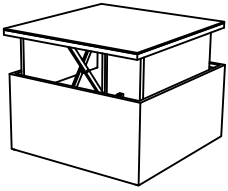


(A) x1




(B) x1




(C) x1

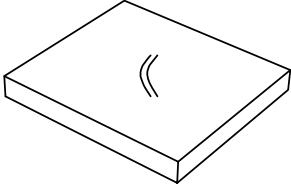


(D) x1

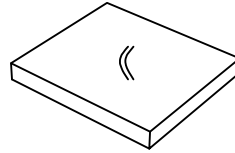


(E) x5

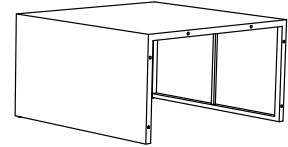


(F) x2

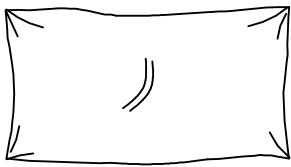


(G) x5

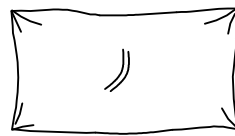


(H) x2




(J) x2

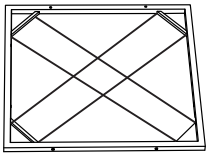


(K) x1

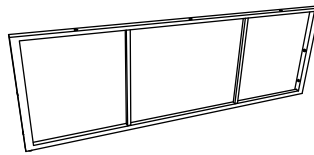


(L) x1

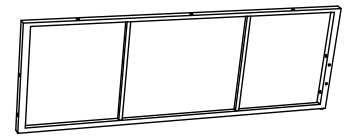


(M) x1

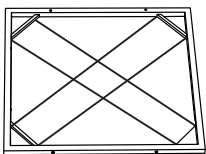


(N) x2

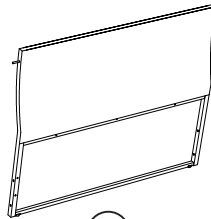


(O) x1

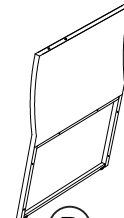


(P) x1

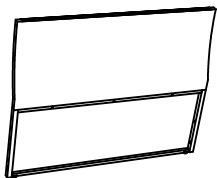


(Q) x1

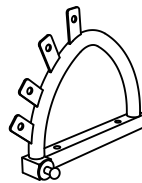


(R) x1

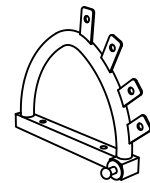

(S) x1









(T) x1

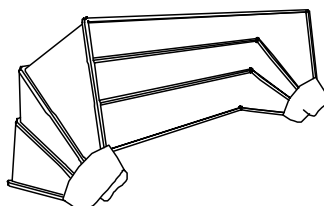


(U) x1

COMPONENTS:

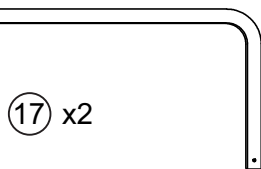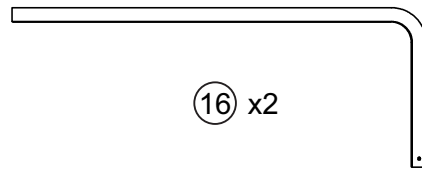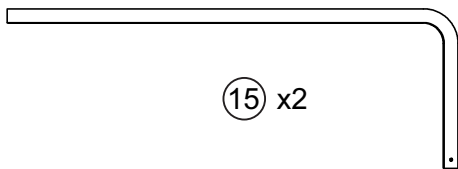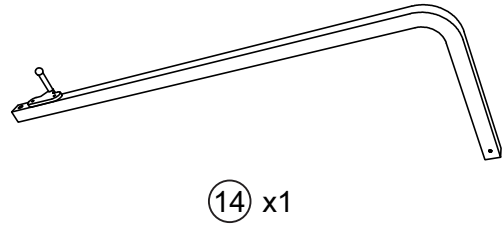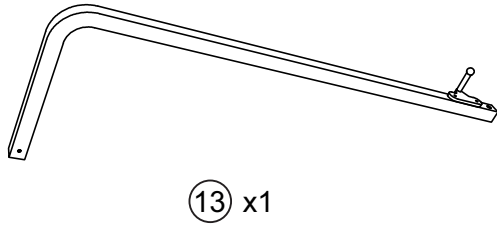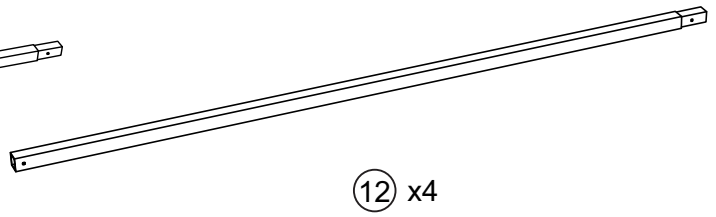

HARDWARE:



Bolt M6x40mm = 38 pcs




Bolt M6x30mm = 10 pcs



Screw = 12 pcs




Washer = 60 pcs



Allenkey = 2 pc







Bolt M6x20mm = 12 pcs




Gas Spring 160N = 2 pcs

X1

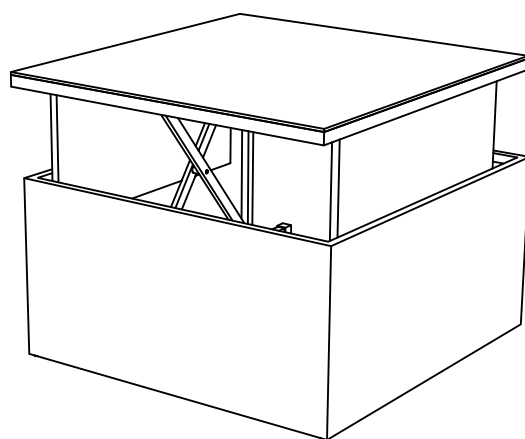


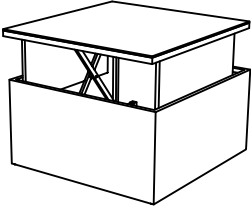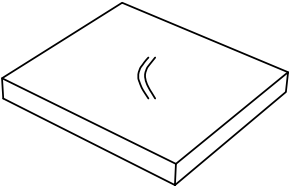A		1 PC
B		1 PC
D		1 PC


Step 1.1: **OPTION: GLASS**

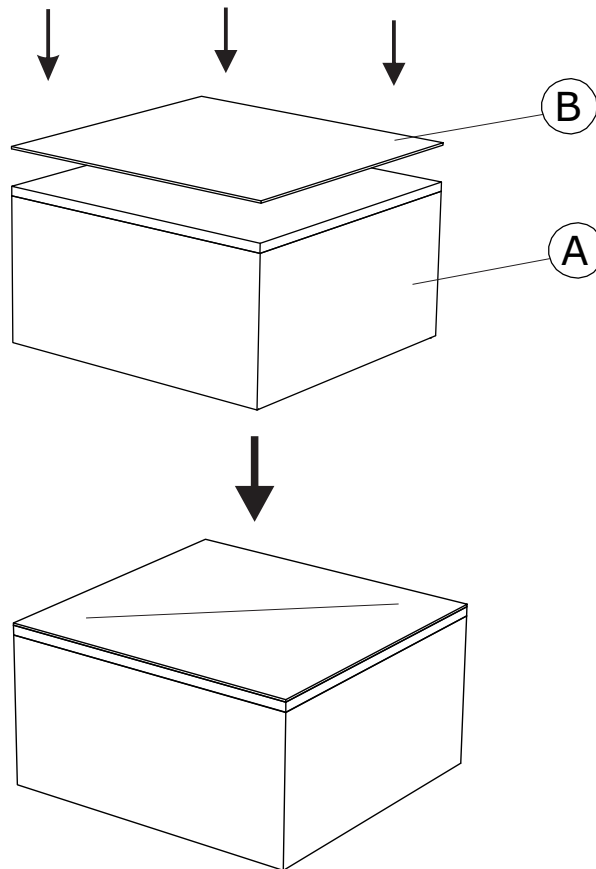


Step 1.2: **OPTION: SEAT CUSHION**

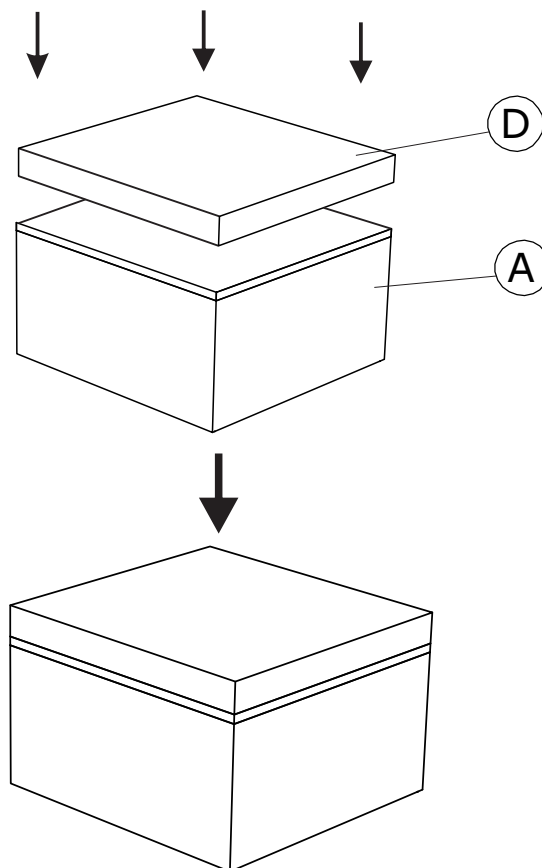

Step 2: **Pull up the table top and steel bars**

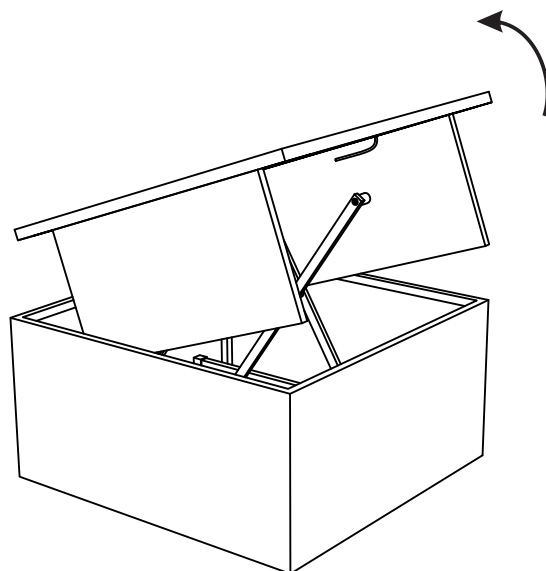






Step 3: **Put the Plastic Wheel into the position**

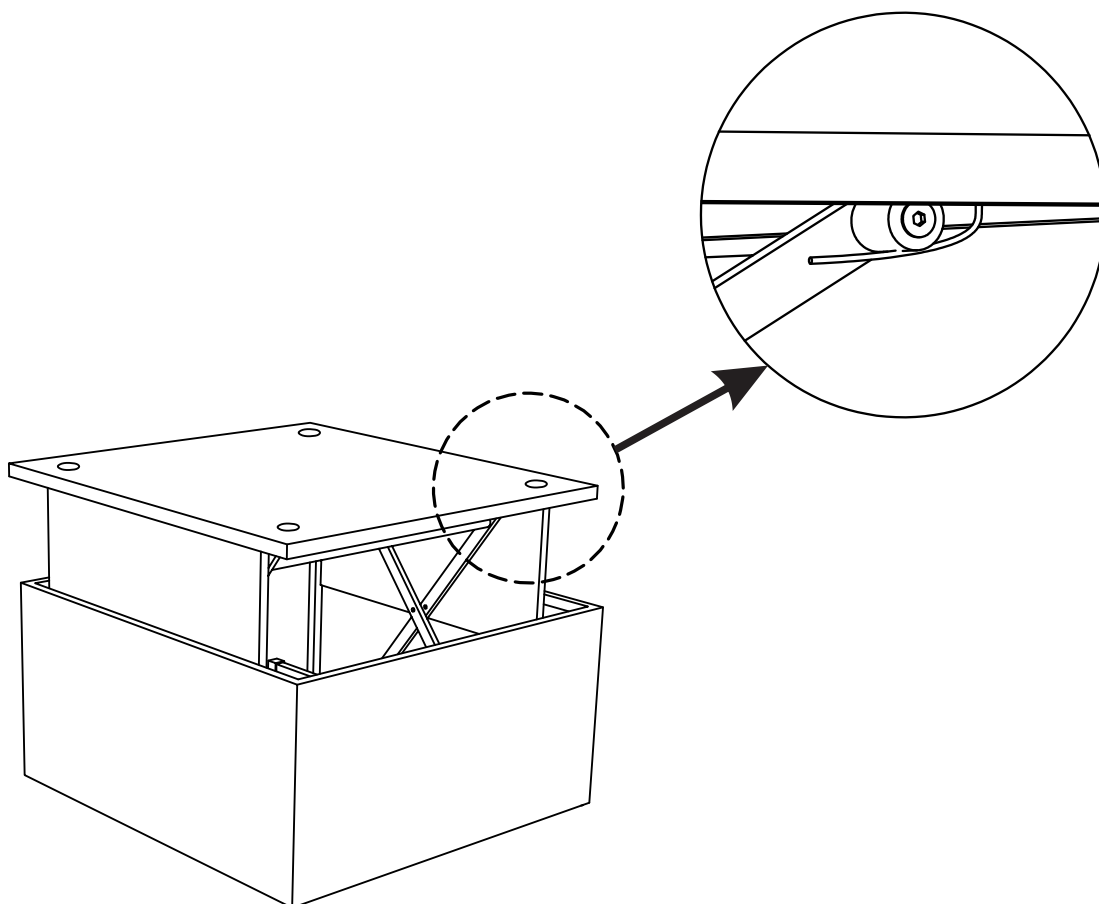




Finish

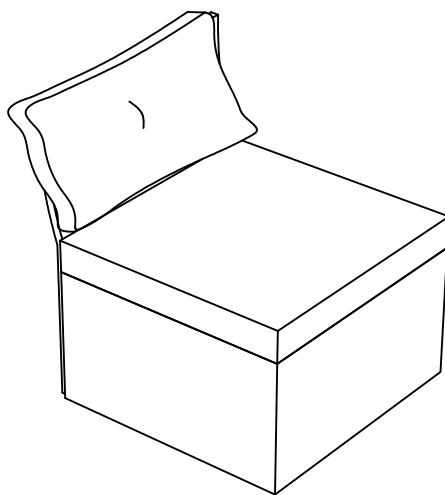
X2

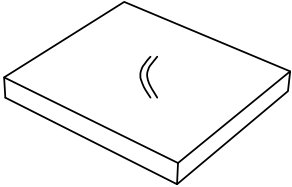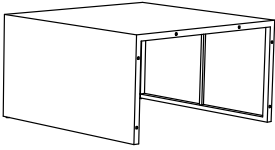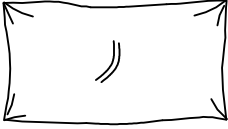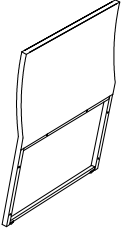



E		1 PC
F		1 PC
G		1 PC
J		1 PC

1	 M6x40 mm	6 PCS
4	 Ø6 x 14 mm	6 PCS
5	 Allenkey 4 x 80	1 PC



Step 1:

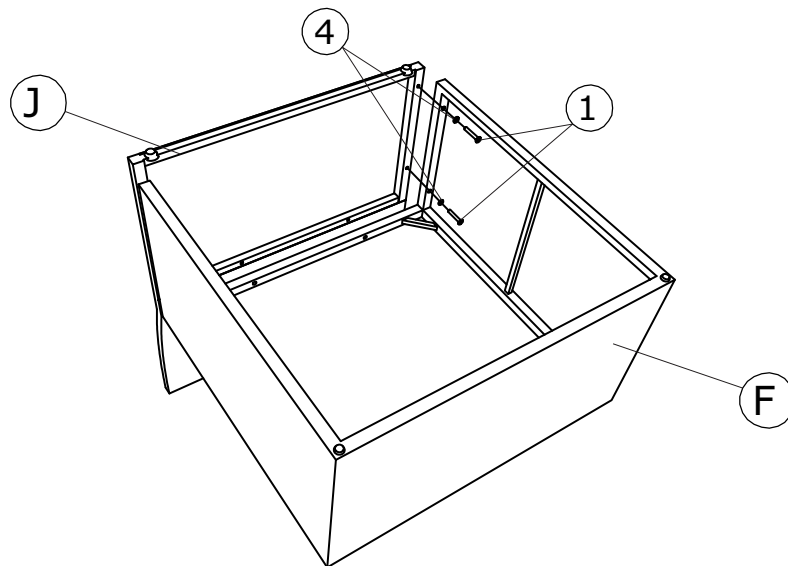

Step 2 :

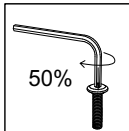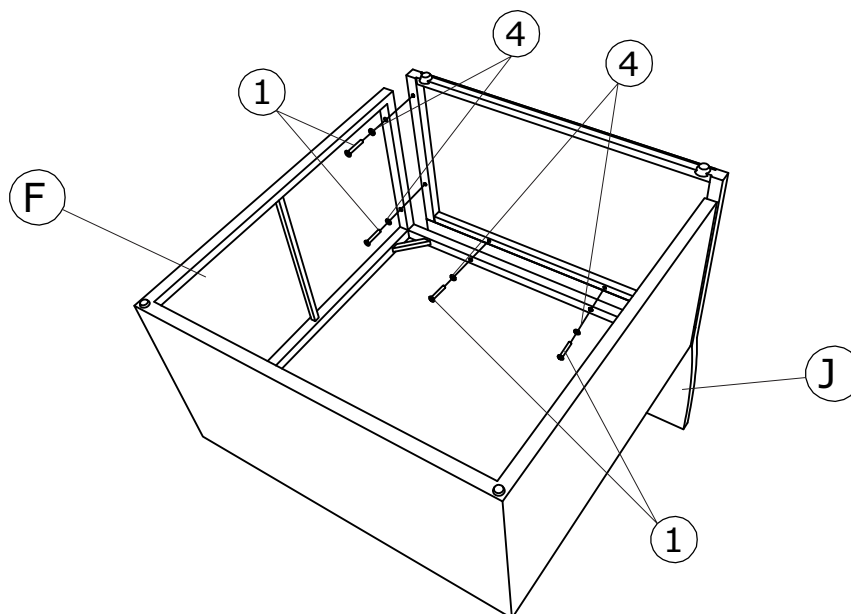



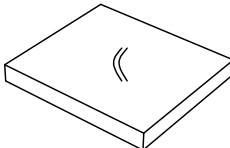



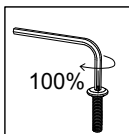
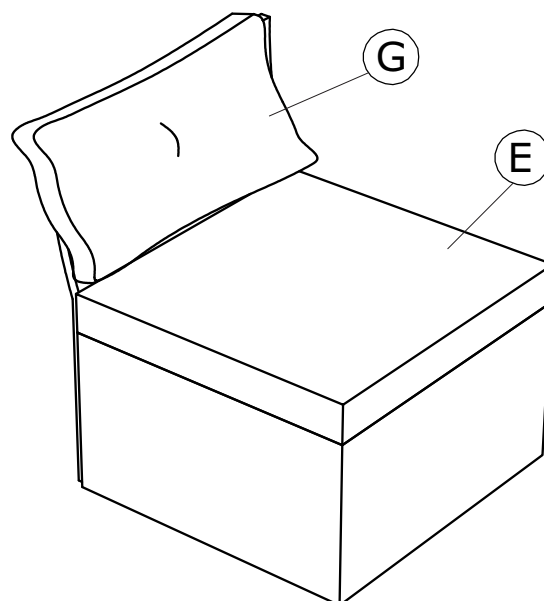
Step 3 :





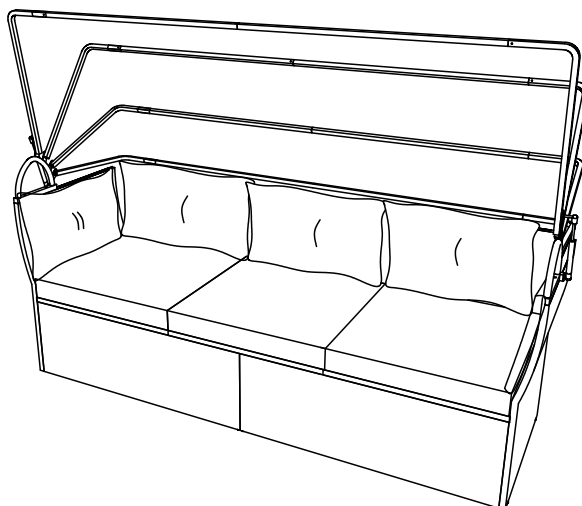

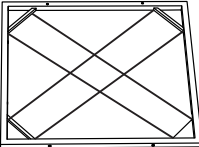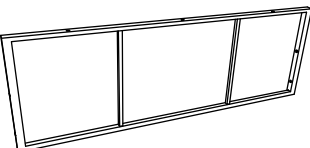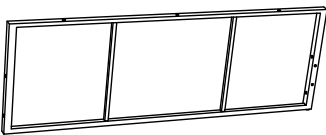










Finish








X1



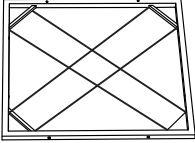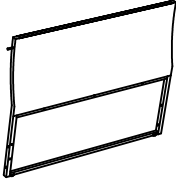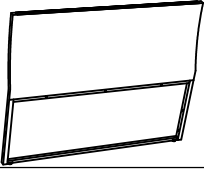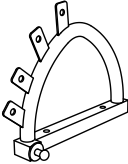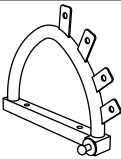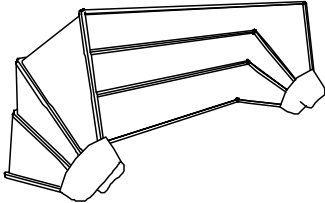
C		1 PC
E		3 PCS
G		3 PCS
H		2 PCS
K		1 PC
L		1 PC
M		1 PC

1	 M6x40 mm	26 PCS
2	 M6x30 mm	10 PCS
3		12 PCS
4		48 PCS
5		1 PC
6	 M6x20 mm	12 PCS
7		2 PCS

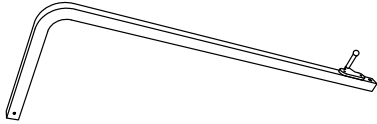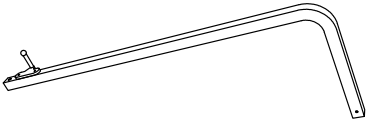
N		2 PCS
O		1 PC
P		1 PC
Q		1 PC
R		1 PC
S		1 PC
T		1 PC
U		1 PC

11		4 PCS
12		4 PCS
13		1 PC
14		1 PC
15		2 PCS
16		2 PCS
17		2 PCS



Step 1:

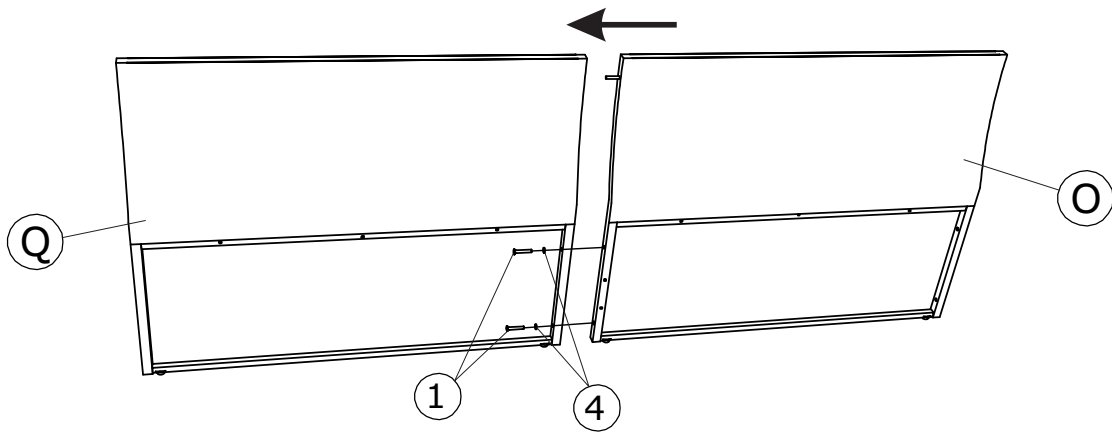


Step 2 :

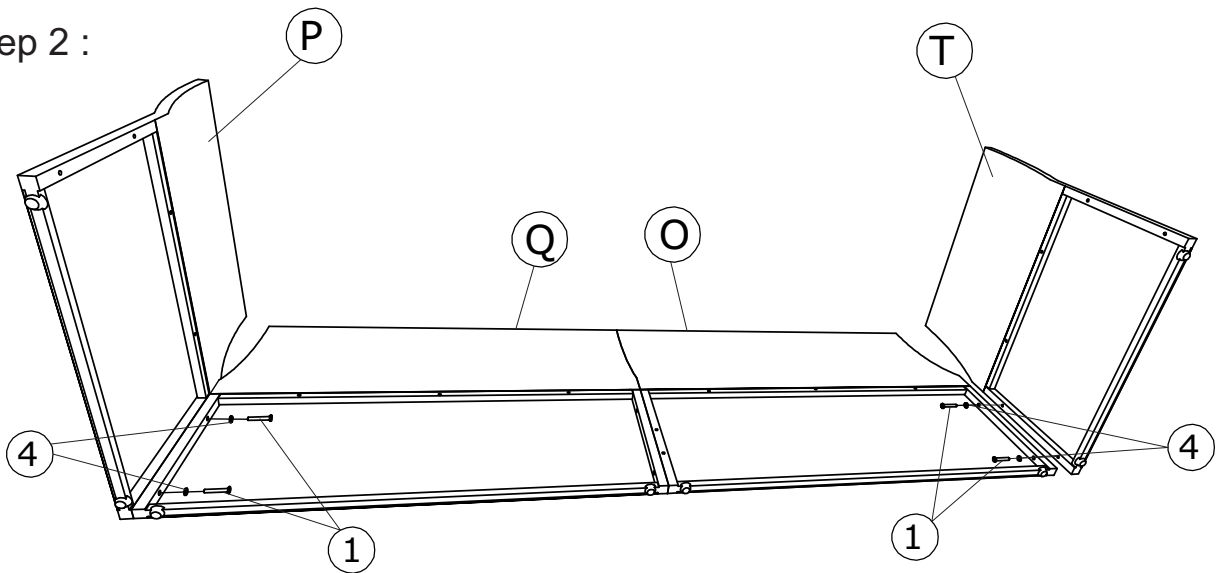


Step 3 :

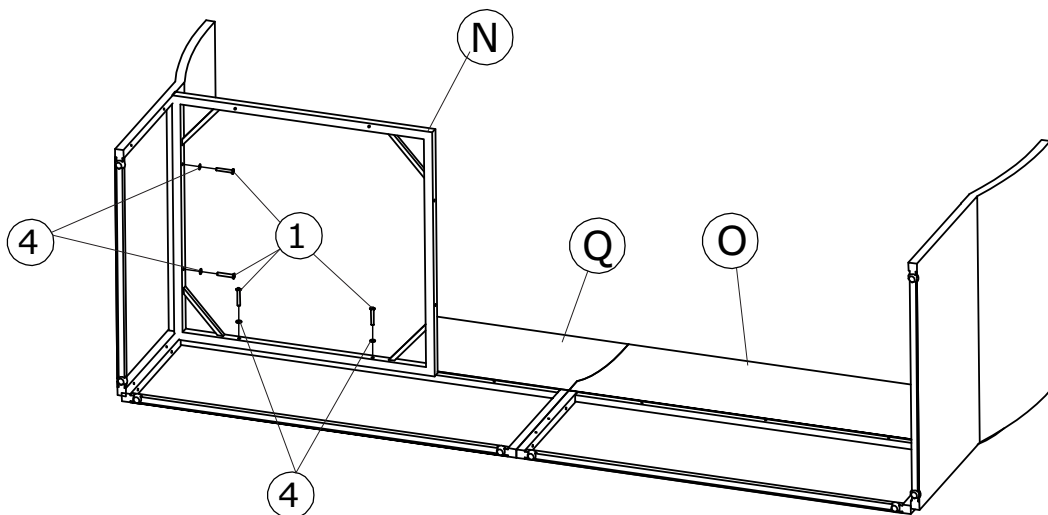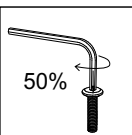



Step 4:

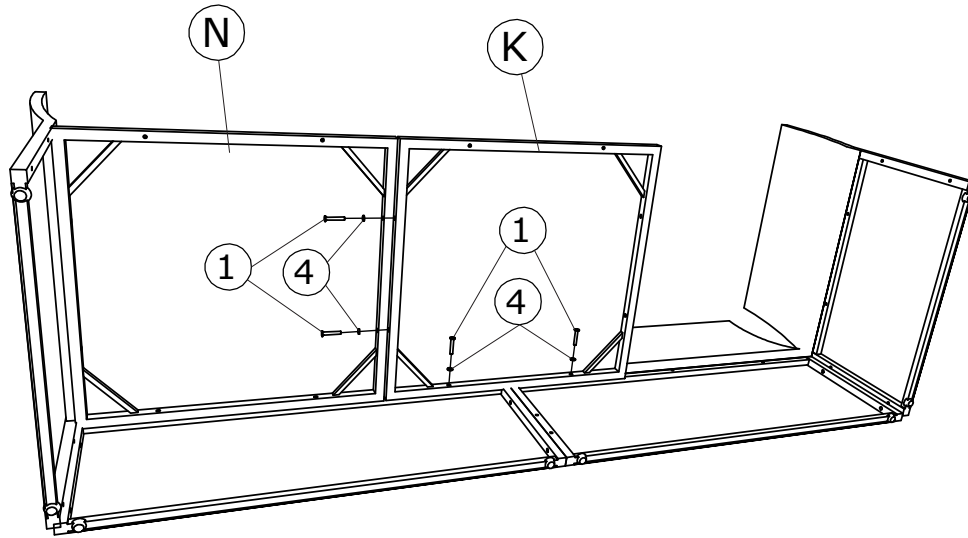


Step 5 :

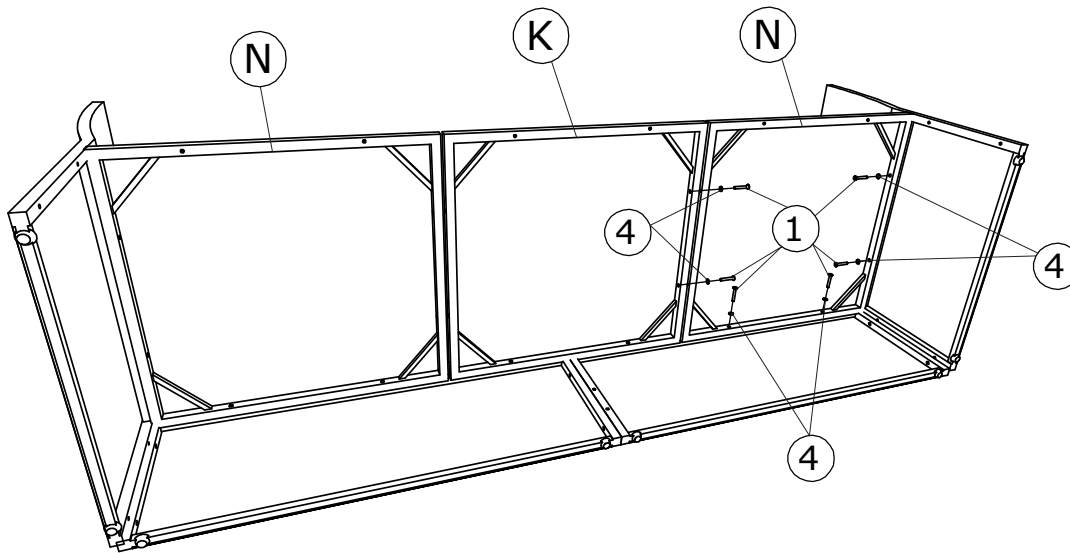



Step 6 :

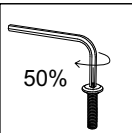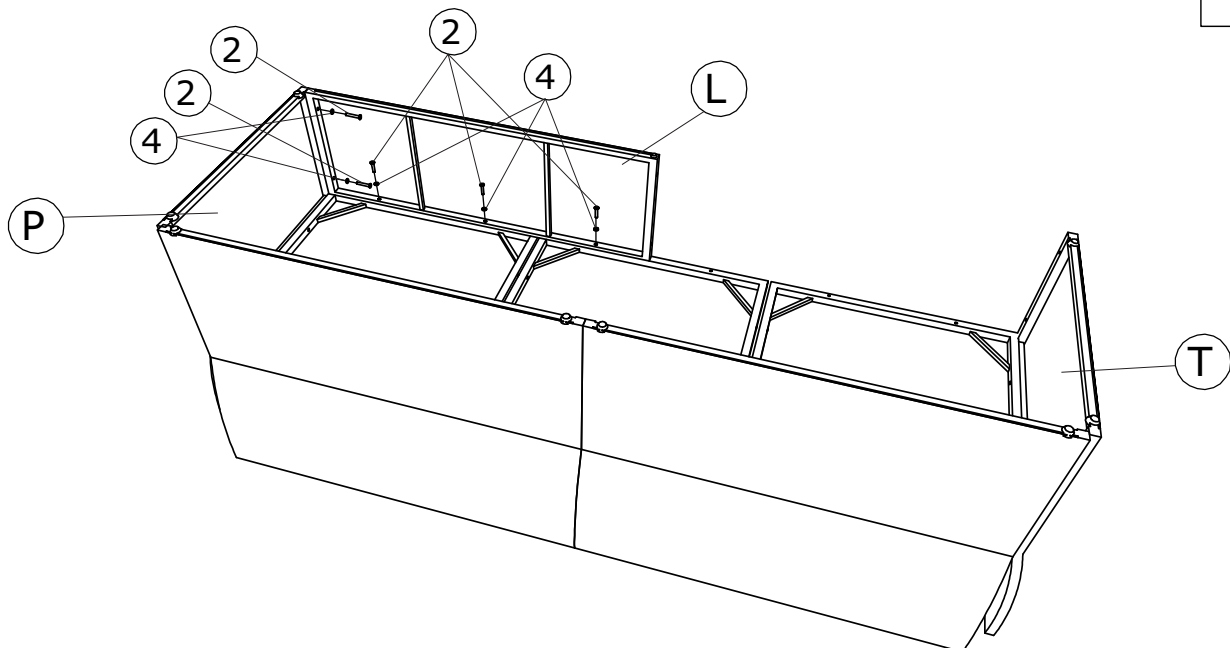



Step 7:

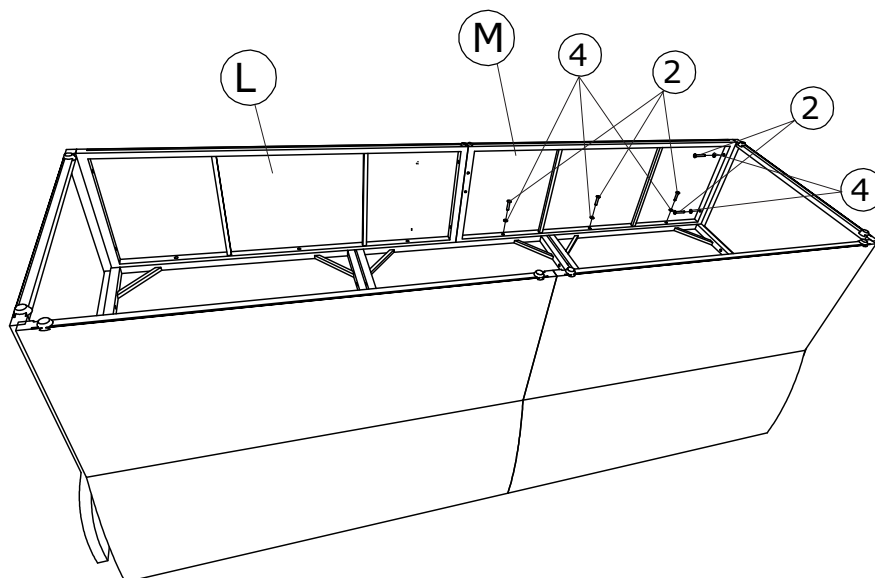


Step 8 :

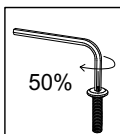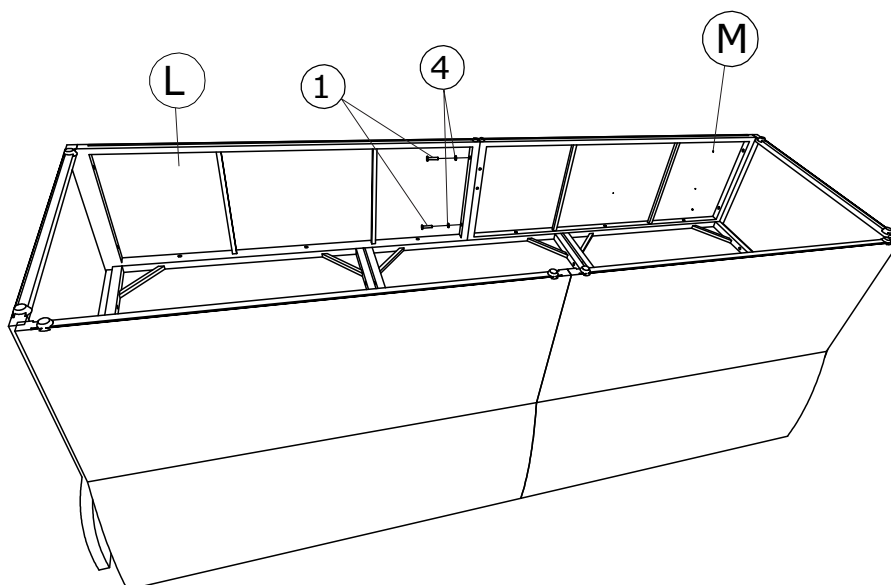


Step 9 :

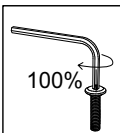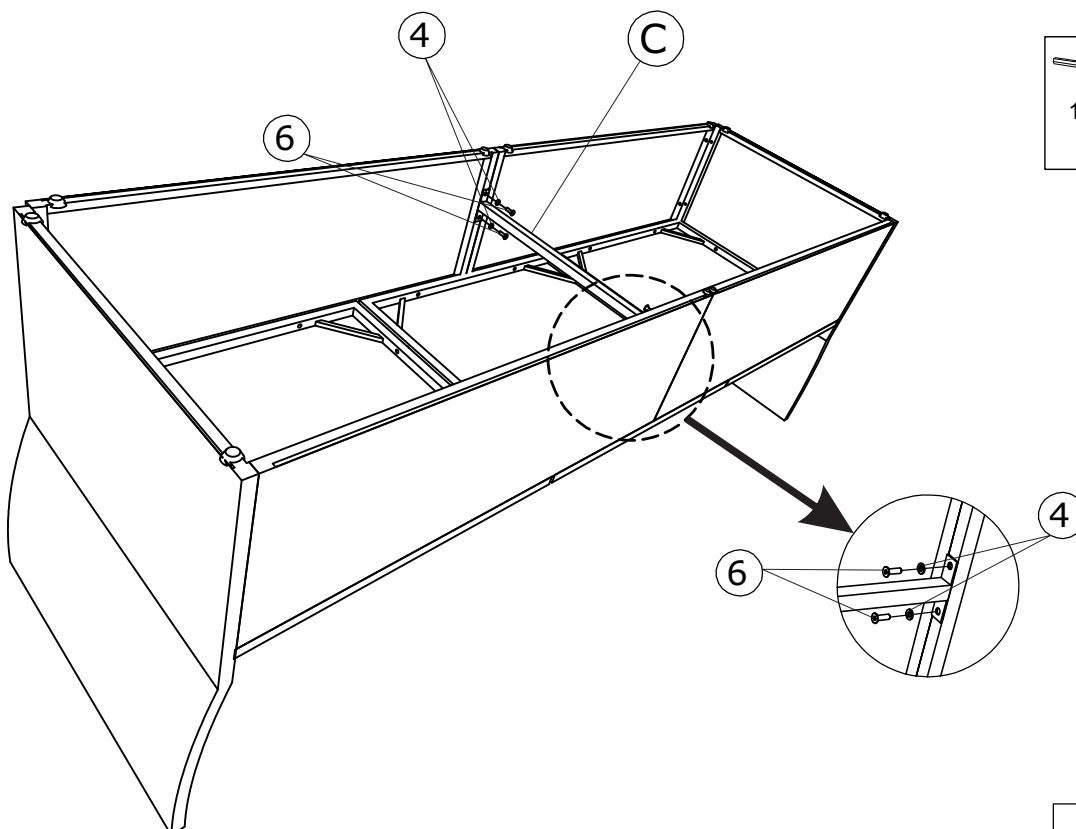


Step 10:

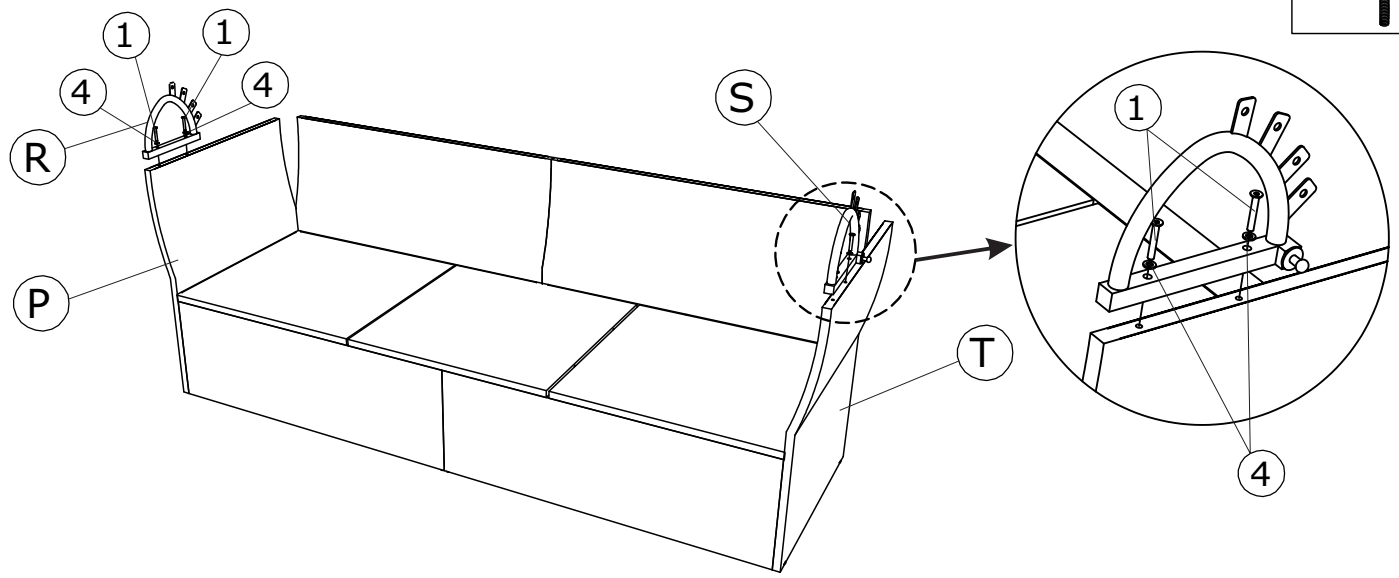


Step 11 : **Part A**

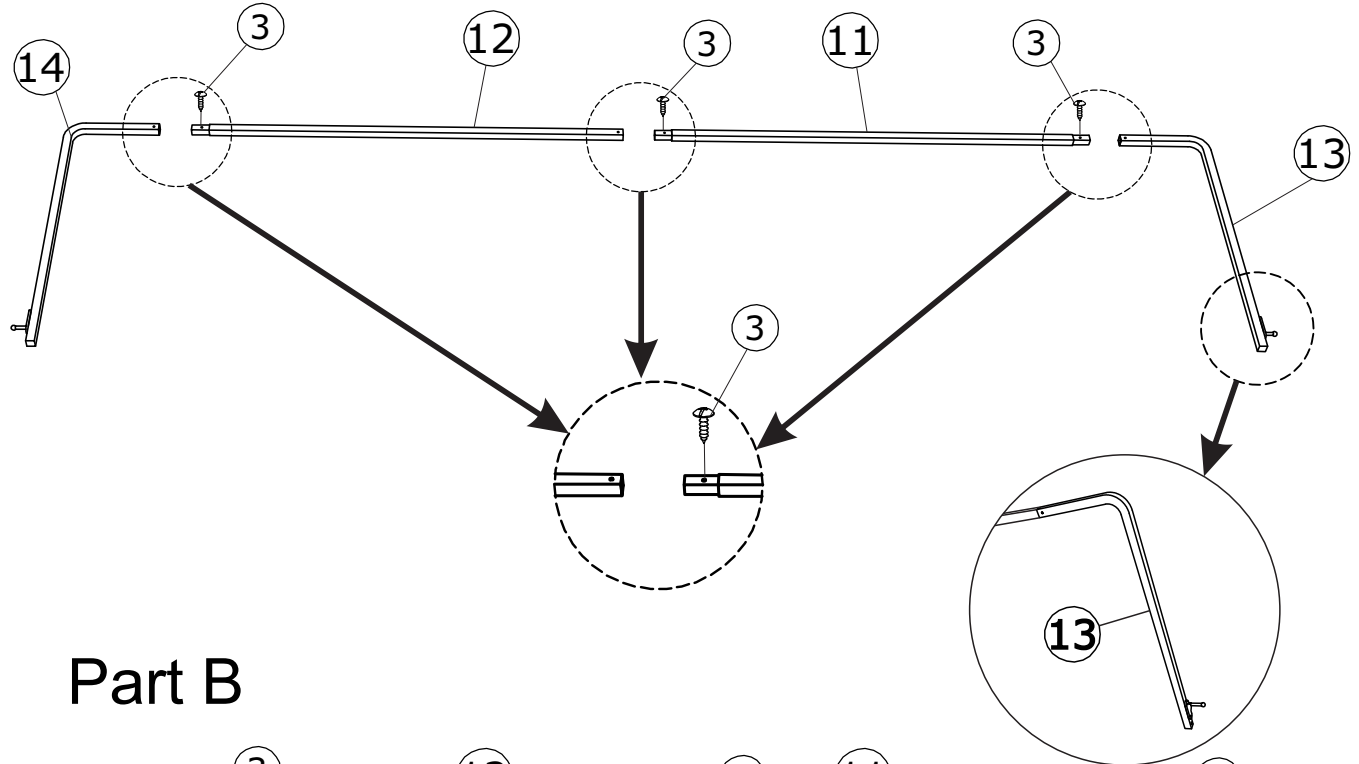


Part B

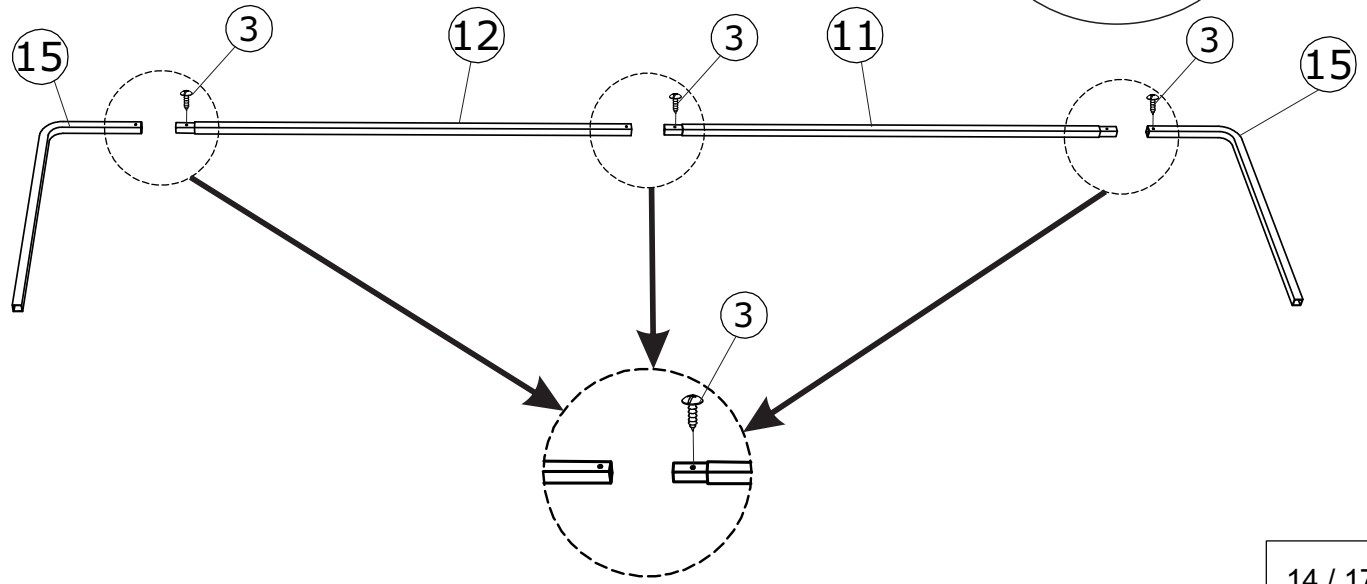


Part C

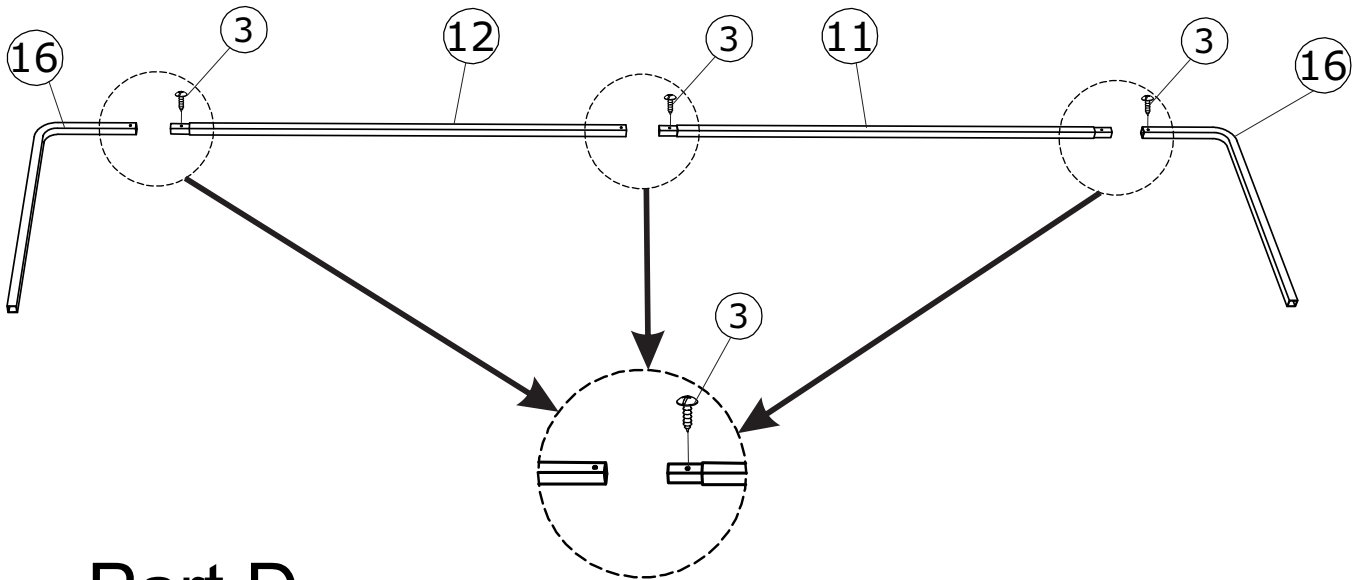


Part D

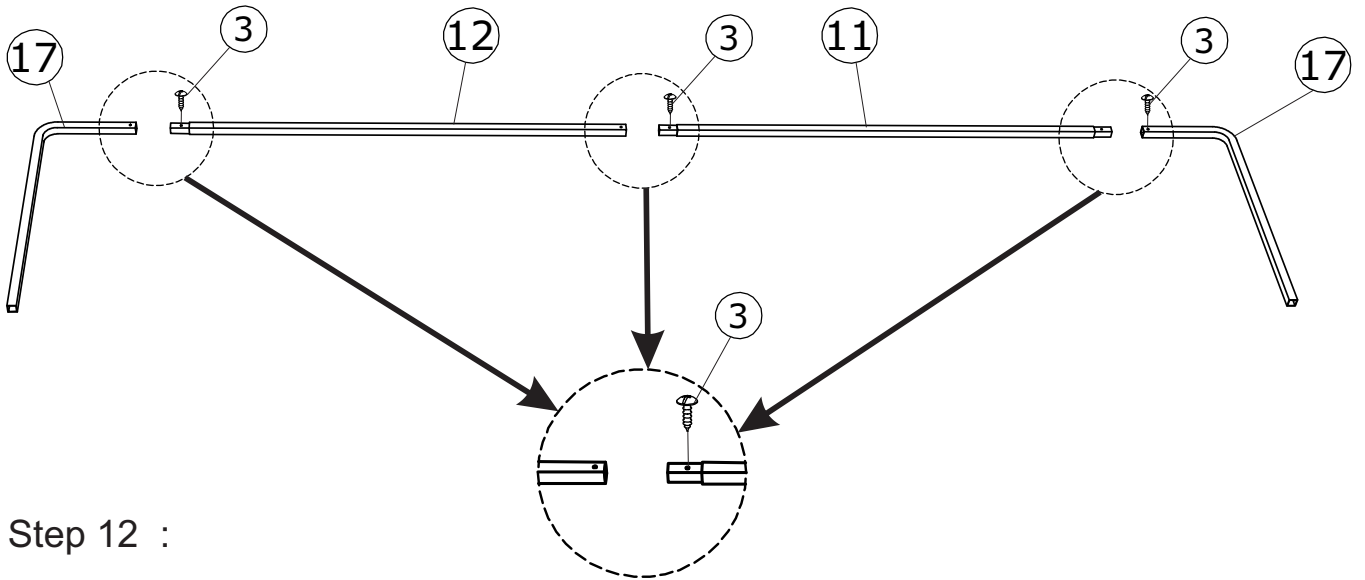


Step 12 :

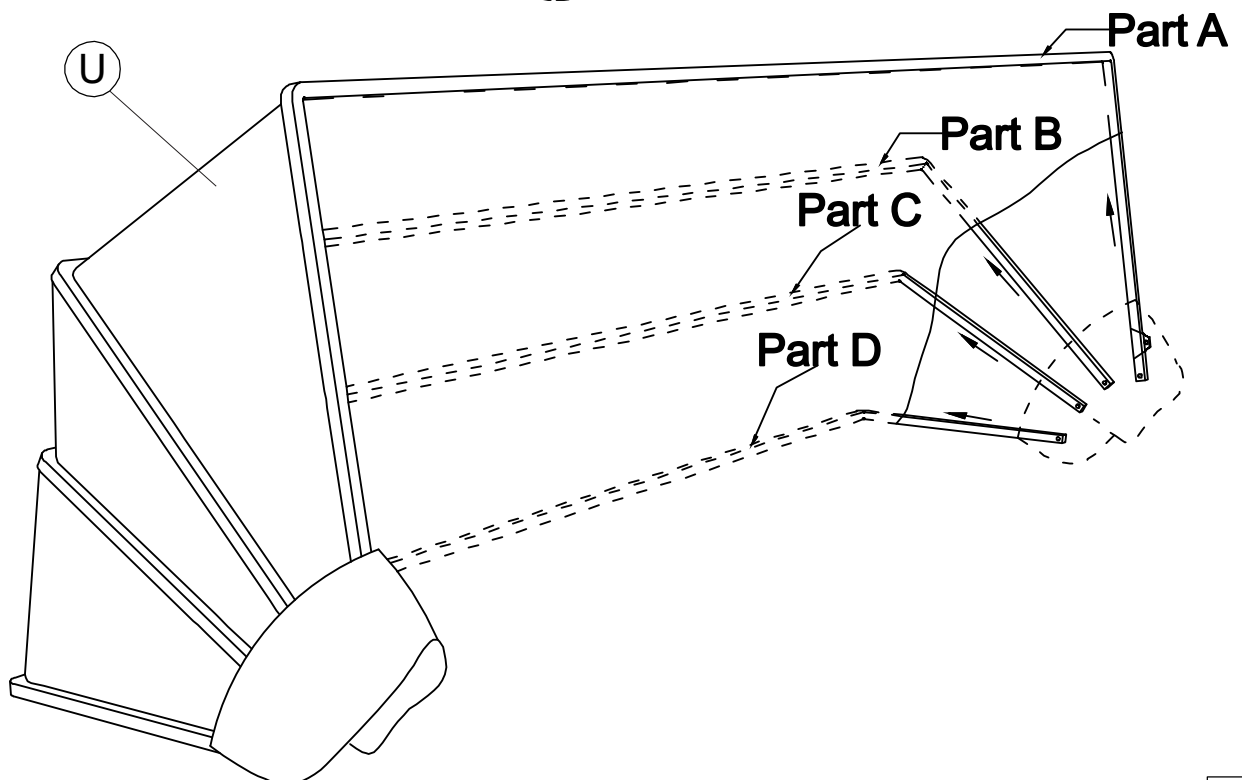


Step 13:

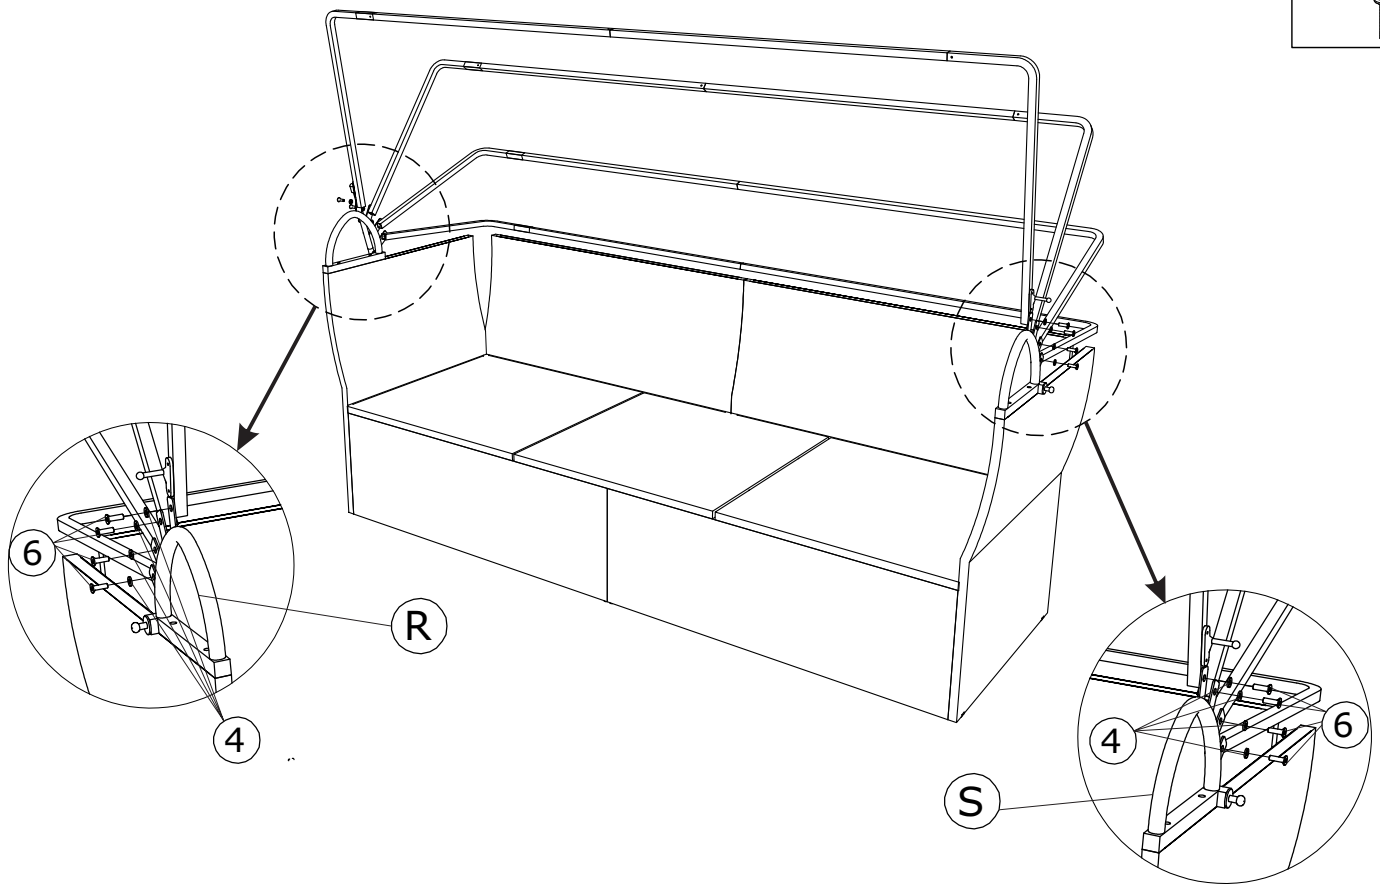

Step 14:

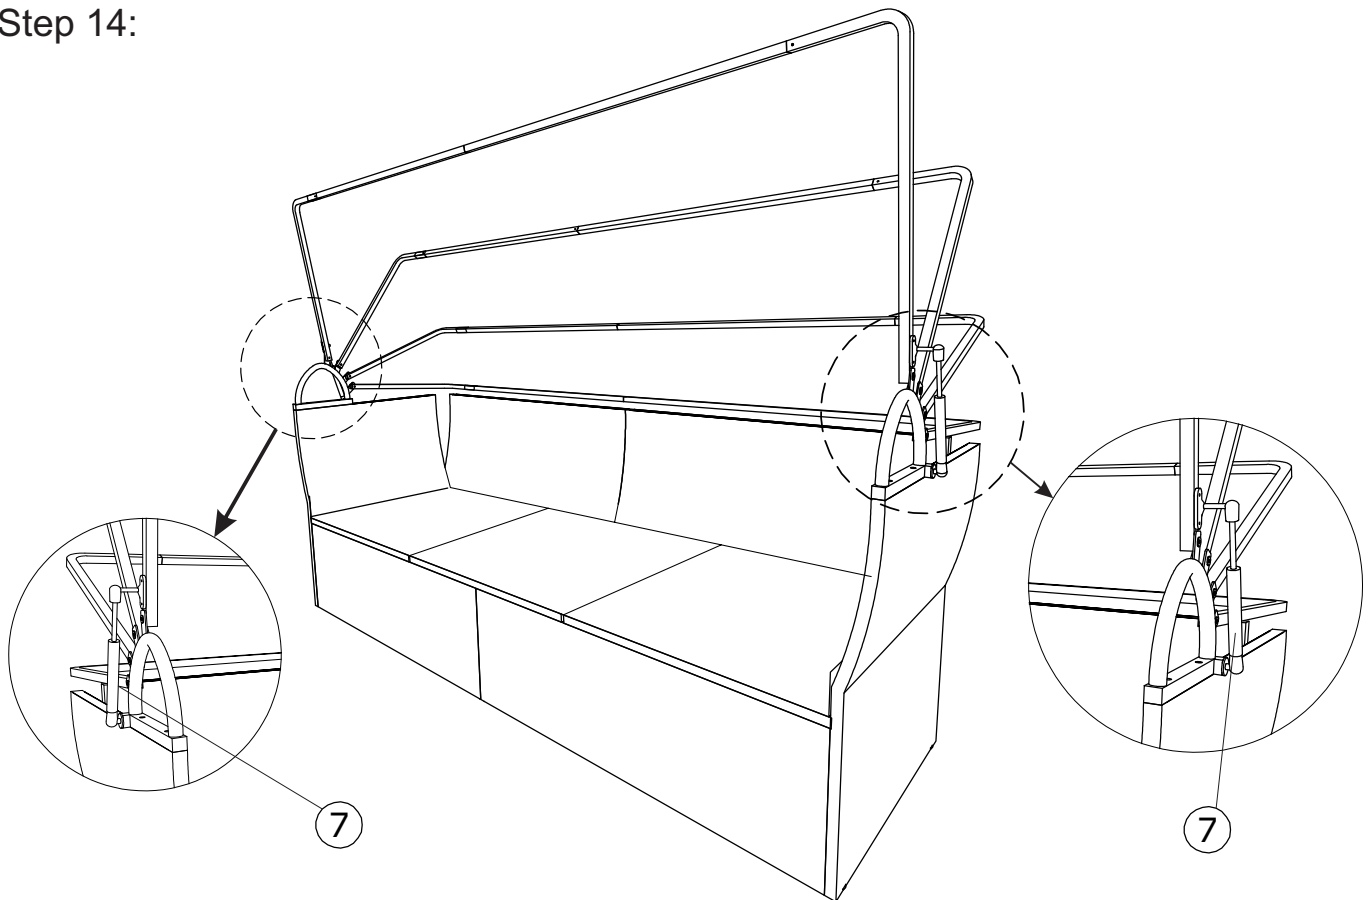

Step 14: CLOSING DOWN

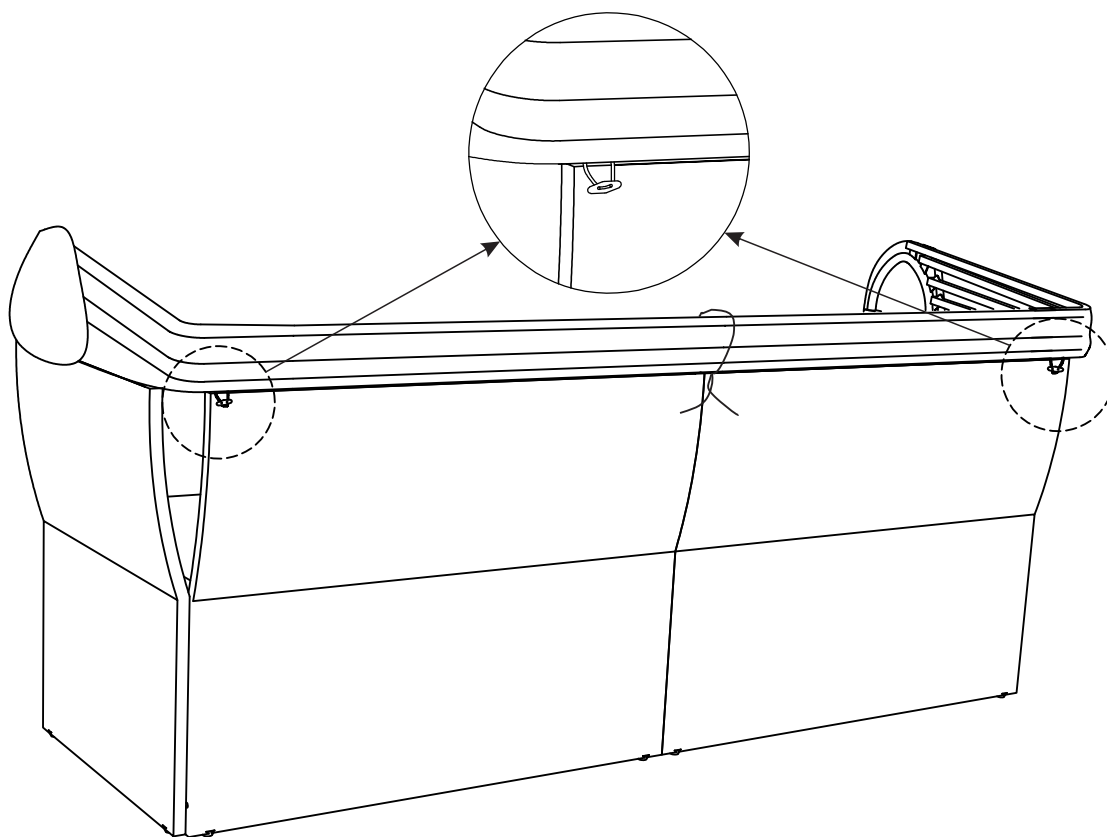

Step 15: OPENING UP

