

LIBRARY CABINET




PARTS LIST

SCREW




X 16

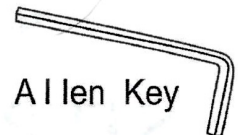


Allen Key

TOP

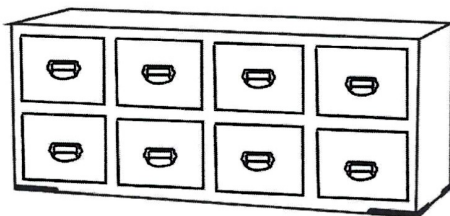

(P1) x 1

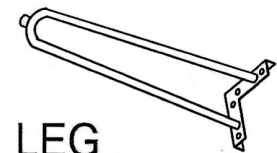


LEG

(P2) x 4

CHECK TO MAKE SURE NOTHING IS MISSING BEFORE YOU START

STEP 1

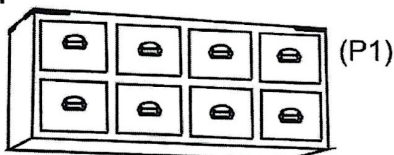



Place the top (P1) upside down on a soft flat surface.

STEP 2

Attach the 4 legs (P2) to the top (P1) using screws leave a little loose


STEP 3

Now tighten the screws
turn the item over carefully

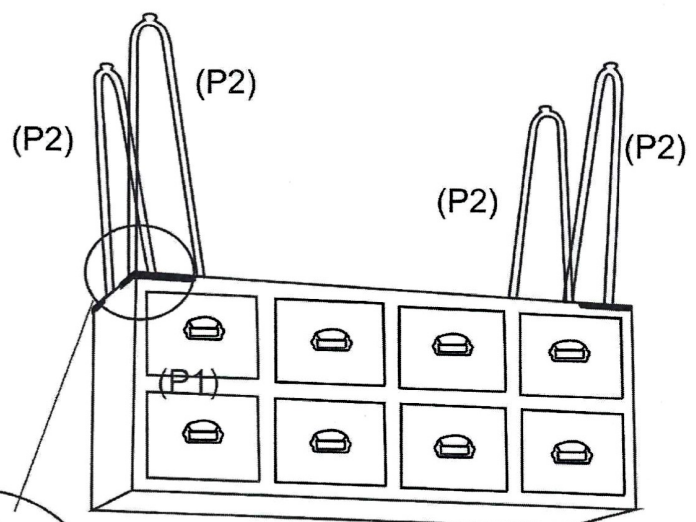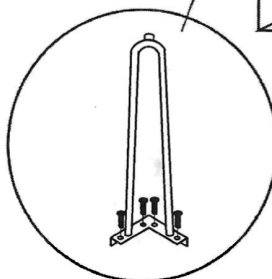


The job is finished

Finish:

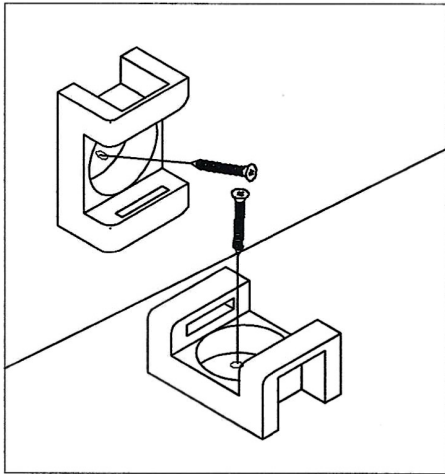

STEP 1

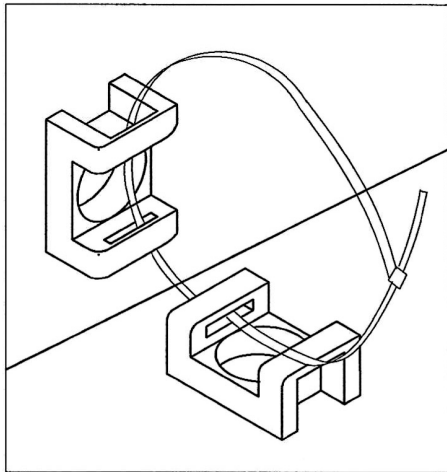

STEP 2

Assembling done.
Anti-tipping hardware
is provided and should
be used !