

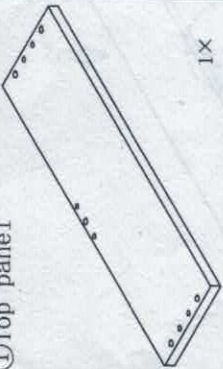
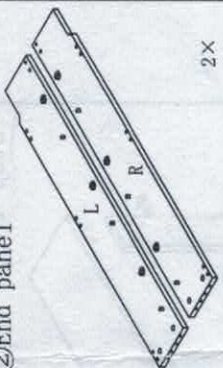
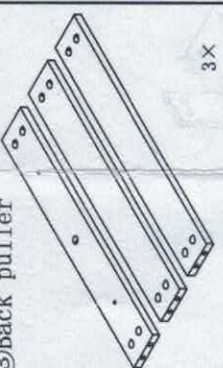
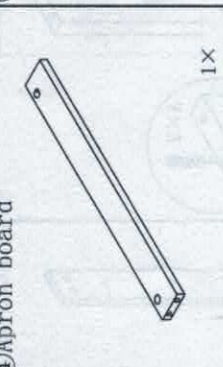
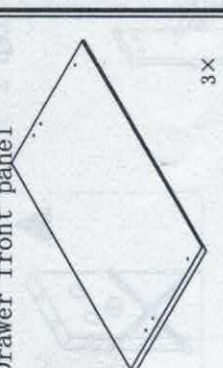
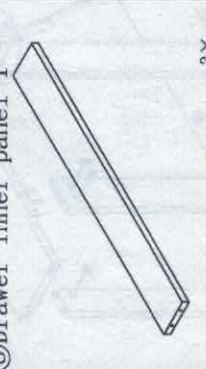
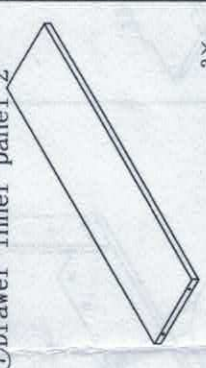
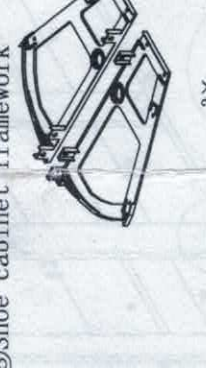
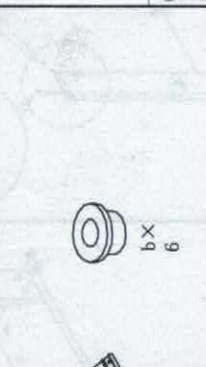
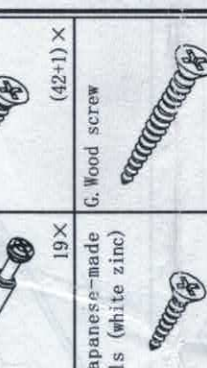
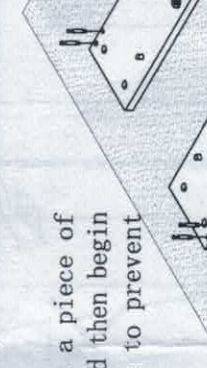
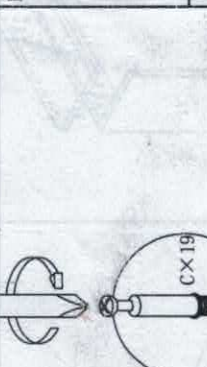
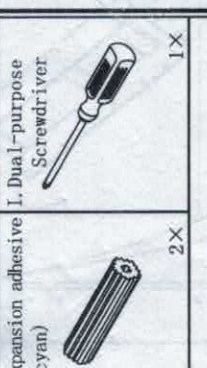


①Top panel  1×	②End panel  2×	③Back puller  3×	④Apron board  1×	⑤Drawer front panel  3×
⑥Drawer inner panel 1  3×	⑦Drawer inner panel 2  3×	⑧Shoe cabinet framework  3×	A. Dowel  8×	B. Cam lock  19×
Install by 2 persons 	C. Cam pin  19×	E. Japanese-made nails (color zinc)  (42+1)×	F. Japanese-made nails (white zinc)  (6+1)×	G. Wood screw  2×
Step 1 Attention: First of all, put a piece of carton rug on the floor, and then begin to install the panels, so as to prevent the parts from scratch	H. Expansion adhesive (cyan)  2×	I. Dual-purpose Screwdriver  1×	⑨Shoe cabinet framework  3×	⑩Shoe cabinet framework  3×
Model GF531-0611 Size 600*170*1170H	Model GF531-0611 Size 600*170*1170H	Model GF531-0611 Size 600*170*1170H	Model GF531-0611 Size 600*170*1170H	Model GF531-0611 Size 600*170*1170H


Step 2

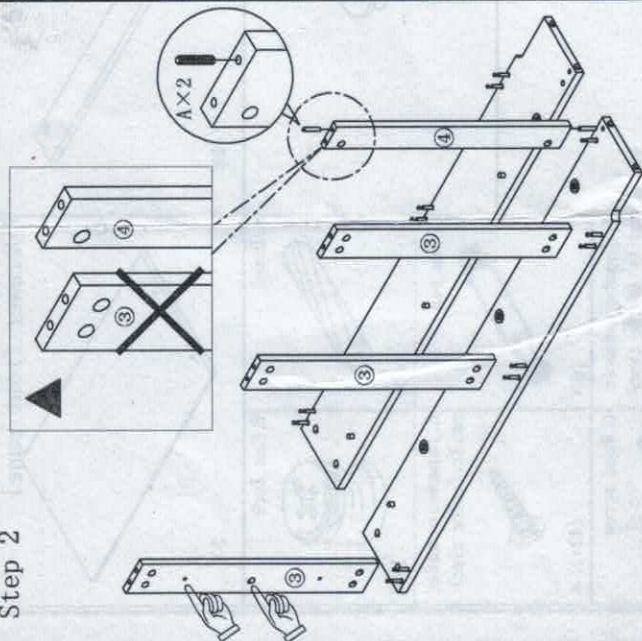


Step 3

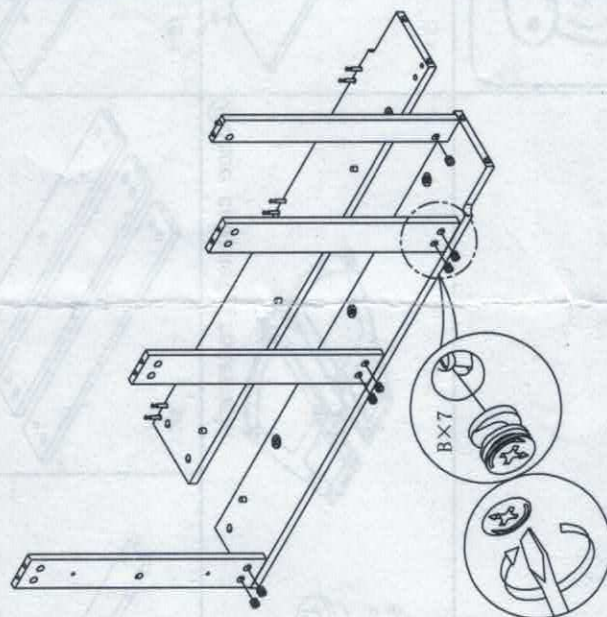


Step 4

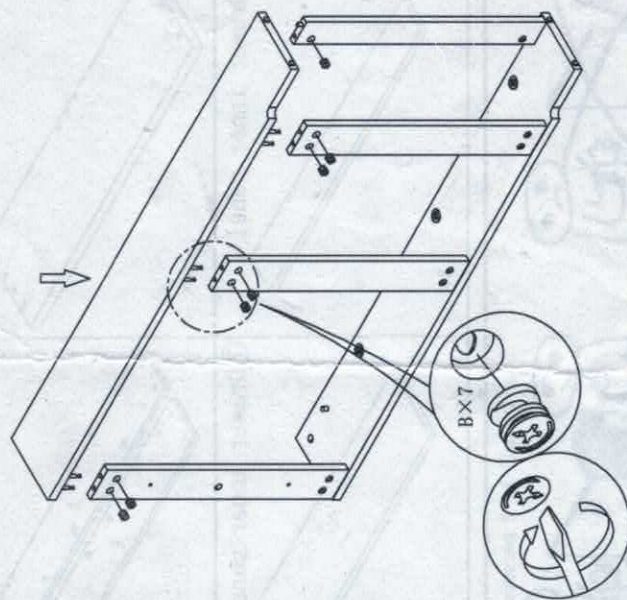


Step 5

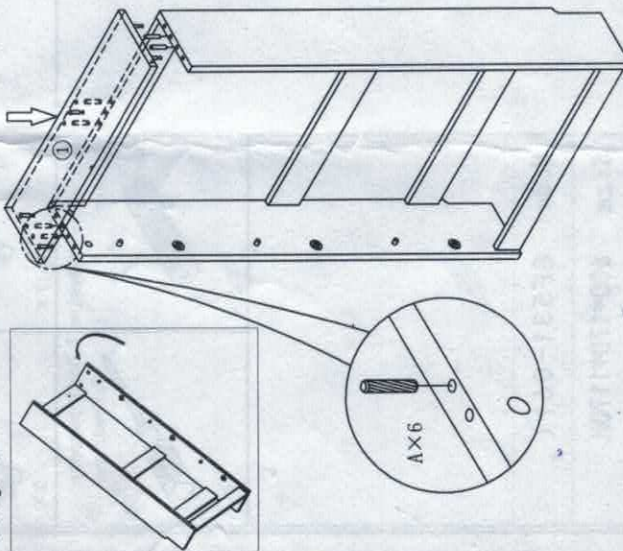


Step 6

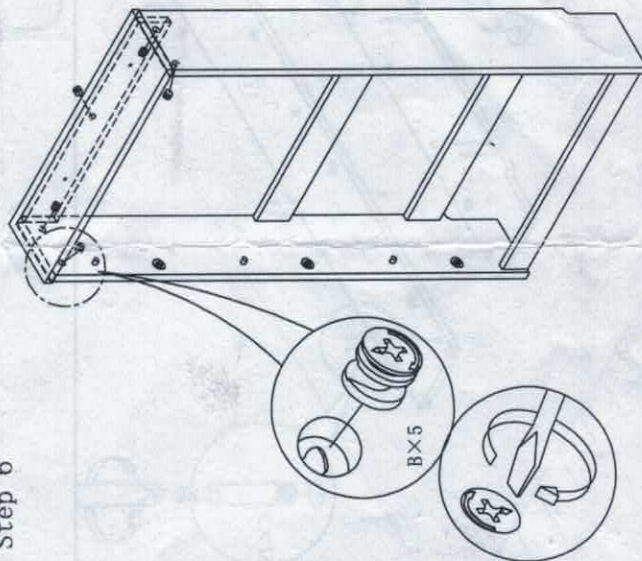


Step 7

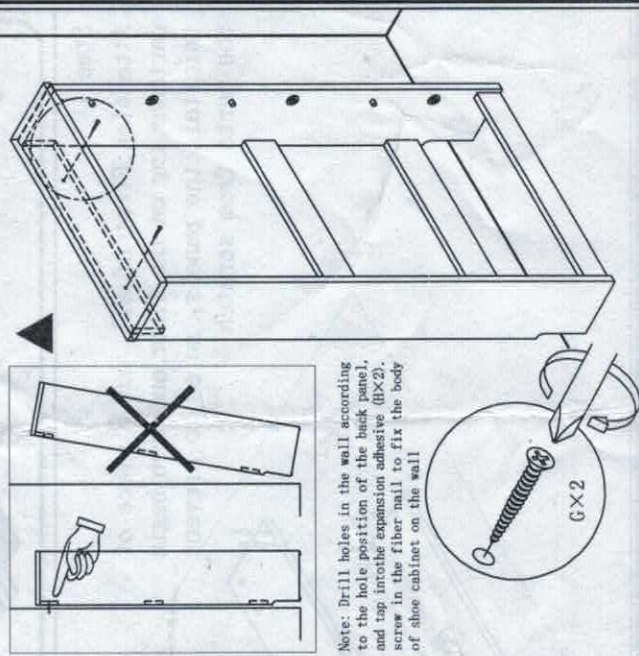


Step 8

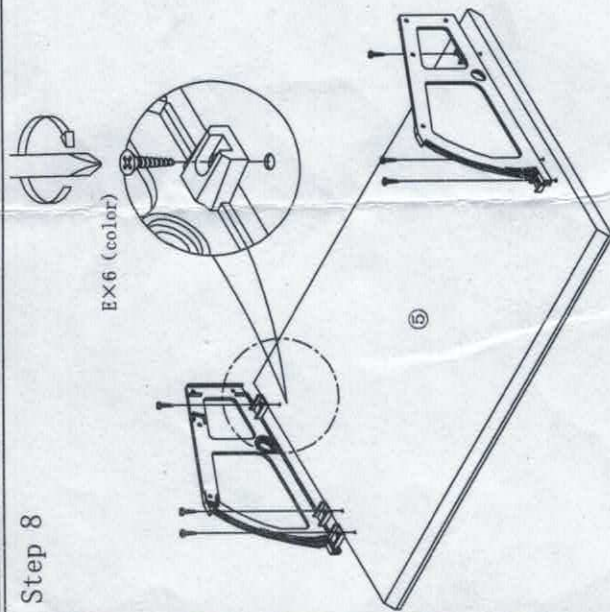


Step 11

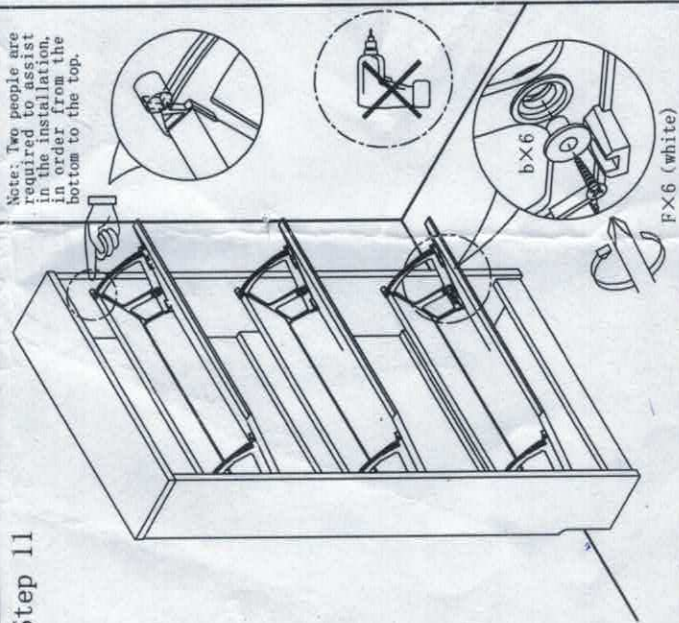

Step 12

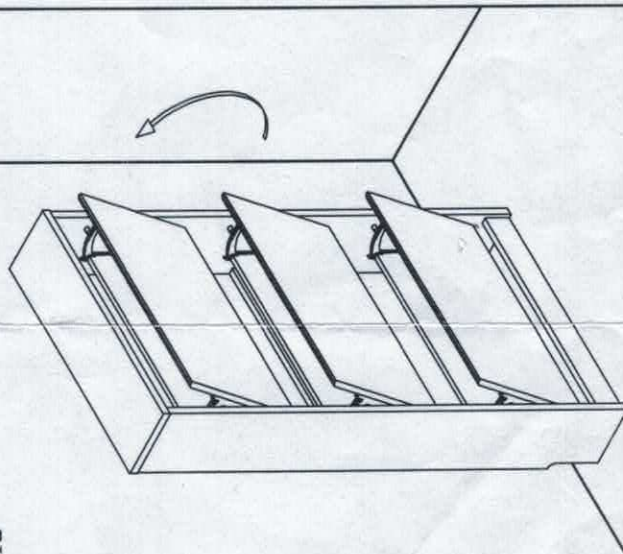

Step 9

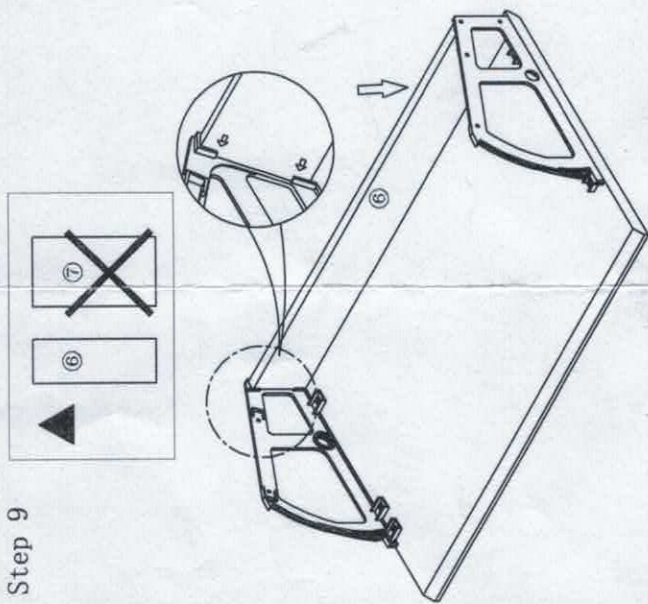

Step 10

