Assembly Instructions FRSF68

30 Mins

APPROXIMATE ASSEMBLY TIME




FLOOR AREA 1M x 2M



REQUIRED ASSEMBLY SPACE

2 PERSON ASSEMBLY

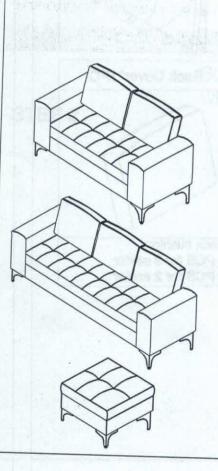



2seater sofa

box:

021 81*48*50CM*1 222 123*66*19CM*1

3seater sofa

box:

021 81*48*50CM*1 322 170*66*20CM*1

Ottoman

box:

300 81*59*24CM*1



CAUTION

PLEASE DO NOT OPEN COMPRESSED PLASTIC CUSHION BAGS UNTIL YOUR SOFA FRAME IS COMPLETELY ASSEMBLED, OTHERWISE, IT CAN'T BE REPACKED IN ORIGINAL PACKING WAY TO RETURN.

HARDWARE LIST















A Screw 60MM*2pcs

B Screw 35MM*2pcs

Arms(1PCS left+

1pcs Right)Total*2 PCS

C Wrench*1pc


D Hex Key*1pc

E Gasket*6pcs


F Nut*2pc

8 Sofs feet 4pcs

PARTS LIST

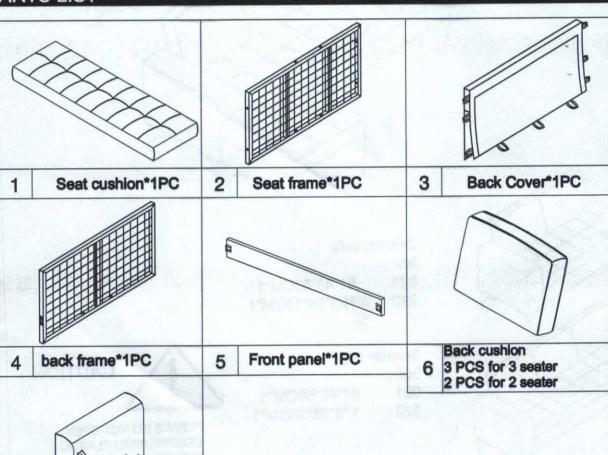



STEP 1

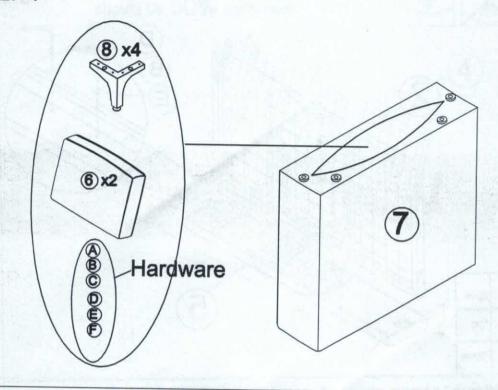

STEP 2


Screws and gaskets are preinstalled, please withdraw them to proceed installation

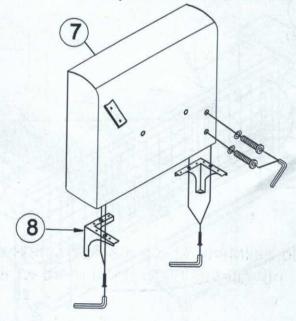

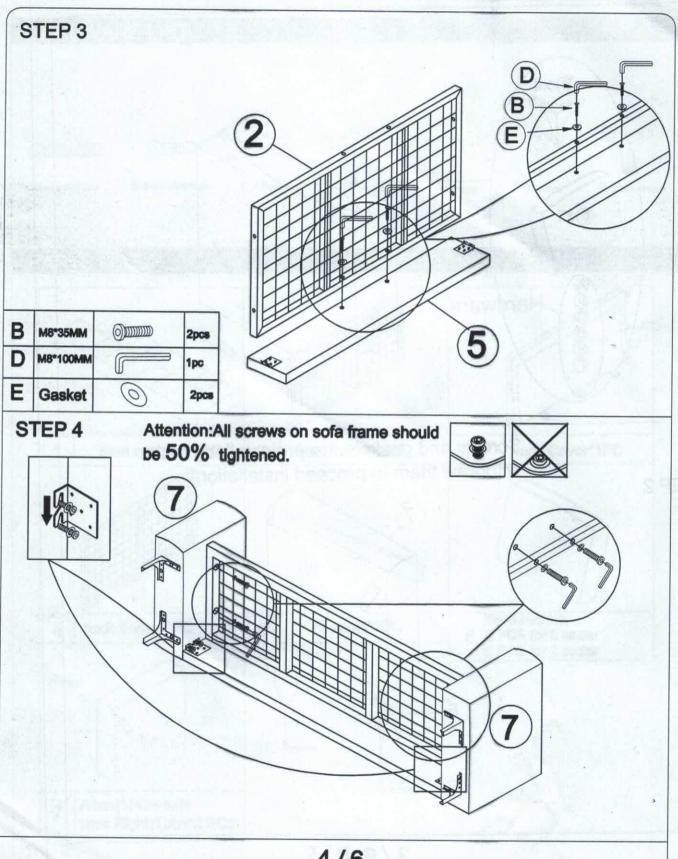



STEP 5

Attention:To insert back frame,all screws should be 50% tightened.

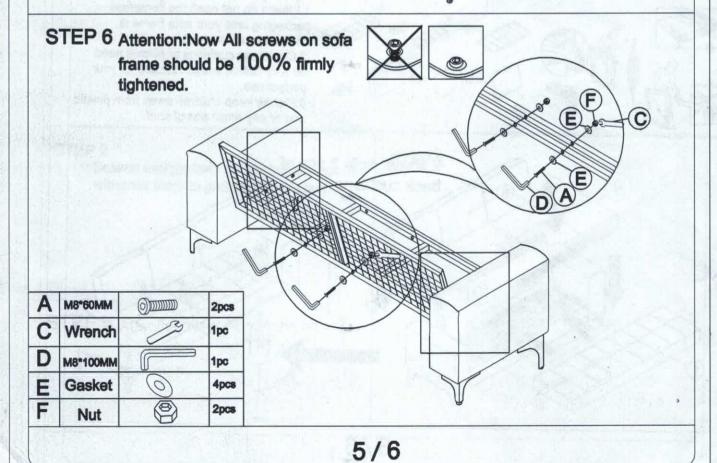




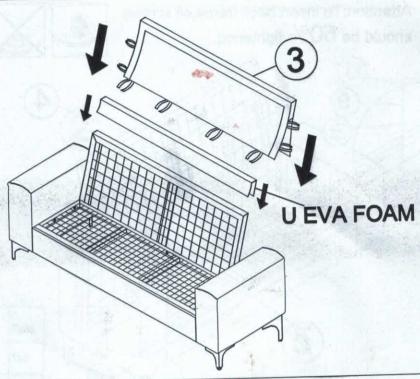

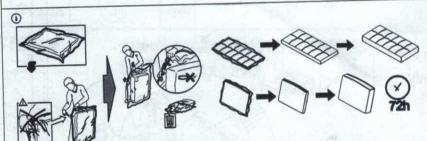


Tips:


- Please do not open the compress packaging until your sofa frame is completely assembled.
 Compress cushions or pillows need.
- Compress cushions or pillows need be fully fluffled within 72hours for your perfect use.
- 3.Please keep children away from plastic bag or any small pcs of stuff.

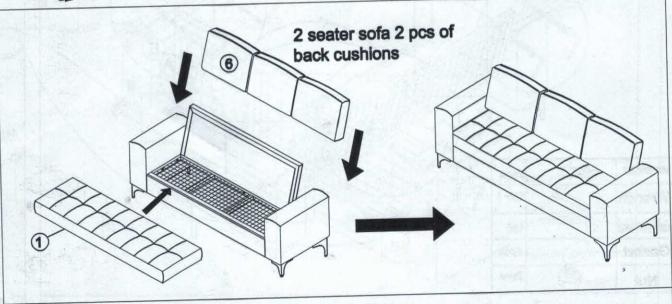

PARTS LIST

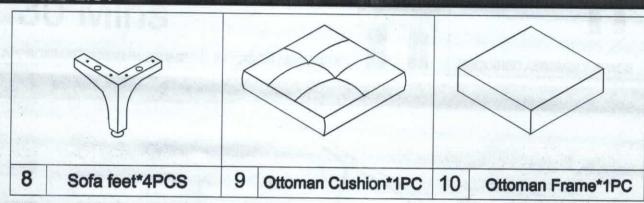


STEP 1

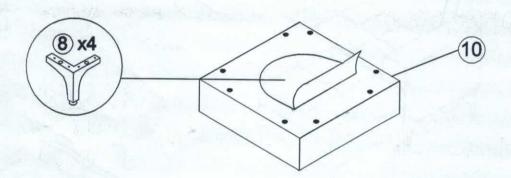

STEP 2

Screws and gaskets are preinstalled, please withdraw them to proceed installation

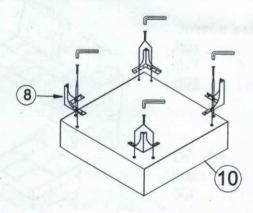

STEP 3

