








# SKU:267-161

## WINFLEX SECTIONAL PULLOUT SOFABED\* (CHaise Facing Right)


ifurniture  
Better; Cheaper; Smarter!  
[ifurniture.co.nz](http://ifurniture.co.nz)

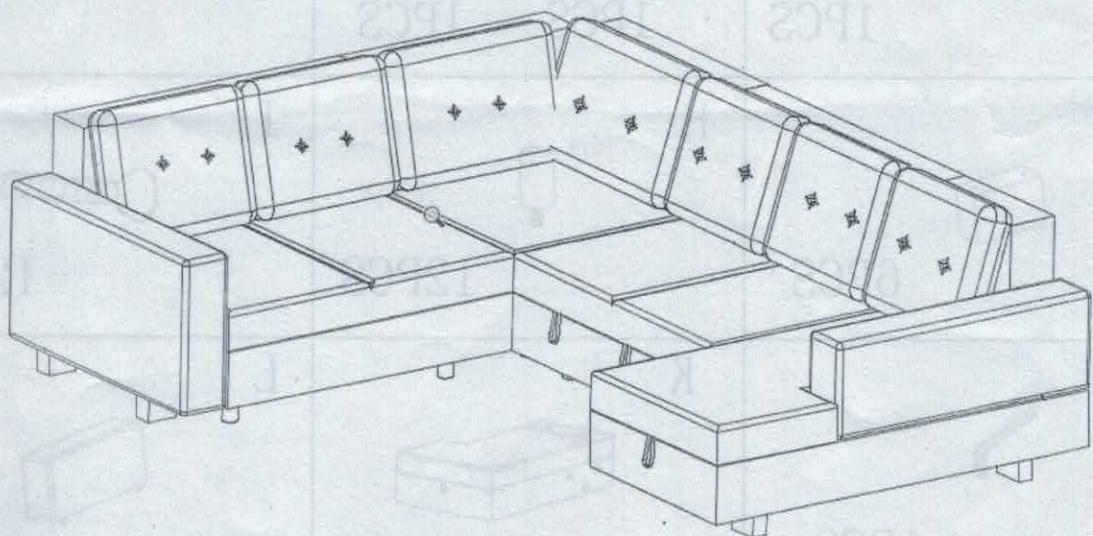



# 01/Part list

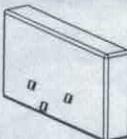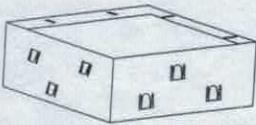A  1PCS	B  1PCS	C  2PCS
D  1PCS	E1  1PCS	E2  1PCS
F  1PCS	G  6PCS	H  12PCS
J  1PCS	K  1PCS	L  1PCS
M  1PCS	N  2PCS	O  1PCS
P1  5PCS	P2  1PCS	P3  1PCS
Q  4PCS	R  8PCS	





## 02/installation steps

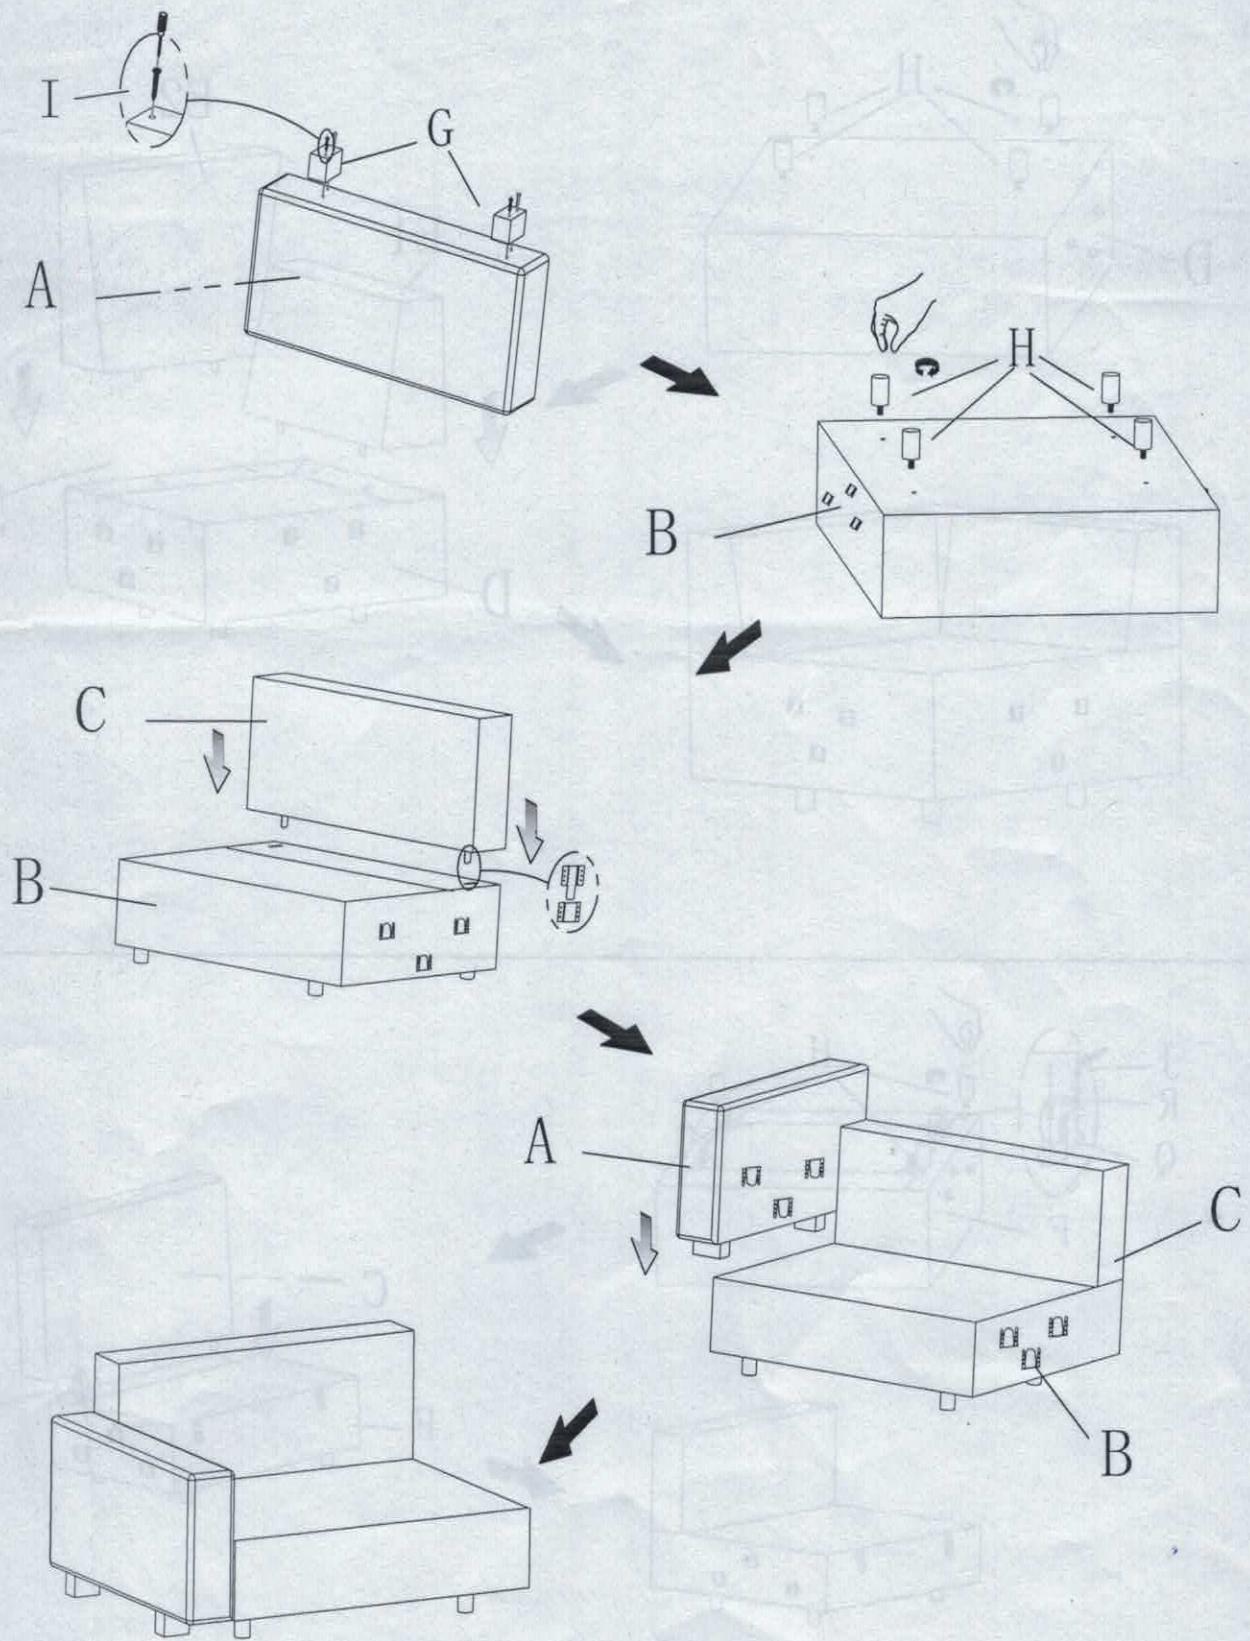


# 03/installation steps

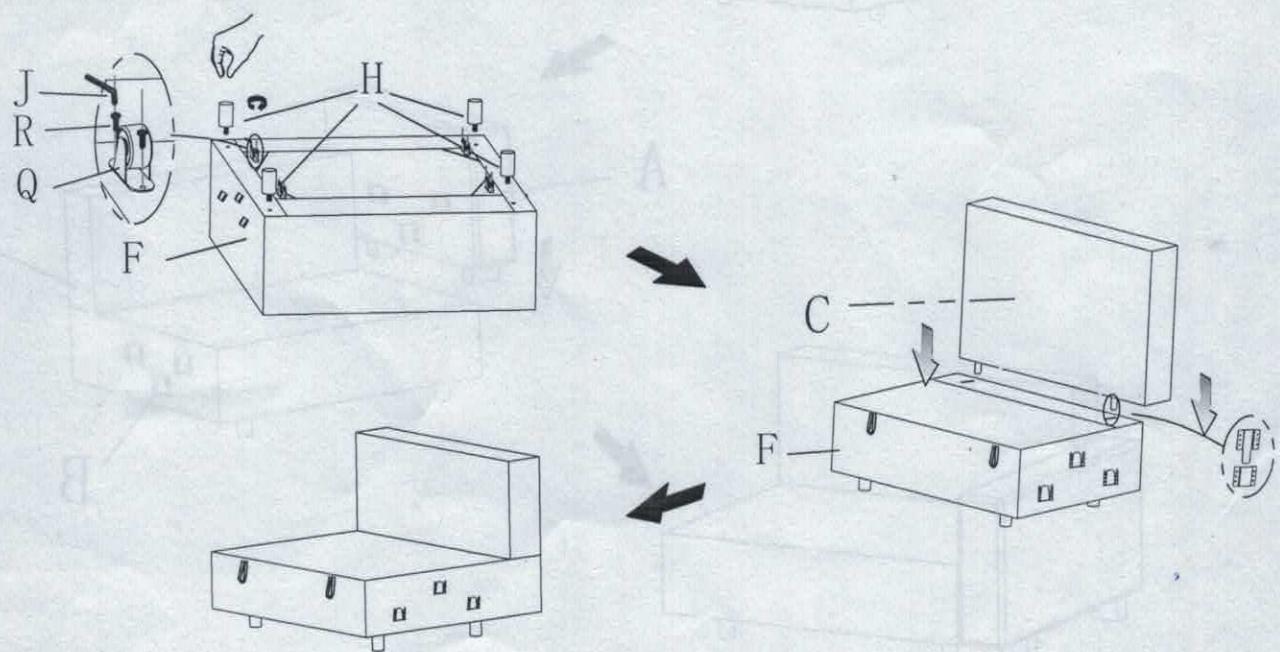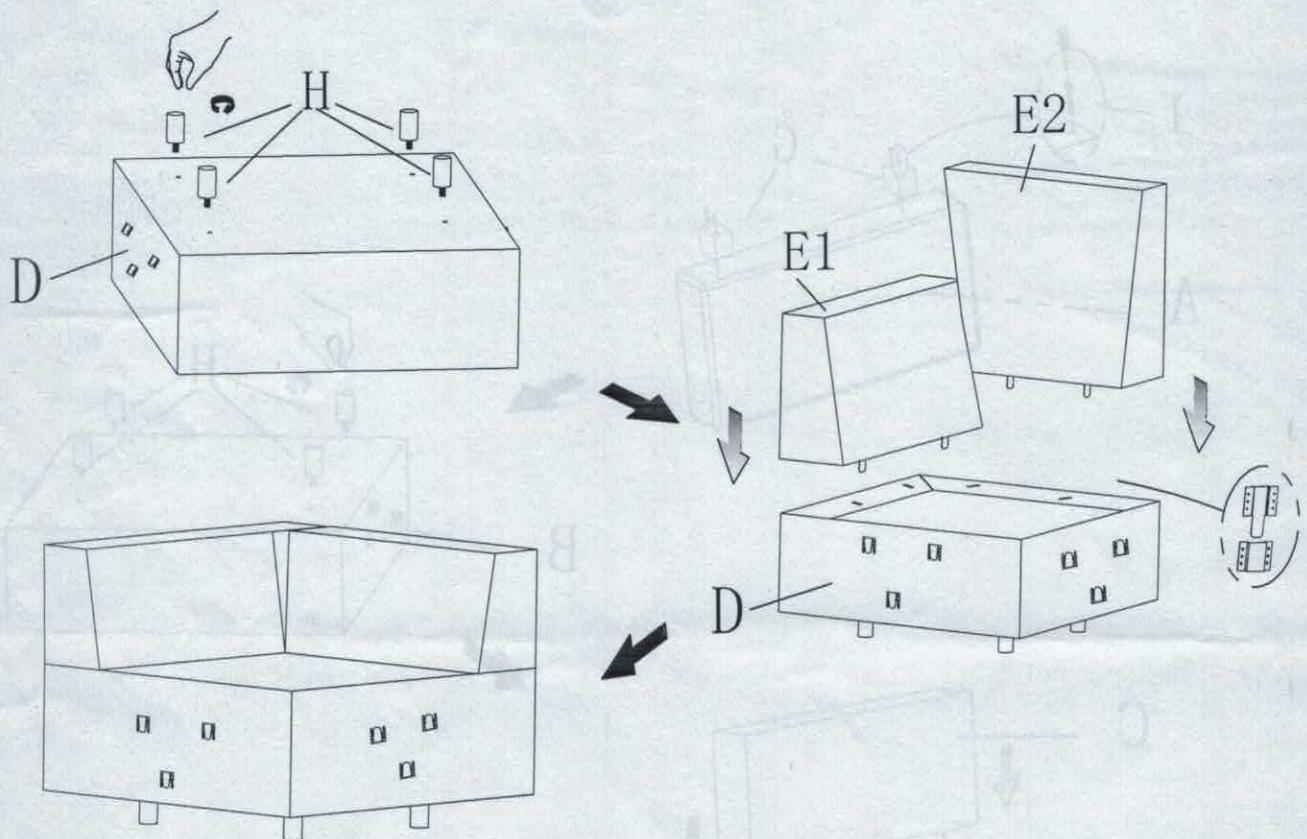


# 04/installation steps

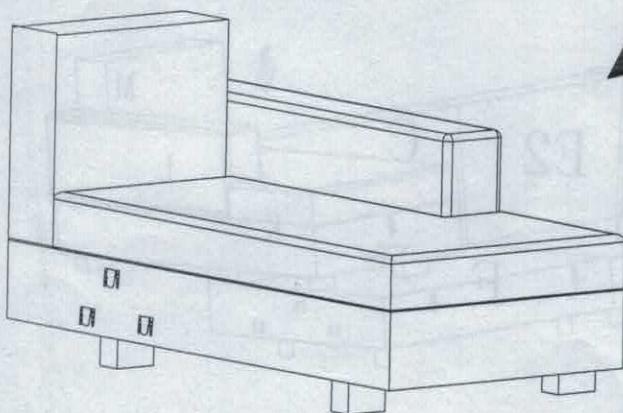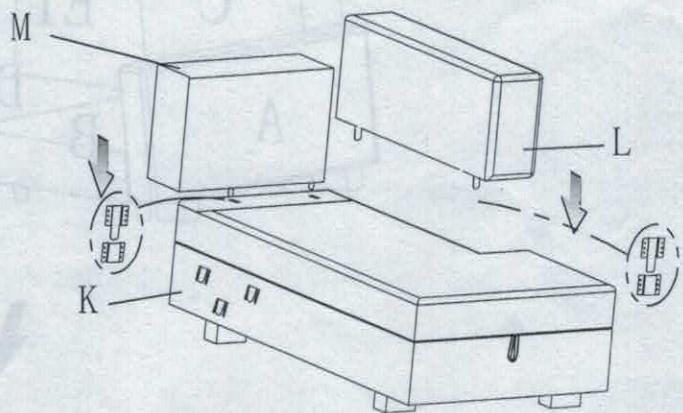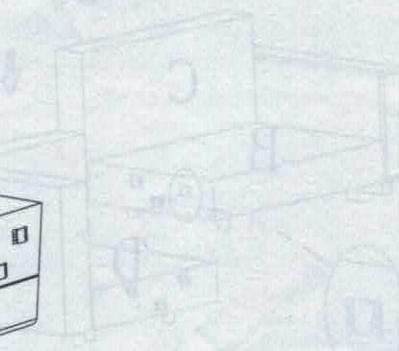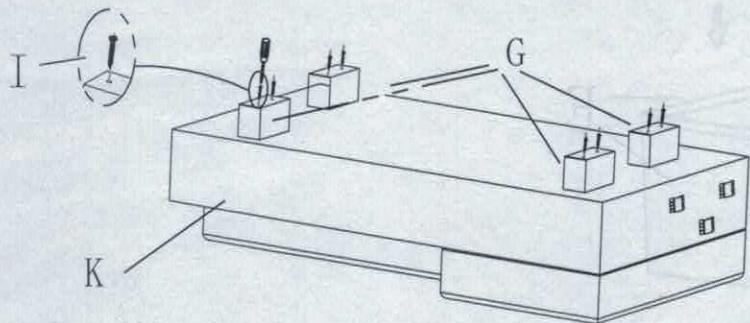



# 05/installation steps

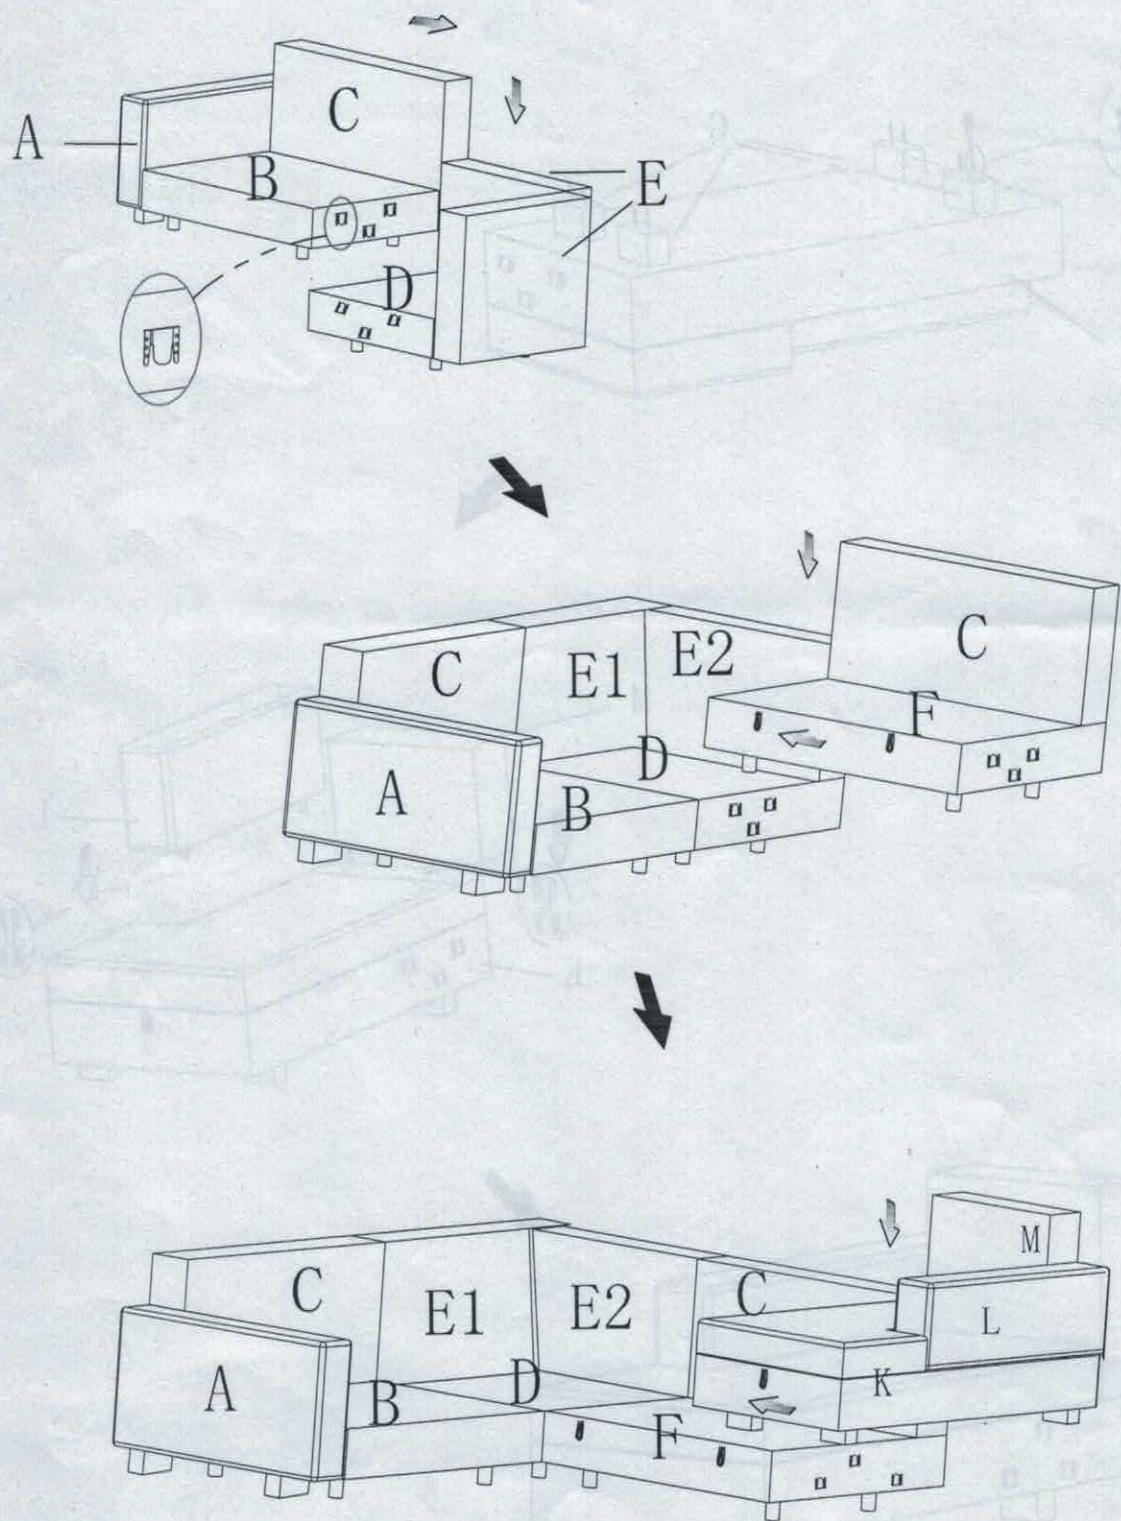

# 06/installation steps

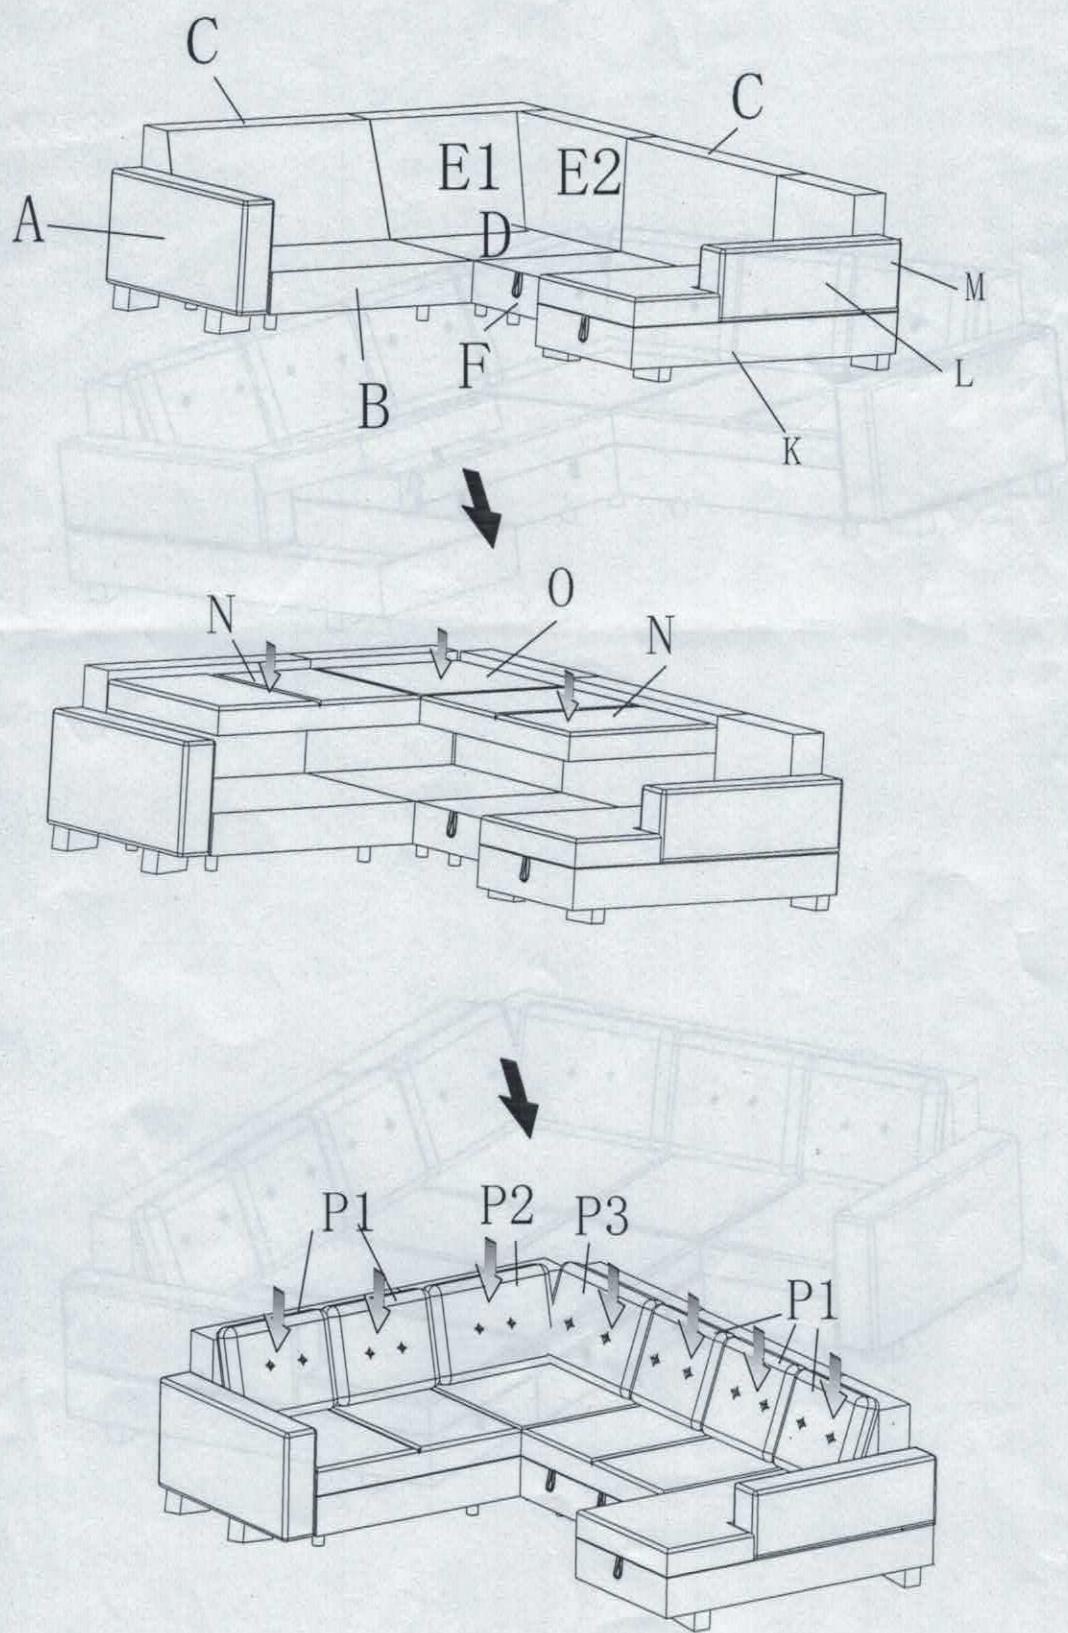


# 07/installation steps

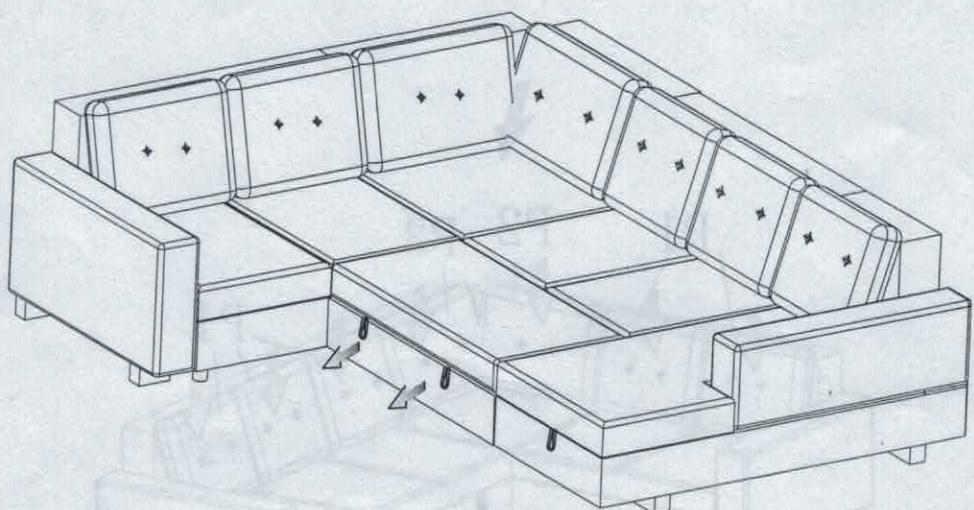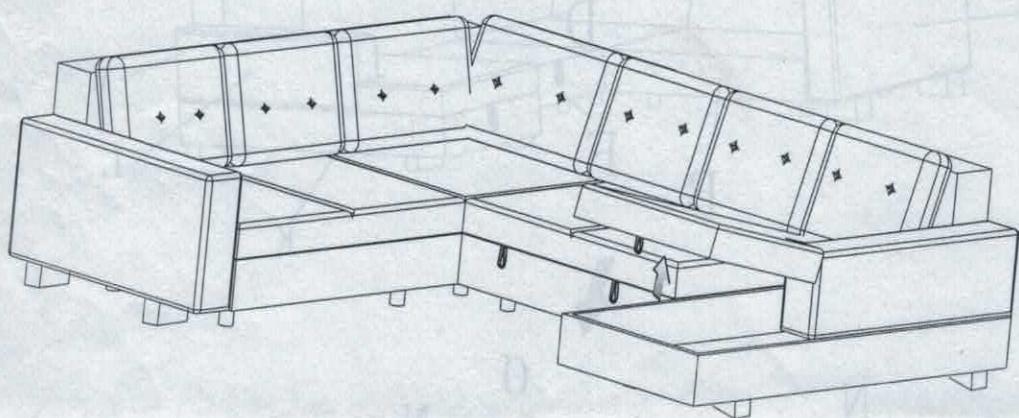


ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

PS:Choose the larger Board I on the left or on the right according to your personal habits.


If you want the desk like this,please follow Step 1-1,Step 2-1,Step 3-1,Step 4-1,Step 5-1,Step 6-1.

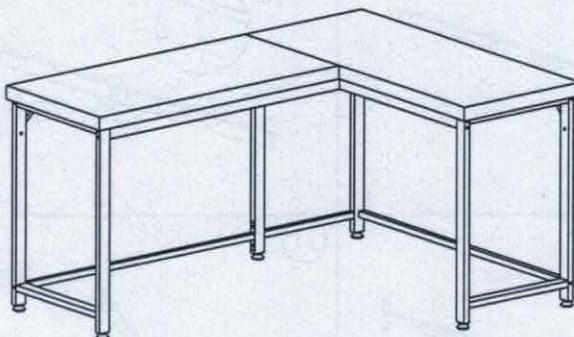


If you want the desk like this,please follow Step 1-2,Step 2-2,Step 3-2,Step 4-2,Step 5-2,Step 6-2.

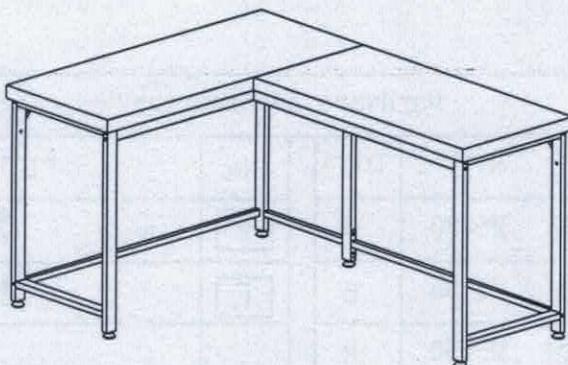


Method One

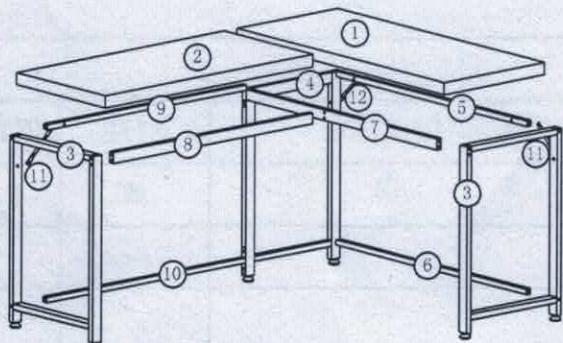





Method Two

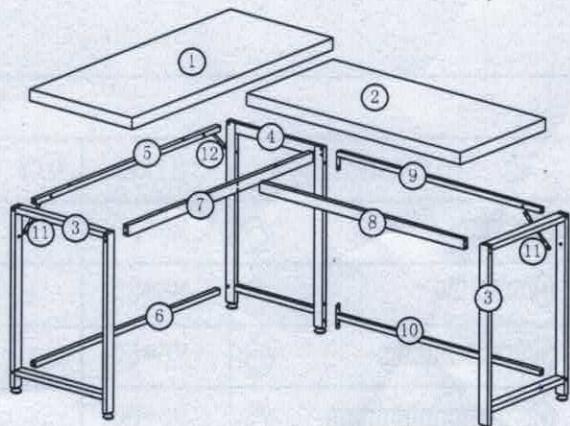





**ASSEMBLY INSTRUCTION**  
SKU:6090-NOVAS-BRONZE

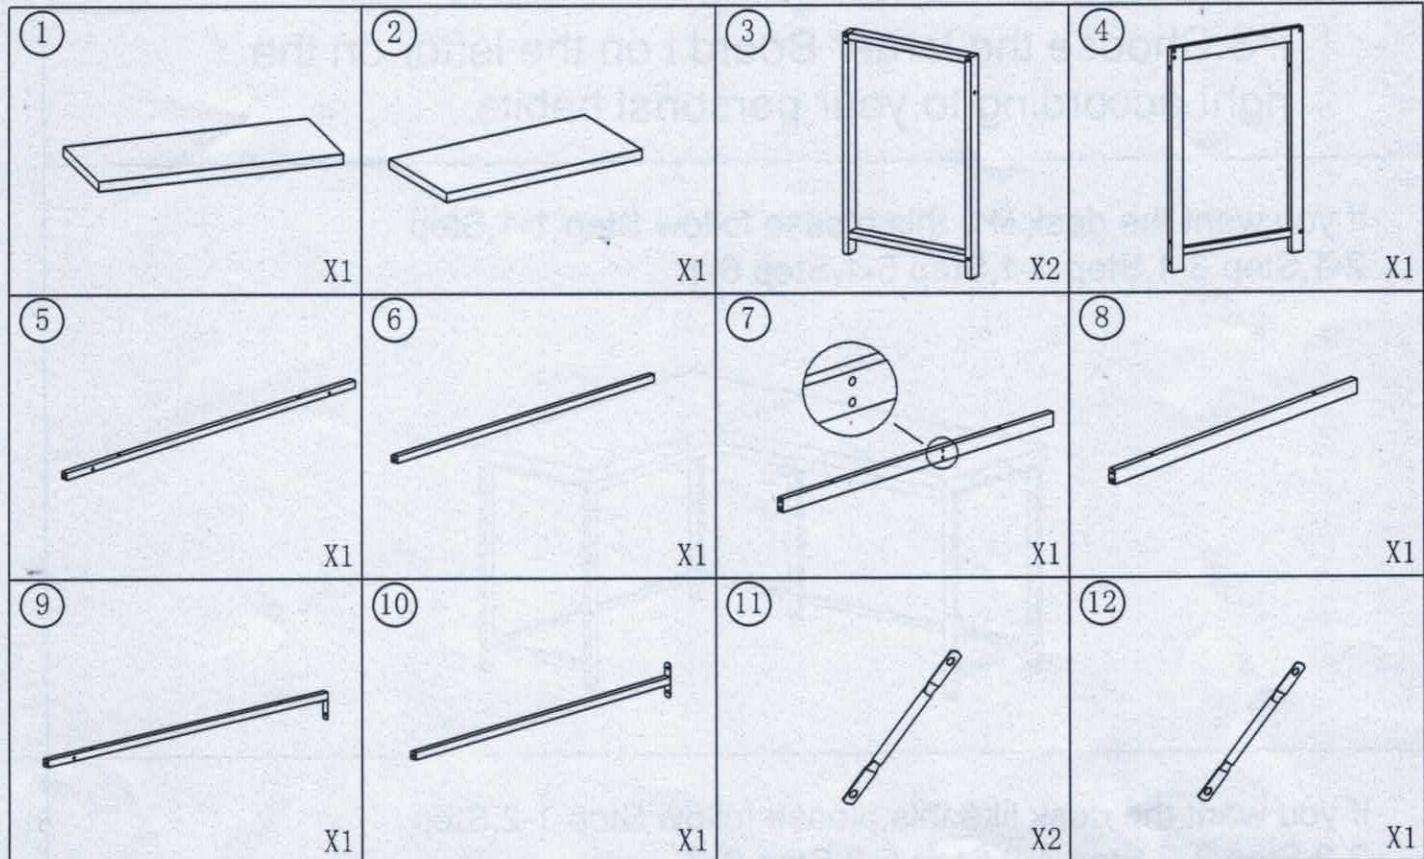

Hardware Accessories


No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A	 	M6*30	9	E		M6	9
B	 	M6*35	6	F			6
C	 	M6*50	8				
D	 	M6*60	8				1

Spare

No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A	 	M6*30	1	E		M6	1
B	 	M6*35	1				
C	 	M6*50	1				
D	 	M6*60	1				


ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

STEP 1-1

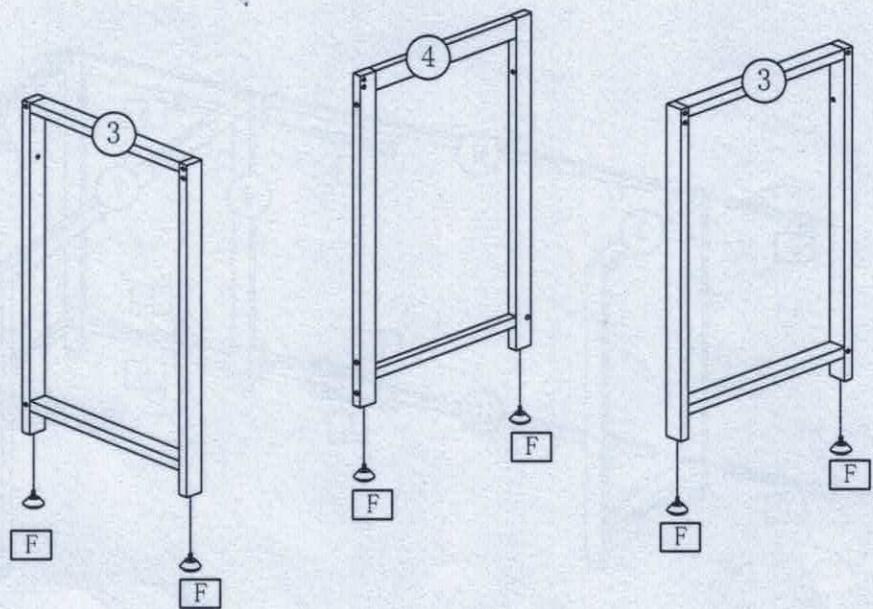

[F] 6X

STEP 2-1

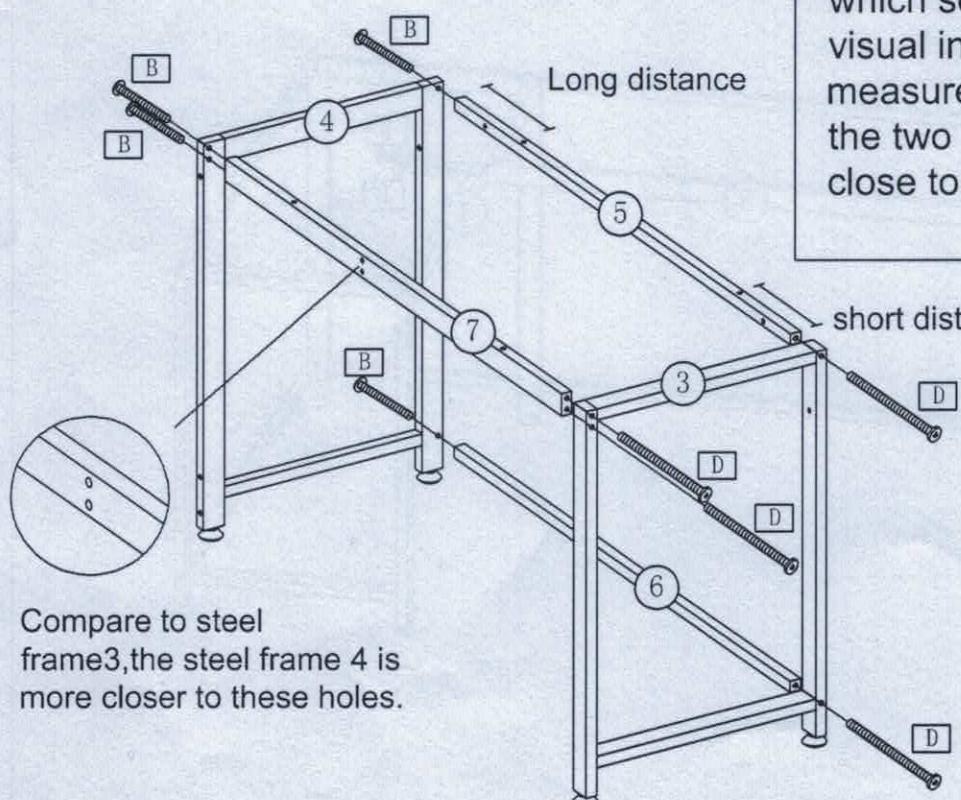


You may not be able to see which section is shorter by visual inspection. You can measure the distance between the two sides. The short side is close to the No. 3 tube.

Compare to steel frame 3, the steel frame 4 is more closer to these holes.

[B] 4X [D] 4X


ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

STEP 3-1

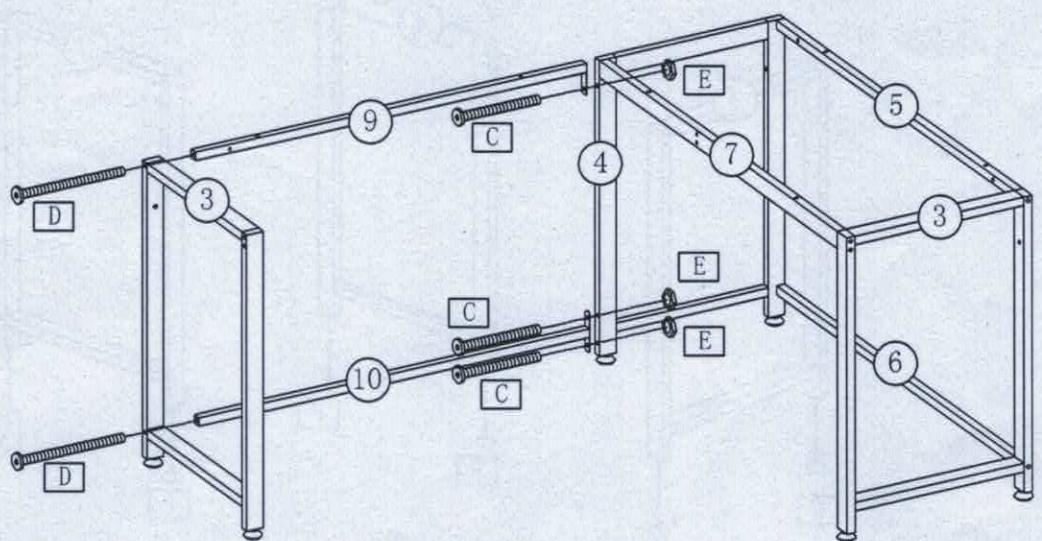

C 3X D 2X E 3X


STEP 4-1

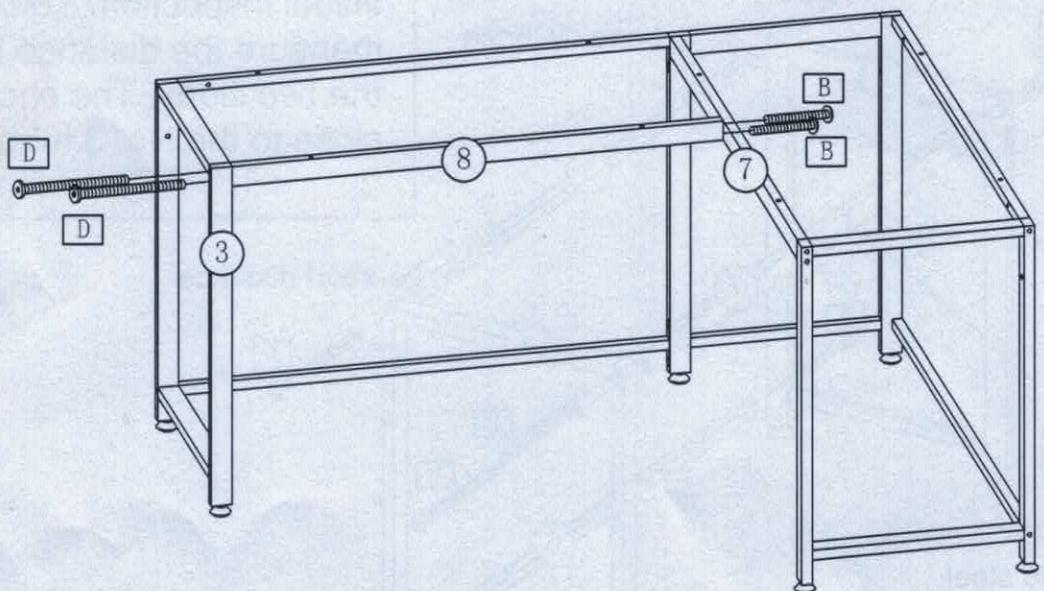

B 2X D 2X


ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

STEP 5-1

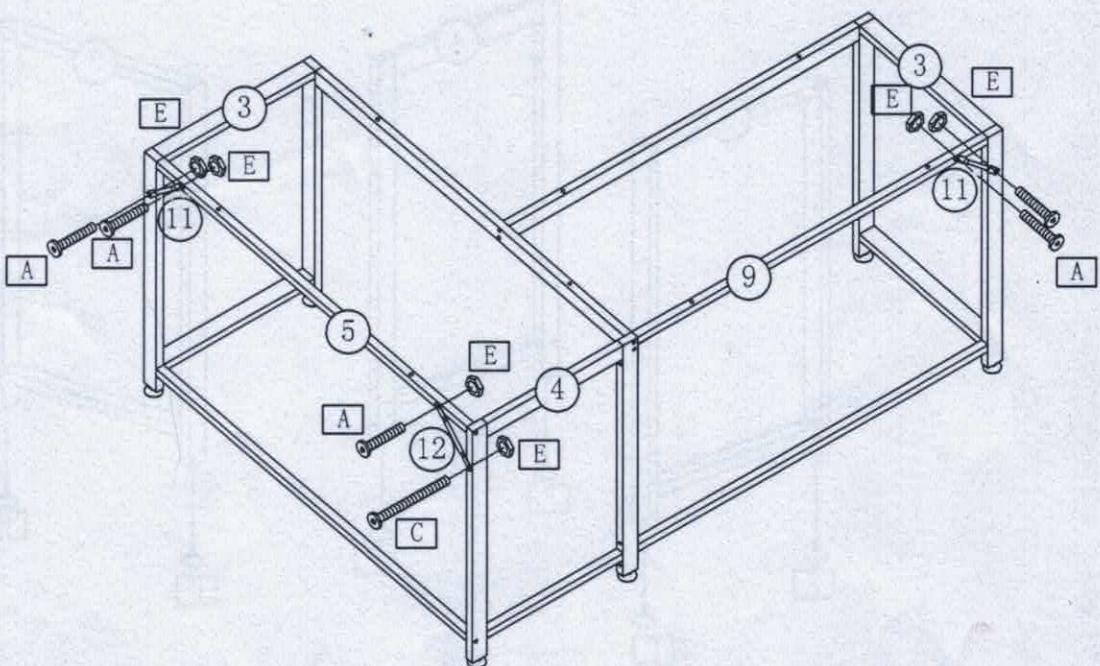

A 5X      C 1X      E 6X


STEP 6-1

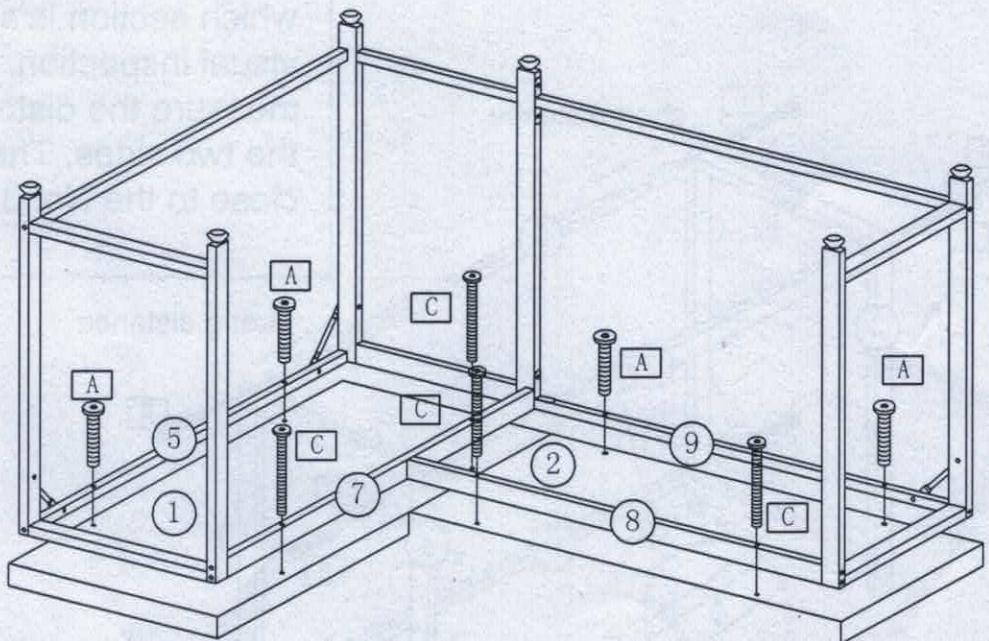

A 4X      C 4X

ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE


STEP 1-2

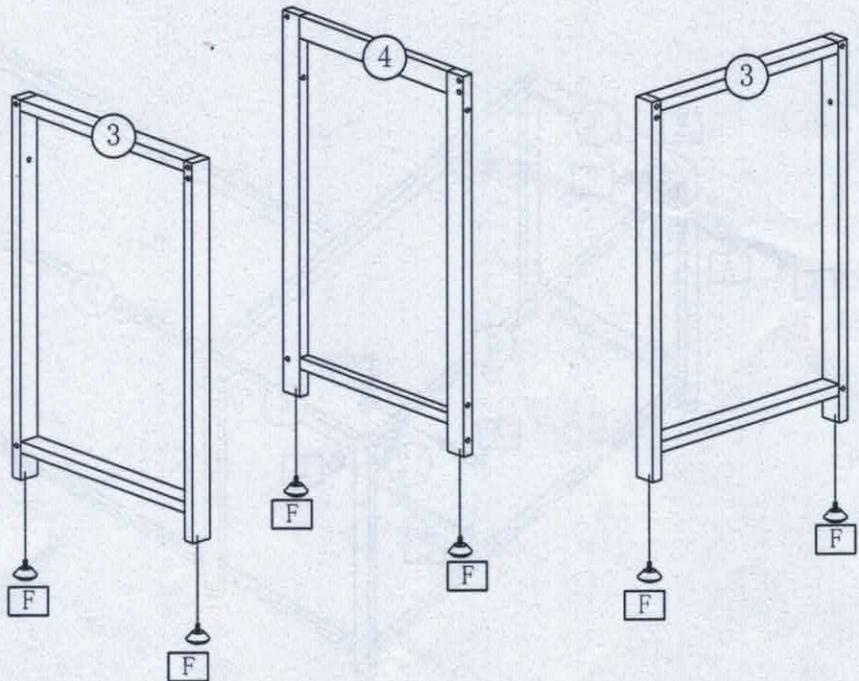

[F] 6X



STEP 2-2

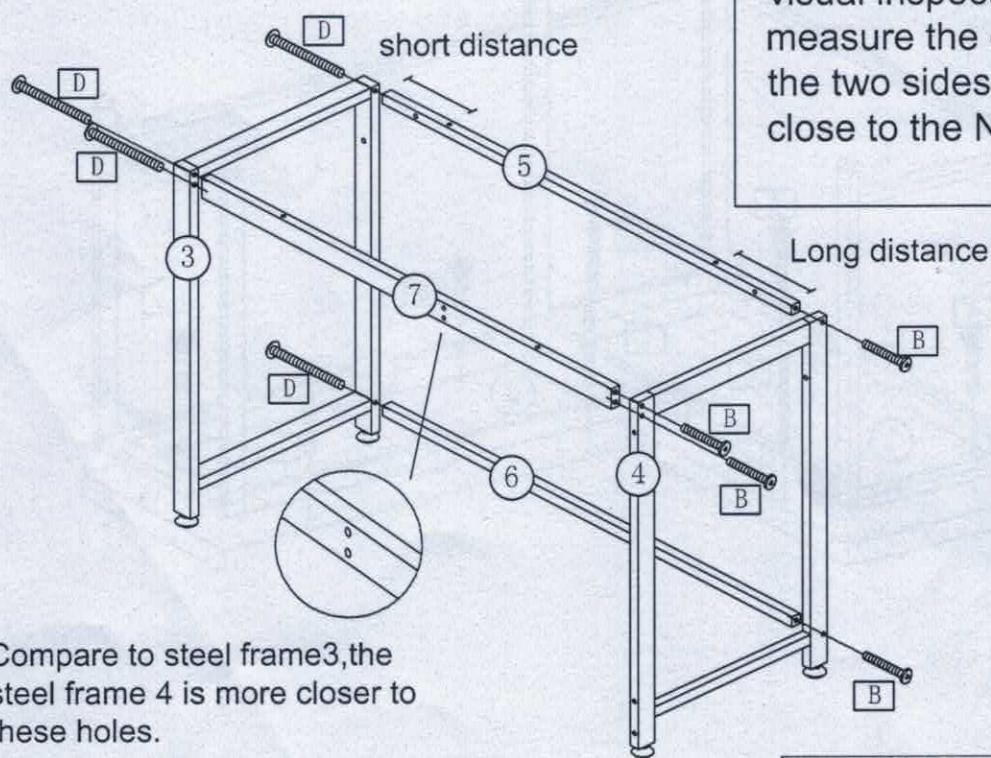

Compare to steel frame 3, the steel frame 4 is more closer to these holes.


[B] 4X

[D] 4X




ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

STEP 3-2

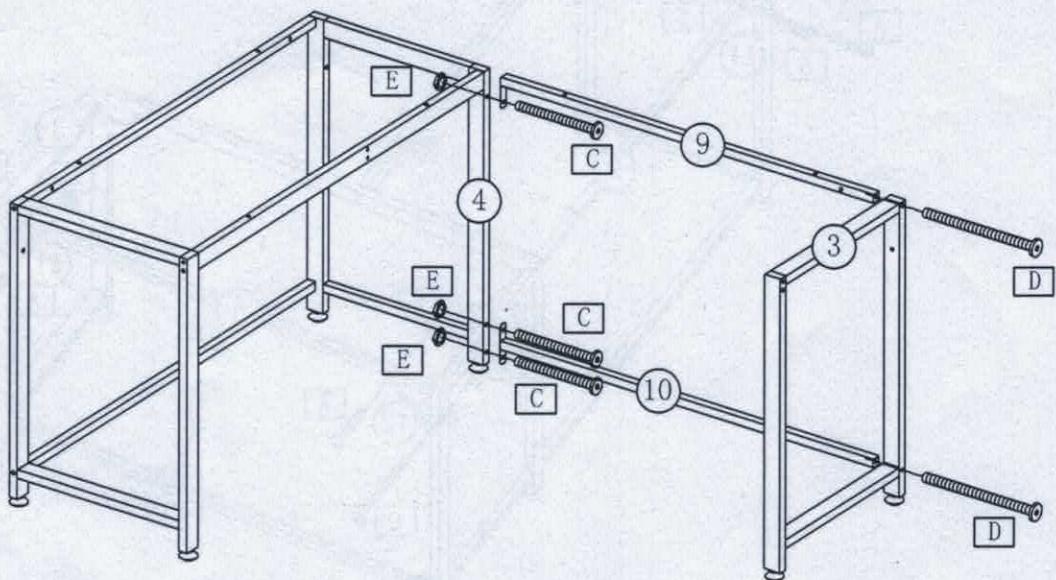

C 3X      D 2X      E 3X


STEP 4-2

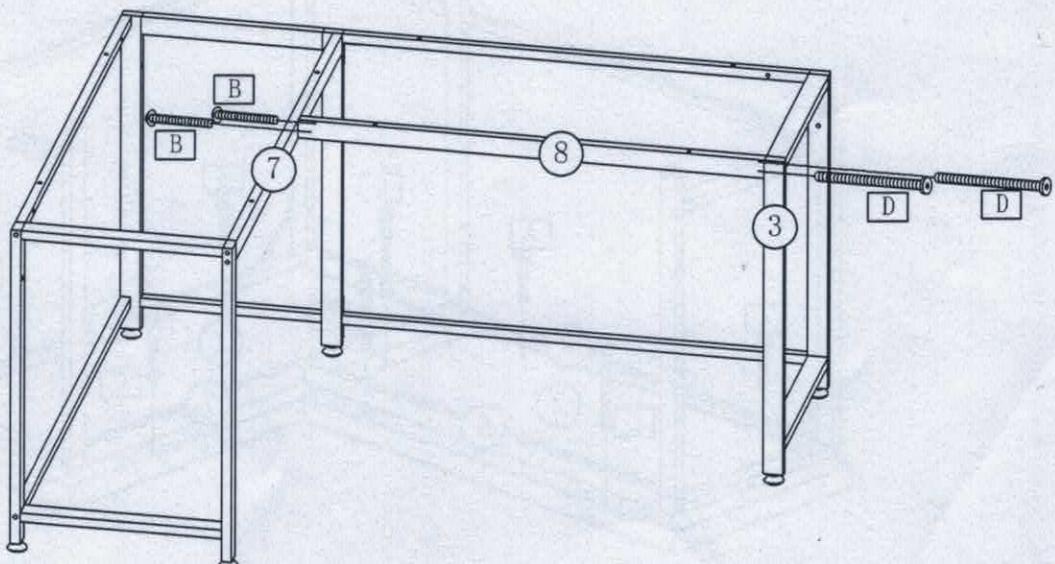

B 2X      D 2X


ASSEMBLY INSTRUCTION  
SKU: 6090-NOVAS-BRONZE

STEP 5-2

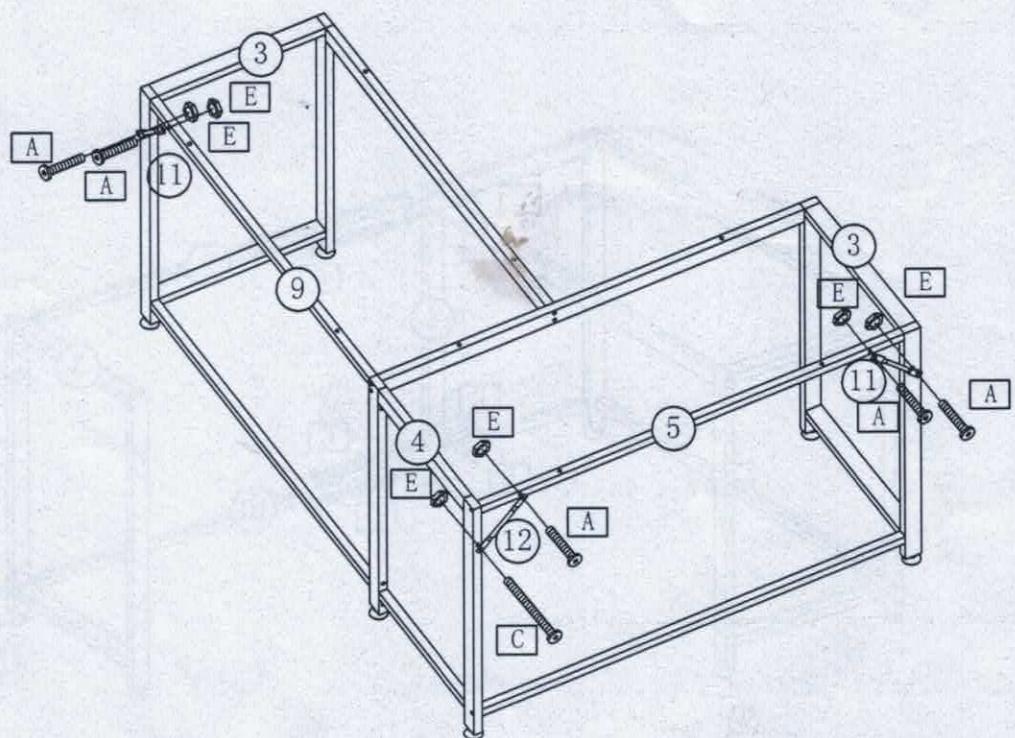

[A] 5X [C] 1X [E] 6X

STEP 6-2

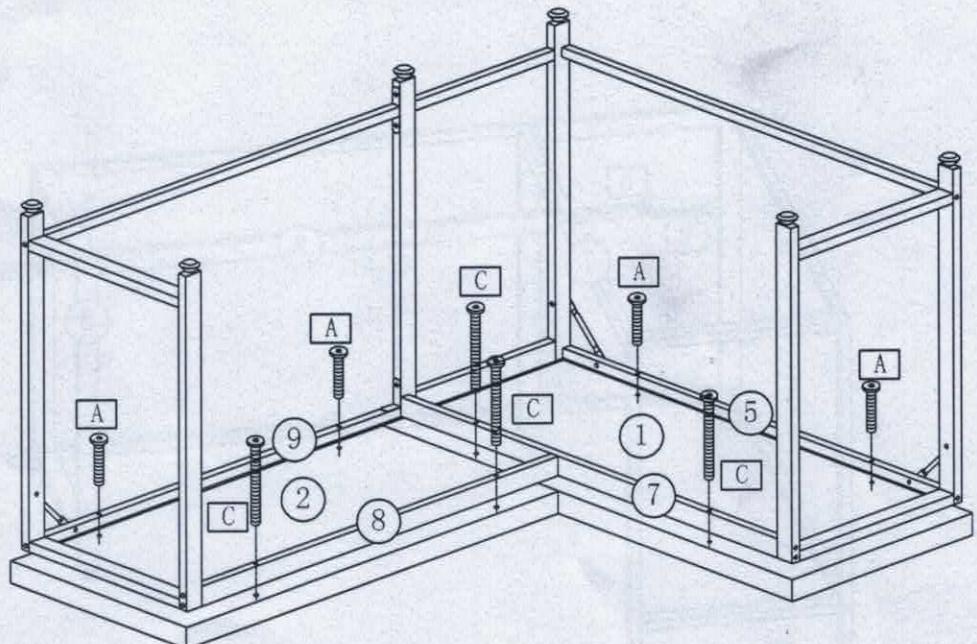

[A] 4X [C] 4X