30'

2

No.	Size	Qty
A	818x350x24mm	2
B	790x401x23mm	1
C	771x399x20mm	1
D	451x352x38mm	1
E	357x447x20mm	2
F	436x301x25mm	1
G	436x300x20mm	2

Hardware	Ctn No.	1

Ø5*12mm	Ø6*30mm	Ø12*0.8mm	Ø4*24mm	62*62mm
① x28	② x1	③ x2	④ x1	⑤ x4
spare:2		spare:1	spare:1	

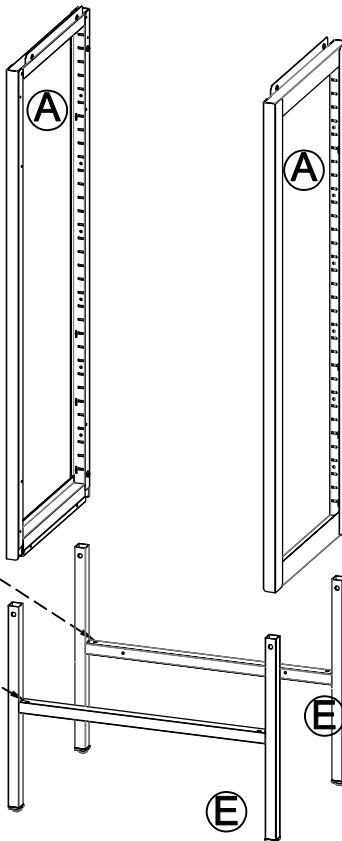|				
⑥ x1	⑦ x8		⑨ x2	⑩ x2
	spare:2	15*76mm	WALL ANCHOR	SCREW
		⑧ x2		

spare
⑪ x4
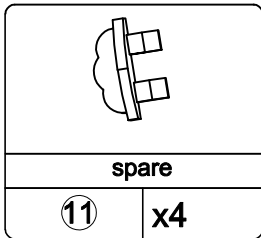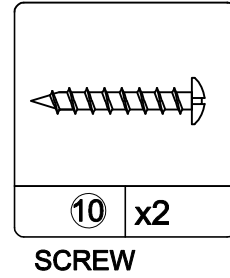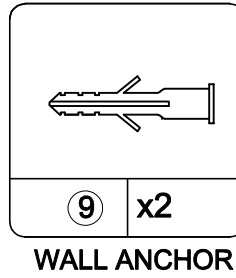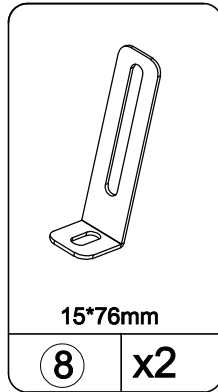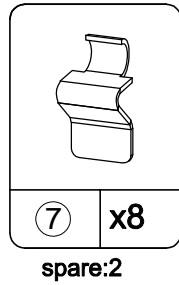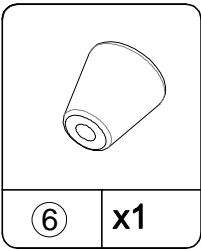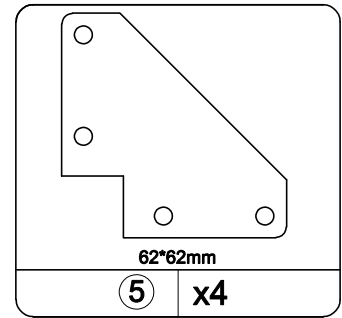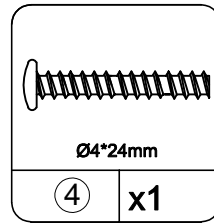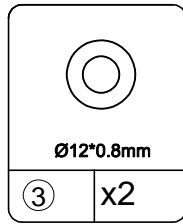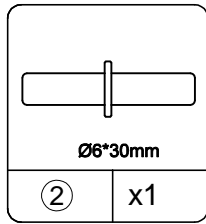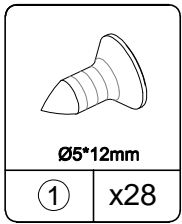
(1) - Attach (A) to (E) as below shown.

Make sure the holes are nearest to outside otherwise will affect door assembling.

Notice
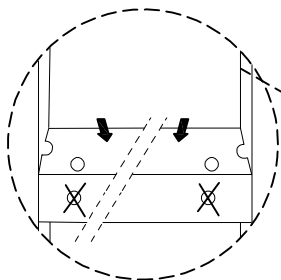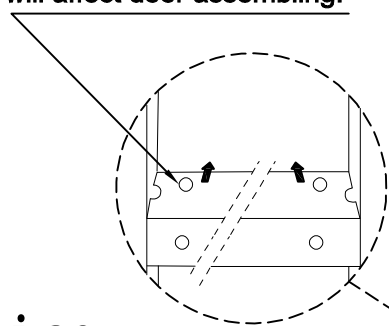
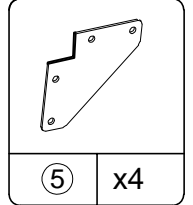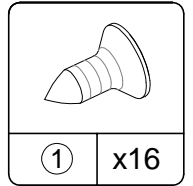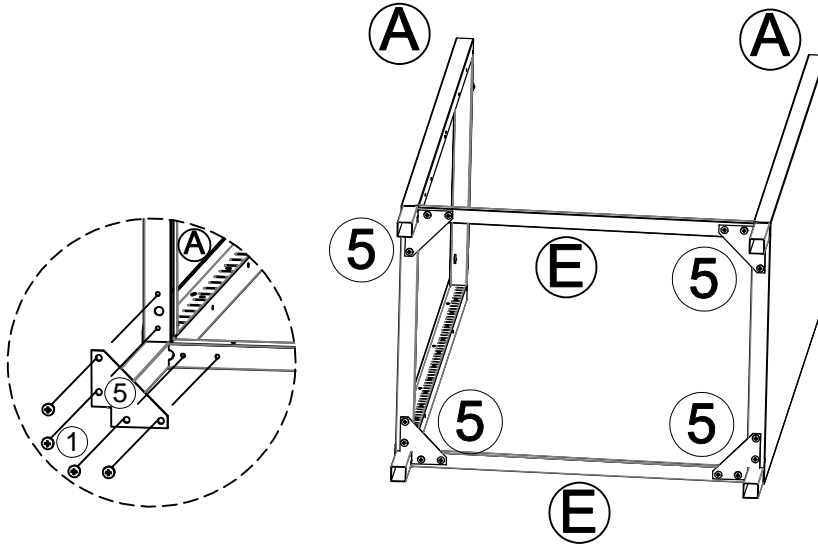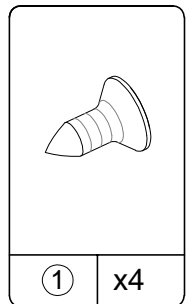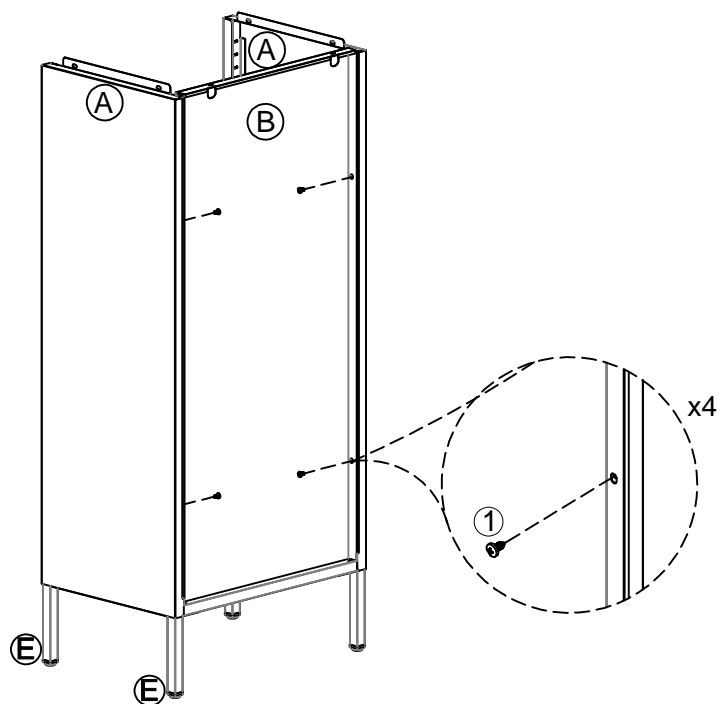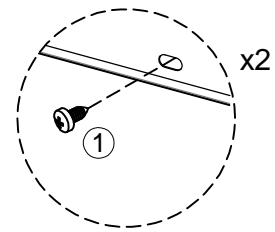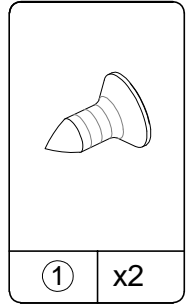The plastic foot cover face down

② - Attach ⑤ to (A)&(E) as below shown.

①	x16

⑤	x4

③ - Attach (B) to (A) as below shown.

①	x4

x4

(4) - Attach (B) to (A) & (E) as below shown.

①	x2

x2
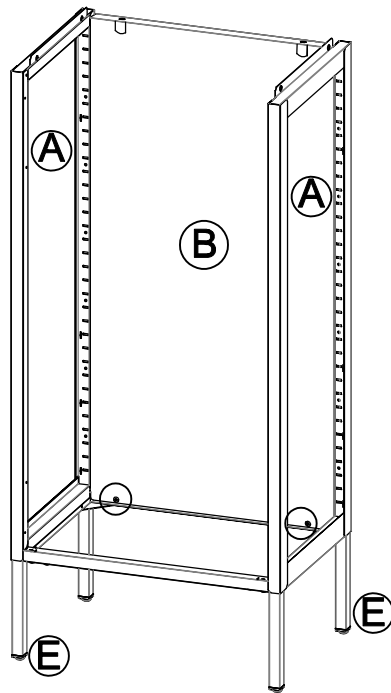
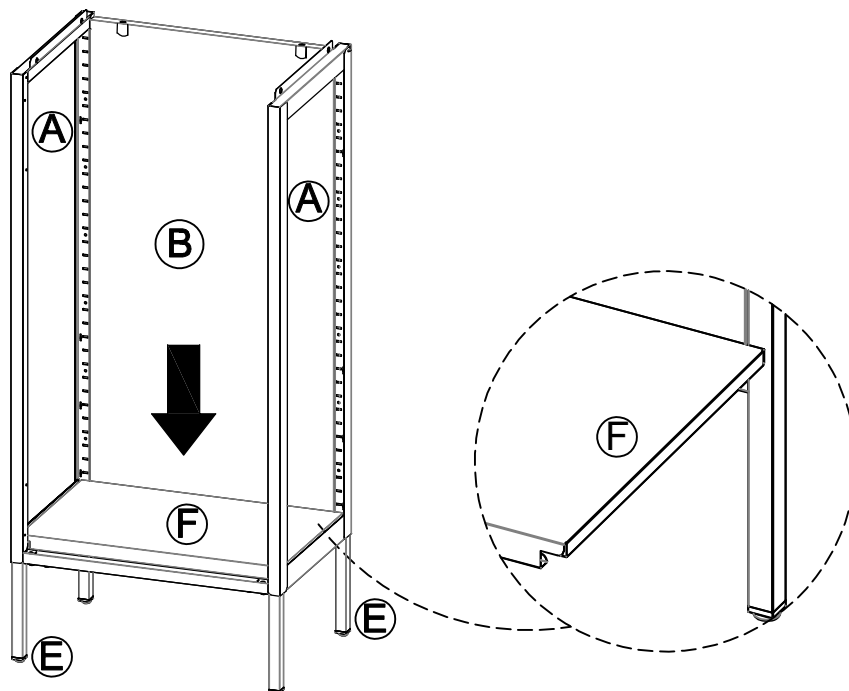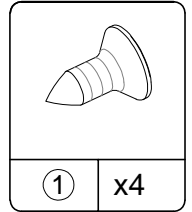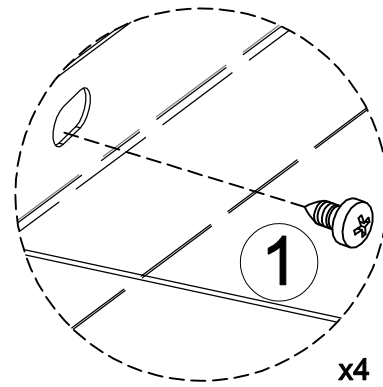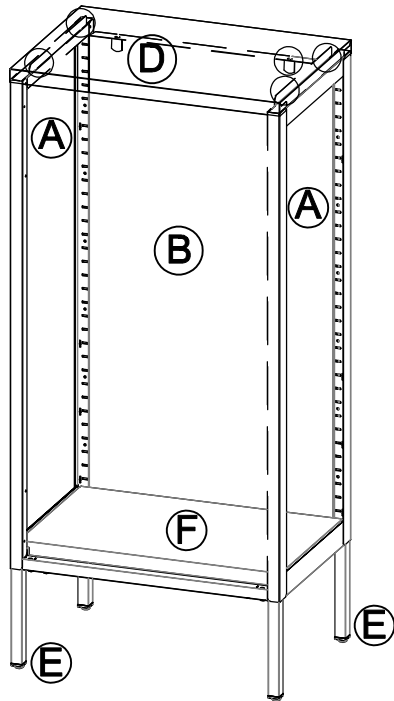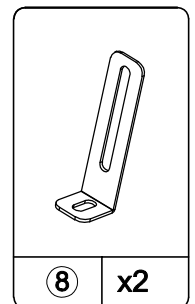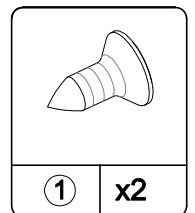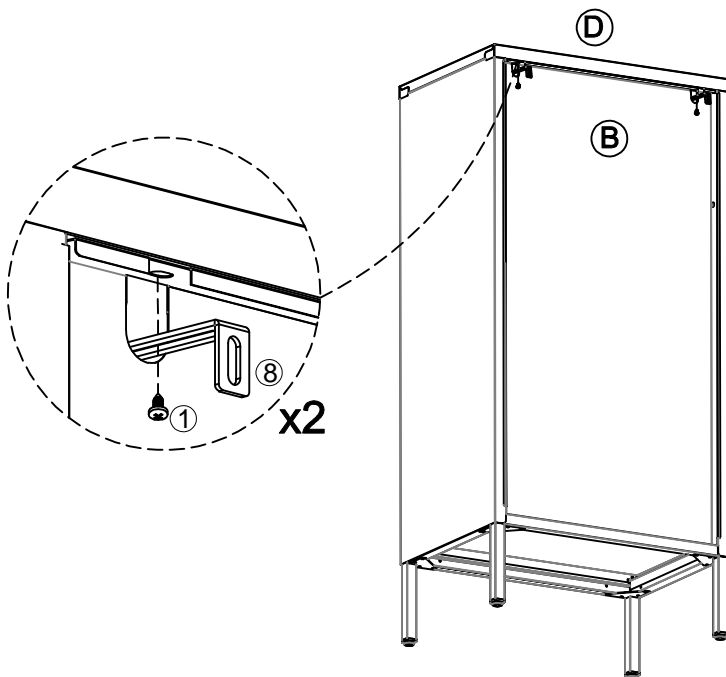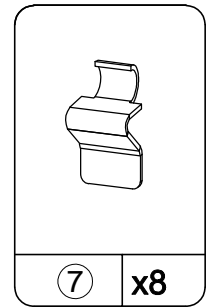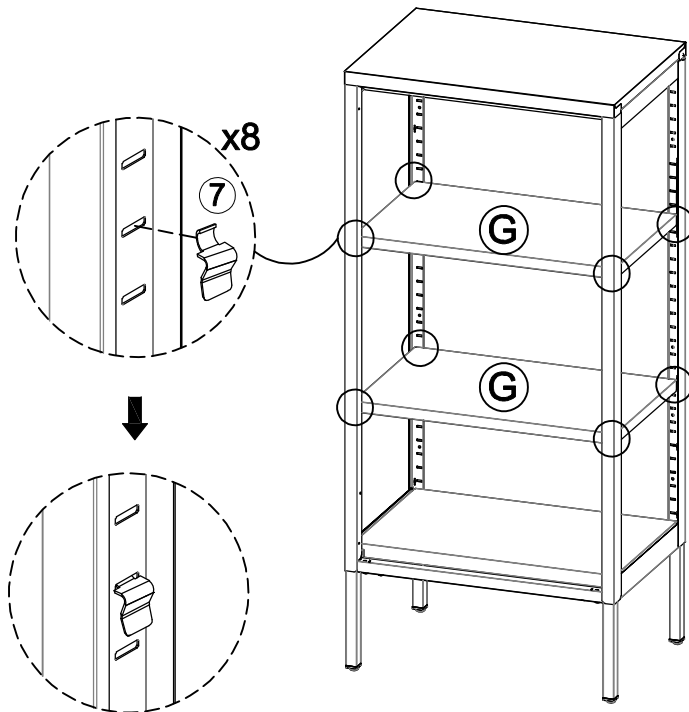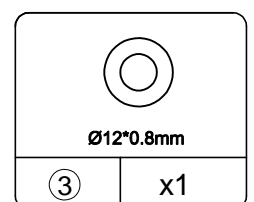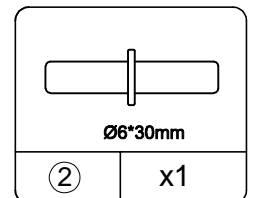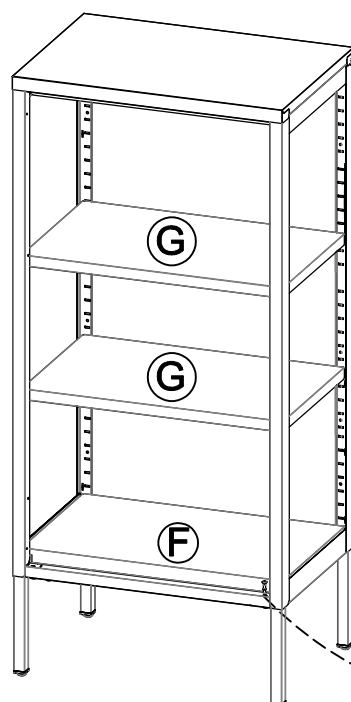(5) - Attach (F) to (A) & (B) & (E) as below shown.

(6) - Attach (D) to (A) as below shown.

①	x4

x4

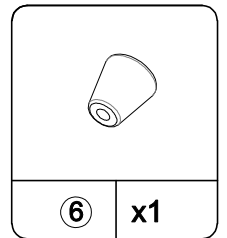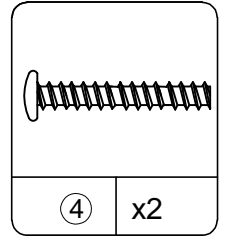(7) - Attach (D) to (B) as below shown.

x2

①	x2

⑧	x2

(8) - Attach (G) to pre-assembled unit as below shown.

| ⑦ | x8 |

x8

⑦

G

G

(9) -Attach (2) & (3) to pre-assembled unit as below shown.

Ø6*30mm

| ② | x1 |

Ø12*0.8mm

| ③ | x1 |

G

G

F

③

②

⑩- Attach (6) to (C) as below shown.

③	x2

④	x2

⑥	x1
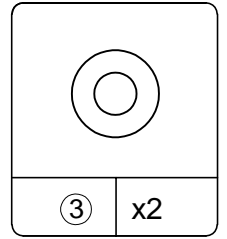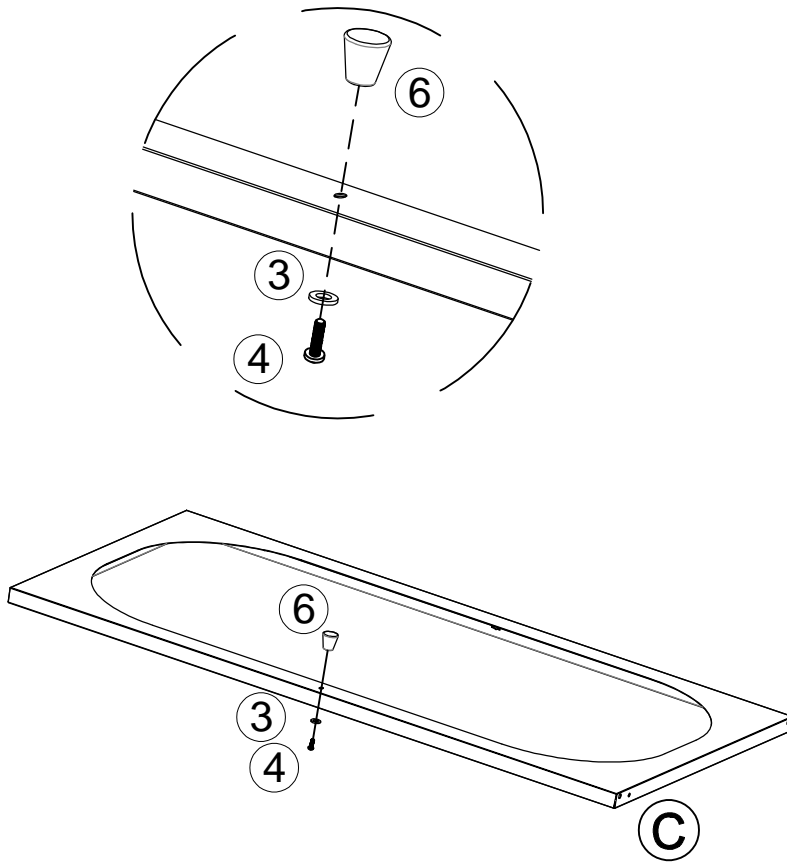
spare parts of glass buckle
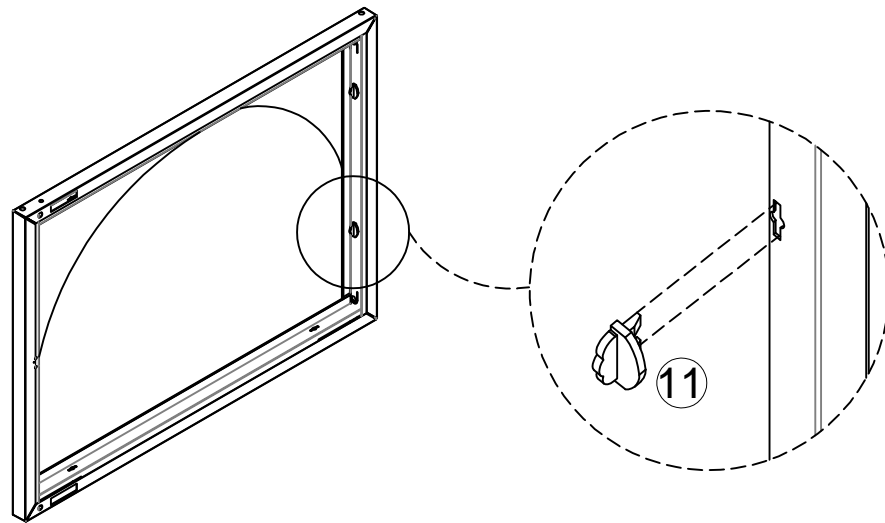
⑪

⑪ - Attach (C) to pre-assembled unit as below shown.

x2

x2

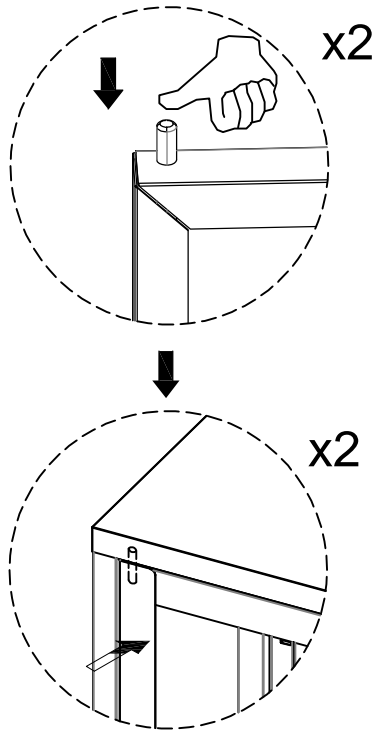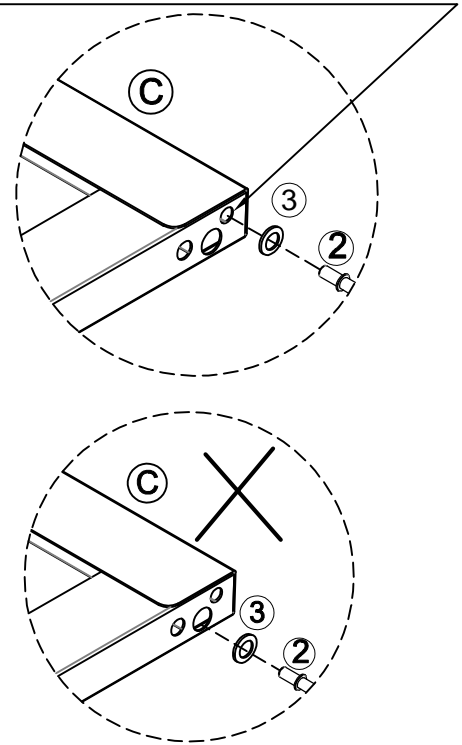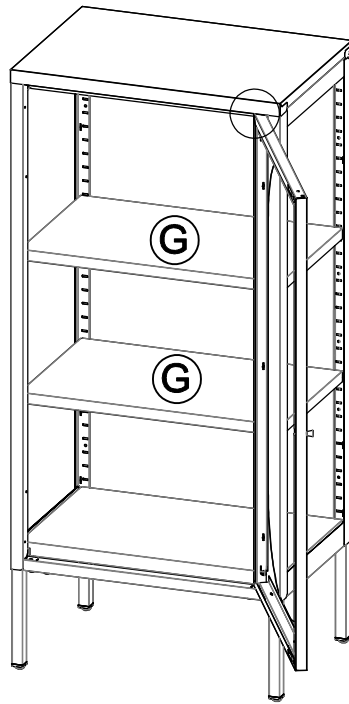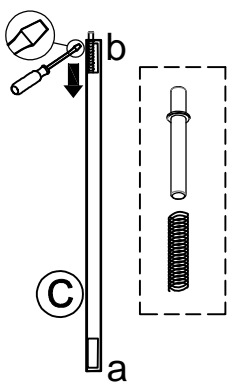Make sure to use the hole which is nearest to side panel for inserting pin(2) otherwise will affect door assembling.

Ⓒ ③ ② ✗

Ⓖ

Ⓖ

Ⓒ ③ ②
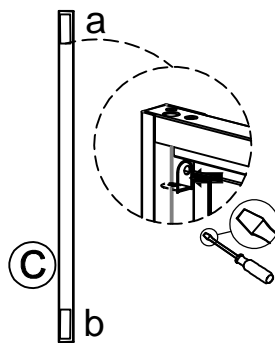
---

door pillar exchange process

WARNING
This step is just to switch the left door to the right door!

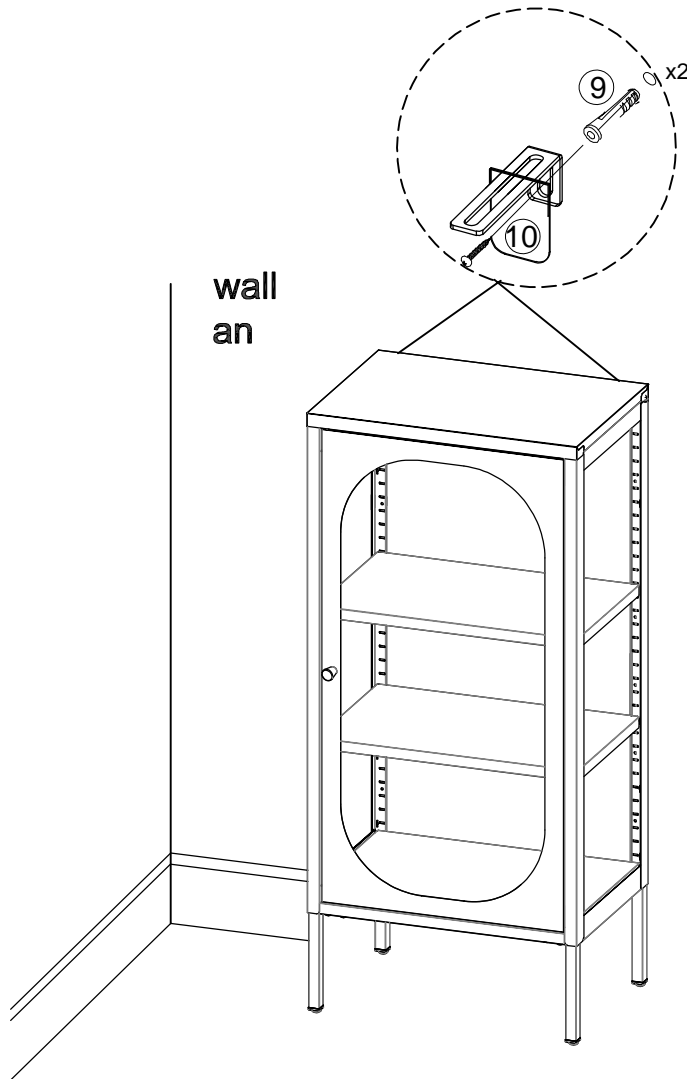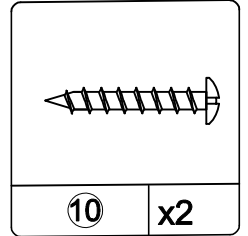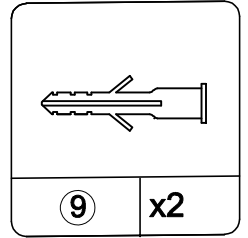| STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

(12)

9 x2

10 x2

9 x2

10

wall
an
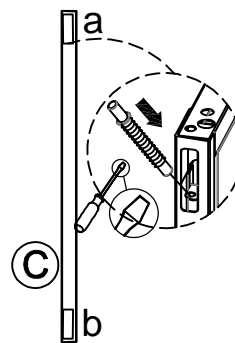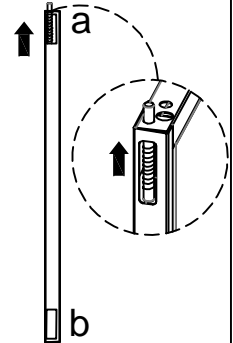
Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.